


	MAINTENANCE SHEET CTD + KEY	FM 8022 EN A www.alma-alma.fr
---	--	--


1.1 Format USB-ALMA CTD+ Key

Before this step, copy and paste all the data saved in the key to your computer.


- Connect the ALMA CTD+ key to your computer

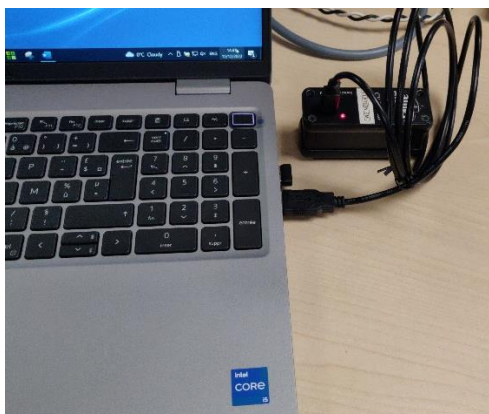

- Go to « **file explorer** » then click on « **this PC** »
- Right click on “USB-ALMA” or another device name of ALMA CTD+ key
- Select “**Format**”

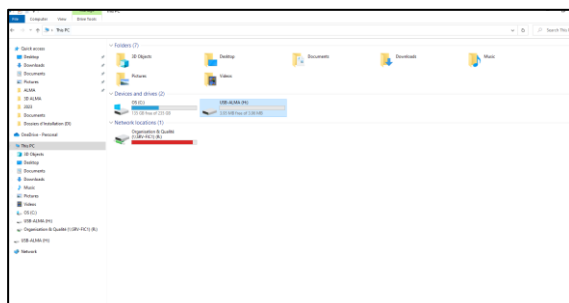

- A new window will appear, select parameters like the picture below

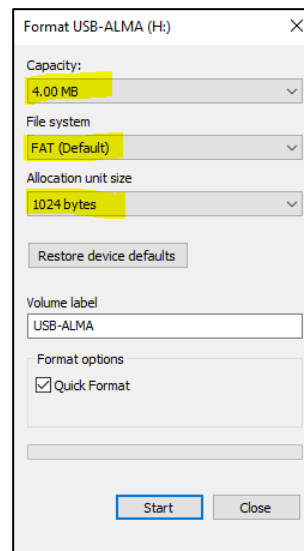

- Click on “**START**”
- When the formatting is done, eject the ALMA CTD+ key of your computer.

1.2 Reset the CTD+ Key



Remove the four screws on the top of CTD+ Key



Pull up the electronic card out of the key

	MAINTENANCE SHEET CTD + KEY	FM 8022 EN A www.alma-alma.fr
---	---	---



Remove the battery of PCB, wait a few seconds



Replace the battery in the PCB



Replace the PCB in the box



Be careful about the position of IRDA LED



Close the box, replace the screws.