

USER MANUAL**MU 7130 EN A**
EPSON TM-P20II



A	27/10/2023	Creation of the document	ITB	
Issue	Date	Nature of modifications	Written by	Approved by

	MU 7130 EN A EPSON TM-P20II	Page 1/13
	This document is available at www.alma-group.com	

SUMMARY

1	GENERAL PRESENTATION.....	3
2	GENERAL INFORMATION	3
2.1	Requirements	3
3	TABLET/SMARTPHONE CONNECTION TO THE PRINTER VIA WIFI	3
3.1	Printing a document	5
3.1.1	Using the NOKOPRINT app	5
4	TABLET/SMARTPHONE CONNECTION TO THE PRINTER VIA BLUETOOTH	8
4.1	Printing a document	10
4.1.1	Using the NOKOPRINT app	10
5	CLEANING THE PRINTER.....	13

1 GENERAL PRESENTATION

Here is a simplified procedure for connecting and printing files (PDF, images, etc.) from an Android tablet or smartphone using an application available from the Play Store.

There are two ways to establish a connection:

- By WIFI between your smartphone and the EPSON printer without using an Internet box.
- By Bluetooth

2 GENERAL INFORMATION

2.1 Requirements

- ⇒ Own Tablet or ANDROID smartphone
- ⇒ To have downloaded or installed the « NOKOprint » app via Google PLAYSTORE

3 TABLET/SMARTPHONE CONNECTION TO THE PRINTER VIA WIFI



-Activate the wifi on your smartphone/tablet

-Turn on the printer by pressing the left button



-Open the roller valve by pushing forward


-Add the paper roll as described below



-Press the  button until a beep is heard

-Close the roller valve. A paper will come out with several possible actions


	MU 7130 EN A EPSON TM-P20II	Page 3/13
	This document is available at www.alma-group.com	

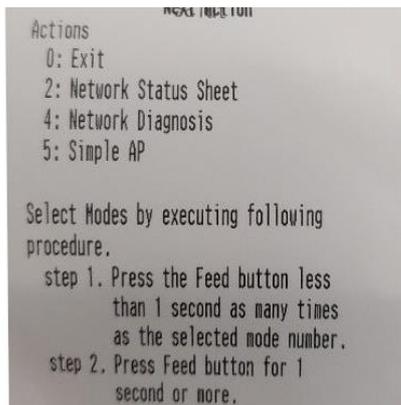

To select « Sample AP » :


-Quickly press 5 times the  button, and then a 6th time for more than a second to confirm your choice.

A long page is printing.

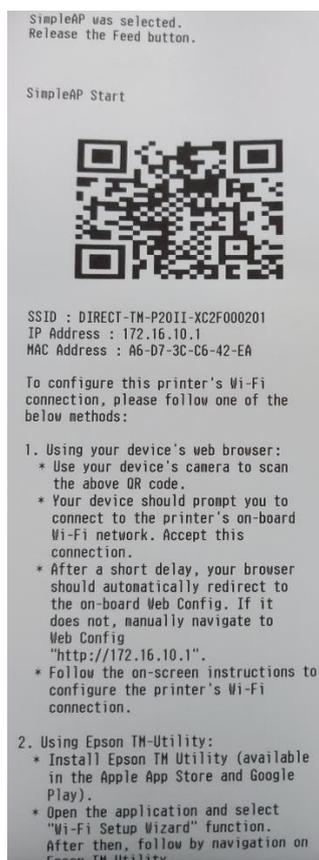

-Scan the QR Code and accept the Scanner le QR code et accept the connection to this WIFI network or go to the WIFI setting on the tablet/smartphone and choose the network whose name is SSID, as explained on the image above (SSID :DIRECT-TM-P20II)

-For the password, write the last digits of the SSID «XC2F000201 »as our example above.

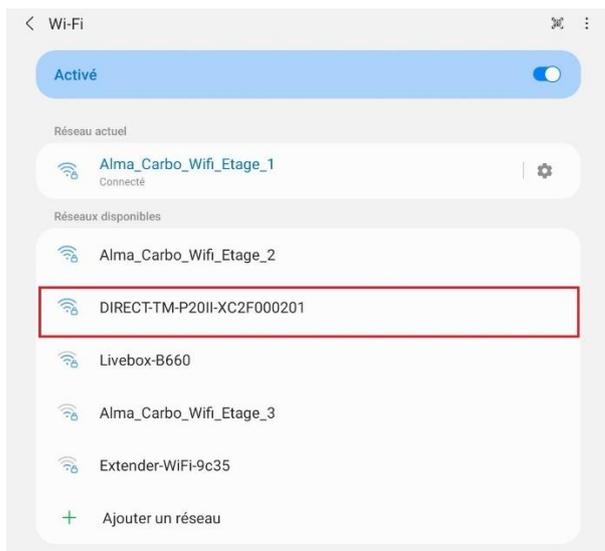


-Once the connection done, the light  on the printer will stop flashing and come on steady.

3.1 Printing a document

For this example, the report is downloaded in PDF format, saved in the « DOWNLOAD » folder on the tablet/smartphone.

3.1.1 Using the NOKOPRINT app


-Open the app and press the «not selected » printer icon in the top left-hand corner

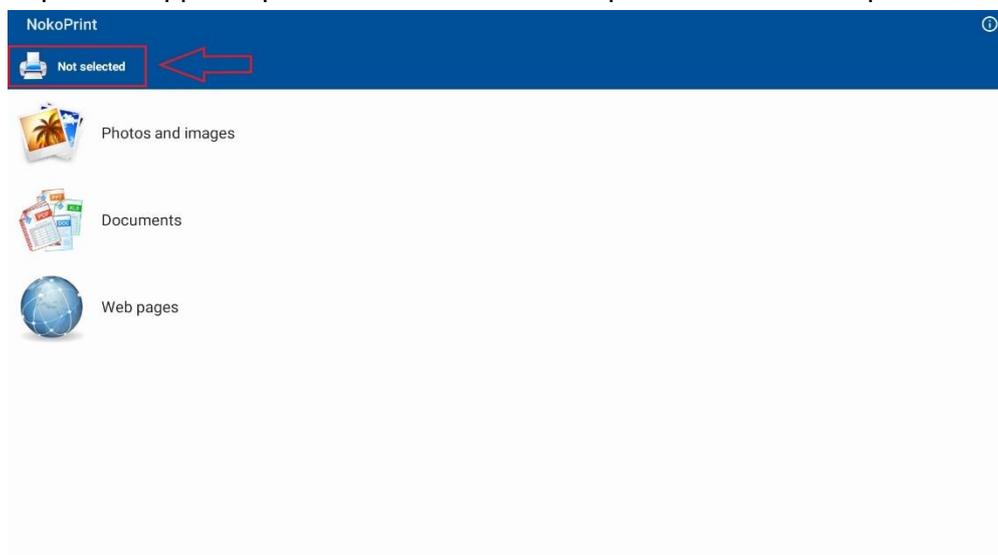

- Press the WIFI icon to display every printer available on the WIFI network
- Press the name of the **EPSON TM-P20II** printer




-A pop-up window will appear saying the connection between the printer and the app is successful.

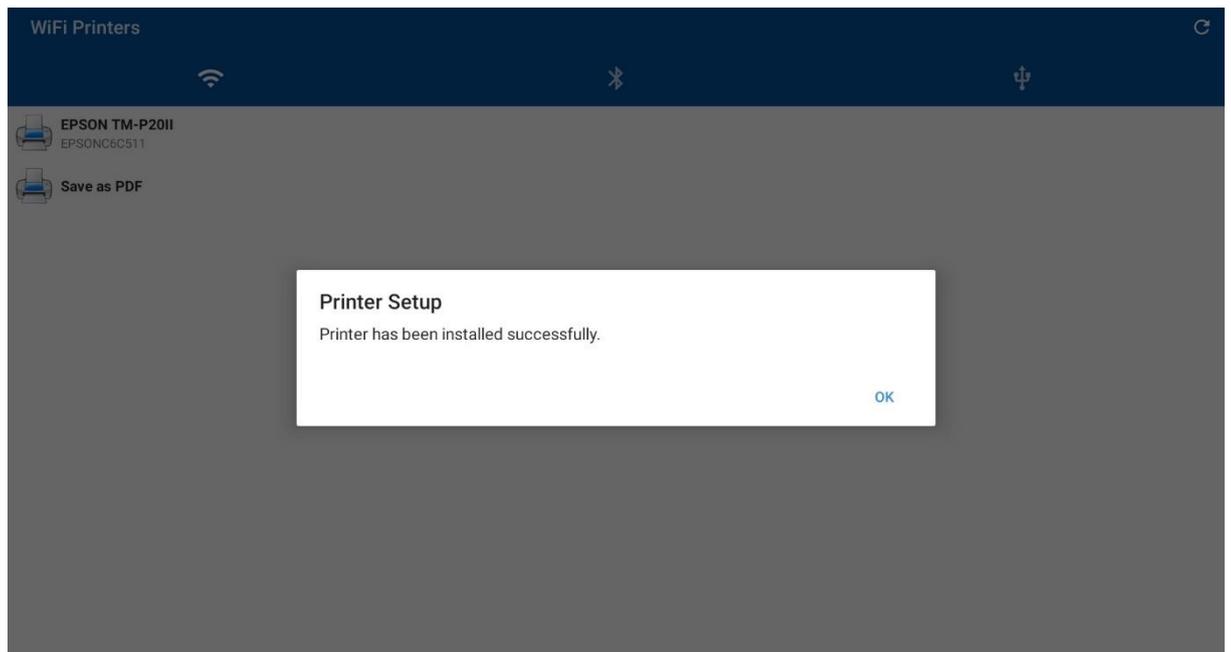

-Open the PDF file you want to print (file>download>PDF file required)

-Once the PDF opened, press the  icon, and « **PRINT** »


-A new window will open. It gives the possibility to choose a printing service. Press the arrow to display all available printers

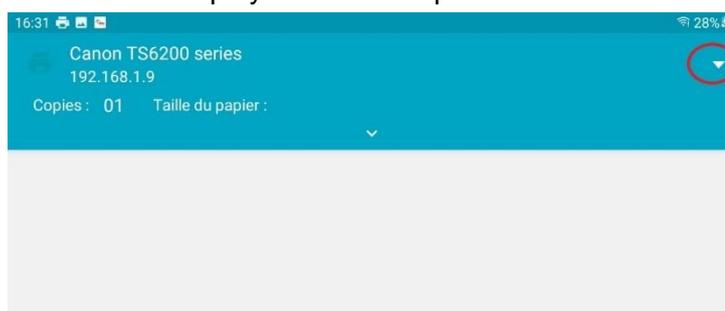

-Choose the **EPSON TM-P20II** printer



-A print preview will appear on your screen. Use the drop-down menu at the top of the screen change the print parameters.

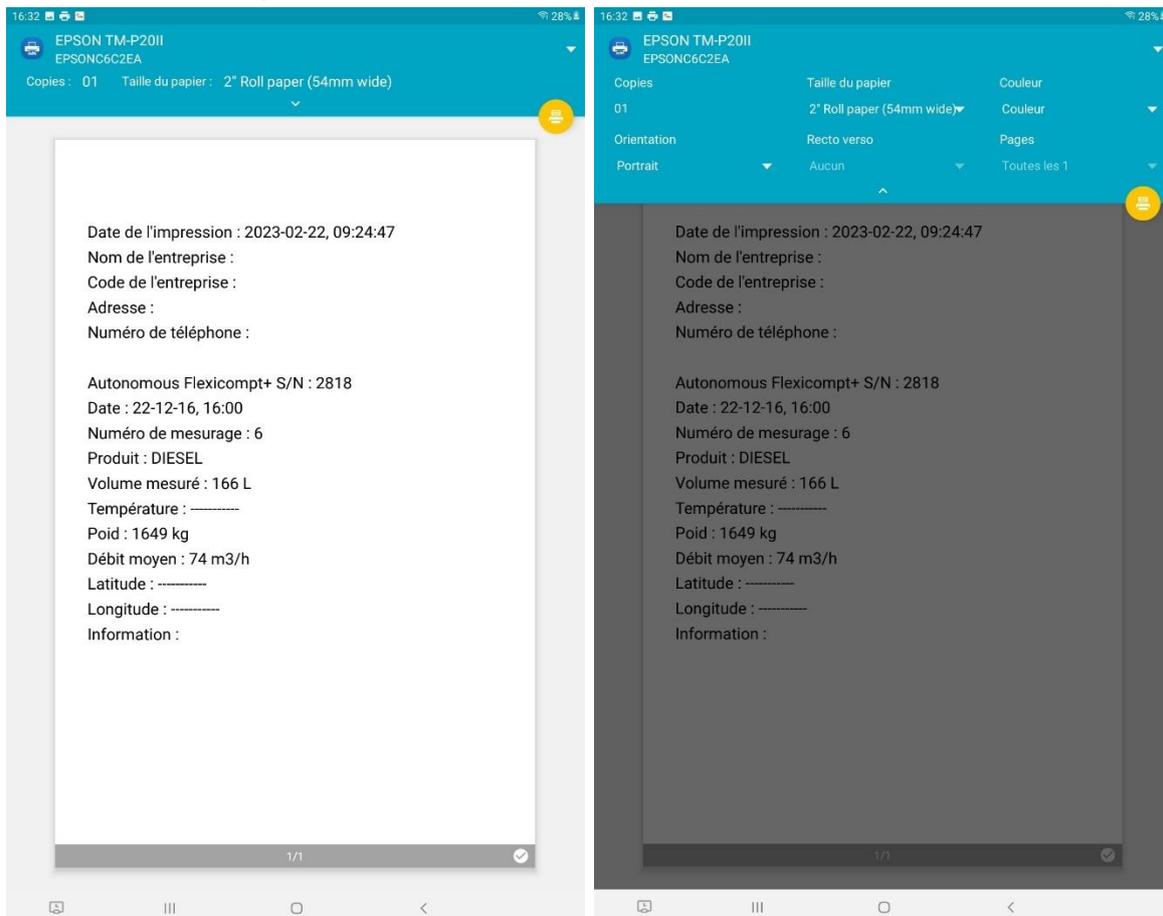

- Press the  button

NOTE : It is recommended to change the paper width to 3" roll paper. This allows to have a better quality printing.

- To start a printing, press the  button

4 TABLET/SMARTPHONE CONNECTION TO THE PRINTER VIA BLUETOOTH



NOTE : It is recommended that you download the EPSON TM Utility app, which is available on the Google Play Store.

-Activate the Bluetooth on your smartphone/tablet

-Turn on the printer by pressing the left button 


-Open the roller valve by pushing forward

-Add the paper roll as described below



-Press the  button until a beep is heard

-Close the roller valve. A paper will come out with several possible actions

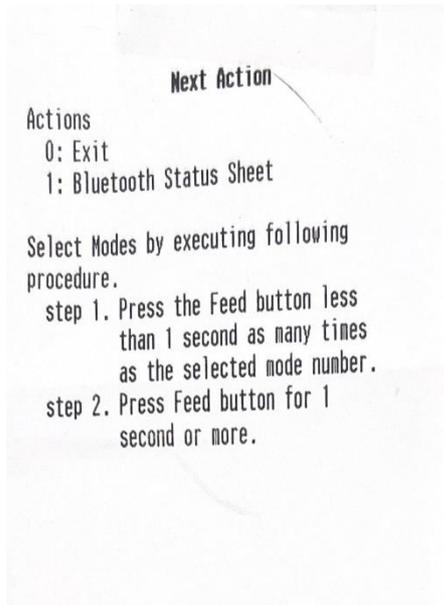

To discover the Bluetooth status of your printer :

- Press less than a second on the  button
- Press the  button again for more than a second.

Once you have performed the action requested, a page is printed:



- Open the EPSON TM Utility application
- Scan the QR code and accept the Bluetooth connection

NOTE : To establish a connection, navigate to the Bluetooth settings and choose "TM-P20II_000013".

Epson TM Utility

P20II

60:8A:10:4B:11:30

View Printer Status

Check Printer Operations

Change Printer Settings

Printer Settings Backup/Restore

Mi-Fi® Setup Wizard

Bluetooth® Setup Wizard


Update the Firmware

- Once the connection is established, the Bluetooth indicator on the printer will stop flashing and remain illuminated.

4.1 Printing a document

4.1.1 Using the NOKOPRINT app

- Open the NokoPrint app and press the unselected printer icon located in the top left corner.

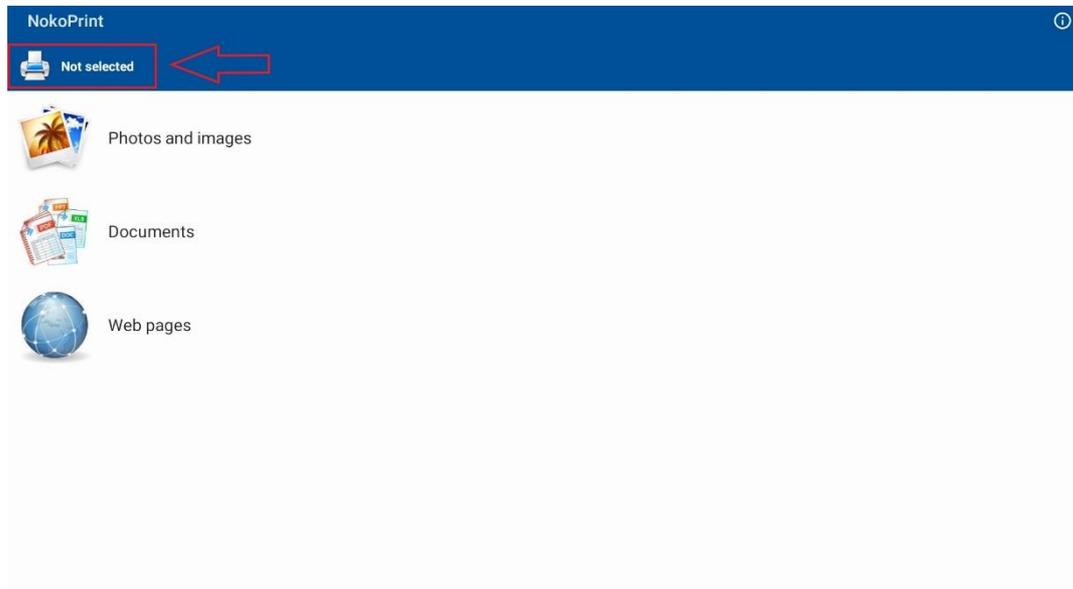


- Press on the Bluetooth icon to display every connected printer on the bluetooth network

	MU 7130 EN A EPSON TM-P20II	Page 10/13
	This document is available at www.alma-group.com	


- Press the **EPSON TM-P20II** printer name



- A pop-up window will appear stating that the connection between the app and the printer is successful.

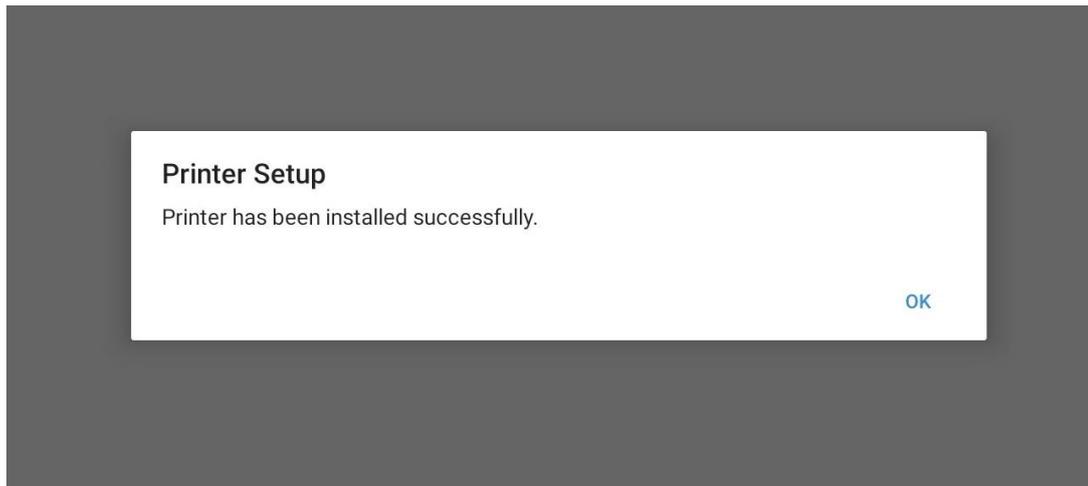


- Open the PDF file you want to print
- Once the file opened, press on the  button, and then on « **PRINT** »
- A new window will open, giving you the option of choosing a printing service
- Press the arrow to display all available printers.

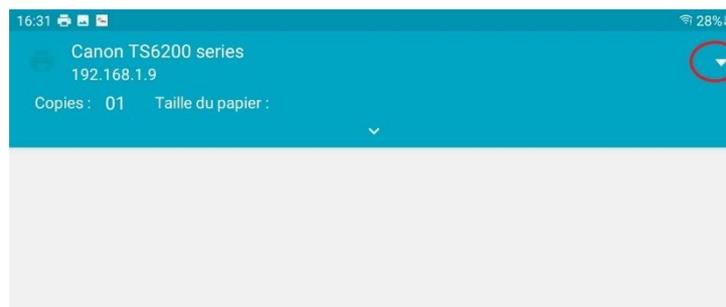

- Choose the **EPSON TM-P20II** printer



A print preview will appear on your screen. Use the drop-down menu at the top of the screen to change the print parameters, such as paper width.

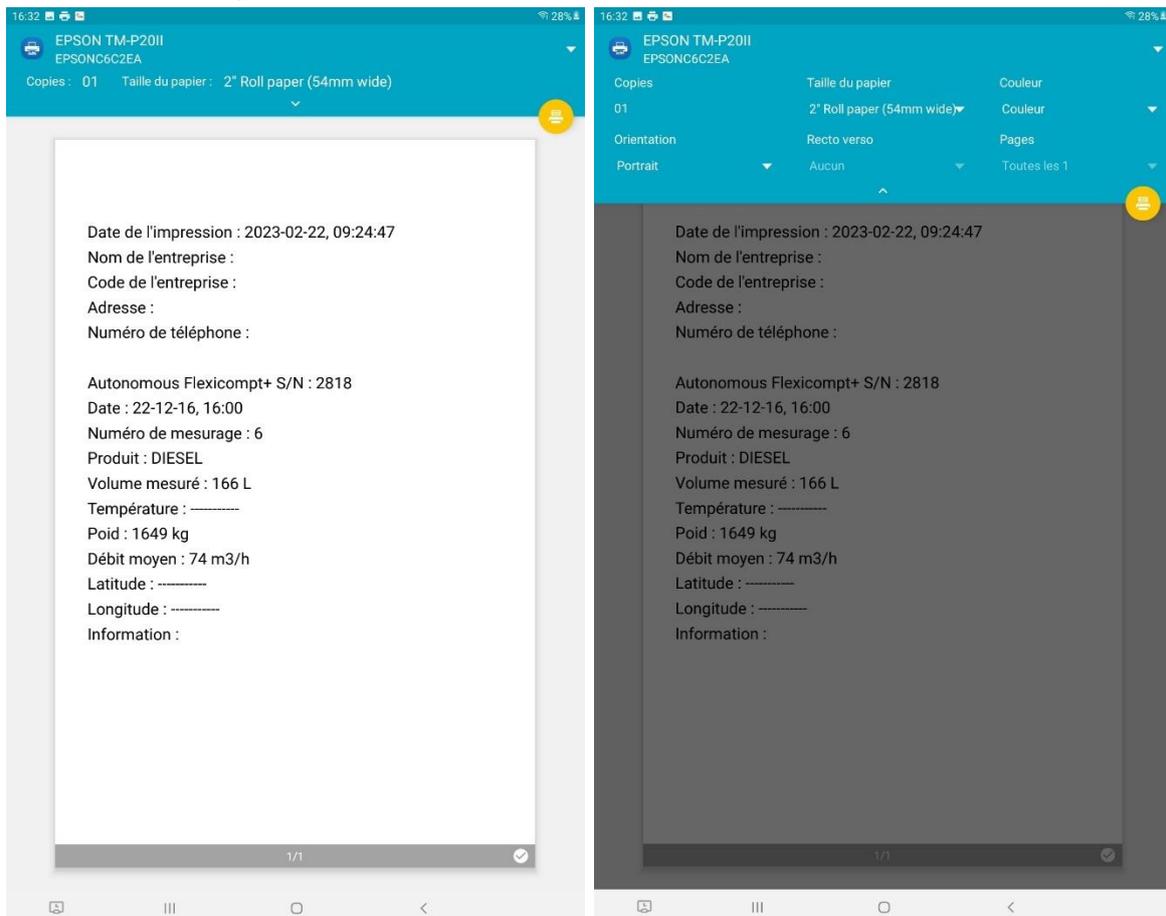

- Press on the  button to start printing. Then, press on the printer  button.

5 CLEANING THE PRINTER

If the outside of the printer is dirty :

- Turn off the printer
- If connected, disconnect the USB-C cable
- Clean the printer with a clean cloth



DO NOT USE ALCOHOL OR SOLVENTS TO CLEAN THE PRINTER.