



# DELIVERY WITH A PUMPED AND MEASURED DISTRIBUTION - except LPG measuring system

GU7034-EN-A

## 1. PARK THE VEHICLE ON THE UNLOADING AREA

## 2. PAY OUT THE HOSE TO THE TANK

 
## 3. IF THERE'S NO FLAP MANAGEMENT SYSTEM, OPEN THE COMPARTMENT OUTPUT VALVE

## 4. CLOSE THE NOZZLE

## 5. PREPARE DELIVERY

### ▲ PREPARATION

Press ● until « DELIVERY » appears



Press OK ●

### ▲ IF THERE'S FLAP MANAGEMENT SYSTEM, SELECT THE COMPARTMENT

Press ●



Press OK ●

### ▲ SELECT THE PRODUCT

Select the product with ●



Press OK ●

### ▲ SELECT THE DISTRIBUTION WAY

Press ●



H1 : Hose  
HF : Full Hose

Press OK ●

### ▲ SELECT THE DISTRIBUTION MODE

Select the distribution mode with ●



PRESET  
00000 : nozzle  
BARRELS : low flow

Press OK ●

### ▲ ENTER PRESET

Use ● to increase the digit value

Use ● to choose another digit



Press OK ●

## 6. DISTRIBUTION

### ▲ START DISTRIBUTION



Press OK ●



PRESS OK

### ▲ DISPLAY



Use ● to display flowrate. The volume appears again after 5 secondes.

## 7. END OF DISTRIBUTION

### ▲ WITH A PRESET



Press many times ●



### ▲ WITH A FREE DISTRIBUTION (00000)

Press ●



Press OK ●



Press ●



Press many times ●



## 8. END OF DELIVERY

### ▲ PRINT THE DELIVERY ORDER

Press many times ●



### ▲ PRINT THE INVOICE

Press ●



Press many times ●

## 9. CLOSE THE NOZZLE

## 10. IF THERE'S NO FLAP MANAGEMENT SYSTEM, CLOSE THE COMPARTMENT OUTPUT VALVE

## 11. BATCH THE HOSE

## 12. LEAVE THE UNLOADING AREA