



OPERATING GUIDE

GRAVICOMPT MANIFOLD

GU 7038 EN A

www.alma.alma.fr


This document sketches out the main menus (please refer to operating manual MU 7038 EN for further information).

USING THE BUTTONS

- - Come back to the previous stage
- Increment the blinking figure

- - Choose the menu option
- Access to the following figure

- - Validate the displayed option
- Validate the entry data

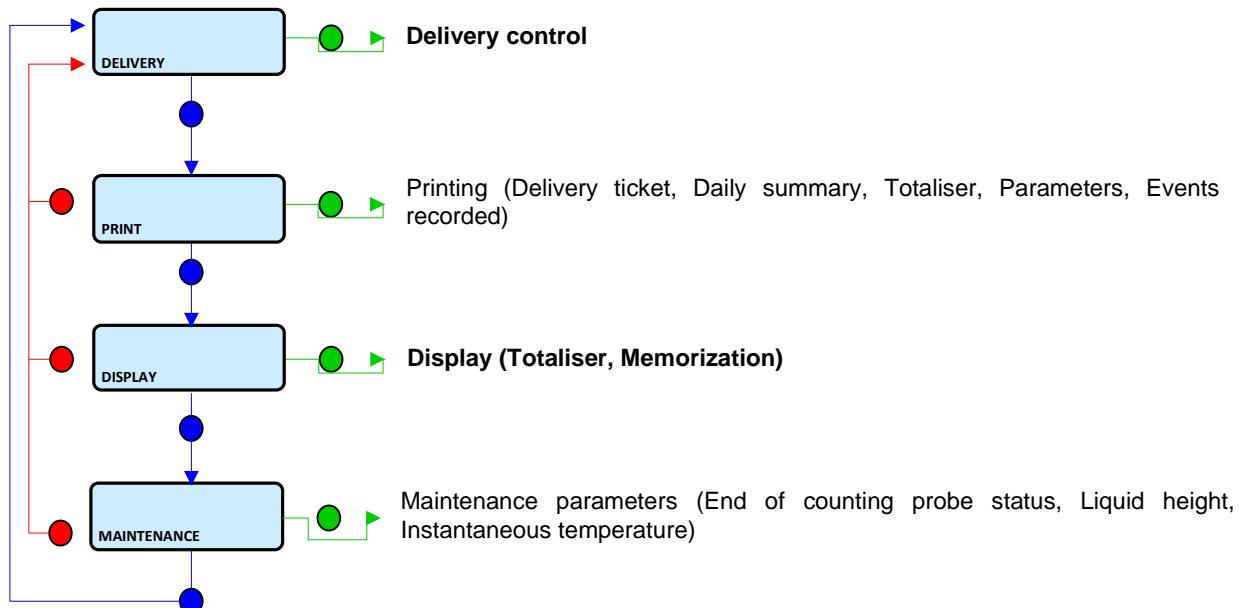

RUN A DELIVERY

1. PREPARE THE OPERATION

- DELIVERY**
- ▲ CHOOSE THE COMPARTMENT
 - C1 / -----**
 - C2 / -----**
 - ...
 - END DELIVERY?**

Validate with

This menu is chosen when all the operations of a same delivery have been carried out (§4)
- ▲ CHOOSE THE PRODUCT
 - PRODUCT->GO**
 - PRODUCT->SP95**
 - PRODUCT->XXX**

Validate with
- ▲ CHOOSE THE DISTRIBUTION MODE
 - MODE->PRESET**
 - MODE->FREE**
 - MODE->NOT COUNTED**

Validate with
- ▲ SET THE VOLUME
 - 000000 L**
 - ENTER PRESET**


Change the blinking figure value
 Access to the following figure
 Validate the entry data

2. CARRY OUT THE OPERATION

▲ START THE OPERATION



Display during discharge:

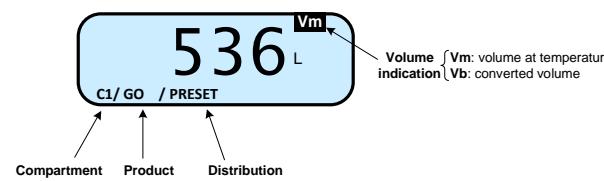

The discharge may be interrupted by several situations:

► APPEARANCE OF A FAULT AND DISPLAY OF AN ALARM




Continue or stop the operation (§3)

► INTENTIONAL INTERRUPTION OF THE OPERATION



Continue or stop the operation (§3)

▲ DISPLAY DISCHARGE INFORMATION

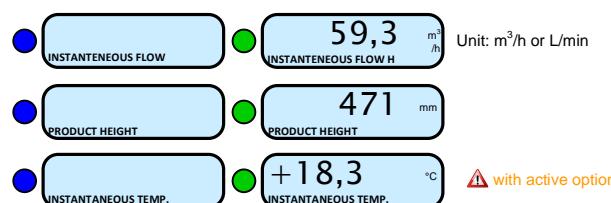

3. CONTINUE OR STOP THE OPERATION

▲ CONTINUE OPERATION




▲ END THE OPERATION



Back to compartment selection menu §1

4. END THE DELIVERY

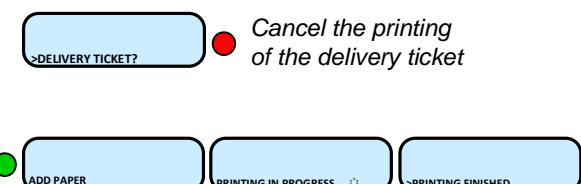




Back to main menu §1

MEANING OF SYMBOLS

- ▲ Mandatory action
- ▲ Optional action (depends on configuration choosen)
- Event during delivery
- Action by operator

DISPLAY THE DELIVERY DATA

The DISPLAY menu is available in stand-by mode or in case of an intermediate stop

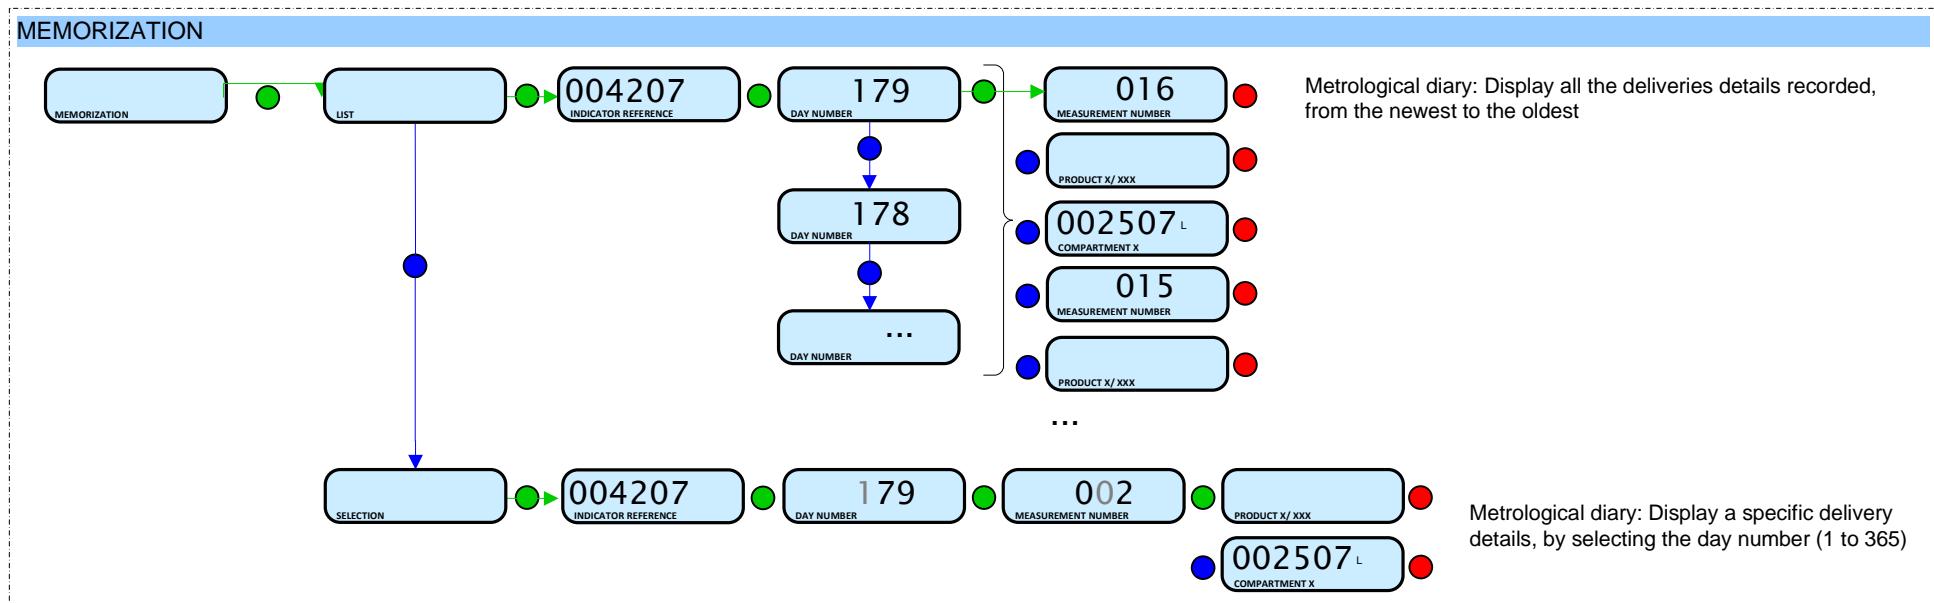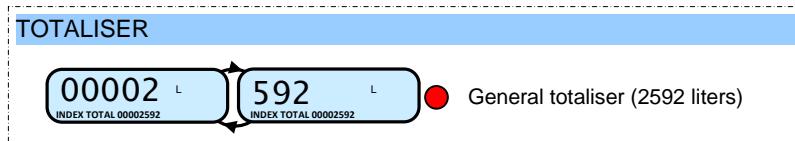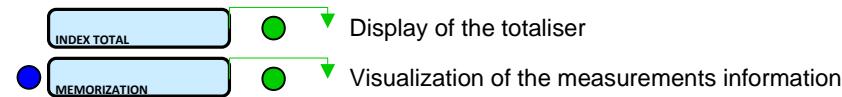

LIST OF ALARMS

	DISPLAY	MEANING	ACTION
USER	STOP OPERATION	Intentional interruption of discharge	Continue, stop or finish the operation
	PRINTER DEFAULT	No more communication with the printer	Check the connection cable, on-off switch and fuse
	POWER SUPPLY PROBLEM	Power outage during operation	Check the cause / Restore power supply
	ZERO FLOW DEFAULT	Zero flow	Check if the pulse transmitter is powered (red indicators)
	LOW FLOW DEFAULT	Low flowrate (less than 4m ³ /h)	Check the hydraulic system (valve, strainer, nozzle...)
	HIGH FLOW DEFAULT	High flowrate (greater than maximum flowrate)	Check the parameters / Reduce flowrate
	METERING PROBLEM	Metering problem with the measuring device	Check if the pulse transmitter is powered (red indicators)
	MANIFOLD NOT EMPTY	The manifold is not empty at the beginning of the operation	Follow the manifold release sequence
	FLAP LEAK DEFAULT	Product leakage from a flap	Check the flap
	DIARY DEFAULT	Reset of the events diary	Acknowledge the alarm, check the date in supervisor mode (supervisor key)
REPARATOR	WATCHDOG DEFAULT	Fault with display or power card or AFSEC+ card	Switch on-off the MICROCOMPT+ / If steady alarm, substitution of the faulty card
	DISPLAY DEFAULT	Problem with display card	If steady alarm, substitution of the display card
	TOTALISER LOSS	Loss of totaliser	Substitution of the backup battery
	END OF POURING	End of pouring probe out of order	If steady alarm, see a reparator for trouble shooting
	PRESSURE DEFAULT	Pressure determination failure	If steady alarm, see a reparator for trouble shooting
	TEMPERATURE FAULT	Temperature determination failure	Check the temperature probe status / If steady alarm, see a reparator for trouble shooting
BLOCKING	MEMORY LOST (PILE)	Loss of saved memory	Substitution of the backup battery
	MEMORY LOST	Delivery diary lost	Enter and exit the METRO mode / If steady alarm, substitution of the backup battery
	DATE AND TIME LOST	Loss of date and time	Set date and time in supervisor mode (supervisor key)
	GAS DEFAULT	Détection d'air en phase de grand débit	If steady alarm, see a reparator for trouble shooting
	PROM DEFAULT	Loss of software or resident integrity	Substitution of the AFSEC+ electronic card
	RAM DEFAULT	Saved memory fault	Substitution of the AFSEC+ electronic card
	EEPROM MEMORY LOST	Loss of metrological configuration	Substitution of the AFSEC+ electronic card
	MEMORY OVER LOADED	Delivery diary is full	Substitution of the AFSEC+ electronic card