

The RCT5 remote control is used to operate the MICROCOMPT+ remotely.

Its screen and the red, green and blue keys allow the user:

- To navigate the menus
- To display the measurement information
- To validate data



- Increment the flashing number or letter
- Return to previous step
- Stop measuring




- Select number, letter or menu
- Transition HF->LF or transition LF->HF
- Lock/unlock screen orientation



- Validating data

Safety functions such as emergency stop and deadman's switch are controlled via the relevant buttons.

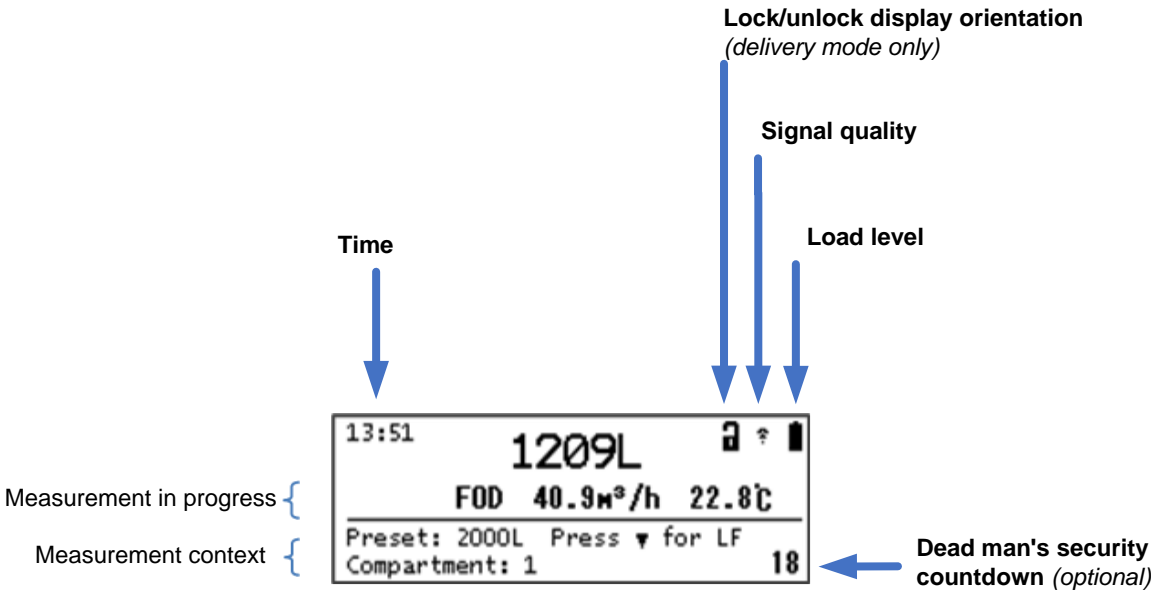

The other two buttons control the safety functions:



Emergency stop only if MICROCOMPT+ is involved



Dead man function only if MICROCOMPT+ is involved

To connect the RCT5 Remote Control

When the RCT5 is removed from its cradle, the connection is made automatically.  
If it does not connect automatically, if "Connection:ok" is displayed, press the green button



If after a few tries the RCT5 connection is still not established, consult a repairer for diagnosis.

To disconnect the RCT5 Remote Control

- The RCT5 disconnects automatically when :
- 1. The RCT5 placed on the charging stand (standby)
  - 2. After 30 minutes of inactivity (when the remote control is inactive)

**NOTE :** When delivered, the RCT5 returns to the menus after 10 minutes of inactivity or after a long press on the red button.

To charge the RCT5 remote control

Place the RCT5 on the load support in the truck cab.



<b>White</b>	<b>Flashing red (Slow)</b>	<b>Flashing red (Fast)</b>	<b>Green</b>
Charger on	RCT5 on load	Load fault	RCT5 is responsible for

Specifications

Dimensions	150mm x 85mm x 38mm
Weight	Around 400g
Temperature	Storage : -20°C to 60°C Utilization : -10°C to 40°C
Humidity	0 – 80% R.H.
Battery	Two AA size NiMH cells at 2500mAh
Charger	Alma Wireless charger
Security	<ul style="list-style-type: none"><li>- Any component inside the appliance must be replaced by a qualified person.</li><li>- Do not replace the batteries with a reference not recommended by ALMA.</li><li>- Only recharge the device with the ALMA's RCT5 charger.</li><li>- Do not charge the device when it is outside of its operating temperature.</li><li>- Keep the device and batteries away from a high heat source.</li><li>- The device operates abnormally if:<ul style="list-style-type: none"><li>o The device emits an abnormal noise, smell, smoke, or a spark-like light during operation.</li><li>o The device generates high temperature during operation.</li><li>o The area in contact with the charger is damaged.</li><li>o Foreign substances or liquid have fallen into it.</li></ul></li><li>- Replacing batteries with an incorrect type may remove the device's protections.</li><li>- Disposing of batteries in a fire or hot oven, or mechanically crushing or cutting the batteries, may cause an explosion.</li><li>- Keeping batteries in a very high-temperature environment may cause an explosion or the leakage of flammable liquid or gas.</li><li>- Subjecting batteries to extremely low air pressure may cause an explosion or the leakage of flammable liquid or gas.</li></ul>

