


USER MANUAL

MU 7071 EN G
GRAVITRONIQUE

Document applicable for software from version 4053+v1.7.x

G	2022/04/26	New software platform. Control of a reel. Pollution and DSPGI blocking operation. Two-step purge. Viscosity correction in %. RCT5 remote control. Import ICOM settings on SD card. Number of injectors in metrological mode. Release quantity. Empty hose operation	DSM	FDS
Issue	Date	Nature of modifications	Written by	Approved by

	MU 7071 EN F GRAVITRONIQUE	Page 1/61
	This document is available on www.alma-alma.fr	

CONTENTS

1	GENERAL PRESENTATION AND DESCRIPTION.....	5
2	CONNECTED FEATURES.....	7
3	OPERATING RECOMMENDATIONS	9
4	CONFIGURATION, SETTINGS, CALIBRATION	10
5	SPECIFIC FEATURES.....	10
5.1	Use with DSPGI device.....	10
5.2	Scheduling of the delivery	11
5.3	Contamination control	13
5.4	Distribution mode PRESET+PURGE.....	13
6	USE THE GRAVITRONIQUE: USER MODE.....	14
6.1	Menu DELIVERY.....	14
6.1.1	Pumped counted distribution mode	16
6.1.1.1	Engine control.....	16
6.1.1.2	Delivery.....	17
6.1.1.3	Two step purge	19
6.1.2	Pumped not counted distribution mode.....	21
6.1.2.1	Engine control.....	21
6.1.2.2	Delivery.....	21
6.1.3	Intermediate stop of the delivery	22
6.1.4	Gravity delivery	23
6.2	Menu PRODUCT MOVEMENTS.....	23
6.2.1	Sub-menu EMPTY MANIFOLD	24
6.2.2	Sub-menu HOSE PURGE	24
6.2.3	Sub-menu PRODUCT TRANSFER.....	25
6.2.4	Sub-menu PRODUCT LOADING	25
6.3	Menu LOADING PLAN.....	26
6.4	Menu PRINT.....	27
6.5	Menu DISPLAY	28
6.5.1	Sub-menu TOTALISER(S).....	28
6.5.2	Sub-menu MEMORY.....	28
6.6	Menu MAINTENANCE.....	29
6.6.1	Sub-menu COMPUTING	29
6.6.2	Sub-menu DSPGI	29
6.6.3	Sub-menu CONTAMINATION	30
6.6.4	Sub-menu SOFTWARE	30
6.6.5	Sub-menu BATTERY VOLTAGE.....	30

6.6.6	Sub-menu BLUE KEY NUMBER	30
6.6.7	Sub-menu HYDRAULIC.....	30
6.6.8	Sub-menu PRESSURES	31
6.6.9	Sub-menu TEMPERATURES	31
6.6.10	Sub-menu INPUTS	31
6.6.11	Sub-menu OUTPUTS	32
6.7	List of alarms.....	33
7	SET THE GRAVITRONIQUE: SUPERVISOR MODE	35
7.1	Menu CALIBRATION/ GAUGE	35
7.1.1	Sub-menu PUMPED MODE	35
7.1.1.1	Enter standard value.....	35
7.1.1.2	Linearisation/Flow	36
7.1.2	Sub-menu GRAVITY MODE	37
7.2	Menu PRODUCT SETTINGS.....	37
7.3	Menu CONFIGURATION	39
7.3.1	Sub-menu ID LINES	39
7.3.2	Sub-menu SCHEDULING	39
7.3.3	Sub-menu VEHICLE	39
7.3.4	Sub-menu CURRENCY.....	40
7.3.5	Sub-menu LOADING PLAN.....	40
7.3.6	Sub-menu ADDITIVE TYPE	40
7.3.7	Sub-menu REMOTE CONTROL.....	41
7.4	Menu SETTINGS	41
7.4.1	Sub-menu VOLUME or MASS SETTINGS.....	41
7.4.2	Sub-menu FLOWRATE SETTINGS.....	43
7.4.3	Sub-menu TIMING SETTINGS	43
7.4.4	Sub-menu BACKUP VALUES.....	44
7.5	Menu TIME ADJUSTMENT.....	44
7.6	Menu PRINTER SETTINGS.....	44
7.7	Menu DSPGI.....	45
7.8	Menu COMPUTING.....	46
7.9	Menu LANGUAGE.....	46
7.10	Menu ICOM MENUS	46
8	CONFIGURE THE GRAVITRONIQUE: METROLOGICAL MODE	47
8.1	Menu INDICATOR REFERENCE.....	47
8.2	Menu CONFIGURATION	47
8.2.1	Sub-menu DUAL OPTION.....	47
8.2.2	Sub-menu INSTRUMENTATION	48
8.2.2.1	PTO	48

8.2.2.2	OVERFILL PREVENTION	49
8.2.2.3	ADDITIVE INJECTOR	49
8.2.2.4	PUMPED NOT COUNTED.....	49
8.2.3	Sub-menu COMPARTMENT OPTIONS	49
8.2.4	Sub-menu CMA OPTION.....	50
8.2.5	Sub-menu HYDRAULIC.....	50
8.2.6	Sub-menu UNIT	50
8.2.7	Sub-menu CONVERSION	51
8.3	Menu measuring system EMA	51
8.3.1	Sub-menu METER COEFFICIENT	52
8.3.2	Sub-menu VISCOSITY CORRECTION	52
8.3.3	Sub-menu UNIT	52
8.3.4	Sub-menu METER FLOWRATES	53
8.3.5	Sub-menu QUANTITIES	53
8.3.6	Sub-menu TEMPERATURE	54
8.3.7	Sub-menu PRESSURE	54
8.3.8	Sous-menu FORMULA	55
8.3.9	Sub-menu DETECTORS	55
8.3.10	Sub-menu VALVE	55
8.4	Menu DATE AND TIME.....	55
<i>ADDENDUM 1: Assignments table according to the number of flaps, product returns and additive injectors.....</i>		56
<i>ADDENDUM 2: Printings.....</i>		57
<i>RELATED DOCUMENTS.....</i>		61

1 GENERAL PRESENTATION AND DESCRIPTION

The GRAVITRONIQUE measuring system is designed to measure volumes of liquid in preset or free mode from each compartments of a road-tanker. It can be used for gravity or pumped distribution.

The GRAVITRONIQUE measuring system comprises:

- ⇒ An ALMA MICROCOMPT+ electronic calculator-indicator device
- ⇒ An ALMA pressure sensor type CP3000 which indicates the level of product into the compartment to the calculator-indicator device
- ⇒ A manifold connected to each truck compartment
- ⇒ A gas detector used as end-of-metering probe located upstream of the turbine meter. It detects the absence of liquid and triggers the end of metering
- ⇒ A filter located upstream of the turbine meter (optional if a pump prefilter is installed upstream the pump in pumped mode circuit)
- ⇒ An ALMA ADRIANE turbine meter DN80-80 or DN100-80
- ⇒ A sight glass which can be integrated to the meter
- ⇒ A temperature probe (option)
- ⇒ A printer (option).

Pumped mode:

- ⇒ A selection valve for pumped mode
- ⇒ A pump prefilter (optional if a filter is installed upstream the meter)
- ⇒ A pump which flowrate and pressure characteristics are compatible with the meter
- ⇒ A set of delivery devices including:
 - One (or two) full and/or empty hose(s) equipped with its (their) closing controls,
 - A possible third empty hose.

Gravity mode:

- ⇒ A selection valve for gravity mode
- ⇒ A gas detector used as vacuity sensor located downstream of the turbine meter. It controls the complete draining of the shared piping
- ⇒ If necessary, a transfer valve which regulates flow.

The GRAVITRONIQUE performs the following functions:

- ⇒ Measure products when they are delivered to the station, with or without volume preset
- ⇒ Split compartments
- ⇒ Control the product movements (transfer, loading, product returns, purge, drain).

Depending on the hydraulic configuration, the system can manage up to three distribution ways for pumped delivery and one distribution way for gravity delivery. If the feature is enabled a delivery channel is available for pumped not counted distribution

According to hardware configuration, it controls up to six compartments (if supplied with the Alma control box) or up to nine compartments. You can configure 16 different products.

	MU 7071 EN F GRAVITRONIQUE	Page 5/61
	This document is available on www.alma-alma.fr	

It can be connected to DSPGI anti-contamination systems. DSPGI devices provide product identification for each compartment and update the MICROCOMPT+. This eliminates any mixture of product. Each compartment is equipped with a DSPGI.

The system can control one or two additive injection devices. This injection has to occur upstream the meter.

In option, the system controls the product temperature.


In addition, it may be connected to a printer for delivery tickets, internal totalisers, parameters or diary printings.

NOTE: The information printed by the printer has no metrological value. Only the indications displayed by the indicator shall be considered legally valid.


The MICROCOMPT+ has one display:

The displayed quantity depends on the system configuration. The user is informed by a pictogram at the top-right of the display according to the conventions below:

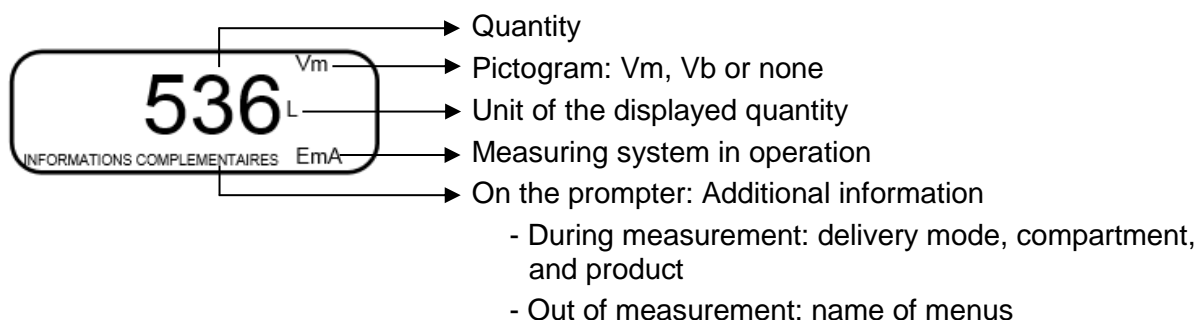


- ⇒ Volume in metering conditions: pictogram Vm
- ⇒ Volume converted to the reference temperature: pictogram Vb
- ⇒ Mass: no pictogram






Configured data are pre-visualized thanks to menus. In the example above, XX corresponds to the value given to the conversion, either OFF or ON.



The MICROCOMPT+ has three pushbuttons:

	Increment a blinking figure or letter Come back to the previous step Stop the measurement Specific case: automatic scheduling (see §5.2)
	Select a figure, a letter or a menu Specific case: automatic scheduling (see §5.2)
	Validate the data Specific case: automatic scheduling (see §5.2)

Use the RFID keys:

	Blue key: Level-User This key is associated to a single MICROCOMPT+. It is used to switch into SUPERVISOR mode
	Green key: Level-Manager Many of these keys can be associated to a single MICROCOMPT+. Likewise, a single key can be associated to one or many MICROCOMPT+. RFID key is used to switch into SUPERVISOR mode. Specific menus are available that allow the manager to configure the MICROCOMPT+ for its communication with the external environment. The specific menus are indicated by green boxes in the attached document ANX 0001
	Red key: Level-Maintenance This key doesn't need to be associated to the MICROCOMPT+. It is used to switch into SUPERVISOR mode. Specific menus are available that allow the maintenance operator to change parameters. Those menus are indicated in red boxes

2 CONNECTED FEATURES

The wireless connection enables the MICROCOMPT+ to communicate with an embedded computer or with a PC/tablet/portable device, in hazardous area (ATEX).

The connected functions of the MICROCOMPT+ are the following:



- ⇒ Incoming data flow processing
- ⇒ Management of the communication modules below











Communication modules are listed below:









- ⇒ Wi-Fi (IEEE 802.11 b/g/n (2.4GHz) **OR** Bluetooth Low Energy 4.1
- ⇒ GSM (2G, 3G, 4G) / GPS
- ⇒ RFID NFC allowing the reading of an RFID key to switch in SUPERVISOR mode
- ⇒ Ethernet Base 10/100

The GSM module associated to the GPS navigation system allows the device tracking. Two antennas are located outside the MICROCOMPT box.

Three tricolor LED on the MICROCOMPT+ front face are showing the wireless connection status as described in the table below:

AT POWER ON		
Flashing of the middle LED		
		Current update
	<i>Number of flashing</i>	
	1	No µSD
	2	No update folder
	3	No update file
	4	The update file does not open
	5	Problem writing to flash memory
	6	No app and no update file

IN OPERATION						
	Left-hand LED: Bluetooth or Wi-Fi		Middle LED: GSM / GPS		Right-hand LED: NFC (RFID)	
Steady light	Bluetooth 	Connection OK		Waiting for internet connection		
	Wi-Fi 			Internet connection OK		
		Waiting for initialization		Waiting for initialization		
Flashing light	Bluetooth 	Slow flashing: Waiting for connection		GPS OK		Authentication of the RFID key OK
	Wi-Fi 					

	Bluetooth  Wi-Fi 	Rapid flashing: Communication in progress		Transfer in progress		RFID key not accepted, but authentication is ok
			 every 2 seconds	Coordinates not found		
		Initialization error		Initialization error		Authentication error of the RFID key

3 OPERATING RECOMMENDATIONS






For a use of the GRAVITRONIQUE in pumped mode, the operator must make sure that all of the following conditions are met:

- ⇒ The unloading hose must be installed to ensure an easy outflow during delivery; the maximum length of the discharge DN80 hose, is 12 meters
- ⇒ The operator must remain beside the metering system during delivery to stop the flow, if necessary, by closing the API valve on the outlet of the tank compartment.

For a use of the GRAVITRONIQUE in gravity mode, the operator must make sure that all of the following conditions are met:

- ⇒ The piping linking each compartment and the transfer valve must have a minimum pitching of 3%. The vehicle on which the measuring system is installed must be fitted with a device to ensure it is horizontal
- ⇒ The end-of-metering probe is placed so that it can detect the vacuity of the collector on the smallest free surface.

4 CONFIGURATION, SETTINGS, CALIBRATION

CONFIGURATION: METROLOGICAL mode	SETTINGS: SUPERVISOR mode menu ICOM MENUS	SETTINGS, CALIBRATION: SUPERVISOR mode
§ CONFIGURE THE GRAVITRONIQUE: METROLOGICAL MODE	§ SET THE GRAVITRONIQUE: SUPERVISOR MODE Attached document ANX 0001	§ SET THE GRAVITRONIQUE: SUPERVISOR MODE Attached document ANX 0001
You must configure the GRAVITRONIQUE during commissioning and sometimes during metrological controls.	You must set the GRAVITRONIQUE before any operation and sometimes during metrological controls (specific menus)	You must set the GRAVITRONIQUE before any operation You must control the accuracy of the GRAVITRONIQUE cyclically
NOTE: Only approved persons are permitted to remove the seal	NOTE: Only approved persons are permitted to change parameters of the specific menus	NOTE: Only approved persons are permitted to change parameters or to make calibration.
<ul style="list-style-type: none"> - Unseal the cup - Remove the seal 	<ul style="list-style-type: none"> - Put the RFID key at the right side of the display 	<ul style="list-style-type: none"> - Put the RFID key at the right side of the display 
		

5 SPECIFIC FEATURES

5.1 Use with DSPGI device

If compartments are equipped with DSPGI devices, the DSPGI code associated to the product quality must be set (menu SUPERVISOR>PRODUCT SETTINGS>DSPGI CODE). A specific menu also allows you to assign a DSPGI code to an empty compartment (SUPERVISOR>DSPGI>EMPTY CODE).

Operation with DSPGI may or may not be blocking. If it is blocking, it is possible to suspend the blocking for the current operation. See the menu SUPERVISOR>DSPGI that describes the different features.

	MU 7071 EN F GRAVITRONIQUE	Page 10/61
	This document is available on www.alma-alma.fr	

The name of the product that is supposed to be in the hose, is displayed in brackets at the right hand of DELIVERY, for example: DELIVERY (GO+). The product's name given by the DSPGI device is also displayed at the compartment selection or a return.

In case of communication failure with the DSPGI device, depending on the configuration, you can switch in manual mode without DSPGI. See the menu SUPERVISOR>DSPGI that describes the proposed features.

The product's name is replaced by warning messages in the following cases:

- DSPGI DEFAULT: The DSPGI is ON and there is a communication problem
- ?????: The DSPGI is ON and its drum is located between two positions
- DSPGI MISMATCH: Inconsistent data in loading plan and DSPGI (product or compartment)

The messages below are printed in the event log:

- DSPGI ERROR: A DSPGI default has been recorded
- DSPGI CONFLICT: When the product selected in degraded mode is different from the product known by the DSPGI.


5.2 Scheduling of the delivery

If the scheduling of the delivery is activated in SUPERVISOR MODE (CONFIGURATION>SCHEDULING→ON), you can use several compartments to make the delivery. These compartments are filled with the same product.

The compartments are used in the definite sequence. When the compartment is empty before the end of measurement, the MICROCOMPT+ waits for 5 seconds and then orders to close the flap. It waits 5 seconds more and then orders to open the flap of the next compartment according to the definite sequence. Delivery starts again when the product height is enough, and so on until the measurement end.

The user can choose which compartment will be used for the delivery and in which order. If the option DSPGI or loading plan are ON, the compartments proposed for scheduling are those containing the selected product.

E.g.: Delivery of 800 liters of FOD+. Compartment 5: 500 liters of FOD+ and compartment 1: 8000. Sequence: compartment 5 then compartment 1. The scheduling menu is as follows:

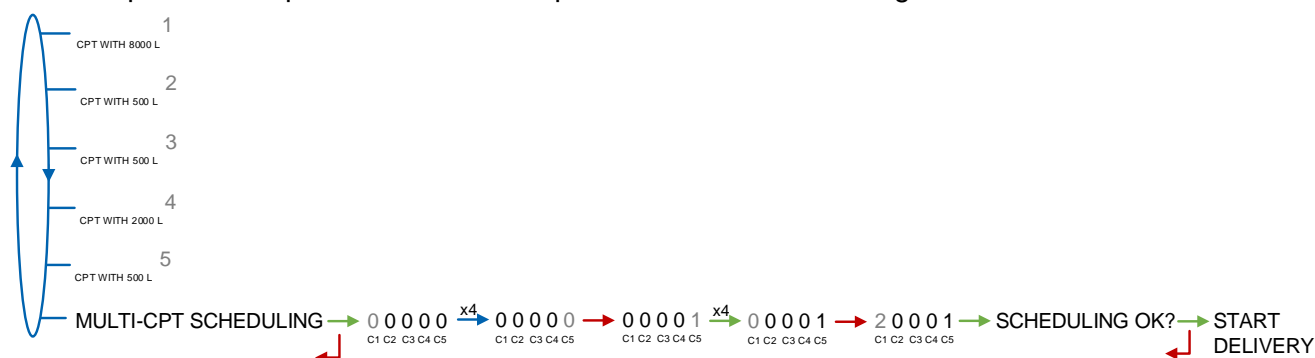

Loading plan

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 16:26
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** LOADING PLAN *****

CPT N°	PROD.	QUANTITY (L)
1	FOD+	8000
2	GO	8000
3	GO	5000
4	GO	1000
5	FOD+	500



Cargo after delivery of FOD+

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 16:50
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** CARGO PLAN *****

CPT N°	PROD.	QUANTITY (L)
1	FOD+	7700
2	GO	8000
3	GO	5000
4	GO	1000
5	FOD+	0

The ergonomics of the scheduling menu is as follows. It changes according to the array set in menu SUPERVISOR>CONFIGURATION>SCHEDULING→ON>ARRAY: compartments displayed from right to left or from left to right (menu).

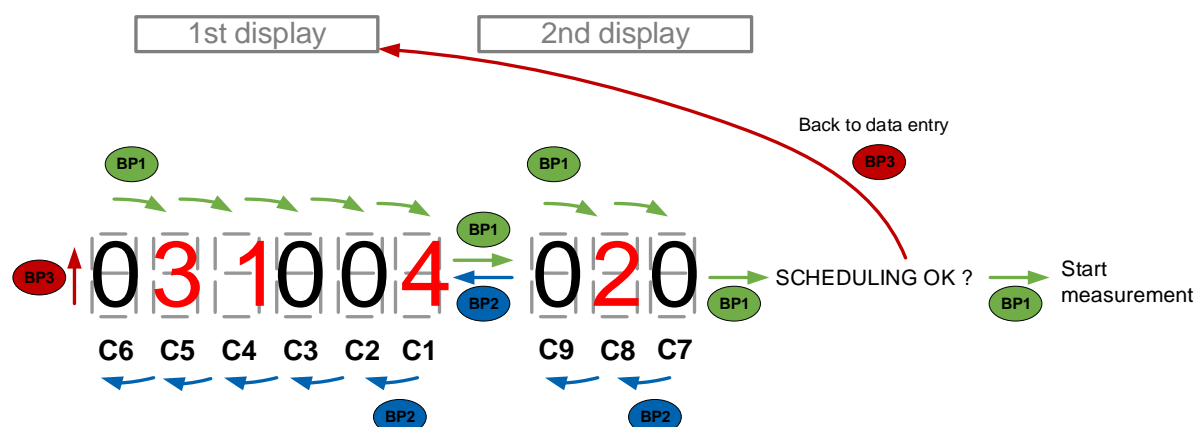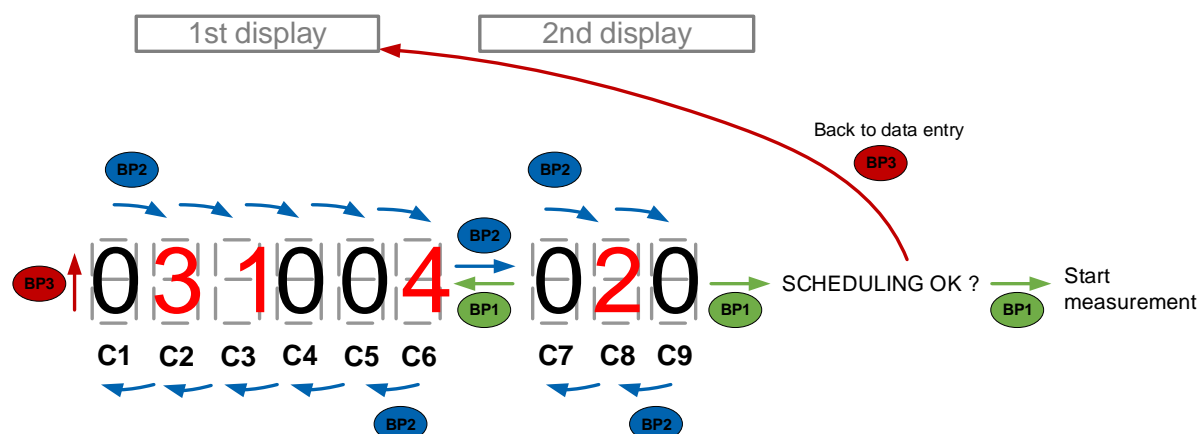Left to right sequence number:Right to left sequence number:

To include a compartment into the delivery, move on to the digit related to the compartment with BP1 (to the right) or BP2 (to the left), then validate with BP3. When you validate, the value 0 becomes the order number. When you validate again with BP3, the compartment is removed from the delivery, then the order numbers of the previous compartments are all decremented by one.

Select the right-hand digit and use BP1 to:

- Access the scheduling validation menu if there's no other compartment
- Access the second display. This display is used to include the other compartments into the delivery. Select the left-hand digit and use BP2 to reach the first display. When the last compartment digit is selected, use BP1 to access the scheduling validation menu.



When you see the scheduling validation message SCHEDULING OK?, use BP3 to return to the first display.

5.3 Contamination control

According to the nature of the products, the GRAVITRONIQUE calculates the purge volumes in order to ensure a downgrading of the brewing areas in order to never contaminate the noblest product.

The GRAVITRONIQUE memorizes permanently the quality in hose 1, hose 2, manifold and the common pipe. It systematically displays the product contained in all these elements. When the quality is not defined, in case of mixture for example, it displays the first product.

The GRAVITRONIQUE declares if a risk of pollution can occur. There's a mismatch between the selected product and the quality contained in the common pipe and the hose selected for delivery. This alert does not prevent the product selection. However, if the blocking contamination feature is activated CONTAMINATION>BLOCKING C.→ON, this situation requires a purge. It is possible to suspend the blocking for the current operation using the menu MAINTENANCE>CONTAMINATION>WITHOUT (NOT BLOCKING) when activated.

5.4 Distribution mode PRESET+PURGE


The distribution mode PRESET+PURGE can include a step that forces to select the hose for the next delivery. It is used to determine the volume of purge.

If the delivery has not been completed and if the purge has begun, you must complete the purge before starting the next delivery (menu PRODUCT MOVEMENTS>HOSE PURGE).

The delivery mode PRESET + PURGE is not available:

- If the GRAVITRONIQUE doesn't control the compartment flap
- In gravity distribution mode

6 USE THE GRAVITRONIQUE: USER MODE

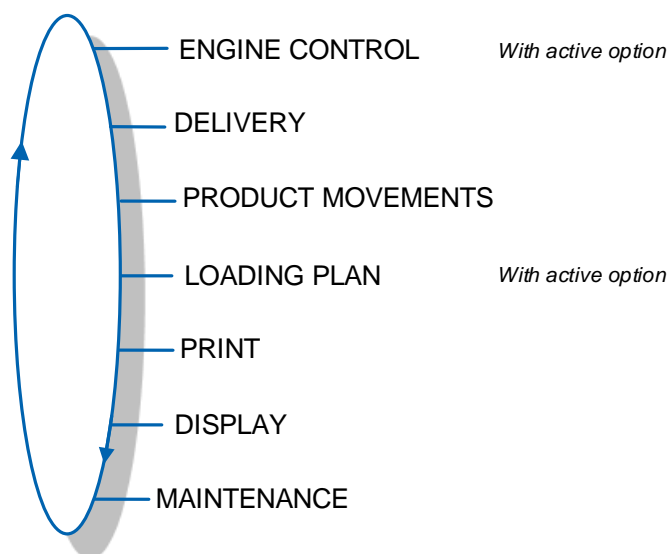

The use of the GRAVITRONIQUE depends on the hardware configuration of the truck, the features and the configuration of the equipment carried out during commissioning.

Therefore, the user menu depends on several items:

- ⇒ The instrumentation of the power take off.
- ⇒ The number of distribution ways (from one to three)
- ⇒ The remote control
- ⇒ The number of compartments
- ⇒ The control of the compartments flaps
- ⇒ The control of the return product system (SRP)
- ⇒ The delivery mode (counted pumped, uncounted pumped, gravity)
- ⇒ The temperature control (conversion of the volume).


NOTE: To use the RCT5 remote control, the GPS must not be activated.

6.1 Menu DELIVERY

There are several distribution modes:

- ⇒ **PRESET:** It allows to deliver a quantity of product previously entered. The delivery is stopped automatically
- ⇒ **PRESET+PURGE:** It allows to deliver a quantity of product previously entered and the purging of the hose. The delivery is stopped automatically
- ⇒ **FREE:** It allows to deliver a quantity of product in low or high flow. A user action is required to stop the delivery.


At rest, the MICROCOMPT displays a flashing number and the product label corresponding to the last quantity delivered.

	MU 7071 EN F GRAVITRONIQUE	Page 14/61
	This document is available on www.alma-alma.fr	

During measurement, the following information may be displayed:

- ⇒ The instantaneous high or low flow rate. The unit depends on settings
- ⇒ The level of liquid in the compartment is use
- ⇒ The temperature (°C) if it is taken into account.

Simply follow the indications below:

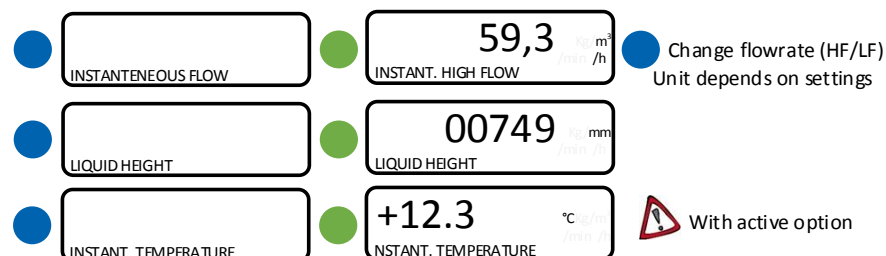

Back to normal display is automatic: DO NOT PRESS RED CLEAR BUTTON TO KEEP FROM INTERRUPTING DELIVERY.

Before starting measuring, the driver must initialize the MICROCOMPT+ calculator device by validating the pumped or gravity distribution mode, if necessary the distribution way, the product. He can choose if the distribution is made by presetting the volume (PRESET or PRESET+PURGE) or not (FREE).

Pumped distribution mode:


Choose DELIVERY>WAY→PUMPED:




For a preset distribution, the choice is given to end with the manifold full or empty.

If the last delivery ends with the manifold empty or if the manifold has been emptied through the menu EMPTY MANIFOLD→PUMPED (release) or EMPTY MANIFOLD→GRAVITY (draining), the GRAVITRONIQUE opens the compartment bypass flap in order to fill the manifold. FILLING is displayed during this sequence.

Delivery can be performed in high or low flow. This choice is made at the display of the message START HIGH FLOW. The blue MENU BUTTON switches on the display START LOW FLOW. The choice is made by pressing the green OK BUTTON. Switching is possible during the delivery by pressing the blue MENU BUTTON.

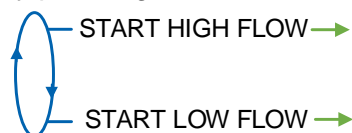

NOTE: In the event of a delivery interruption, improper handling of the pushbuttons may enter the menu DISPLAY (totalisers, memory). Simply press the red button to display DISPLAY and then the blue button to return to DELIVERY STOP. Confirm with the green button to select the next step.

	MU 7071 EN F GRAVITRONIQUE	Page 15/61
	This document is available on www.alma-alma.fr	

Gravity distribution mode:

Choose DELIVERY>WAY→GRAVITY:



At the beginning of a delivery:


If the manifold is empty, the GRAVITRONIQUE opens the compartment bypass flap in order to fill the manifold. FILLING is displayed during this sequence, then the delivery starts.



If the product in the manifold and the product selected for the delivery are the same, the delivery starts.

If the product in the manifold is different from the product selected for the delivery, the message MANIFOLD CONTAMINATION is displayed. This user decides whether or not to purge the manifold. However if the contamination is blocking, it is mandatory to empty the manifold.

6.1.1 Pumped counted distribution mode**6.1.1.1 Engine control**

With active option, the commands for the pump clutching/declutching and for the power take-off control are realized by the GRAVITRONIQUE at the beginning and at the end of distribution.



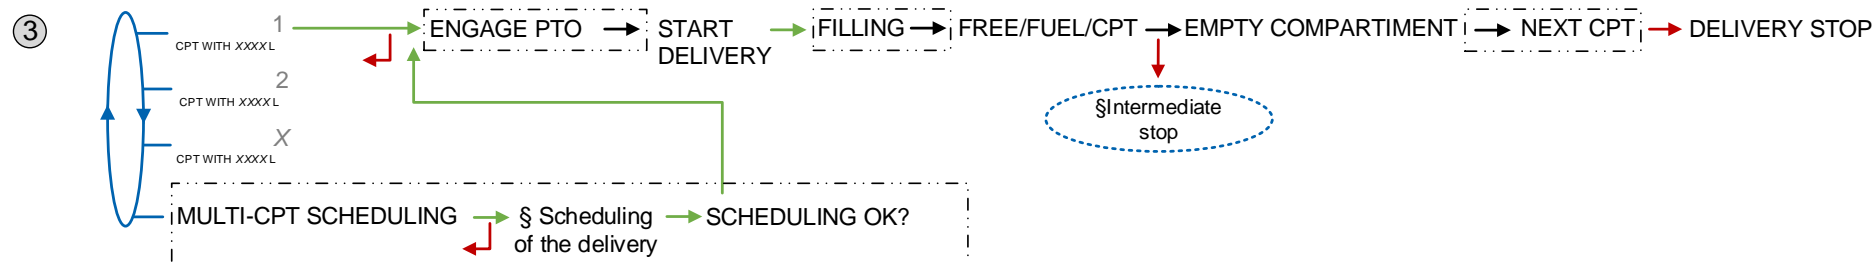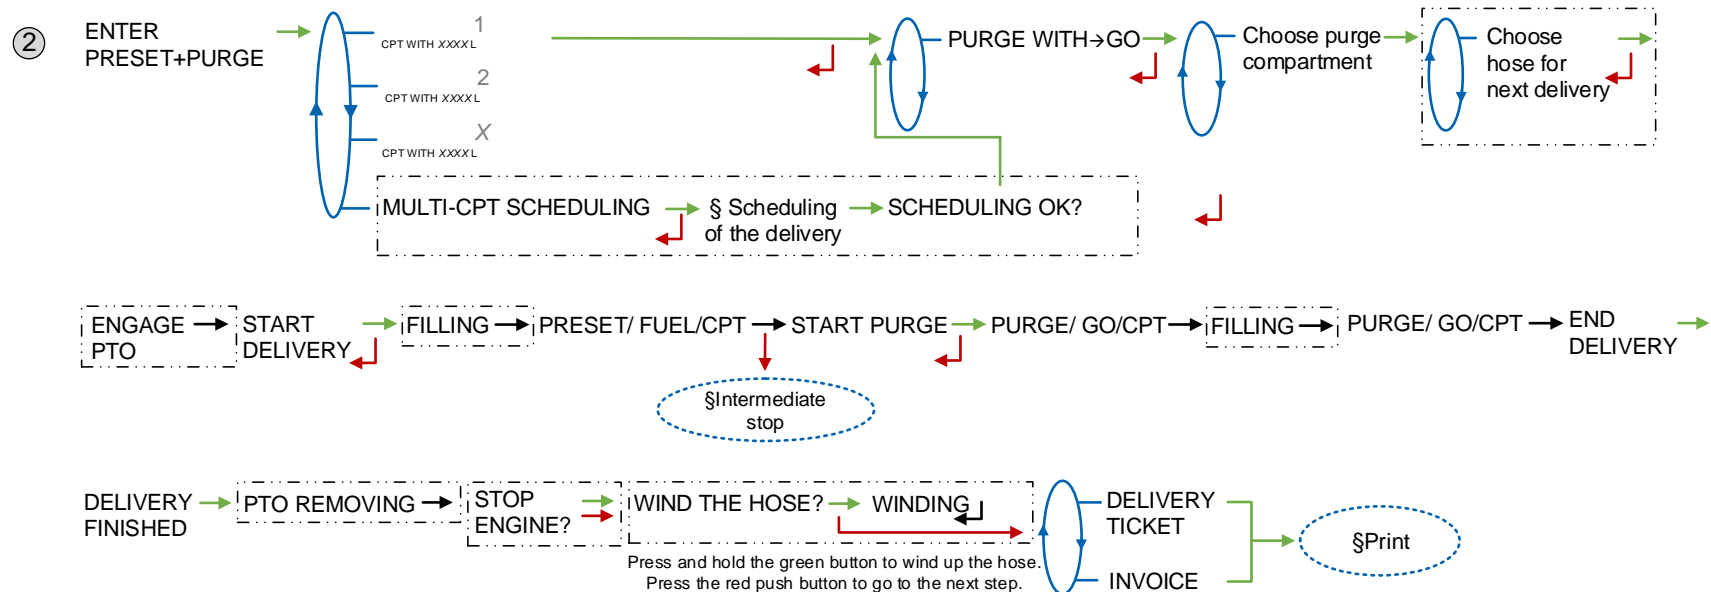


Non-systematic phases.

6.1.1.3 Two step purge


Some delivery scenarios require a two-step purge.

SCENARIO 1: Both hoses and the common pipe are filled with FOD. For the next delivery, we want to deliver FOD+ with hose 2.

First step: Purge hose 1 with menu PRODUCT MOVEMENTS>HOSE PURGE

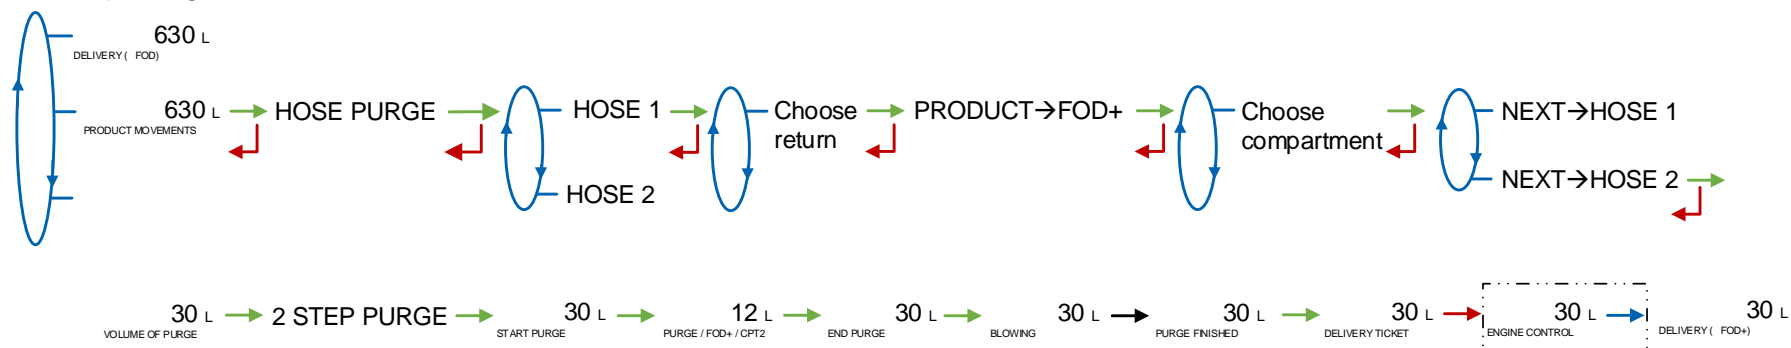

Second step: Purge hose 2 and common pipe with menu DELIVERY

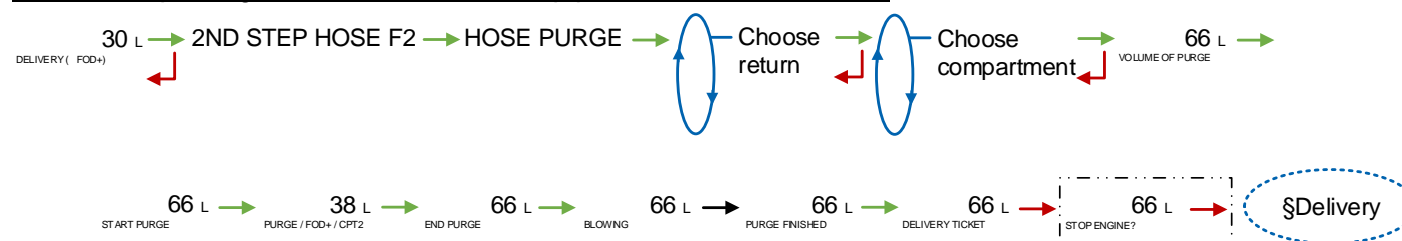


Non-systematic phases.

SCENARIO 2: Hose 1 is full of FOD, hose 2 and the common pipe are filled with FOD+. For the next delivery, we want to deliver FOD with hose 1.

First step: Purge common pipe with menu PRODUCT MOVEMENTS>HOSE PURGE



Second step: Purge hose 1 with menu DELIVERY

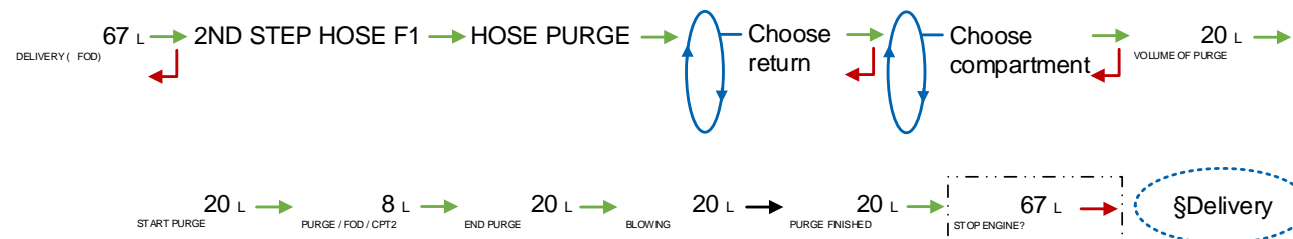

Non-systematic phases.

6.1.2 Pumped not counted distribution mode


This delivery mode is used with two distribution outlets: upstream and downstream the meter. In METROLOGICAL mode, choose CONFIGURATION>INSTRUMENTATION>PUMPED NOT COUNTED.




To prevent any contamination, the delivery is made with the product in the line. To use another product, purge the line and repeat the operation.

6.1.2.1 Engine control

With active option, the commands for the pump clutching/declutching and for the power take-off control are made by the GRAVITRONIQUE at the beginning and at the end of distribution.




6.1.2.2 Delivery

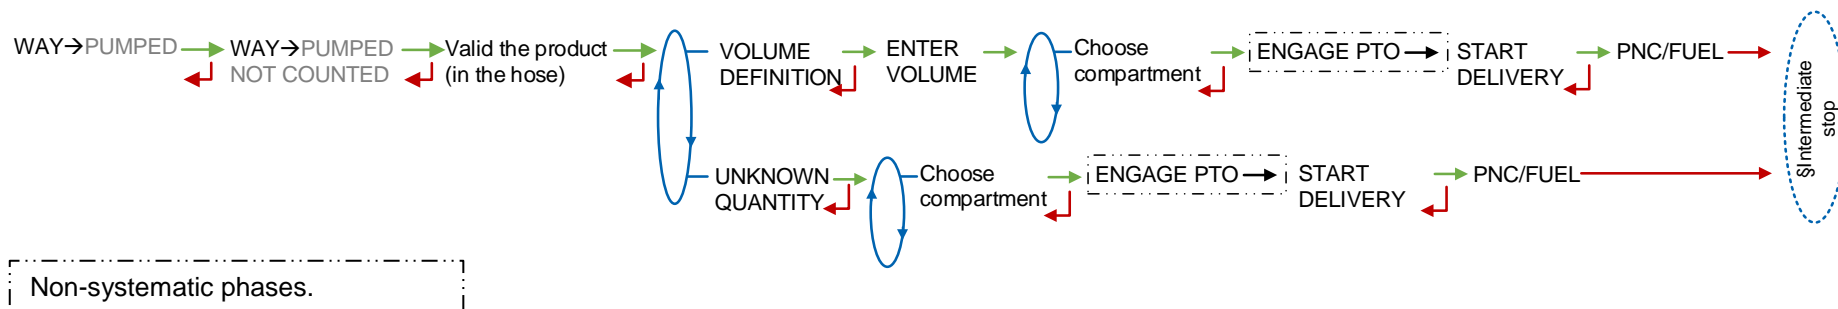


6.1.3 Intermediate stop of the delivery

If it's necessary to move the vehicle, the distribution has to be stopped for a moment, then choose the MOVE VEHICLE item. The GRAVITRONIQUE switches off the power take-off, clutches the engine and freezes the MICROCOMPT+ indicator on DELIVERY PAUSE. Press green OK BUTTON to continue distribution.

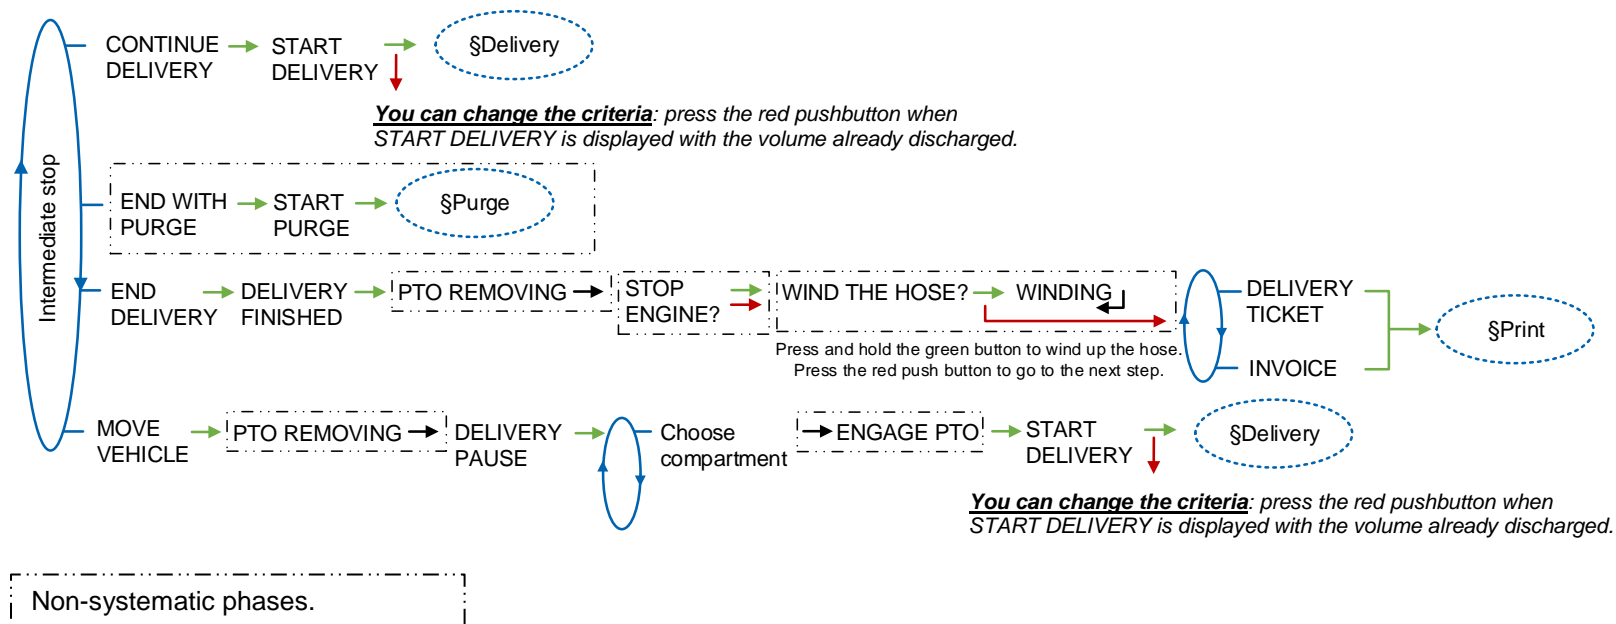


6.1.4 Gravity delivery

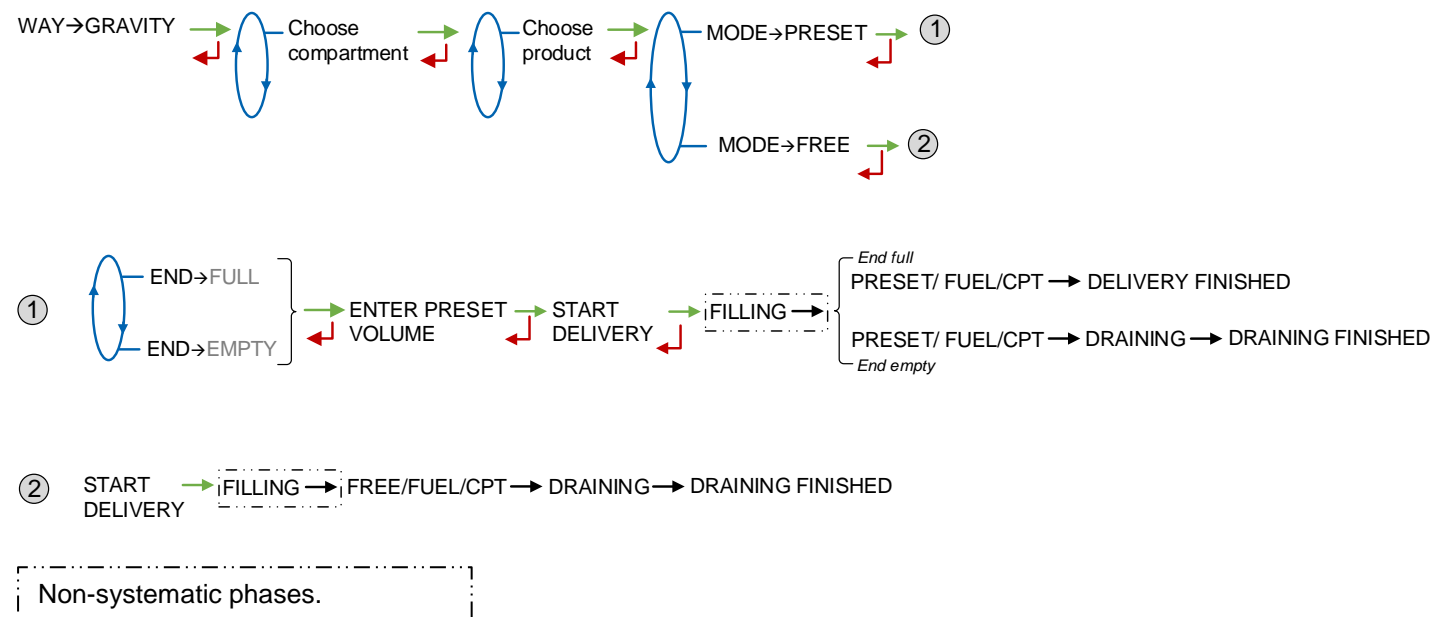

6.2 Menu PRODUCT MOVEMENTS

Product movements HOSE PURGE, PRODUCT TRANSFER and PRODUCT LOADING are performed in low flow rate.

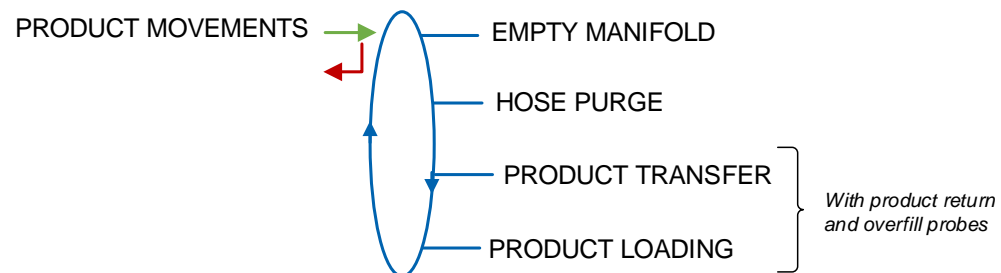


6.2.1 Sub-menu EMPTY MANIFOLD

This operation is possible if the collector is instrumented with piloted flaps and connected to the compartments roof (gaseous atmosphere). This sequence is used to prevent any mixture of product. The draining is recorded in the summary '(V)DRAINING'.

WAY→PUMPED: This release procedure is used to empty the manifold to the vacuity sensor. The quantity taken into account corresponds to the release quantity.


WAY→GRAVITY: This draining procedure is used to empty manifold to the gravity valve. The quantity taken into account corresponds to the fixed quantity.

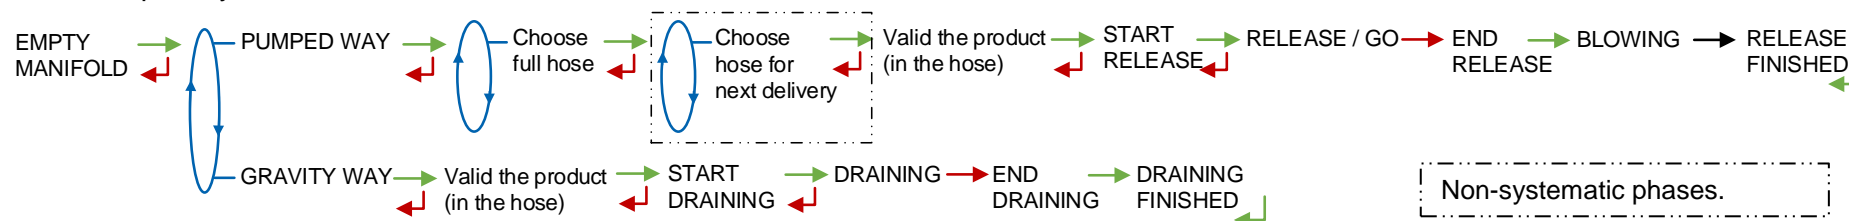

6.2.2 Sub-menu HOSE PURGE

This menu allows purging the hose in order to change the quality of the product. This operation is permitted with the pumped measuring system only.

Operating with blocking contamination, the hose purge must have been completed before starting a new delivery (configuration SUPERVISOR>SETTINGS>VOLUME SETTINGS>BLOCKING CONTAMINATION).

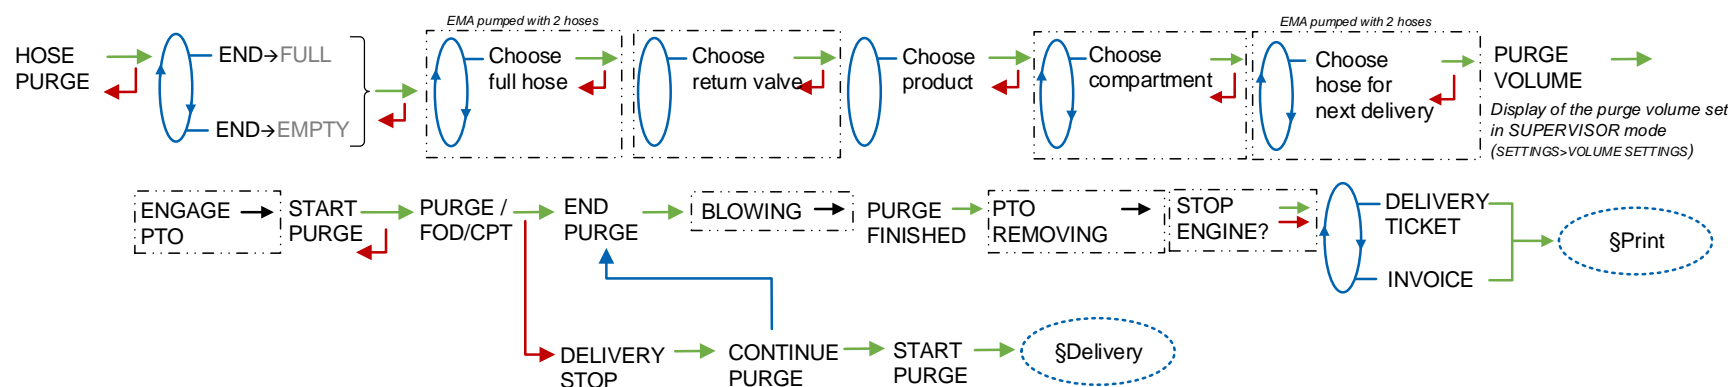


6.2.3 Sub-menu PRODUCT TRANSFER

This menu is used to transfer product from one compartment to another; transfer is performed in low flow rate. This operation is permitted with the pumped measuring system only. It is available when at least one line is set with full hose, product return and overfill probe.




To prevent any contamination, the delivery is made with the product in the line. To use another product, purge the line and repeat the operation.

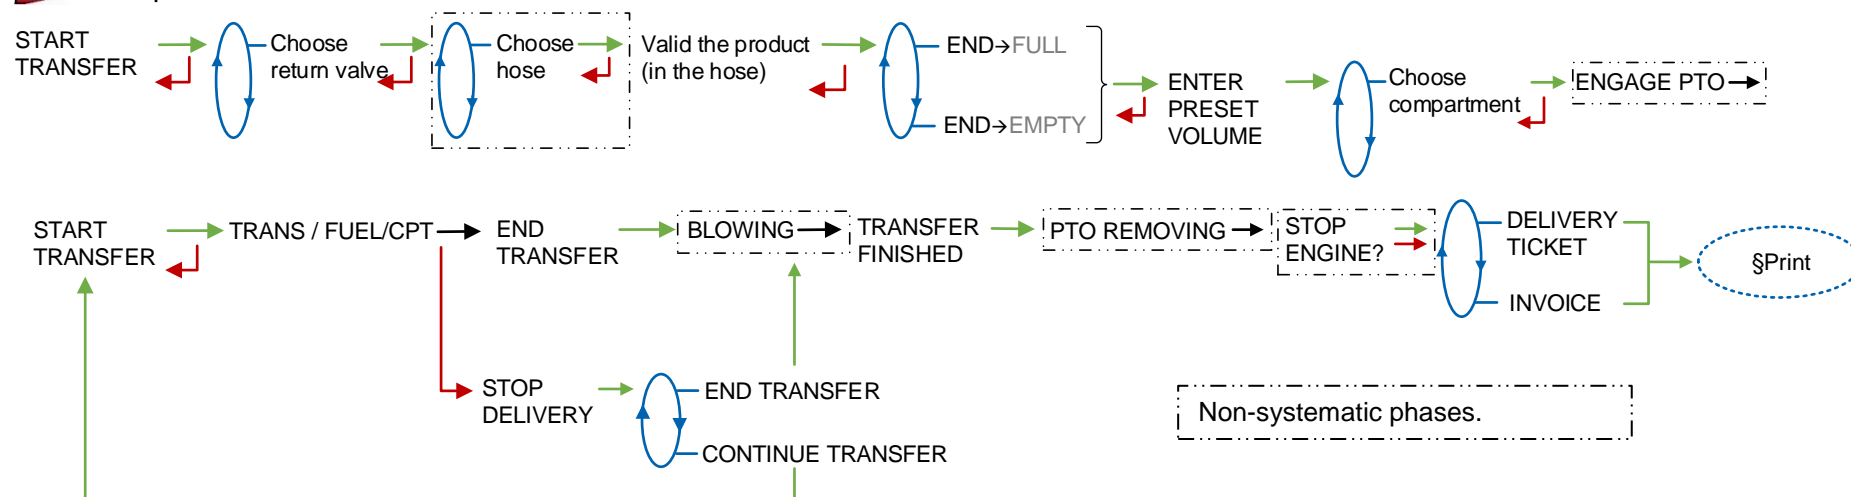

6.2.4 Sub-menu PRODUCT LOADING

This menu is used to do a loading via a product return with the overfill probes set.

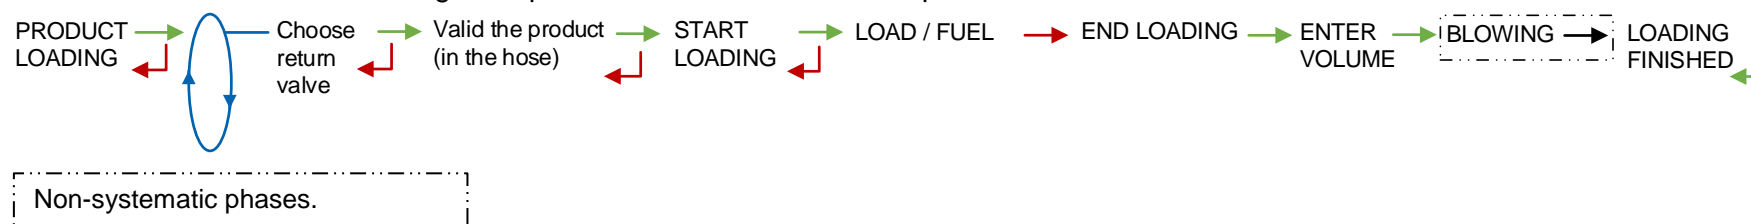

6.3 Menu LOADING PLAN

Depends on METROLOGICAL configuration. Not used if the function has not been activated.

The LOADING PLAN menu is used to display the quality and the quantity of the products available in each compartment according to the information received from the embedded computing or entered manually. The volumes per compartment are be updated as the deliveries and product movements continue. They will be displayed at the compartment selection.


In case of a blocking function, an empty compartment won't be available for a delivery until you enter a new product quality via this menu. A compartment is considered as empty if the end height is reached and if CPT X EMPTY is displayed during the delivery.

The loading plan can be entered manually:


ENTER PLAN: For each compartment, select the product name and set the loaded volume. With DSPGI, the product name is blank. Then you must validate the loaded plan

VALID LOADING PLAN: This step validates the manually entered loading plan.

RESET PLAN: The loading plan can be cancelled by this menu.

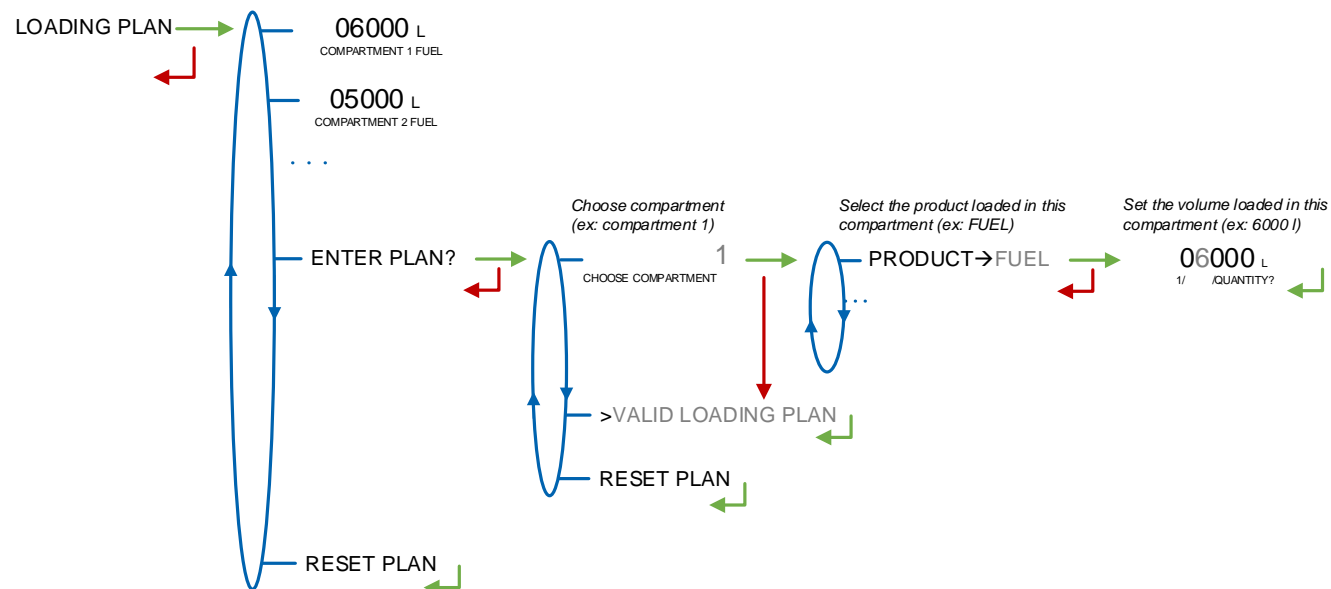

6.4 Menu PRINT

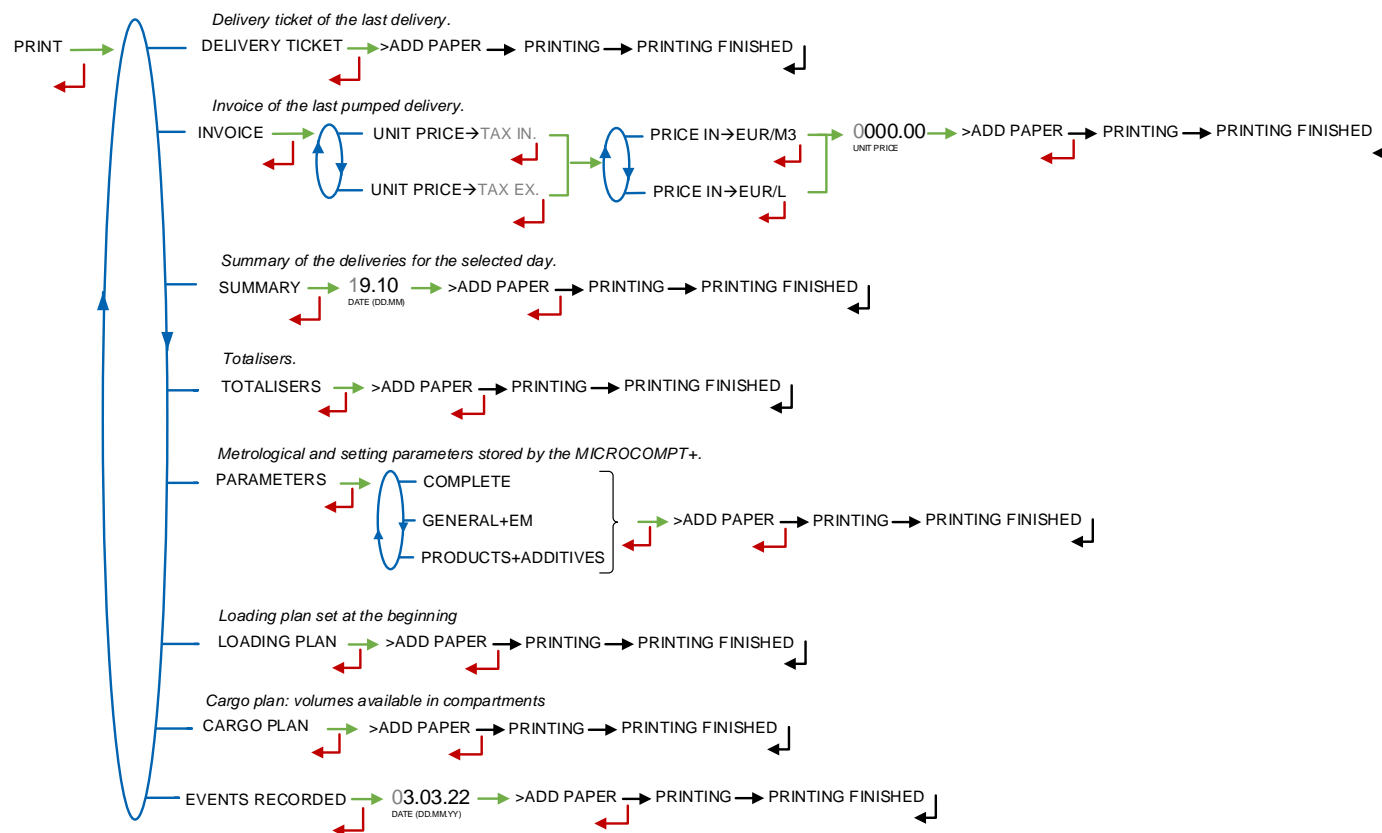

According to the needs, the **PARAMETERS** menu prints all or part of the parameters. Choose the menu:

COMPLETE: The general parameters are printed first, then remove the sheet and add another one to print the parameters of the measuring system (EM), and do the same to print the product and additive parameters. Between each sheet, the message PRINTING FINISHED is displayed. See ADDENDUM 2.

GENERAL+EM: The general parameters are printed first, then remove the sheet and add another one to print the parameters of the measuring system (EM). Between each sheet, the message PRINTING FINISHED is displayed.

PRODUCTS+ADDITIVES: Printing of the product and additive parameters

6.5 Menu DISPLAY

This menu is available in stand-by mode or during an intermediate stop. It allows the proofreading of totalisers and measurement results.



6.5.1 Sub-menu TOTALISER(S)

Display of the totaliser(s). Vb is available when conversion is active.




6.5.2 Sub-menu MEMORY

You can read all the measurement results stored by the GRAVITRONIQUE. That can be done in two ways:

COMPLETE LIST: Display all the measurement details recorded, from the newest to the oldest, sorted by day then by measurement number.


DAY SELECTION: Display a specific measurement by selecting the day number.

For each measurement, are displayed: the product number, the name of the product, the measured quantity.

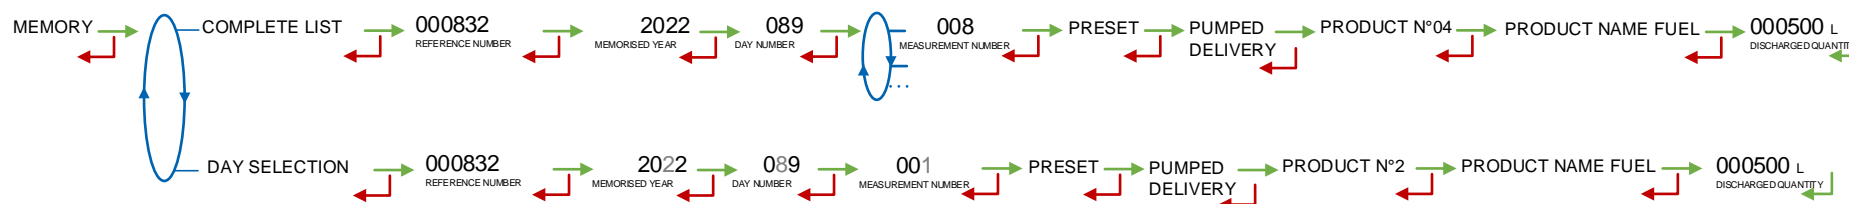

6.6 Menu MAINTENANCE

This menu depends on the configuration of the measuring system

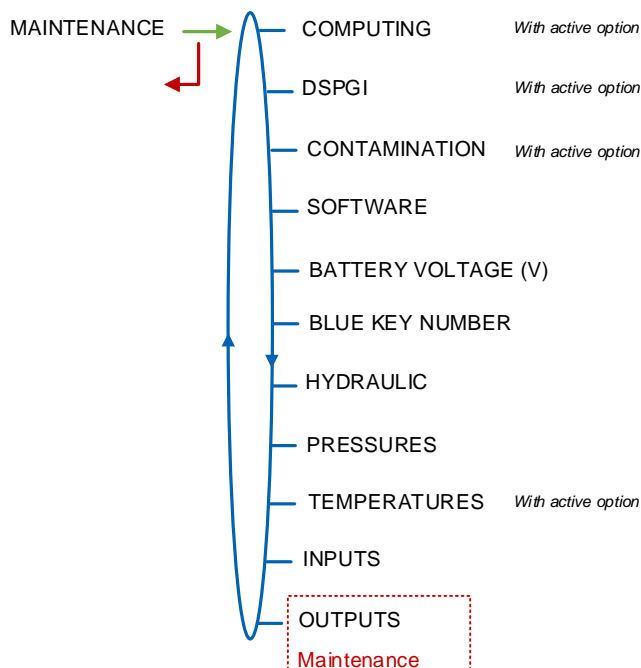


The access to the red boxes menus is restricted to the Maintenance with a red key.

6.6.1 Sub-menu COMPUTING

With active option: SUPERVISOR>COMPUTING→ON

In case of embedded computing failure, choose COMPUTING>WITHOUT EC (DEGRADED) to operate without embedded computing

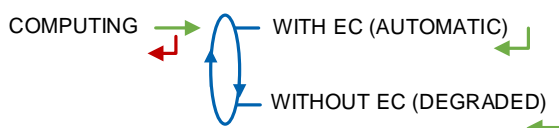


6.6.2 Sub-menu DSPGI

With active option:

SUPERVISOR>DSPGI→ON>DSPGI BLOCKING→ON>ON→WITH DEGRADED.

When the DSPGI is faulty, choosing WITHOUT DSPGI (DEGRADED) is used to temporarily force a non-blocking DSPGI operation in order to perform or complete an operation. At the end of this operation, the initial situation is restored.

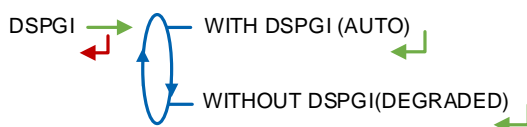


6.6.3 Sub-menu CONTAMINATION

With active option:


SUPERVISOR>SETTINGS>VOLUME_SETTINGS>CONTAMINATION>BLOCKING C.→ON>
ON→WITH DEGRADED.

In case of a hose contamination, choosing WITHOUT (NOT BLOCKING) is used to temporarily force a non-blocking operation in order to perform or complete an operation. At the end of this operation, the initial situation is restored.

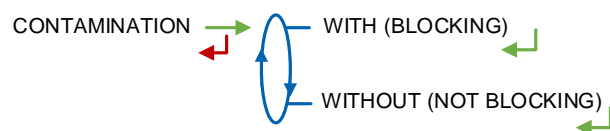

6.6.4 Sub-menu SOFTWARE

Display the software version of the boot loader and the app.

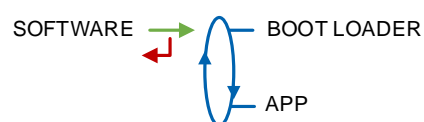

6.6.5 Sub-menu BATTERY VOLTAGE

Display the voltage of the battery.




6.6.6 Sub-menu BLUE KEY NUMBER

Display number of the blue key associated to the MICROCOMPT+.



6.6.7 Sub-menu HYDRAULIC


This menu is used to display the product quality contained in the different parts of the pipe.

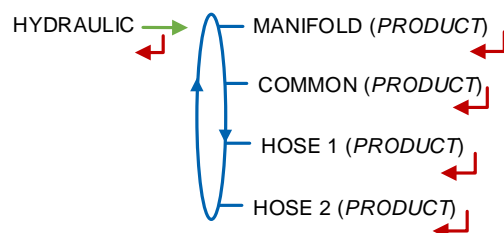

6.6.8 Sub-menu PRESSURES

LIQUID HEIGHT: Gives the height of the product in each compartment with instrumented flaps.

PRESSURE DROP COEFF: Gives the pressure drop coefficient.

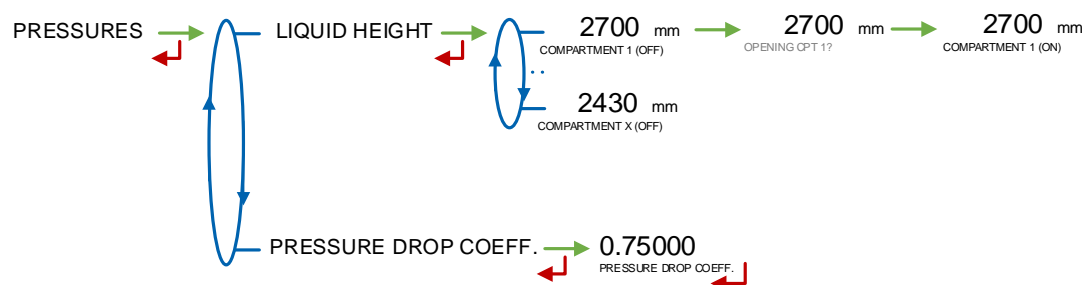

6.6.9 Sub-menu TEMPERATURES


With active option: METROLOGICAL>EMX>TEMPERATURE→ON

Gives the product instantaneous temperature.



6.6.10 Sub-menu INPUTS

Display the status of the inputs to ease maintenance.

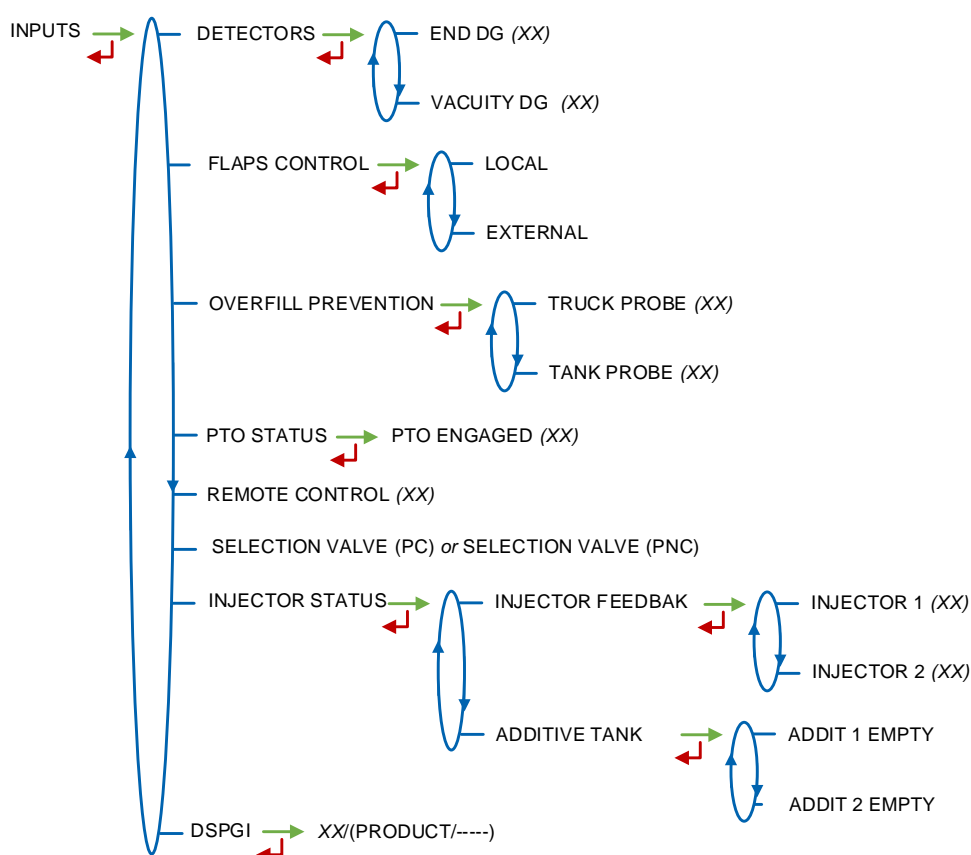

DETECTORS: Status of the gas detectors used as end-of-metering probe and vacuity sensor.
 DRY / WET / FAILURE

FLAPS CONTROL: Flaps position

OVERFILL PREVENTION:

- **TRUCK PROBE:** Status of the truck overfill probe. With the METROLOGICAL option: CONFIGURATION>INSTRUMENTATION>OVERFILL PREVENTION>TRUCK PROBE>CONTROL→LOCAL
- **CUSTOMER TANK:** Status of the customer overfill probe. With the METROLOGICAL option: CONFIGURATION>INSTRUMENTATION>OVERFILL PREVENTION>CUSTOMER TANK→ON

PTO STATUS: Status of the power take-off. With the METROLOGICAL option: CONFIGURATION>INSTRUMENTATION>PTO

REMOTE CONTROL: Status of the remote control. STANDBY, ES: Emergency stop, LF-HF: low flow-high flow or R-S: run-stop

SELECTION VALVE (PC) or SELECTION VALVE (PNC): Only with the pumped counted/pumped mode activated on a measuring system. Position of the selection valve on pumped counted or pumped not counted

INJECTOR STATUS:


- **INJECTOR FEEDBACK:** Status of the injectors feedback: OFF/ON
- **ADDITIVE TANK:** Empty additive tanks: OFF/ON.

DSPGI: Number of the compartment associated to the DSPGI and name of the product.

6.6.11 Sub-menu OUTPUTS

Access restricted to the Maintenance with red key.


According to the configuration: Display and driving of the outputs. Press the green pushbutton to change the output status OFF/ON.

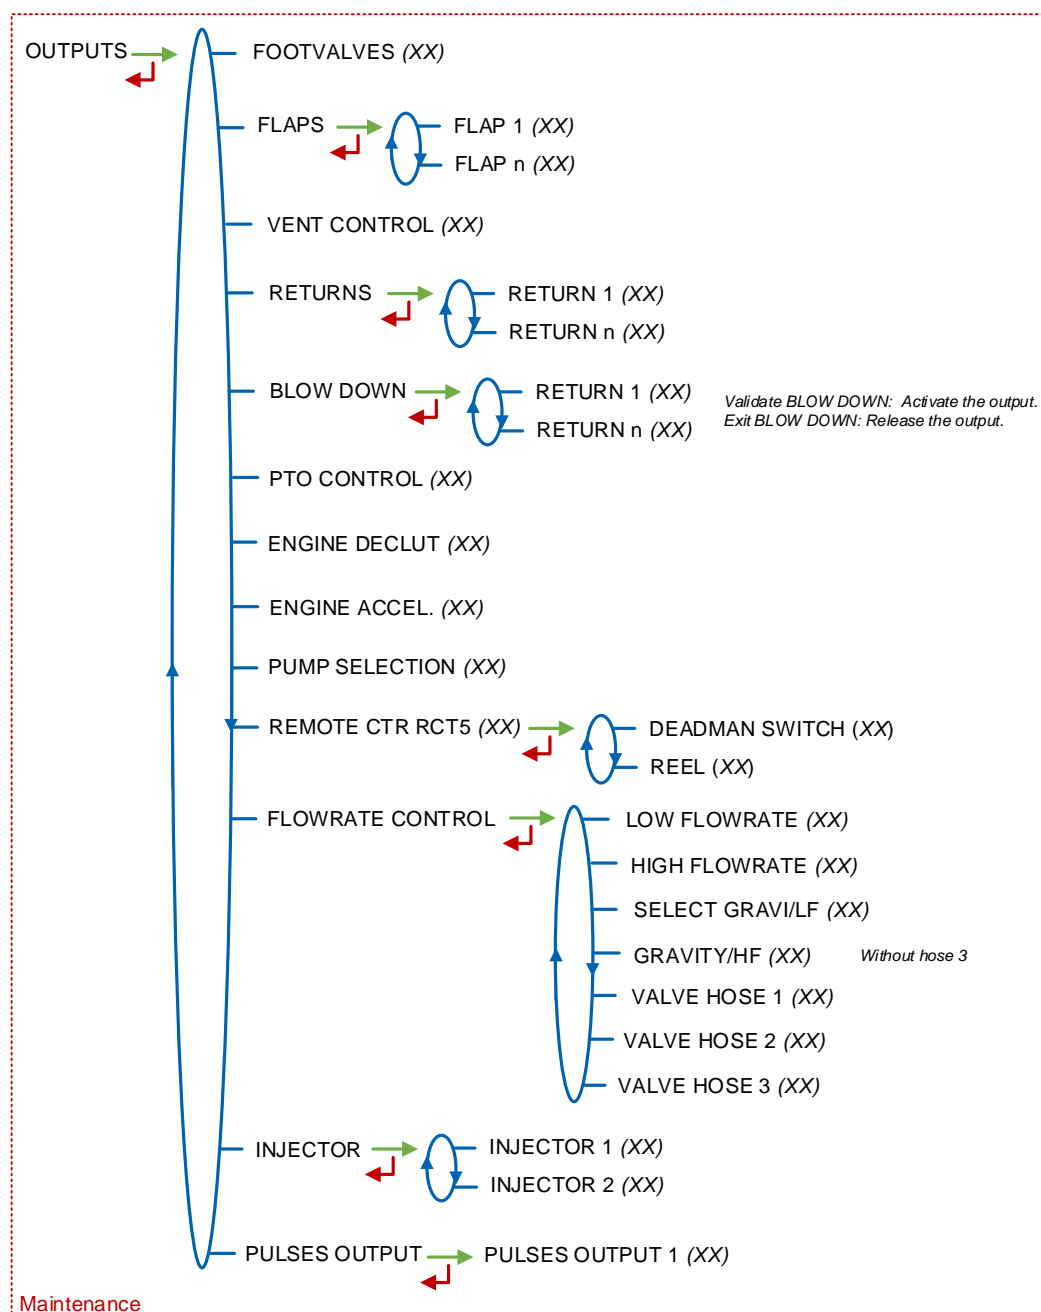

6.7 List of alarms

		DISPLAY	MEANING	ACTION
USER	COMMON	DELIVERY STOP	Intentional interruption of the discharge	Continue, stop or finish delivery or product return
		EMERGENCY SHUTDOWN	Emergency stop triggered by remote control	Continue, stop or finish delivery or product return
		EC COMM.DEFAULT	Communication problem with the embedded computing	Try again and switch to degraded mode if the problem persists. COMPUTING→WITHOUT EC (DEGRADE)
		PRINTER DEFAULT	Communication with the printer lost	Make sure the connections are ok: cable, on-off switch and fuse
		The ticket is jammed	Jammed paper in the printer	Use the RELEASE button to eject the paper
		POWER SUPPLY PROBLEM	Power outage during operation	Check the cause / Restore power supply
		PTO DEFAULT	Inconsistency PTO return / run command	Check the power take-off status in the driver's cab
		DSPGI DEFAULT	Communication problem with the DSPGI	Make sure the DSPGI device is in operation
		INCOHERENCE WAY C/NC	Inconsistent choice for Pumped Counted/Pumped Not Counted circuit	Make sure the manual selection valves are well-positioned
		OVERFILL DEFAULT	Overfill detected on a compartment	Transfer the product in another compartment
		PURGE NOT FINISHED	The purge sequence is not finished	Finish the purge of the manifold (and/or hose)
		FLOW PUMP DEFAULT	No flow after switching on the pump	If necessary, adjust the timer parameter
		ADDITIVATION FAULT	Problem with the additive system (cannot be managed properly)	Check the additive system
		ADDITIVE Y LOW LEVEL	(Y=1 or 2) Low level of the additive tank	Fill the additive tank
		ADDITIVE Y CONTROL	(Y=1 or 2) Non-guaranteed injection of the additive rate	Check the hydraulic system
		OVERFILL CLIENT DEF.	Overfill detected on the customer tank	End delivery
	EMA	EMA LOW FLOW DEFAULT	Flow<Qmin consecutively during 0,2*MMQ	Check the parameters and the hydraulic system (valve, strainer, nozzle...)
		EMA HIGH FLOW DEFAULT	Flow>Qmax consecutively during 3 sec	Check the parameters / Reduce flowrate
		EMA METERING PROBLEM	Inconsistency of metering channels	Make sure the pulse emitter indicators are blinking and the wiring is well done / Change the pulse emitter if required
		EMA PULSES PROBLEM	Problem with the metering pulses	Make sure the pulse emitter indicators are blinking and the wiring is well done / Change the pulse emitter if required
		EMA TEMPER. DEFAULT	Temperature determination failure T<Tmin or T>Tmax	If steady alarm, see a reparator for trouble shooting
		EMA K-FACTOR DEFAULT	Deviation between coefficients K1 and K2 greater than 0.5%	Change the low-flow coefficient (K1)
		EMA TOTALISER LOST	Totalisers integrity problem	Substitution of the backup battery
		EMA PRESSURE DEFAULT	Pressure sensor out of range 4/20 mA	If steady alarm, see a reparator for trouble shooting
		EMA DG-3001 DEFAULT	Problem with the gas detector	Use the maintenance menu to do a check of the detector status
		EMA CONVER. DEFAULT	Problem during volume conversion	Make sure the set density is consistent
REPARATOR	COMMON	LEAK DETECTED	Metering detection without measurement	Make sure the check valve is tight
		GAZ DETECTED	Detection of air during high flow delivery	See a reparator for troubleshooting
		DISPLAY DEFAULT	Integrity problem between the display and the display RAM proofreading	If steady alarm, substitution of the display card
		WATCHDOG DEFAULT	Triggering the watchdog function	Switch on-off the MICROCOMPT+ If steady alarm, substitution of the faulty card If steady alarm, substitution of the faulty card
		DATE AND TIME LOST	Problem with the clock	Set date and time
		DIARY DEFAULT	The events diary is lost	Acknowledge the alarm, make sure the date is ok If steady alarm, substitution of the backup battery
		MEMORY LOST	The measurements diary is lost	Acknowledge the alarm (enter then exit the metrological mode) If steady alarm, substitution of the backup battery Acknowledge the alarm (enter then exit the metrological mode) If steady alarm, substitution of the backup battery
		MEMORY OVER LOADED	Measurement storage area saturated (too many registrations over 90 days)	Acknowledge the alarm (enter then exit the metrological mode) If steady alarm, substitution of the backup battery
		BOOT LOADER DEFAULT	Inconsistency between the app and the version of the boot loader	Match the application software with the boot loader
		PARAMETER LOST	No more integrity of a secured memory area (SUPERVISOR parameters, preset end coeff...)	Acknowledge the alarm If steady alarm, substitution of the backup battery
		EEPROM MEMORY FAIL	Loss of metrological parameters	Substitution of the AFSEC+ electronic card
		SAVE MEMORY DEFAULT	Integrity problem with memorized data	Substitution of the AFSEC+ electronic card
		FRAME WORK DEFAULT	Integrity problem with software	Substitution of the AFSEC+ electronic card


7 SET THE GRAVITRONIQUE: SUPERVISOR MODE

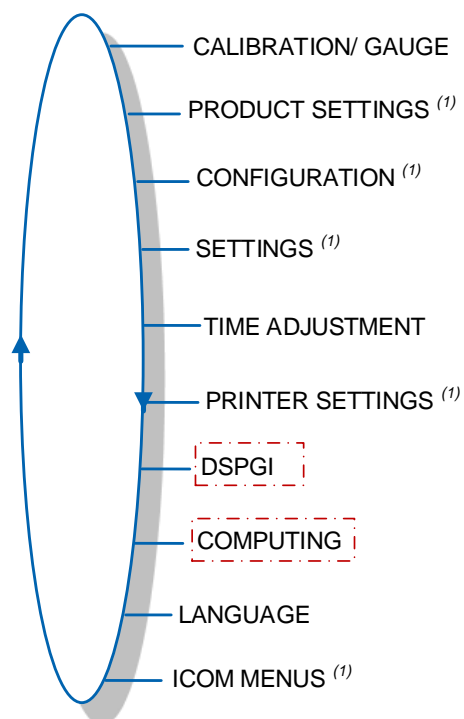


The access to the red boxes menus is restricted to the Maintenance with a red key.

(1): The sub-menus are different according to the level of access: Level-User, Level-Manager and Level-Maintenance.

7.1 Menu CALIBRATION/ GAUGE

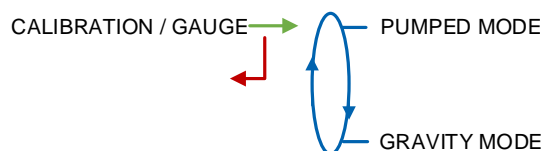

7.1.1 Sub-menu PUMPED MODE

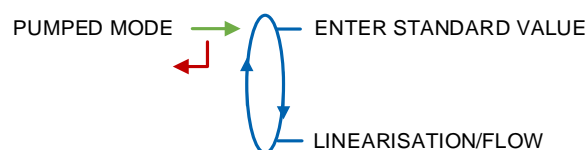


7.1.1.1 Enter standard value

This menu allows you to check the accuracy of the measuring system by calculating the measuring device error, the new corrected coefficient and the average flow.

First, make a discharge (USER mode) in high or low flow with predetermination of the volume to fill a tank prover or through a master meter.

Switch to SUPERVISOR mode, select CALIBRATION/GAUGE>PUMPED MODE>ENTER STANDARD VALUE and validate.

	MU 7071 EN F GRAVITRONIQUE	Page 35/61
	This document is available on www.alma-alma.fr	

Enter the reference volume (read on the gauge and corrected), then validate. The MICROCOMPT+ displays the information that follows:

- The signed error in percent (%)
- The coefficient revised as a function of the error
- The average flow of the delivery.

ENTER STANDARD VALUE → 01001.4 L → -00.33 → 09.9668 → 27.3 m³/h

ENTER QUANTITY (REF) ERROR (PERCENT) COEFFICIENT (PL) AVERAGE FLOWRATE

7.1.1.2 Linearisation/Flow

This menu is used to make a flow-correction for two measuring points (at low and high flowrate). The MICROCOMPT+ stores flowrate and coefficient calibrated values in order to define both correction points at low and high flowrate.

When you validate the menu LINEARISATION/FLOW, the calibrated values are displayed; you need to unseal the MICROCOMPT+ to switch in METROLOGICAL mode and enter the values via the EMA>METER COEFFICIENT menu.

To linearize the curve, two tests are necessary:

- Fill the gauge in high flow [$\text{flowmin} \times 3 \leq \text{high flow} < [\text{flowmax}]$], and enter the volume read on the gauge (or use a master meter) in the menu CALIBRATION/GAUGE>PUMPED MODE>ENTER STANDARD VALUE as described above
- Fill the gauge in low flow [$\text{flowmin}] \leq \text{low flow} < [\text{flowmin} \times 1.5]$], and enter the volume read on the gauge in the menu CALIBRATION/GAUGE>PUMPED MODE>ENTER STANDARD VALUE
- Choose CALIBRATION/GAUGE>PUMPED MODE>LINEARISATION/FLOW and validate. It is then possible to see the coefficients and the flow rates data for the two tests carried out.

LINEARISATION/FLOW → 0.9.9890 → 5.3 → 09.9845 → 29.6 m³/h

LF COEFFICIENT (K1) LOW FLOW HF COEFFICIENT (K2) HIGH FLOW

If the procedure failed, the MICROCOMPT+ can display the information that follows:

- LARGE GAP K1/K2: Correction between both measuring points >0.5%
- FLOWS TOO CLOSE: High flowrate value is out of range. It needs to be [$\text{flowmin} \times 3 \leq \text{high flow} < [\text{flowmax}]$].
- LO-FLOW OUT OF RANGE: Low flowrate value is out of range. It needs to be [$\text{flowmin}] \leq \text{low flow} \leq [\text{flowmin} \times 1.5]$]
- ONLY ONE STANDARD: One of the tests has not been done (at low or high flowrate)
- NO VALID STANDARD: Both tests have not been done (at low and high flowrate).

When the procedure is completed, the MICROCOMPT+ displays the sequence that follows:

VALID COEFFICIENTS → REMOVE THE SEAL → PUT BACK THE SEAL

The new coefficient and flow rates values are taken into account.


7.1.2 Sub-menu GRAVITY MODE

This menu is used to do a check of the accuracy of the measuring system.


First, make a gravity discharge (USER mode) to fill a tank prover or through a master meter.

Enter the reference volume (read on the gauge and corrected), then validate. The MICROCOMPT+ displays the information that follows:

- The signed error in percent (%)
- The signed correction in percent. This correction is applied to the pumped coefficient. If necessary, unseal the device to change the value in menu EMA (GRAVITRONIQUE)>METER COEFFICIENT>GRAVITY MODE
- The average flow.



7.2 Menu PRODUCT SETTINGS

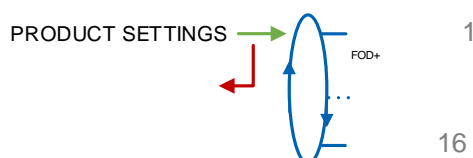

You can configure 16 different products. Default names of the first six products: FOD+, FOD, GO+, GO, GNR+, GNR.

NAME: Record or enter the name of the product

DENSITY AT XX: With active conversion. XX is the reference temperature set in menu METROLOGICAL>CONFIGURATION>CONVERSION>DENSITY TEMP. (REF). Set the density in Kg/m³

PRODUCT TYPE: Definition of product characteristics (petrol, colored, 10PPM, additive)

UNIT PRICE/DEF: Enter the numeric value of the default unit price

U. P.: Select if the price includes taxes or not

PRICE IN: Select the unit of the price. This menu depends on the currency set in menu CONFIGURATION>CURRENCY

VAT RATE: Record the tax rate (in %).


ADDITIVE SETTINGS – Access restricted to the Maintenance with red key. If the GRAVITRONIQUE controls an additive injection device, you must configure the parameters that follow:

- **VOLUME/PULSE:** Record the volume of primary product. For example “00200”: the GRAVITRONIQUE puts a dose of additive every 200 liters of primary product (minimum value: 10L).
- **INJECTOR:** The number of injectors depends on the configuration METROLOGICAL>INSTRUMENTATION>ADDITIVE INJECTOR.
- **ADDITIVE DOSE:** Record the volume of the additive dose in liter.


CORRECTION: Select if the correction is ON or OFF for the product (see METROLOGICAL>EMA>VISCOSITY CORRECTION).

DSPGI CODE – Access restricted to the Maintenance with red key. Assign the DSPGI code to each product quality (with active option: SUPERVISOR>DSPGI→ON).

Example for product 1 FOD+:

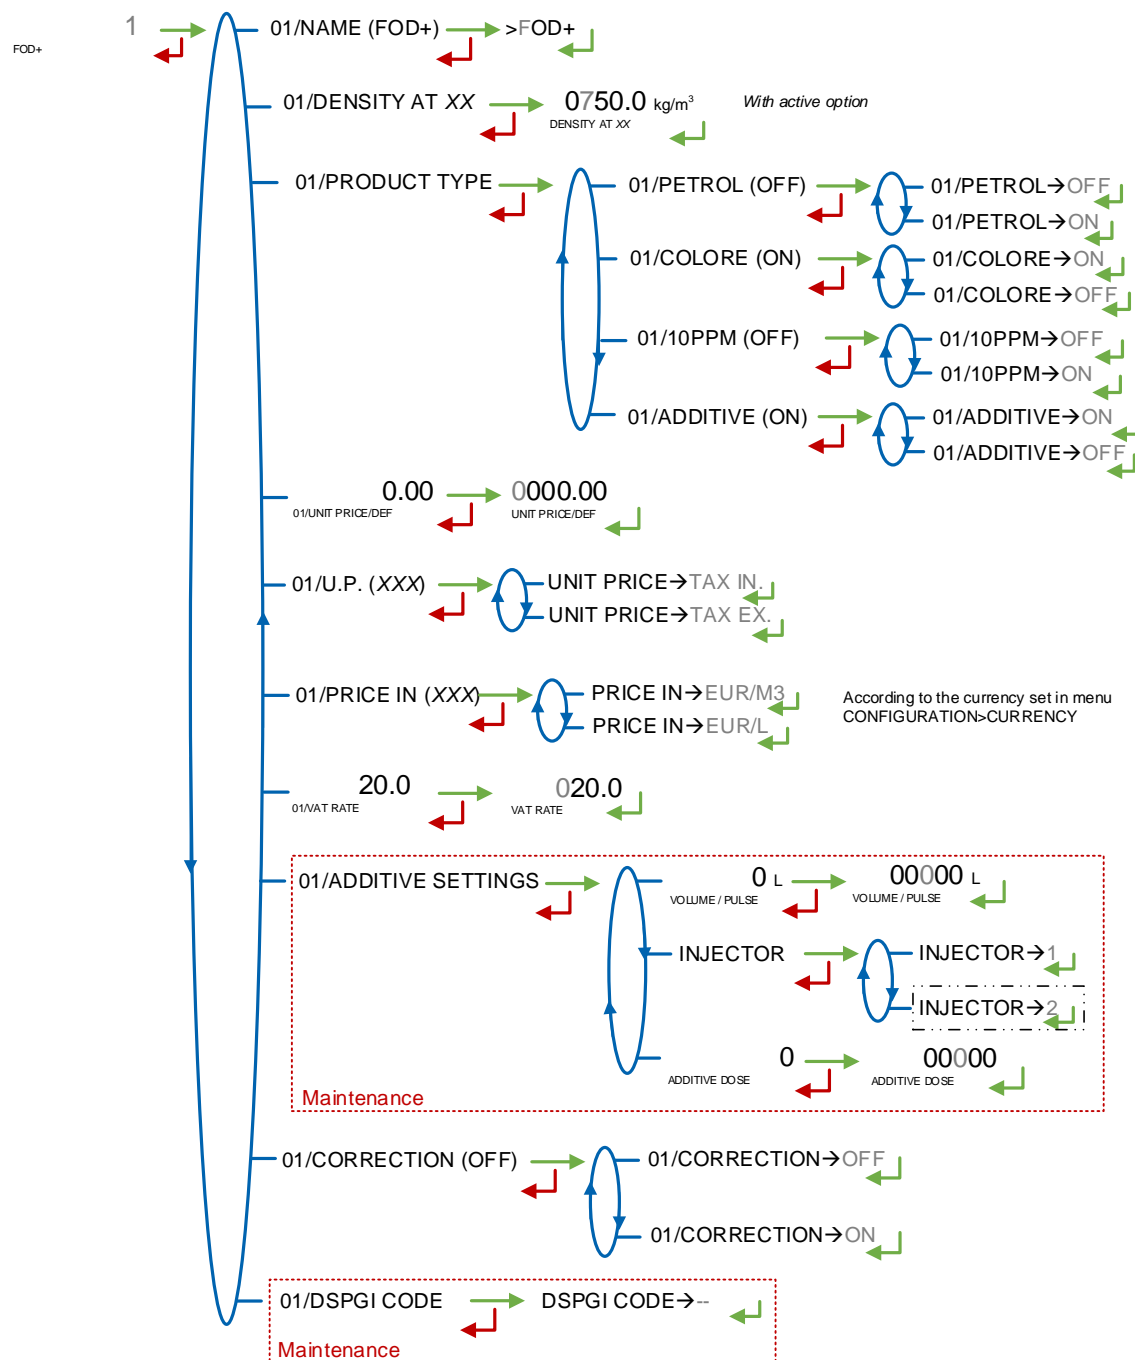


7.3 Menu CONFIGURATION

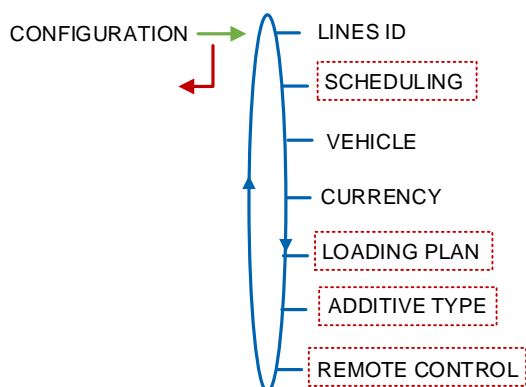

7.3.1 Sub-menu ID LINES

This menu is available when the GRAVITRONIQUE manages two or three hoses (CONFIGURATION>DUAL OPTION→OFF>EMA→GRAVITRONIQUE>). Validate or enter the name of the line. Maximum number of characters: 10.

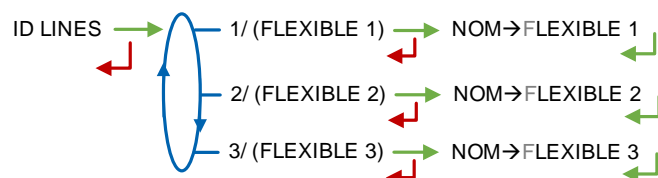

7.3.2 Sub-menu SCHEDULING


Access restricted to the Maintenance with red key

This menu is used to make the automatic scheduling of multi-compartment delivery. It is available if the GRAVITRONIQUE controls at least two compartment flaps.

If scheduling is active, select the array that will be proposed to the user for the compartment selection:

ARRAY→C1--C2--C3: The compartments are displayed from left to right.

ARRAY→C3--C2--C1: The compartments are displayed from right to left.

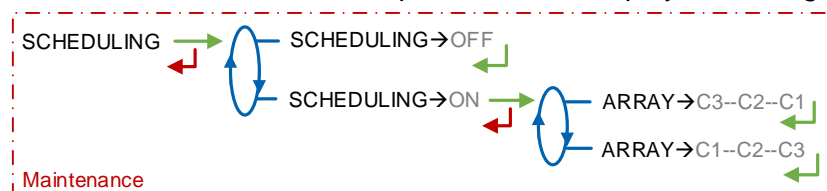

7.3.3 Sub-menu VEHICLE

Enter vehicle identification: set the vehicle registry number on which the measuring system is installed. This number is printed on delivery tickets...



7.3.4 Sub-menu CURRENCY

Record the currency of the price. Set the three-character currency used to edit invoices (according to ISO 4217)

CURRENCY (XX) → CURRENCY → EUR


7.3.5 Sub-menu LOADING PLAN

Access restricted to the Maintenance with red key

This menu is used to operate with loading plan or without loading plan.

LOADING PLAN → ON: When the function is active, a specific menu allows the user to determine the product quality and quantity for each compartment.

- **BLOCKING PLAN → OFF:** When choosing the compartment, there is no restriction of choice. The user chooses a compartment compatible with the requested product
- **BLOCKING PLAN → ON:** When choosing the compartment, only the compartments containing the requested product are proposed. When a compartment is empty, it won't be available for a delivery until the user enters a new product quality via the menu LOADING PLAN of the USER mode.

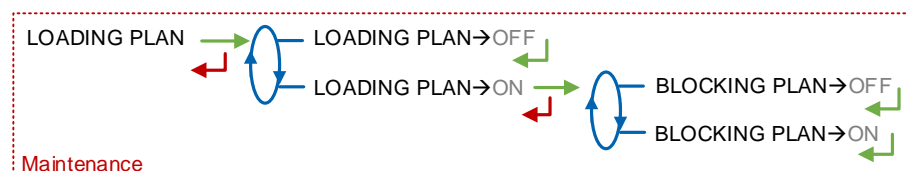

7.3.6 Sub-menu ADDITIVE TYPE

Access restricted to the Maintenance with red key


INJECTOR NB: Choose the injector for configuration. The presence of a second injector is possible only if the number of flaps and returns allows it. See the table in ADDENDUM 1.

Then configure the additive injection with the menus below:

ADDITIVE TIME: Set the duration of the additive control before allowing a new order (in tenth of a second). It corresponds to the control of the actuator to which is added a relaxation of the same duration

FEEDBACK CTRL: If this function is ON, the measuring system makes sure that the injector piston moves.

LEVEL CTRL: If this function is ON, the measuring system controls the additive level in the tank. Low level triggers an alarm.

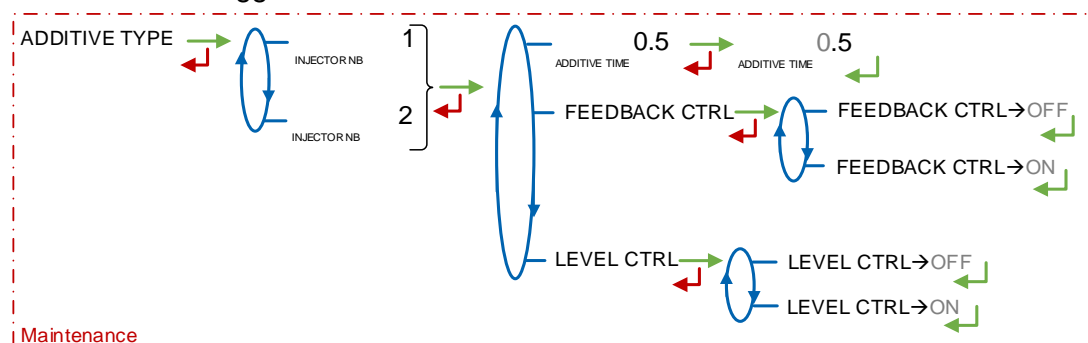

7.3.7 Sub-menu REMOTE CONTROL

Access restricted to the Maintenance with red key


This menu allows you to activate or not the operation with remote control.

REMOTE CTR→OFF: No remote control

REMOTE CTR→RC FIOUL: Activation of the operation with the RC FIOUL remote control


REMOTE CTR→RCT5: Activation of the operation with the RCT5 remote control, See GU 7098.

- **DEADMAN SWITCH:** If the deadman function is activated, enter the timer in seconds. This feature requires the operator to notify his presence periodically by pressing the deadman button on the remote control
- **REEL:** This menu allows you to activate the control of the reel at the end of delivery after the motor has stopped.

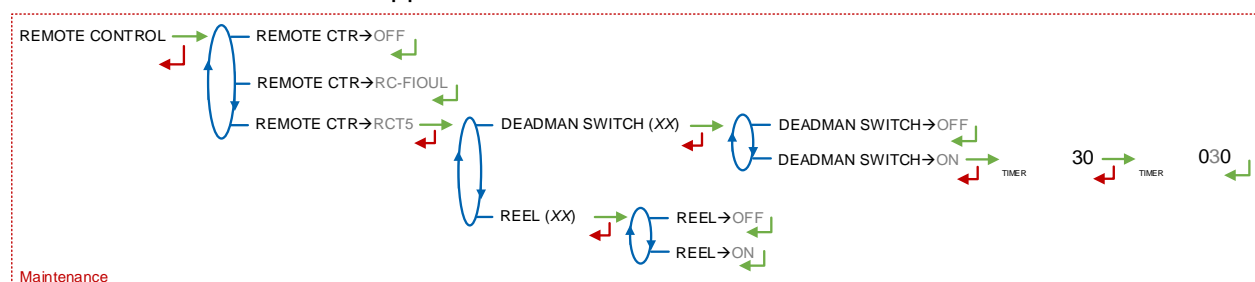


7.4 Menu SETTINGS


The accuracy and the unit of the displayed values are specific to the measuring system and depend on the choices made during the metrological configuration EM>UNIT menu.

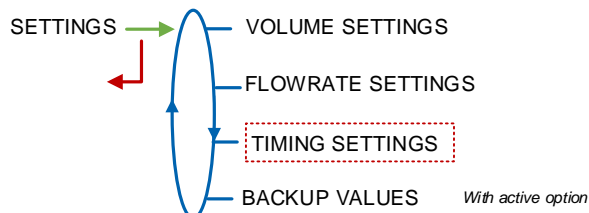


7.4.1 Sub-menu VOLUME or MASS SETTINGS

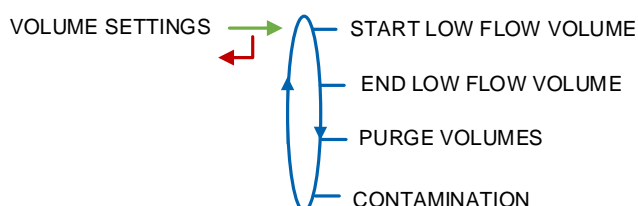

START LOW FLOW VOLUME or START LOW FLOW MASS: Volume or mass delivered in low flowrate before switching in high flowrate.




END LOW FLOW VOLUME or END LOW FLOW MASS: Volume or mass delivered in low flowrate to finish the delivery



PURGE VOLUMES: For volume measurement only (CONFIGURATION>UNIT>QUANTITY→L). The purge volumes depend on the truck hydraulic configuration (manifold, hose...), they are set at commissioning, and they prevent from product contamination.


- **SHARED VOLUME:** V_C . When several hoses are set or only one empty hose. Quantity of product contained in the part of the piping located between the manifold and the hose attachment point. The common volume includes the brewing volume. $V_C \geq 1.5 \times V_B$
- **HOSE 1:** V_F . Quantity of product contained between the manifold and the outlet of the full hose. The hose volume includes the common volume. $V_F = V_C + V_{flexible\ plein}$
- **HOSE 2:** V_F . Quantity of product contained between the manifold and the outlet of the full hose. The hose volume includes the common volume. $V_F = V_C + V_{flexible\ plein}$

BREWING VOLUME: Brewing volume V_B . It corresponds to the quantity of product in the piping for which the quality is indefinite due to the mixture of products.

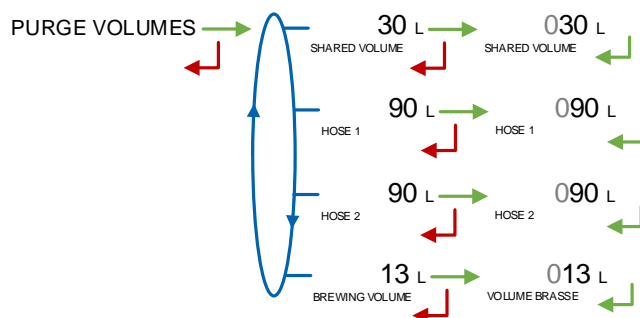

CONTAMINATION:

- **BLOCKING C.→OFF:** Select this option if you want to let the user continue the delivery in case of hose contamination.
- **BLOCKING C.→ON:** Select this option if you want to force a hose purge in case of hose contamination.
 - ON→WITH DEGRADED: This feature is used to suspend the blocking for the current operation through the menu MAINTENANCE>CONTAMINATION
 - ON→WITHOUT DEGRADED: The suspension of the blocking is not allowed.

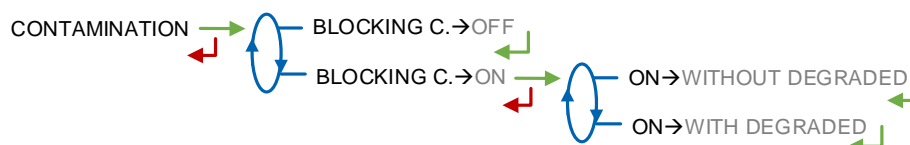


7.4.2 Sub-menu FLOWRATE SETTINGS

You can set the flowrate parameters that follow:

L TO H FLO THRESHOLD: For pumped measuring systems only. Set the flowrate beyond which the measuring system (running in low flowrate) controls the high flowrate.

OBJECTIVE LOW FLOW: With incremental valve only. Set the objective flowrate to regulate the low flowrate.

OBJECTIVE STOP FLOW EH: With incremental valve only. Minimum flowrate to be applied when managing an end of compartment for an empty hose. The default value is the same as the minimum flowrate of the measuring system.

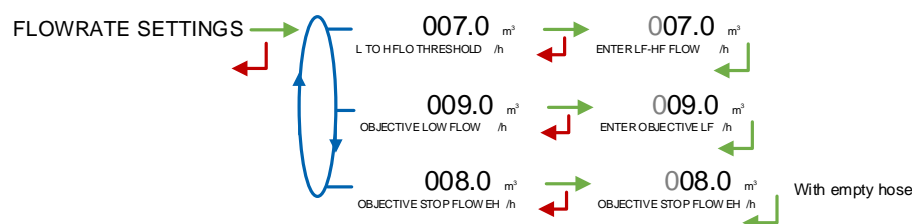

7.4.3 Sub-menu TIMING SETTINGS

Access restricted to the Maintenance with red key

You can set the timing parameters that follow:

BLOWING TIME: Blowing duration for product return probes (in seconds)

MANIFOLD DRAINING: Manifold draining duration (in seconds)

PUMP BYPASS: Choose the hose (if both hoses are set). Set the pump parameters:

- **ZERO FLOW AT PUMP:** Set the maximum permissible duration of the pump in operation at zero flow condition (in seconds). Minimum input value: 60; typical value: 180; 0 disables the function. Recorded on the parameters printing as: Flow timing
- **INPUT TIMING:** With incremental valve only. Set the timing. Default value: 3
- **DEPRESS TIMING:** With incremental valve only. Set the timing. Default value: 3


ANTI-VORTEX STOP(S): Duration of the API adapter closing after an anti-vortex breakdown. Default value: 5 seconds

MANIFOLD FILLING: Filling time of an empty manifold including the wetting time of the gas detectors. Default value: 30 seconds. If the gas detectors are wet at the time of filling, MANIFOLD FILLING is reduced by CONDITIONING.

Dry DG time = MANIFOLD FILLING


Wet DG time = MANIFOLD FILLING - CONDITIONING (with CONDITIONING < MANIFOLD FILLING)

CONDITIONING: Maximum duration before the end-of-metering sensor becomes wet (in seconds). CONDITIONING must be less than MANIFOLD FILLING. Default value: 10 seconds

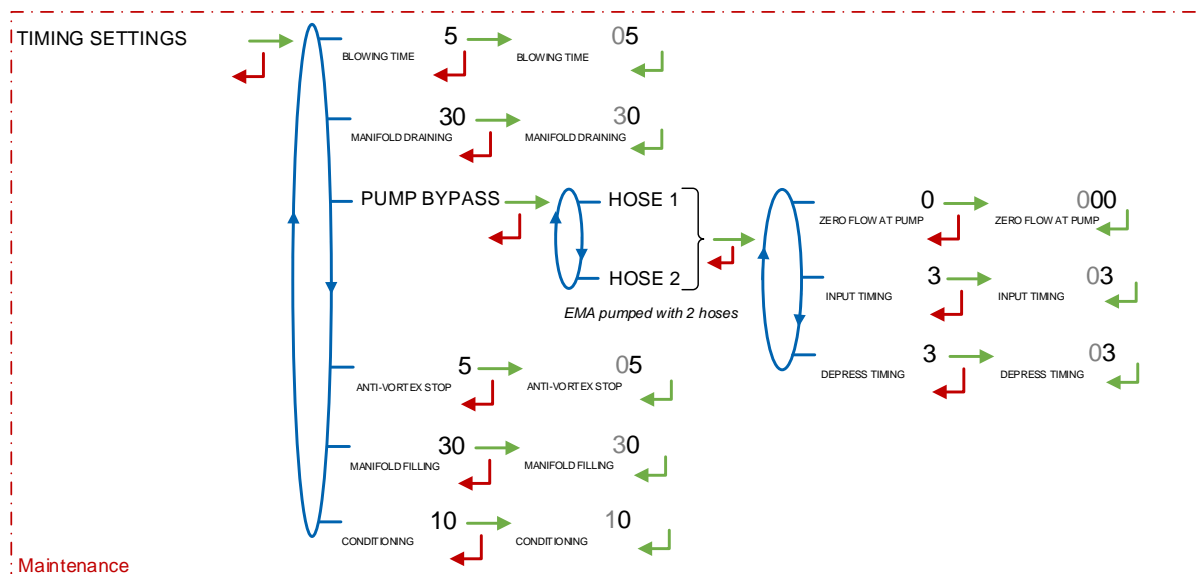

7.4.4 Sub-menu BACKUP VALUES

TEMPERATURE: With active temperature option. Record the backup value for temperature
PRESSURE DROP COEFF. EH: For empty hose operation, the pressure drop coefficient has a constant value.

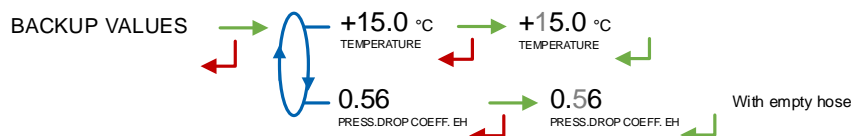

7.5 Menu TIME ADJUSTMENT

Date and time are set in METROLOGICAL mode. You can adjust time ($\pm 2h$) one time a day. Use French format, for example: 14.41 means 2.41 pm.



7.6 Menu PRINTER SETTINGS

This menu is used to configure printing options.

TOTALISER VOLUMES: With active conversion. Choose the volume to print


TICKET: Choose the ticket format for printing the delivery ticket.

- **TICKET→STANDARD:** Single-product delivery. The product chosen for the first measurement will be imposed for all measurements of the delivery
- **MULTIPRO→TICKET:** For gravity multi-products delivery. Allows the measurement of different products within the same delivery (no-customizable generic ticket)

EJECT: Choose to eject or not the sheet of paper at the end of printing (allowing the embedded computing to print its part). In case of printing default, use the 'RELEASE' button of the printer device to eject the sheet manually.

FORCED TICKET: Access restricted to the Maintenance with red key. At the end of delivery the printing of the delivery ticket or invoice printing is proposed. It is possible to force the printing by choosing FORCED TICKET→ON.

SUMM – Access restricted to the Maintenance with red key. Choose to make appear or not details of the deliveries when printing the summary.

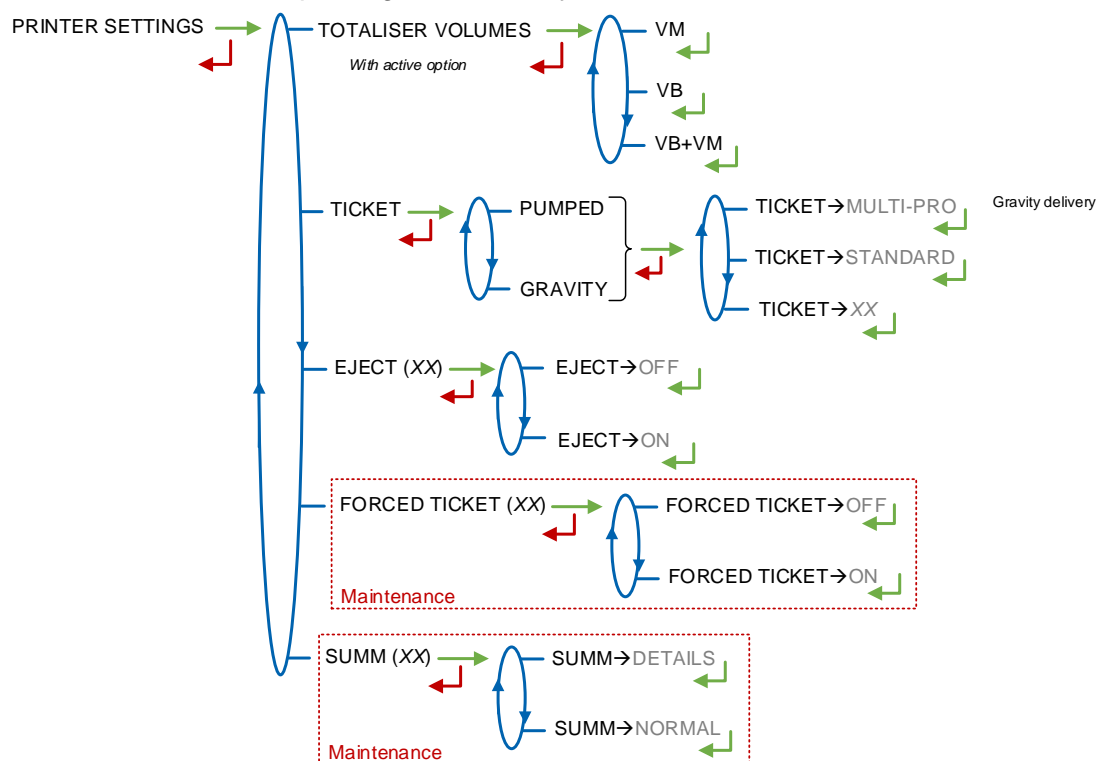

7.7 Menu DSPGI


Access restricted to the Maintenance with red key

This menu is used when the compartments are equipped with DSPGI devices.

DSPGI→ON: The option is activated. When choosing the compartment, only the compartments containing the requested product are proposed.

- **DSPGI BLOCKING→OFF:** If no compartment matches, the message NO COMPARTMENT is displayed. Pressing the green push button unlocks all compartments, the delivery sequence continues. In addition, a delivery can be made even if the DSPGI does not respond
- **DSPGI BLOCKING→ON:** Make this choice to make any mixture of product impossible. Two settings are possible:
 - **ON→WITH DEGRADES:** This feature is used to suspend the blocking for the current operation through the menu MAINTENANCE>CONTAMINATION. The non-blocking operation described above is then applied
 - **ON→WITHOUT DEGRADED:** This feature blocks all operations if all conditions are not met

EMPTY CODE: Assign a DSPGI code to an empty compartment.

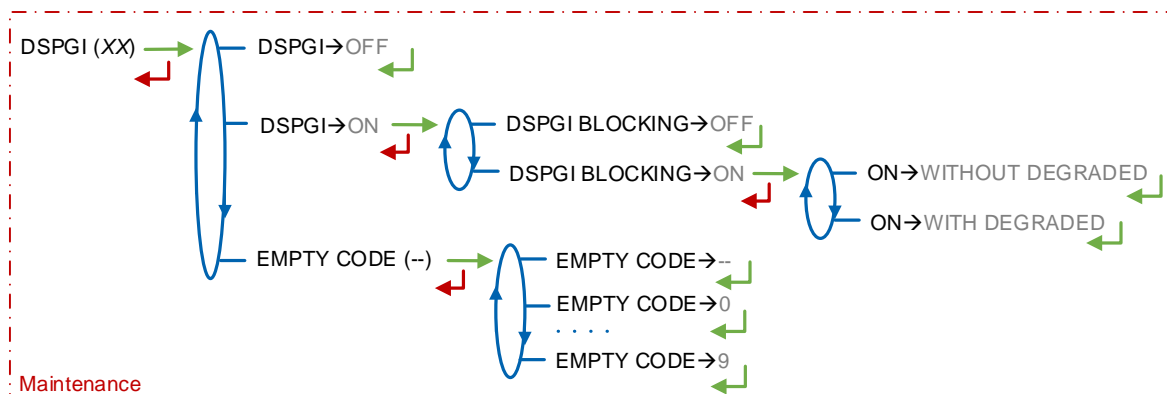

7.8 Menu COMPUTING


Access restricted to the Maintenance with red key

Operation with or without embedded computing. The operation with embedded computing imposes single-product deliveries (the product chosen for the first measurement will be imposed for all the measurements of the delivery). Activating the feature gives access to the following submenus.

PRINTER:


- **PRINTER→WITH:** The delivery ticket and the invoice must be printed via the embedded computing. They cannot be printed via the MICROCOMPT+.
- **PRINTER→WITHOUT:** The delivery ticket and the invoice must be printed via the MICROCOMPT+.

PRODUCT CODE: This menu allows activating or not the control of the product codes by the embedded computing

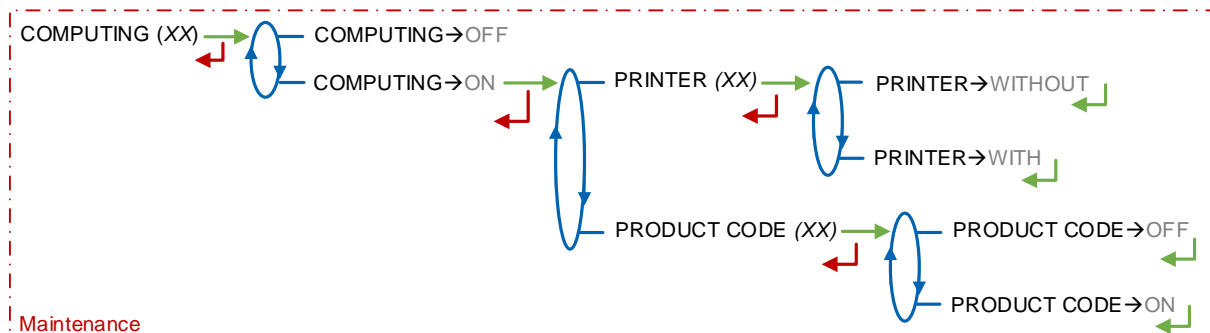

7.9 Menu LANGUAGE

Select the display language. This menu is available if a translation catalogue is uploaded in the MICROCOMPT+.

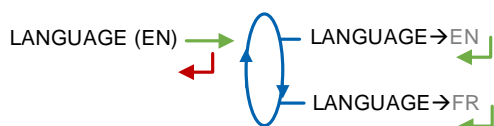


7.10 Menu ICOM MENUS

The attached document ANX 0001 shows the available submenus.

	MU 7071 EN F GRAVITRONIQUE	Page 46/61
	This document is available on www.alma-alma.fr	

8 CONFIGURE THE GRAVITRONIQUE: METROLOGICAL MODE

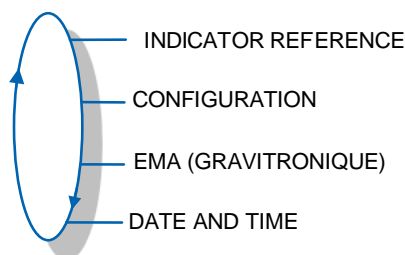


8.1 Menu INDICATOR REFERENCE

Record the MICROCOMPT+ serial number.



8.2 Menu CONFIGURATION

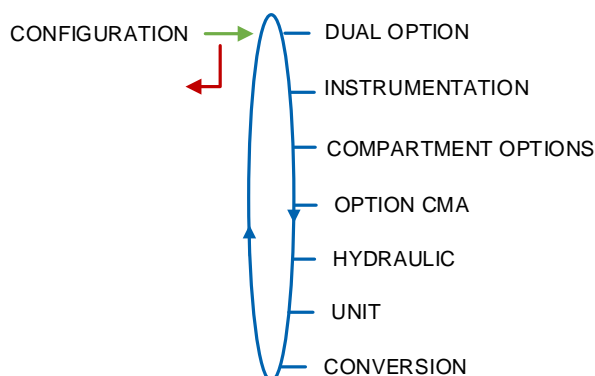


8.2.1 Sub-menu DUAL OPTION


This menu is used to define the type and number of distribution lines.

Validate DUAL OPTION→OFF, then validate EMA→GRAVITRONIQUE.

Note: The menu DUAL OPTION→ON is not applicable.

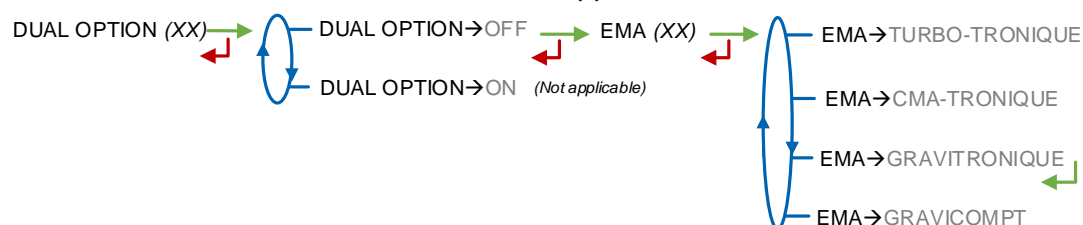

Then:

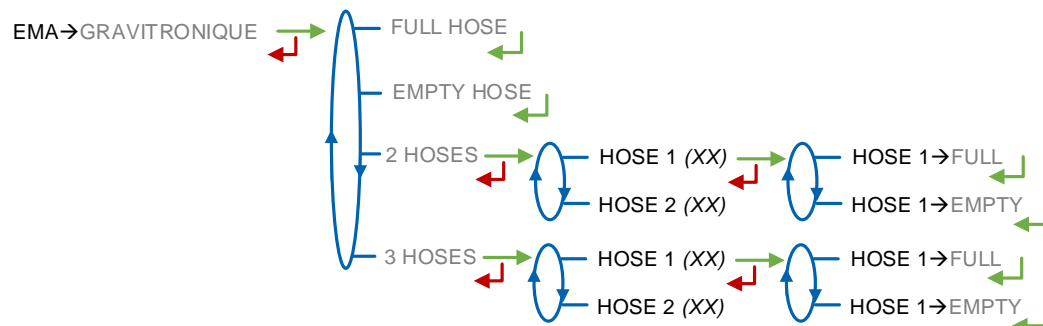

FULL HOSE: Operation with full hose


EMPTY HOSE: Operation with empty hose

2 HOSES: Operation with two hoses. Each may be full or empty hose

3 HOSES: Operation with three hoses. Hoses 1 and 2 can be empty or full hoses. Hose 3 is not proposed, it is an empty hose. In this configuration, it is possible to use the gravity mode only in single flow by the gravity selection valve.

8.2.2 Sub-menu INSTRUMENTATION


This menu is used to configure the truck instrumentation.

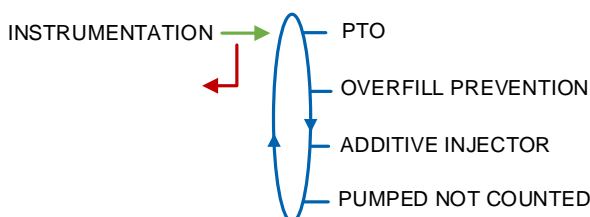

8.2.2.1 PTO


This menu allows to operating with or without power take-off. When the system operates without power take-off, choose PTO→OFF

When the system operates with power take-off, validate EMA. Choose the type of transmission: automatic or manual. It is used to take into account the clutching (manual transmission), the power take-off and the engine start and stop.

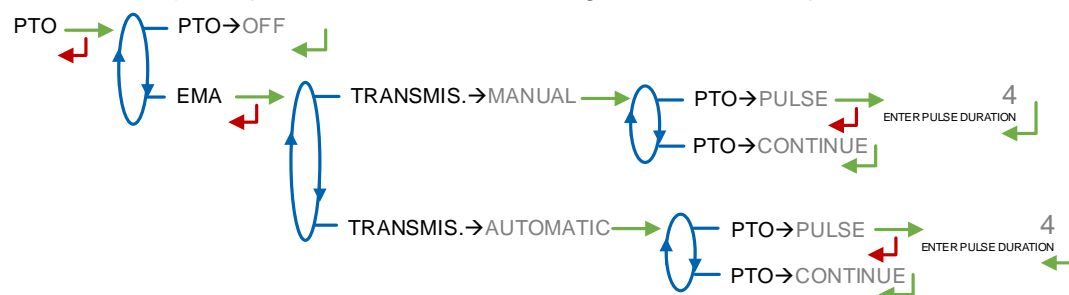


8.2.2.2 OVERFILL PREVENTION

Control of the overfill protection of the truck and of the customer tank.

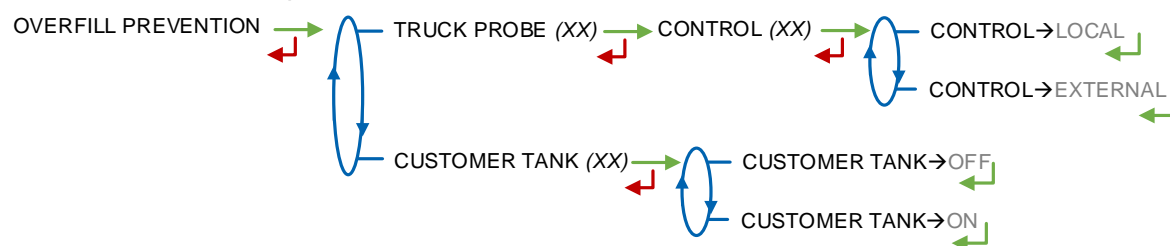

8.2.2.3 ADDITIVE INJECTOR

This menu is used to define the number of additive injectors. This choice determines the number of flaps and returns available. See the table in ADDENDUM 1.



8.2.2.4 PUMPED NOT COUNTED

This menu is available to authorize the operation in pumped not counted mode. This feature means that a pumped line must be available upstream of the meter



8.2.3 Sub-menu COMPARTMENT OPTIONS

This menu is used to set the configuration of the compartments. First, set the number of compartments.

NUMBER OF CPT: Number of compartments. Maximum number: 9

For each compartment, set the parameters below. Attention, you can configure a limited number of traps and returns. See the table in ADDENDUM 1.




FLAP: Operation with or without flap control

RETURN: Operation with or without product return. Used for pumped measuring system with full hose

- **PROBE:** Overfill protection probe of the compartment


LF HEIGHT: Height to command low flow (mm)

NB OF VENT STROKES: Number of vent orders after a filling phase in order to evacuate the air from the piping before delivery. The number of vent orders is directly related to the quantity of air.

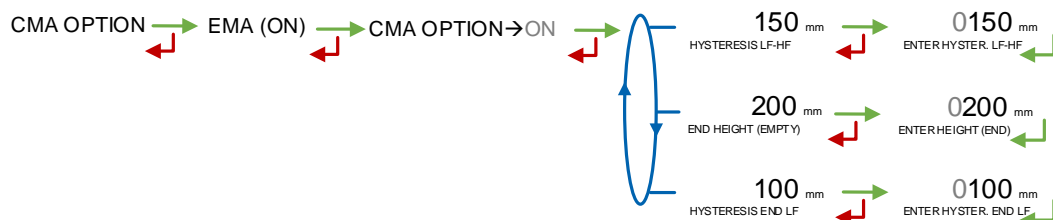

8.2.7 Sub-menu CONVERSION

This menu is used to operate with conversion or without conversion. This feature is available only if measured quantities are volumes (CONFIGURATION>UNIT>QUANTITY→L).




When conversion is active, the following parameters must be set:

MAIN DISPLAY: Select the type for displayed quantity

- **VM:** volume in metering conditions
- **VB:** volume converted to the reference temperature


REFERENCE TEMP.: Record the reference temperature for conversion. Default value: 15°C for the most common conversion.

DENSITY TEMP (REF): Record the reference temperature for set up densities. Default value: 15°C for density at 15°C (MV15).

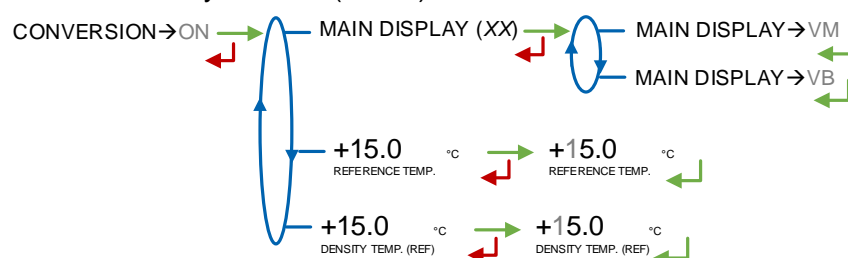

8.3 Menu measuring system EMA

This part allows to define the characteristics of the EMA measuring system.

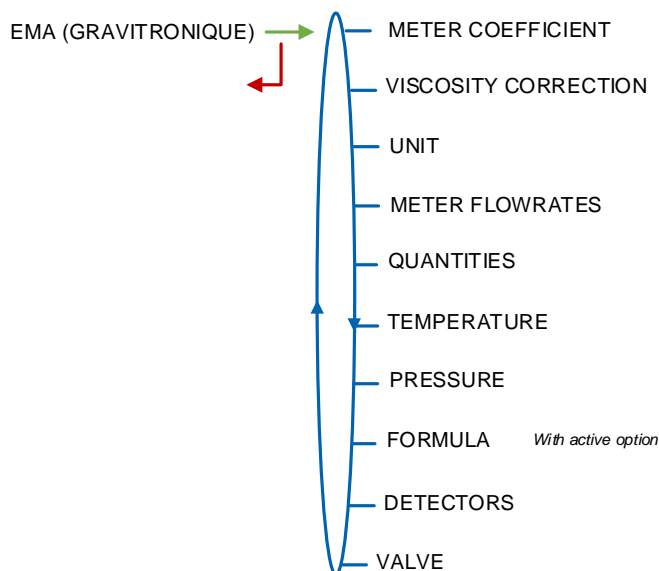

8.3.1 Sub-menu METER COEFFICIENT


Enter the coefficient of the EMA measuring system meter.

PUMPED MODE: For pumped distribution mode, set the four items that follows

- **LF COEFFICIENT (K1):** Coefficient for low flow. The unit depends on settings (pulses/liter or pulses/kg)
- **LOW FLOW/K1 (Q1):** Reference low flow so that $[\text{flowmin}] \leq Q1 < [\text{flowmin} \times 1.5]$. According to the flow unit
- **HF COEFFICIENT (K2):** Coefficient for high flow. The unit depends on settings (pulses/liter or pulses/kg)
- **HIGH FLOW/K2 (Q2):** Reference high flow so that $[\text{flowmin} \times 3] \leq Q2 < [\text{flowmax}]$. According to the flow unit

GRAVITY MODE: For gravity distribution mode, set the following item

- **CORRECTION:** Correction coefficient applied to the pumped mode coefficients. Maximum value: $\pm 0.4\%$.

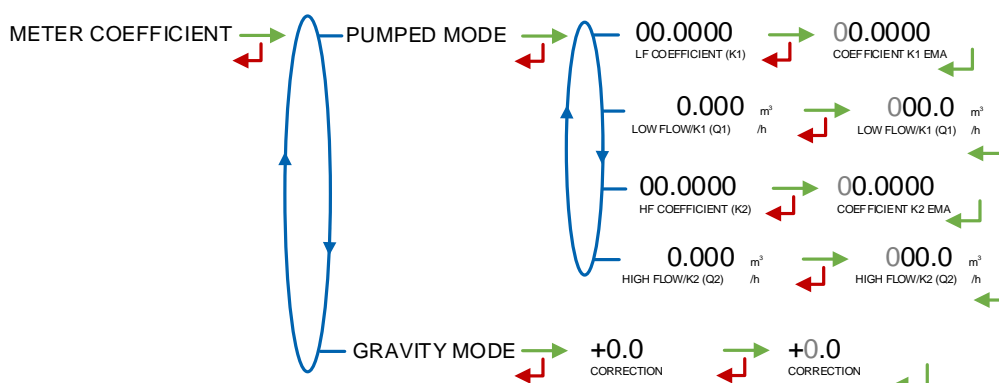

8.3.2 Sub-menu VISCOSITY CORRECTION

This menu is used to define the correction to be applied to the low viscosity product when it is defined with correction (SUPERVISOR mode). See the marking of the meter or the calibration certificate. Limit input values: $\pm 0.4\%$.




8.3.3 Sub-menu UNIT

Choose the accuracy of the quantity and the unit of the flow that will be displayed and printed for the EMA measuring system.




ACCURACY: Choose the accuracy of the quantity that will be displayed and printed. According to the unit set in menu CONFIGURATION>UNIT>QUANTITY (measure of a volume or a mass).

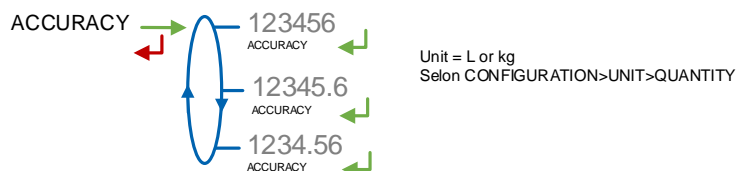


FLOWRATE: Choose the accuracy of the quantity that will be displayed and printed. According to the unit set in menu CONFIGURATION>UNIT>QUANTITY (measure of a volume or a mass).

CONFIGURATION>UNIT>QUANTITY→L

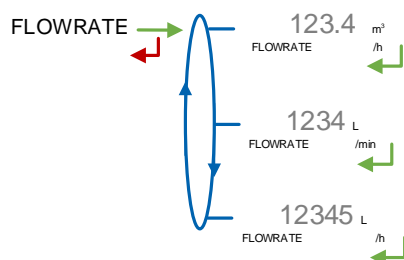

CONFIGURATION>UNIT>QUANTITY→KG

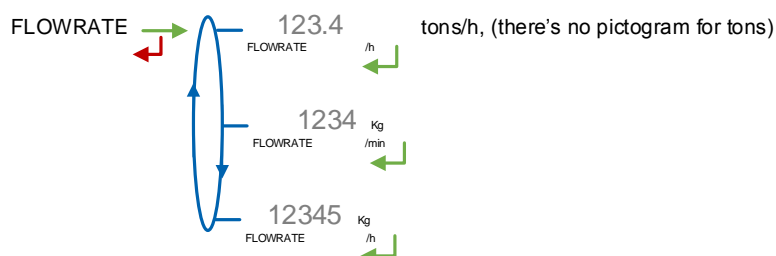


8.3.4 Sub-menu METER FLOWRATES

The accuracy and the unit of the displayed values are specific to the measuring system and depend on the choices made during the metrological configuration EM>UNIT menu.

MINIMUM FLOWRATE: Set the metrological minimum flowrate of the EMA measuring system

MAXIMUM FLOWRATE: Set the metrological maximum flowrate of the EMA measuring system

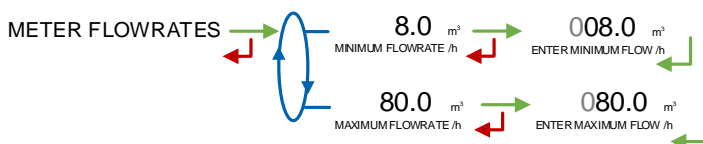

8.3.5 Sub-menu QUANTITIES


The accuracy and the unit of the displayed values are specific to the measuring system and depend on the choices made during the metrological configuration EM>UNIT menu.

MINIMUM QUANTITY: Set the minimum quantity of the EMA measuring system. This value is given by the association of the turbine meter, the MICROCOMPT+ and other parts of the measuring system.

MANIFOLD QUANTITY: Whith liter-unit only (CONFIGURATION>UNIT>QUANTITY→L). This menu is used to set the manifold volume (horizontal part up to the end-of-metering probe). Maximum value: 59 liters.

FIXED QUANTITY: Fixed volume included between the end-of-metering probe and the gravity valve, in liters.


RELEASE QUANTITY: For pumped delivery. Release volume included between the end-of-metering probe and the vacuity sensor, in liters. This value is lower than or equal to the fixed quantity.

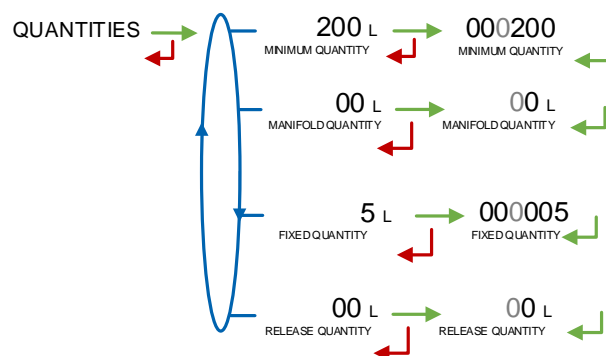

8.3.6 Sub-menu TEMPERATURE

This menu is used to calibrate the temperature into the MICROCOMPT+ for EMA. Depending on the probe, it's possible to:

- Calibrate temperature. See maintenance sheet FM 8510 for temperature calibration
- Set the minimum temperature below which an alarm is triggered
- Set the maximum temperature below which an alarm is triggered

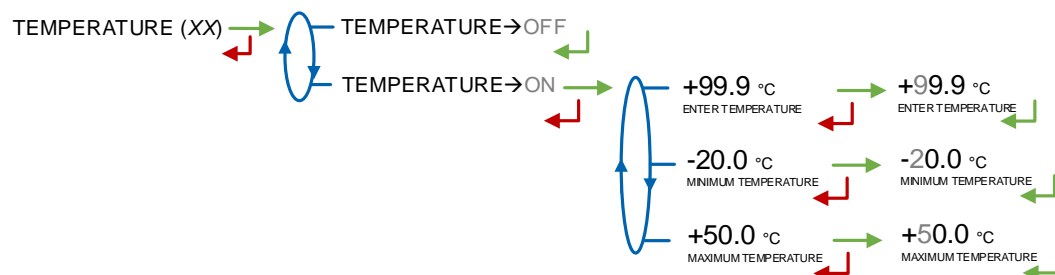

8.3.7 Sub-menu PRESSURE

This menu allows you to calibrate the 4.20mA differential pressure transmitter at two points according to the measurement range of the associated transmitter. Pressure is expressed in mbar. The default values are as follows:


- 4mA : -100mbar
- 20mA : +220mbar



8.3.8 Sous-menu FORMULA


This menu is available when conversion is active CONFIGURATION>CONVERSION→ON. Choose the formula used for volume conversion. The choice of the conversion formula causes an implicit definition of valid density and temperature ranges to guarantee the conversion result. See the table below to select the conversion table that corresponds to type of fuel used:

Product	Conversion formula
Crude products	API54A
Refined products	API54B
Ethanol at 15°C	ETH15
Ethanol at 20°C	ETH20
Ad-Blue	AUS32
Fatty acid methyl esters	FAME
Ethyl tert-butyl ether	ETBE

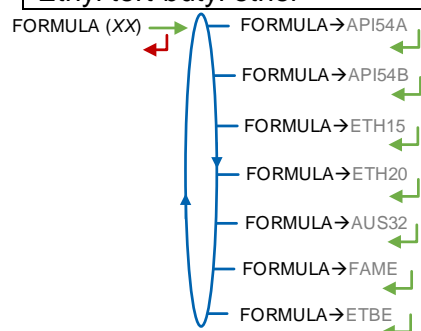

8.3.9 Sub-menu DETECTORS

This menu is used to validate the dry state of the gas detectors used as end-of-metering probe and vacuity sensor.

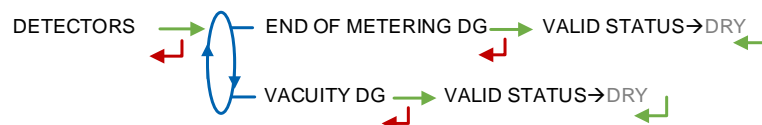

8.3.10 Sub-menu VALVE

Type of valve used for pumped distribution without degassing device.



8.4 Menu DATE AND TIME

This menu is used to update the calculator's clock.



The stored measurement results are completely erased if you delay or advance the time by more than 2 hours.



ADDENDUM 1: ASSIGNMENTS TABLE ACCORDING TO THE NUMBER OF FLAPS, PRODUCT RETURNS AND ADDITIVE INJECTORS

Flaps and product returns assigned to the compartments are set in METROLOGICAL mode menu CONFIGURATION>COMPARTMENT OPTIONS. Additive injectors are set in SUPERVISOR mode menu CONFIGURATION>ADDITIVE TYPE.

				Terminal number (PF) Power supply board V1 REV11									
Nb of Flaps	Nb of Returns	Addit. #1	Addit. #2	45 (PF14)	44 (PF13)	43 (PF12)	42 (PF11)	41 (PF10)	40 (PF9)	39 (PF8)	67 (PF6)	66 (PF5)	65 (PF4)
0	0-9	ON	ON/OFF	Addit #2	9th Return	8th Return	7th Return	6th Return	5th Return	4th Return	3rd Return	2nd Return	1st Return
1-5	0-5	ON	OFF	5th Return	4th Return	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	3rd Return	2nd Return	1st Return
1-5	6-9	ON	OFF	9th Return	8th Return	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	PLEXMI (1st to 7th Return)		
1-5	0-4	ON	ON	Addit #2	4th Return	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	3rd Return	2nd Return	1st Return
1-5	5-8	ON	ON	Addit #2	8th Return	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	PLEXMI (1st to 7th Return)		
1-5	9	ON	ON	Addit #2		9th Return	8th Return	PLEXMI (1st to 5th Flap)			PLEXMI (1st to 7th Return)		
6	0-4	ON	OFF	4th Return	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	3rd Return	2nd Return	1st Return
6	5-8	ON	OFF	8th Return	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	PLEXMI (1st to 7th Return)		
6	9	ON	OFF			9th Return	8th Return	PLEXMI (1st to 6th Flap)			PLEXMI (1st to 7th Return)		
6	0-3	ON	ON	Addit #2	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	3rd Return	2nd Return	1st Return
6	4-7	ON	ON	Addit #2	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	PLEXMI (1st to 7th Return)		
6	8-9	ON	ON	Addit #2		9th Return	8th Return	PLEXMI (1st to 6th Flap)			PLEXMI (1st to 7th Return)		
7	0-3	ON	OFF	7th Flap	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	3rd Return	2nd Return	1st Return
7	4-7	ON	OFF	7th Flap	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	PLEXMI (1st to 7th Return)		
7	8-9	ON	OFF			9th Return	8th Return	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		
7	0-2	ON	ON	Addit #2	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	7th Flap	2nd Return	1st Return
7	3-6	ON	ON	Addit #2	6th Return	5th Return	4th Return	PLEXMI (1st to 7th Flap)			3rd Return	2nd Return	1st Return
7	7-9	ON	ON	Addit #2		9th Return	8th Return	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		
8	0-2	ON	OFF	7th Flap	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	8th Flap	2nd Return	1st Return
8	3-6	ON	OFF	6th Return	5th Return	4th Return	8th Flap	PLEXMI (1st to 7th Flap)			3rd Return	2nd Return	1st Return
8	7-9	ON	OFF		9th Return	8th Return	8th Flap	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		
8	0-1	ON	ON	Addit #2	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	8th Flap	7th Flap	1st Return
8	2-5	ON	ON	Addit #2	5th Return	4th Return	8th Flap	PLEXMI (1st to 7th Flap)			3rd Return	2nd Return	1st Return
8	6-9	ON	ON	Addit #2	9th Return	8th Return	8th Flap	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		
9	0-1	ON	OFF	7th Flap	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	9th Flap	8th Flap	1st Return
9	2-5	ON	OFF	5th Return	4th Return	9th Flap	8th Flap	PLEXMI (1st to 7th Flap)			3rd Return	2nd Return	1st Return
9	6-9	ON	OFF	9th Return	8th Return	9th Flap	8th Flap	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		
9	0	ON	ON	Addit #2	6th Flap	5th Flap	4th Flap	3rd Flap	2nd Flap	1st Flap	9th Flap	8th Flap	7th Flap
9	1-4	ON	ON	Addit #2	4th Return	9th Flap	8th Flap	PLEXMI (1st to 7th Flap)			3rd Return	2nd Return	1st Return
9	5-8	ON	ON	Addit #2	8th Return	9th Flap	8th Flap	PLEXMI (1st to 7th Flap)			PLEXMI (1st to 7th Return)		

ADDENDUM 2: PRINTINGS

PARAMETERS: COMPLETE PRINTING

<p>DUALTRONIQUE 4053+.001 VERSION 01.07.21 DATED 07.04.22 BOOT LOADER 03.00.03 (58C7) PRINTED ON THE 07.04.22 AT 11:24 VEHICLE : AA-215-EL REFERENCE : 03201</p> <p>***** GENERAL PARAMETERS *****</p> <p>TRANSMIS. AUTOMATIC :PULSE 4s PTO :EMA PUMPED NOT COUNTED :EMA OVERFILL PROBE :LOCAL CUSTOMER PROBE :ON PETROL BY PUMP :ON CONVERSION :ON REF T.: 15.0°C D.T. REF: 15.0°C COMPUTING :ON PRODUCT CODE :ON PRINTER :WITHOUT PUMPED TICKET :XXX GRAVITY TICKET :XXX CURRENCY :EUR EJECT TICKET :ON FORCED TICKET :OFF SUMMARY :DETAILS LANGUAGE CATALOG :xxx SCHEDULING :ON(C3C2C1) START LOW FLOW VOLUME :10 L END LOW FLOW VOLUME :30 L DSPGI :OFF LOADING PLAN :OPTIONAL BLOCKING CONTAMINATION :OFF REMOTE CONTROL :OFF DEADMAN SWITCH :OFF REEL CONTROL :OFF BLOWING TIMING :5 s WET DETECTOR TIMING :10 s ANTI-VORTEX TIMING :5 s BACKUP TEMP:+12.3°C - PD EH:1.23</p> <p>NAME LINE OR MEASURING SYSTEM: LINE 1 : FLEXIBLE 1 LINE 2 : FLEXIBLE 2 PURGE CONFIGURATION: EMA/H1 EMB/H2 COMMON PURGE V. 90L 30L 30L BREWING V. 13L 13L PRODUCT 01 02 02 NUMBER OF CPT: 4 CPT/FLAP/RETURN/PROBE /LF.H /VENT 1 /ON /ON /ON /0750 /2 2 /ON /OFF /OFF /0750 /2 3 /ON /OFF /OFF /0750 /2 4 /ON /OFF /OFF /0750 /2 CPT PLEXMI: N, RETURN PLEXMI: N</p>	<p>DUALTRONIQUE 4053+.001 VERSION 01.07.21 DATED 07.04.22 BOOT LOADER 03.00.03 (58C7) PRINTED ON THE 07.04.22 AT 11:26 VEHICLE : AA-215-EL REFERENCE : 03201</p> <p>***** EM PARAMETERS *****</p> <p>EMA: GRAVITRONIQUE (2376) FH-FH-EH VALVE TYPE :INCREMENTAL MINIMUM QUANTITY : 200L MIN FLOW: 08.00 / MAX: 080.00 M3/H COEFFICIENT K1 :10.0000 IMP/L FLOW Q1 (LF) : 0.000 M3/H COEFFICIENT K2 :10.0000 IMP/L FLOW Q2 (HF) : 0.000 M3/H CORRECTION VISCO :+0.0% CORRECTION GRAVI :+0.0% TEMPERATURE :+22.5°C MIN (-10.0°C) - MAX (+50.0°C) CMA OPTION :ON HYSTERESIS LF-HF :150 MM END HEIGHT :200 MM HYSTERESIS END-LF :100 MM HEIGHT: 1242 MM / PD COEF: 0.75 ZERO FLOW TIMING H1 :180s ZERO FLOW TIMING H2 :200s MANIFOLD FILL TIMING :30 s MANIF. DRAIN TIME :30 s LF/HF: 007.0 OBJ LF: 9.0 - OBJ SLF EH:5.0M3/H MANIFOLD QUANTITY :12L FIXED QUANTITY :5L RELEASE QUANTITY :5L CONVERSION FORMULA :API54A STOP FLOW 0.000 M3/H WITH 0.2 L PRESET END COEFF. :0.0992</p>	<p>DUALTRONIQUE 4053+.001 VERSION 01.07.21 DATED 07.04.22 BOOT LOADER 03.00.03 (58C7) PRINTED ON THE 07.04.22 AT 11:28 VEHICLE : AA-215-EL REFERENCE : 03201</p> <p>***** ADDITIVES PARAMETERS *****</p> <p>ADDITIVE INJ 1 :EMA ADDITIVE RETURN :OFF ADDITIVE LEVEL CTRL :OFF ADDITIVE PULSE :0.5 s ADDITIVE INJ 2 :EMB ADDITIVE RETURN :OFF ADDITIVE LEVEL CTRL :OFF ADDITIVE PULSE :0.5 s</p> <p>***** PRODUCT PARAMETERS *****</p> <p>FOD+ (01/-) OFF CO+BA+A EMA+EMB 20L(INJ1) 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p> <p>FOD (02/-) OFF CO+BA+NA EMA+EMB NON ADD 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p> <p>GO+ (03/-) OFF NC+10+A EMA+EMB 30L(INJ2) 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p> <p>GO (04/-) OFF NC+10+NA EMA+EMB NON ADD 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p> <p>GNR+ (05/-) OFF CO+10+A EMA+EMB NON ADD 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p> <p>GNR (06/-) OFF CO+10+NA EMA+EMB NON ADD 0840.0Kg/m3 UP:0000.0 EUR/M3 TTC TAX : 0020.0</p>
--	--	---



MU 7071 EN F
GRAVITRONIQUE

This document is available on www.alma-alma.fr

Page 57/61

SUMMARY:

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 15:40
 VEHICLE : AA-215-EL
 REFERENCE : 03201

SUMMARY OF DELIVERIES OF
 07.04.22 (DAY 97)
 006 MEMORISED RESULTS

*** DAILY TOTALISERS ***

FOD+	(01) :	00001400 L	+10,5°C
FOD	(02) :	00000300 L	+11,3°C
GO+	(03) :	00000000 L	+00,0°C
GO	(04) :	00001090 L	+11,2°C
GNR+	(05) :	00000500 L	+11,9°C
GNR	(06) :	00000000 L	+00,0°C

TOTAL FROM 1 TO 6: 00003290 L

***** DAILY SUMMARY *****

HR	HR	NO	E	(L)	(°C)
START	END	MES	M	PROD	VOLUME
09:40	09:42	A01	A	FOD	00300
10:26	10:29	D02	A	FOD+	01000
10:38	10:40	A03	A	FOD+	00400
10:02	10:07	D04	A	GO	01000
11:29	11:31	P05	A	GO	00090
11:51	11:54	D06	A	GNR+	00500

(D) PRESET; (L) FREE;
 (A) PRESET+PURGE; (P) PURGE;
 (T) TRANSFER; (C) LOADING;
 (V) DRAINING; (B) RELEASE;
 (G) GRAVITY; (-) UNDEFINED

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 15:40
 VEHICLE : AA-215-EL
 REFERENCE : 03201

SUMMARY OF DELIVERIES OF
 07.04.22 (DAY 97)
 006 MEMORISED RESULTS

*** DAILY TOTALISERS ***

FOD+	(01) :	00000300 L	094%
FOD	(02) :	00001400 L	---
GO+	(03) :	00001090 L	---
GO	(04) :	00000000 L	---
GNR+	(05) :	00000000 L	099%
GNR	(06) :	00000500 L	---

TOTAL FROM 1 TO 6: 00003290 L

***** DAILY SUMMARY *****

HR	HR	NO	E	(L)	(%)
START	END	MES	M	PROD	VOLUME
09:40	09:42	A01	A	FOD	00300
10:26	10:29	D02	A	FOD+	01000
10:38	10:40	A03	A	FOD+	00400
10:02	10:07	D04	A	GO	01000
11:29	11:31	P05	A	GO	00090
11:51	11:54	D06	A	GNR+	00500

(D) PRESET; (L) FREE;
 (A) PRESET+PURGE; (P) PURGE;
 (T) TRANSFER; (C) LOADING;
 (V) DRAINING; (B) RELEASE;
 (G) GRAVITY; (-) UNDEFINED

With active option

TOTALISERS:

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 15:40
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** TOTALISERS*****

TOTALISER EMA (VM) : 00056638 L

FOD+	(01) :	00000399 L
FOD	(02) :	00000198 L
GO+	(03) :	00000000 L
GO	(04) :	00000999 L
GNR+	(05) :	00000000 L
GNR	(06) :	00000000 L
	(07) :	00001000 L
	(08) :	00000000 L
	(09) :	00000000 L
	(10) :	00000000 L
	(11) :	00000000 L
	(12) :	00000000 L
	(13) :	00000000 L
	(14) :	00000000 L
	(15) :	00000000 L
	(16) :	00000000 L

TOTAL FROM 1 TO 16 : 000002196 L
 NO ALLOCATED VOLUME : 00000008 L

Main display according to the configuration:
 VM, VB or blank (for masses)
 Unit: depending on the set scale interval

LOADING PLAN

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 14:47
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** LOADING PLAN *****

CPT N°	PROD.	QUANTITY (L)
1	FOD	1000
2	FOD+	2000
3	GO	3000
4	GO+	4000
5	GNR	5000

DELIVERY TICKET (according to customer)

Date : 07/04/22
 Starting : 14:48
 Vehicle : AA-215-EL
 Indicator : 03201
 Product : FOD
 Temperature : +11.2°C
 Quantity : 199 L
 Index 012 before 00005461
 Index 013 after 00005660

In case of dispute, the measurement
 results stored by the main indicating
 device providing proof.

CARGO PLAN

DUALTRONIQUE 4053+.001
 VERSION 01.07.21 DATED 07.04.22
 BOOT LOADER 03.00.03 (58C7)
 PRINTED ON THE 07.04.22 AT 14:52
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** CARGO PLAN *****

CPT N°	PROD.	QUANTITY (L)
1	FOD	500
2	FOD+	2000
3	GO	1500
4	GO+	3000
5	GNR	5000



MU 7071 EN F
 GRAVITRONIQUE

This document is available on www.alma-alma.fr

Page 59/61

MULTI-PRODUCTS TICKET:

DUALTRONIQUE 4053+.001
 VERSION 02.00.xx DATED 28.03.22
 BOOT LOADER 05.00.00 (B6A97AA1)
 PRINTED ON THE 30.03.22 AT 18:05
 VEHICLE : AA-215-EL
 REFERENCE : 03201

***** DELIVERY *****

Delivery started measurement n°003

Compartment : 1
 Product : FOD+
 Measurement n° 1 : 499 L (VM)
 Temperature : +24.0°C
 Measurement n° 2 : 299 L (VM)
 Temperature : +24.0°C

 Total Cpt 1 : 798 L (VM)
 Compartment : 2
 Product : GO+
 Measurement n° 1 : 999 L (VM)
 Temperature : +24.0°C
 Compartment : 3
 Product : GNR
 Measurement n° 1 : 199 L (VM)
 Temperature : +24.0°C
 Measurement n° 2 : 299 L (VM)
 Temperature : +16.8°C
 Measurement n° 3 : 499 L (VM)
 Temperature : +13.4°C

 Total Cpt 3 : 997 L (VM)

In case of dispute, the measurement
 results stored by the main indicating device
 providing proof.

Page 1



MU 7071 EN F
 GRAVITRONIQUE

This document is available on www.alma-alma.fr

Page 60/61


RELATED DOCUMENTS

GU 7071	User Guide Gravitronique
GU 7098	RCT5
MV 5007	Verification Guide Gravitronique
DI 015	Installation guide Gravitronique
FM 8000	Replacement of the backup batteries on the AFSEC electronic board
FM 8001	Diagnostic support for power supply failure
FM 8002	Diagnostic support for a display failure
FM 8003	Diagnostic support for DEB_0 or ZERO FLOW DEFAULT alarm
FM 8004	Diagnostic support for GAS or PRESENCE GAS alarm
FM 8005	Diagnostic support for METERING PROBLEM alarm
FM 8006	Diagnostic support for DATE AND TIME LOST alarm
FM 8007	Diagnostic support for MEMORY LOST or DEF MEMO alarm
FM 8010	Diagnostic support for EEPROM MEMORY LOST alarm
FM 8011	Configuration of jumpers and adjustment of metering thresholds on the AFSEC+ electronic board
FM 8013	Replacement of the backup batteries on the AFSEC+ electronic board
FM 8501	Adjustment of a DMTRONIQUE
FM 8510	Adjustment of a temperature chain in a MICROCOMPT+

ANX 0001 – PRESENTATION OF THE MENU SUPERVISOR>ICOM MENUS

1 OPERATOR

As an operator, with my blue key, I can display or set the parameters that follow.

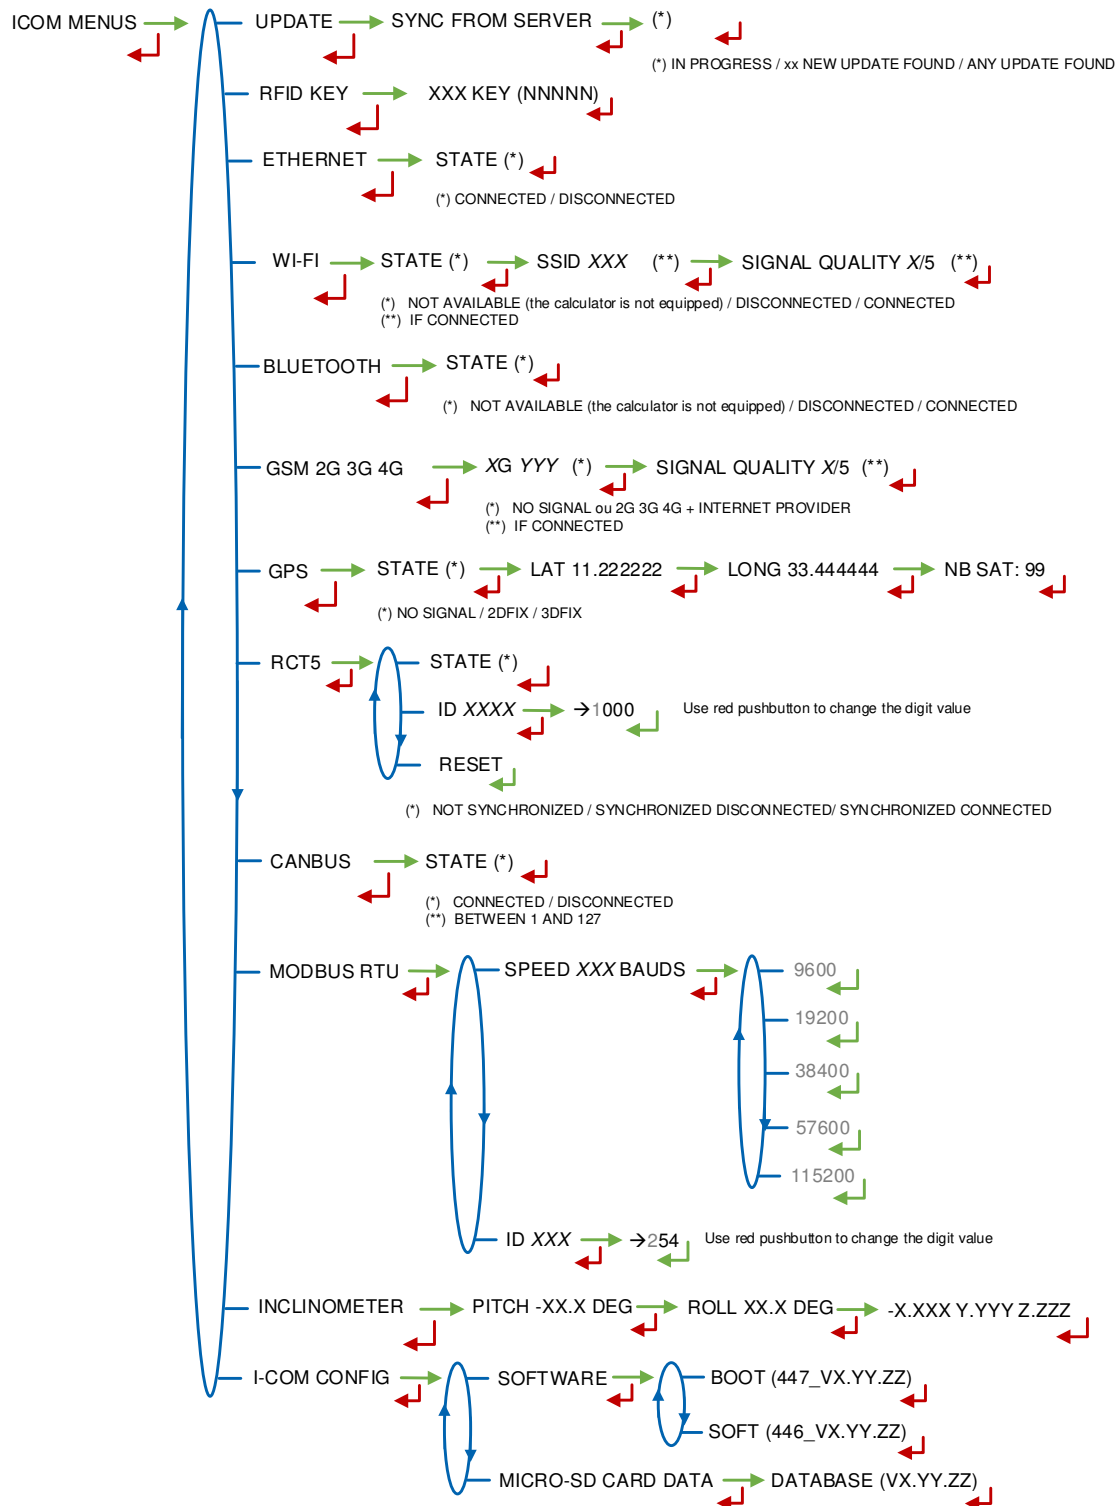


2 MANAGER AND MAINTENANCE

This section presents the whole menu SUPERVISOR>ICOM MENUS. Access to settings depends on the key used. The parameters that are not highlighted are available with any type of key.

- ⇒ As an operator, with my blue key: I can display or set the parameters that are not highlighted (see §1 for simplified presentation)
- ⇒ As a manager of a truck fleet or a loading terminal: with my green key, I can display or set the operator parameters and those indicated in green boxes
- ⇒ As an installer and/or a maintenance operator: with my red key, I can display or set all the parameters of the menu SUPERVISOR>ICOM MENUS. Note: The menus indicated in red boxes are available with the red key only.

1.12.1 Menu UPDATE

The MICROCOMPT+ connects to the server via Wi-Fi, Bluetooth, Ethernet or GSM.

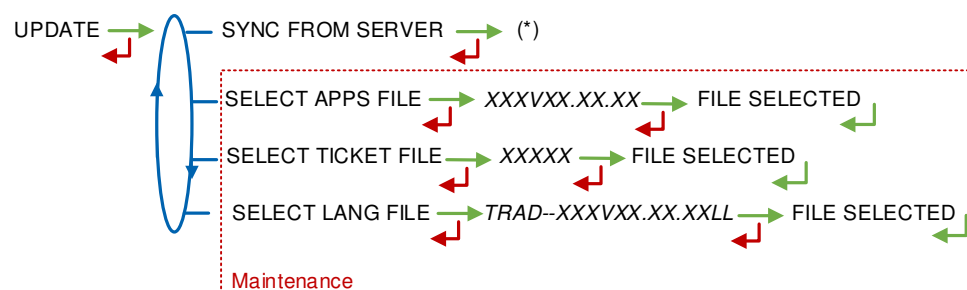

(*) IN PROGRESS / xx NEW UPDATE FOUND / ANY UPDATE FOUND

SYNC FROM SERVER: Synchronization of the updated files from ALMA server. If an update of the functions or the communication configuration is uploaded, it will be applied on the next reboot of the MICROCOMPT+.


SELECT APPS FILE(*) – Access restricted to the Maintenance with red key. Used to display and select the version(s) of the application available on the SD card. NO FILE is displayed if there's no file to download.


SELECT TICKET FILE(*) – Access restricted to the Maintenance with red key. Display and select the version(s) of the ticket file available on the SD card. NO FILE is displayed if there's no file to download.

SELECT LANG FILE(*) – Access restricted to the Maintenance with red key. Display and select the version(s) of the translation catalogue available on the SD card. NO FILE is displayed if there's no file to download.

(*) Selected files are automatically downloaded onto the AFSEC board when switching the MICROCOMPT+ into 'Resident' mode. See the operating manual MU 7037 (§2).

1.22.2 Menu RFID KEY

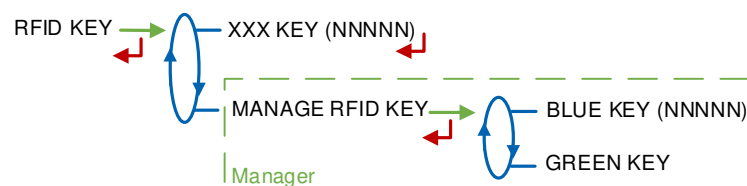


	ANX 0001 EN D Presentation of the menu SUPERVISOR>ICOM MENUS	Page 2/11
	This document is available on www.alma-alma.fr	

XXX KEY (NNNNN): Displays the information about the RFID placed on the screen with: XXX = color and (NNNNN) = identifier. E.g.: RED KEY (01234)


MANAGE RFID KEY – Access restricted to the Manager with green key and/or to the Maintenance with red key

- **BLUE KEY (NNNNN):** Display in brackets the number of the blue key associated with the MICROCOMPT+; if no blue key is associated, the number is replaced by dashes.
 - **SYNC. NEW KEY:** Used to associate a blue key to the MICROCOMPT+
 - **RESET A BLUE KEY** – Access restricted to the Maintenance with red key: Used to reset a blue key

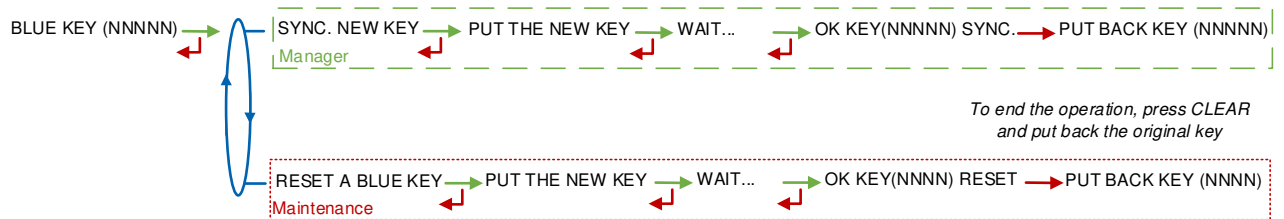

▪ GREEN KEY

- **ADD A GREEN KEY:** Used to associate a Manager green key to the MICROCOMPT+. To initialize the first green key, use the blue key associated to the MICROCOMPT+
- **DELETE KEY:** Used to remove keys that have already been associated to the MICROCOMPT+.

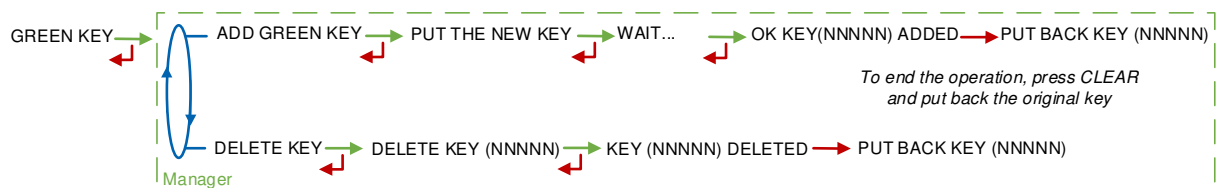

If the key does not match the expected key format, a message is displayed:

OTHER DEVICE KEY: The blue key is locked

KEY FROM THIS DEVICE: Attempt to reset a blue key that corresponds to the recorded blue key


KEY ALREADY INITIALIZED: The blue key is already initialized

KEY ALREADY ADDED: Addition of a green key already recorded

KEY ERROR: The re-applied key is not the right color

INCORRECT KEY: The format of the key is unknown.

2-12.3 Menu ETHERNET

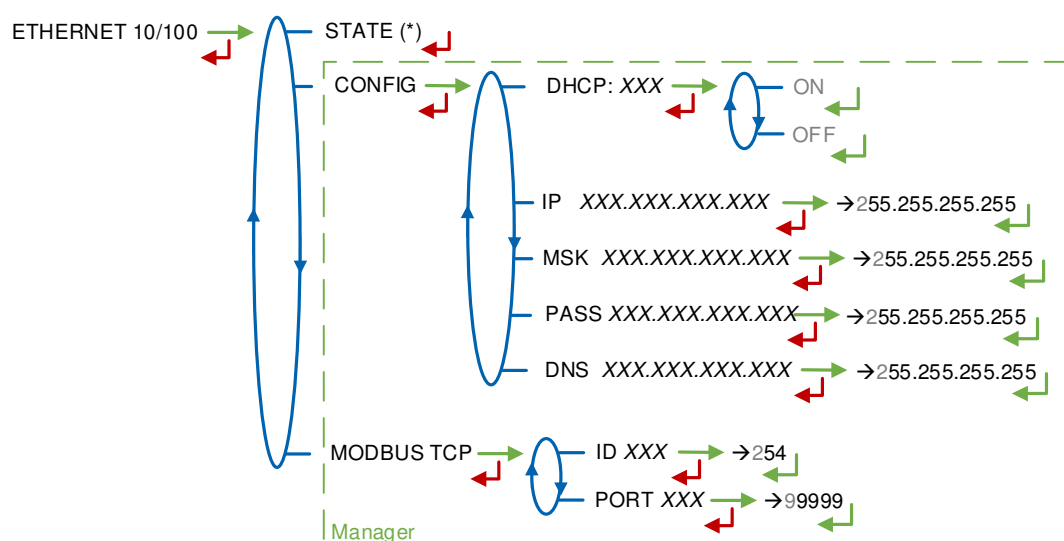

(*) CONNECTED / DISCONNECTED

STATE: Status of the Ethernet connection


CONFIG – Access restricted to the Manager with green key and to the Maintenance with red key

- **DHCP:** If ON is enabled, IP parameters can be initialized through the DHCP protocol. If OFF is enabled, parameters are set manually
- **IP:** MICROCOMPT+ IP address
- **MSK:** Subnet mask (IP mask for the internal IP address allocation)
- **PASS:** Gateway (IP Address for the internet access of the Ethernet interface)
- **DNS:** IP address to access a DNS server

MODBUS TCP – Access restricted to the Manager with green key and to the Maintenance with red key

- **ID:** MICROCOMPT+ Modbus identifier between 0 and 255
- **PORT:** TCP/IP access port for Modbus protocol

2-22.4 Menu Wi-Fi

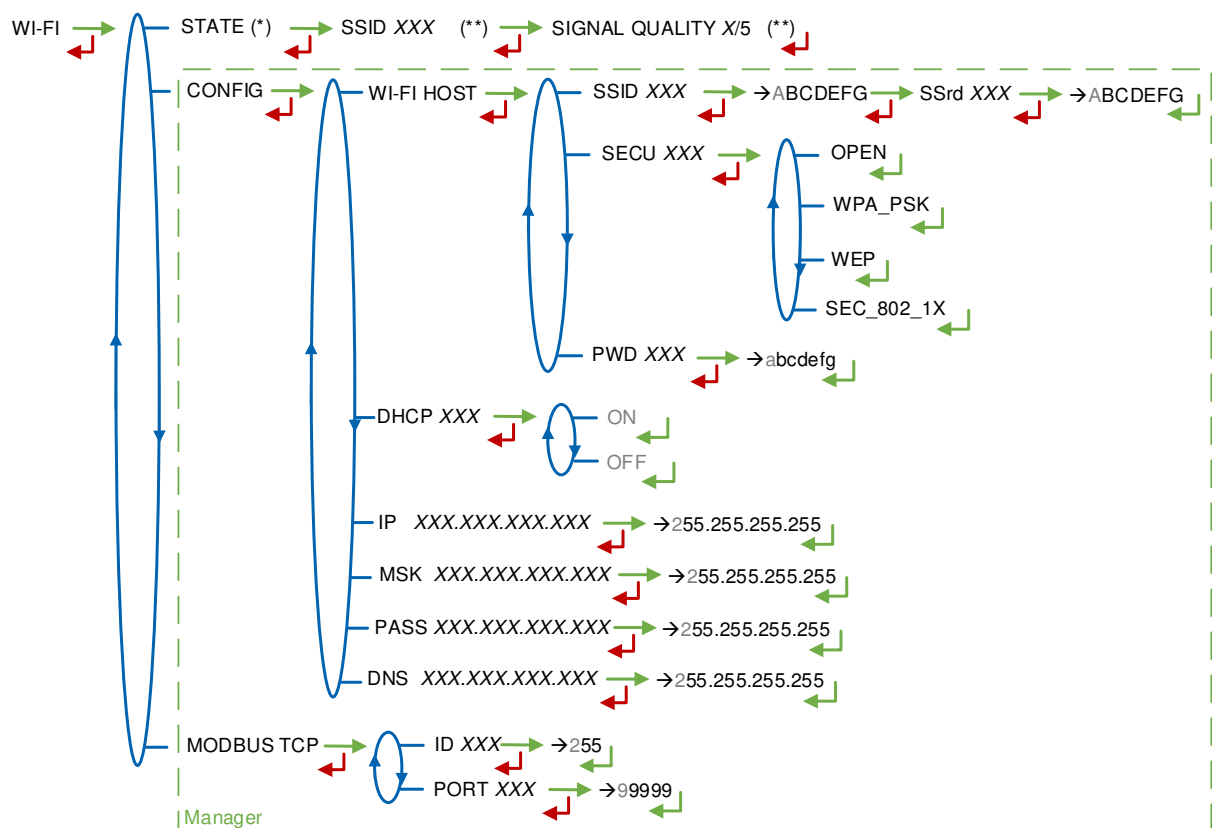

(*) NOT AVAILABLE (the calculator is not equipped) / DISCONNECTED / CONNECTED
 (**) IF CONNECTED

STATE: Status of the Wi-Fi connection. If connection is successful, you can do a check of SSID and quality

CONFIG – Access restricted to the Manager with green key and to the Maintenance with red key

- **WI-FI HOST:** Set the characteristics of the wireless network access point
 - **SSID:** Wi-Fi network name (32 characters-alphanumeric key that identifies the wireless network uniquely)
 - SECU:** Type of security protocol for the network
 - OPEN:** Free Wi-Fi
 - WPA_PSK:** Encryption protocol by a 128 bits-dynamic key
 - WEP:** Encryption protocol by a key encoded in 64 or 128 bits
 - SEC_802-1X:** Encryption protocol compatible with the standard IEEE 802.1X
 - **PWD:** Wi-Fi network password.
 Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
 (Visualization of the permitted characters on the MICROCOMPT+ display)
- **DHCP:** If ON is enabled, IP parameters can be initialized through the DHCP protocol. If OFF is enabled, parameters are set manually
- **IP:** MICROCOMPT+ IP address
- **MSK:** Subnet mask (IP mask for the internal IP address allocation)

- **PASS:** Gateway (IP Address for the internet access of the Ethernet interface)
- **DNS:** IP address to access a DNS server

MODBUS TCP – Access restricted to the Manager with green key and to the Maintenance with red key

- **ID:** MICROCOMPT+ Modbus identifier between 0 and 255
- **PORT:** TCP/IP access port for Modbus protocol

2.32.5 **Menu BLUETOOTH**




(*) NOT AVAILABLE (the calculator is not equipped) / DISCONNECTED / CONNECTED

STATE: Status of the Bluetooth connection

NAME – Access restricted to the Manager with green key and to the Maintenance with red key. The default name of the Bluetooth device includes the Microcompt+ serial number.

2.42.6 Menu GSM

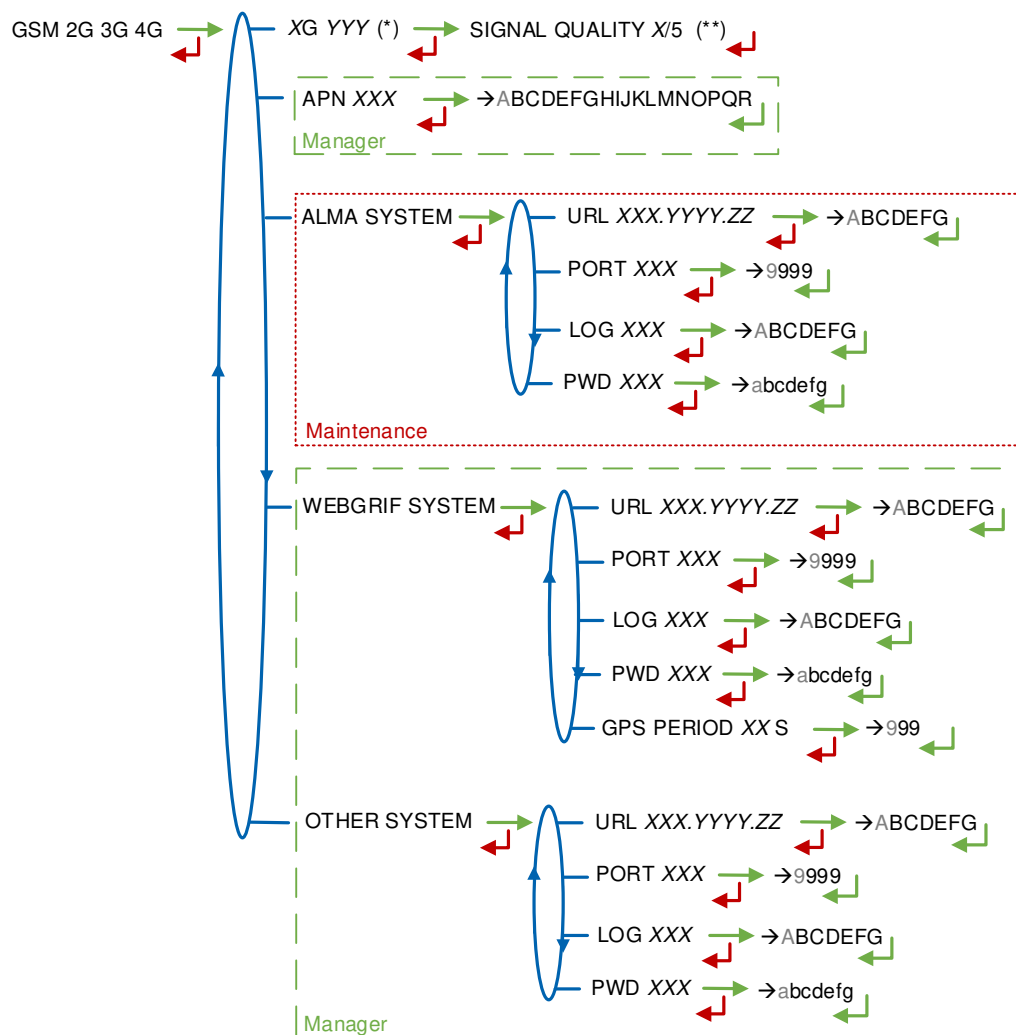

(*) NO SIGNAL ou 2G 3G 4G + INTERNET PROVIDER
 (**) IF CONNECTED

XG YYY: The signal is being received, the type of mobile network is displayed according to the protocols GSM / GPRS / EDGE, UMTS / HSPA+ / LTE, followed by the name of the service provider. Otherwise NO SIGNAL is displayed

APN – Access restricted to the Manager with green key and to the Maintenance with red key Name of the internet access point, only if ALMA does not supply it

ALMA SYSTEM – Access restricted to the Maintenance with red key. Information of connection to the ALMA FTP server for files transfer

- **URL:** Web address of the ALMA FTP server (host)
- **PORT:** ALMA FTP server port, default value: 21
- **LOG:** ALMA FTP server identifier
- **PWD:** ALMA FTP server password.

Permitted characters: <space>! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 ; : < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { | } ~
 (Visualization of the permitted characters on the MICROCOMPT+ display)

WEBGRIF SYSTEM – Access restricted to the Manager with green key and to the Maintenance with red key Information of connection to the Webgrif FTP server for files transfer

- **URL:** Web address of the Webgrif FTP server (host)
- **PORT:** Webgrif FTP server port, default value: 21
- **LOG:** Webgrif FTP server identifier
- **PWD:** Webgrif FTP server password.

Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
(Visualization of the permitted characters on the MICROCOMPT+ display)

GPS PERIOD: Backup period of GPS coordinates (from 1 to 999 seconds)

OTHER SYSTEM – Access restricted to the Manager with green key and to the Maintenance with red key Information of connection to the FTP server for files transfer

- **URL:** Web address of the FTP server (host)
- **PORT:** FTP server port, default value: 21
- **LOG:** FTP server identifier
- **PWD:** FTP server password.

Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
(Visualization of the permitted characters on the MICROCOMPT+ display)

2.52.7 Menu GPS

GPS → STATE (*) → LAT 11.222222 → LONG 33.444444 → NB SAT 99

(*) NO SIGNAL / 2DFIX / 3DFIX

STATE: The signal is being received: the type of signal is displayed 2DFIX or 3DFIX. Validating the data makes the GPS coordinates appear (latitude then longitude), and lastly appears the number of satellites which signals are simultaneously received (that gives information about the position accuracy). Otherwise NO SIGNAL is displayed

2.62.8 Menu RCT5

RCT5 → STATE (*) → ID XXXX → 1000 → IN PROGRESS

Use red pushbutton to change the digit value


(*) NOT SYNCHRONIZED / SYNCHRONIZED DISCONNECTED/ SYNCHRONIZED CONNECTED

STATE: Status of the MICROCOMPT+ ICOM board

ID: 4-digit MICROCOMPT+ radio ID

RESET: Reset the pairing of the MICROCOMPT+ with the RCT5 remote control

2.72.9 Menu CANBUS

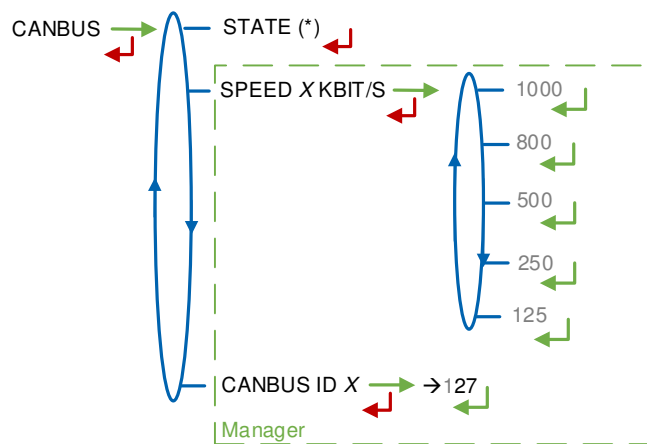

(*) CONNECTED / DISCONNECTED


(**) BETWEEN 1 AND 127

STATE: Status of the CANBus connection

SPEED – Access restricted to the Manager with green key and to the Maintenance with red key Speed of the CANBus connection

CANBUS ID – Access restricted to the Manager with green key and to the Maintenance with red key MICROCOMPT+ identifier for the CANBus protocol (between 1 and 127)


2.82.10 Menu MODBUS RTU

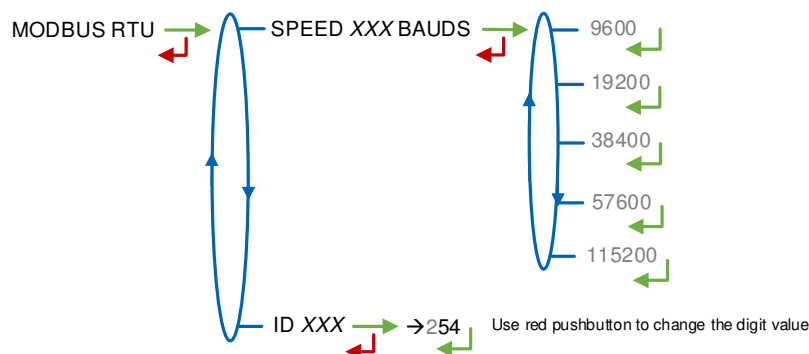

SPEED: Speed of the Modbus connection


ID: Modbus identifier of the slave (between 0 and 254)

2.92.11 Menu INCLINOMETER

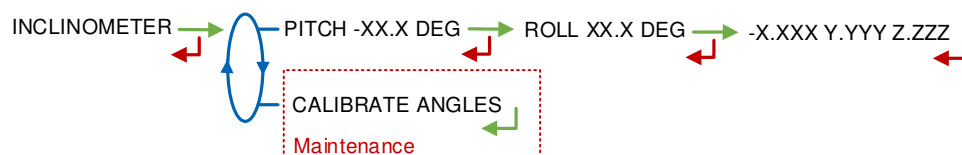

PITCH: Used to display the bank angles of the truck and the inclinometer raw data

CALIBRATE ANGLES – Access restricted to the Maintenance with red key. Used to reset the angles 'pitch' and 'roll' when the truck has a horizontal position in order to correct the assembly tolerances of the MICROCOMPT+ on the truck.

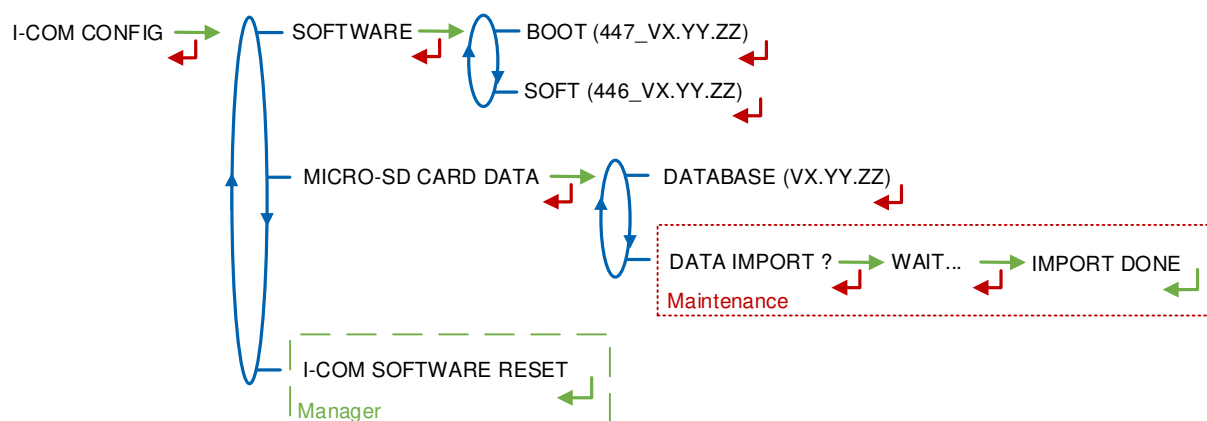2.102.12 Menu I-COM CONFIG

SOFTWARE: Used to display the number and version of the software

MICRO-SD CARD DATA

- **DATABASE (VX.YY.ZZ):** Display the version of the database; the version number is replaced by dashes if there's no database
- **IMPORT DATA ?** – Access restricted to the Maintenance with red key. Import the ICOM settings onto the SD card

I-COM SOFTWARE RESET – Access restricted to the Manager with green key and to the Maintenance with red key. Reboot the I-COM board.

VISUALIZATION OF THE PERMITTED CHARACTERS ON THE MICROCOMPT+ DISPLAY

<SPACE> ! " # \$ % & ' () * + , - . /

0 1 2 3 4 5 6 7 8 9 : ; < = > ?

@ A B C D E F G H I J K L M N O

P Q R S T U V W X Y Z [\] ^ _


` a b c d e f g h i j k l m n o

p q r s t u v w x y z { | } ~

ANX 0001 – PRESENTATION OF THE MENU SUPERVISOR>ICOM MENUS

1 OPERATOR

As an operator, with my blue key, I can display or set the parameters that follow.

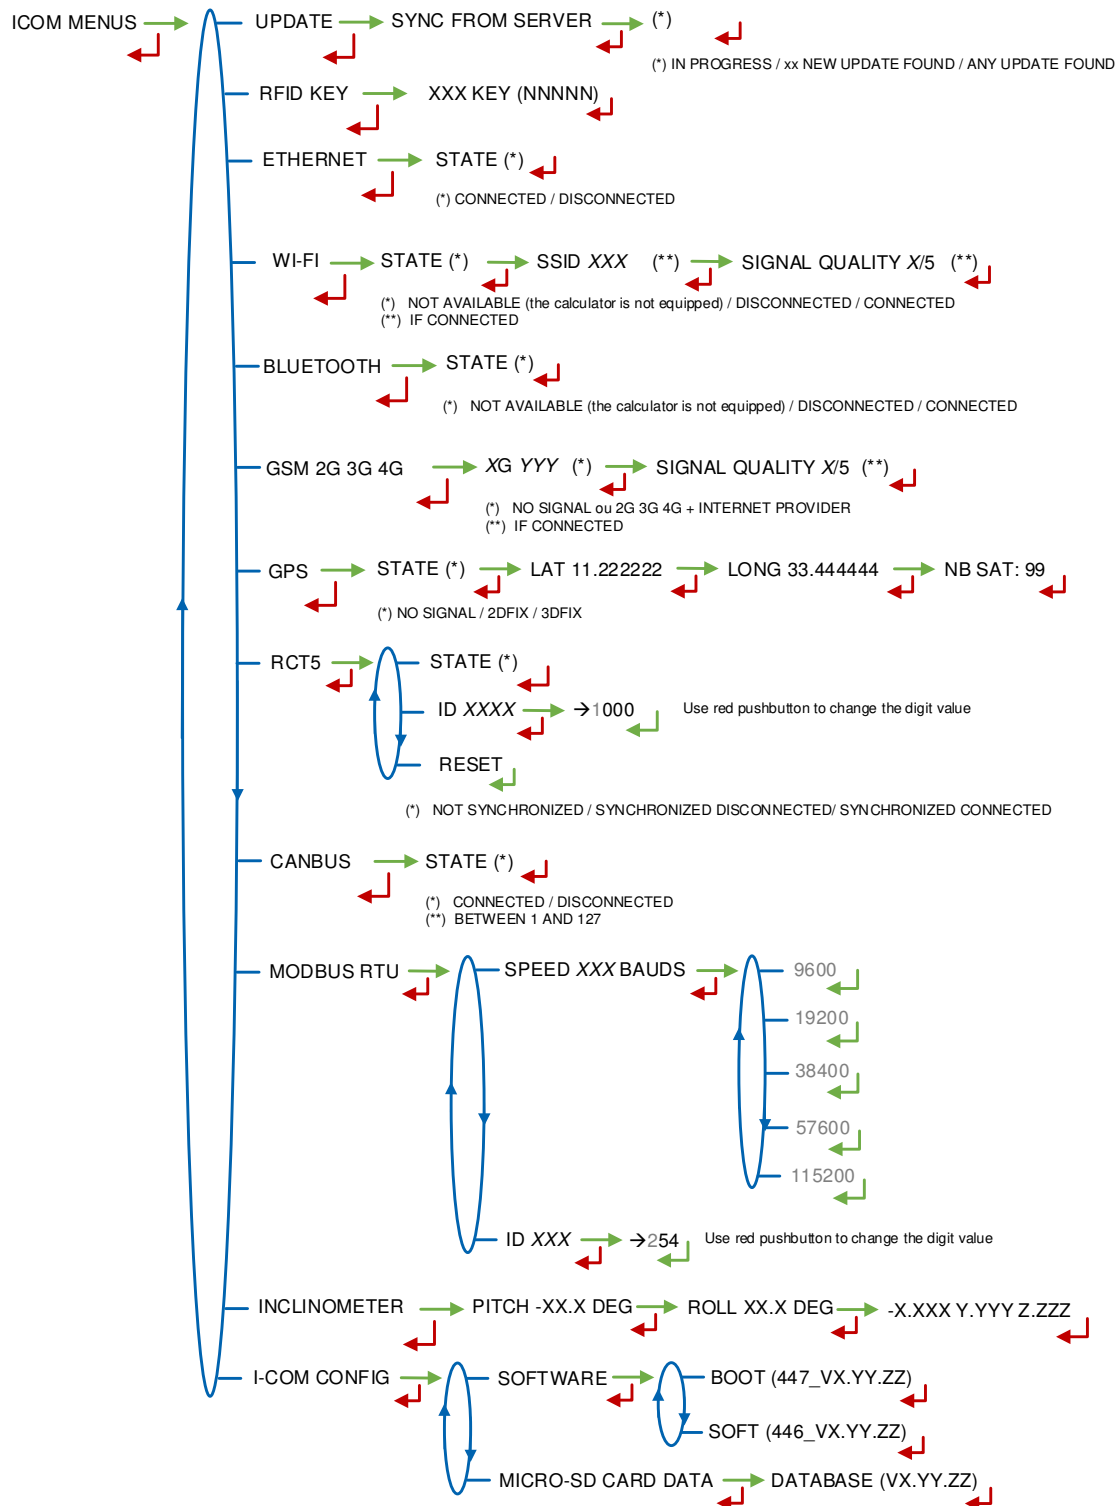


2 MANAGER AND MAINTENANCE

This section presents the whole menu SUPERVISOR>ICOM MENUS. Access to settings depends on the key used. The parameters that are not highlighted are available with any type of key.

- ⇒ As an operator, with my blue key: I can display or set the parameters that are not highlighted (see §1 for simplified presentation)
- ⇒ As a manager of a truck fleet or a loading terminal: with my green key, I can display or set the operator parameters and those indicated in green boxes
- ⇒ As an installer and/or a maintenance operator: with my red key, I can display or set all the parameters of the menu SUPERVISOR>ICOM MENUS. Note: The menus indicated in red boxes are available with the red key only.

2.1 Menu UPDATE

The MICROCOMPT+ connects to the server via Wi-Fi, Bluetooth, Ethernet or GSM.

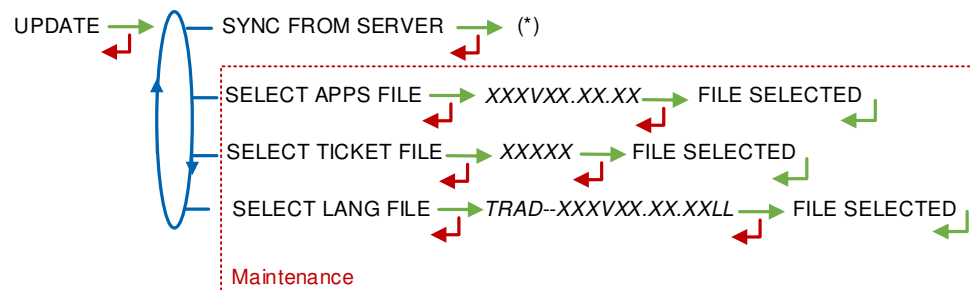

(*) IN PROGRESS / xx NEW UPDATE FOUND / ANY UPDATE FOUND

SYNC FROM SERVER: Synchronization of the updated files from ALMA server. If an update of the functions or the communication configuration is uploaded, it will be applied on the next reboot of the MICROCOMPT+.


SELECT APPS FILE(*) – Access restricted to the Maintenance with red key. Used to display and select the version(s) of the application available on the SD card. NO FILE is displayed if there's no file to download.

SELECT TICKET FILE(*) – Access restricted to the Maintenance with red key. Display and select the version(s) of the ticket file available on the SD card. NO FILE is displayed if there's no file to download.

SELECT LANG FILE(*) – Access restricted to the Maintenance with red key. Display and select the version(s) of the translation catalogue available on the SD card. NO FILE is displayed if there's no file to download.

(*) Selected files are automatically downloaded onto the AFSEC board when switching the MICROCOMPT+ into 'Resident' mode. See the operating manual MU 7037 (§2).


2.2 Menu RFID KEY

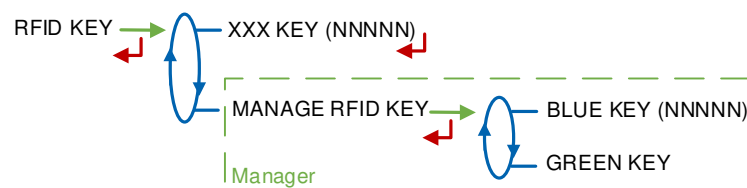

XXX KEY (NNNNN): Displays the information about the RFID placed on the screen with: XXX = color and (NNNNN) = identifier. E.g.: RED KEY (01234)


MANAGE RFID KEY – Access restricted to the Manager with green key and/or to the Maintenance with red key

- **BLUE KEY (NNNNN):** Display in brackets the number of the blue key associated with the MICROCOMPT+; if no blue key is associated, the number is replaced by dashes.
 - **SYNC. NEW KEY:** Used to associate a blue key to the MICROCOMPT+
 - **RESET A BLUE KEY – Access restricted to the Maintenance with red key:** Used to reset a blue key

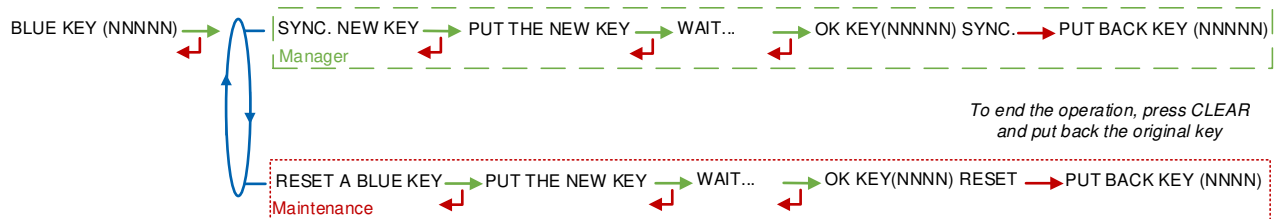

GREEN KEY

- **ADD A GREEN KEY:** Used to associate a Manager green key to the MICROCOMPT+. To initialize the first green key, use the blue key associated to the MICROCOMPT+.
- **DELETE KEY:** Used to remove keys that have already been associated to the MICROCOMPT+.

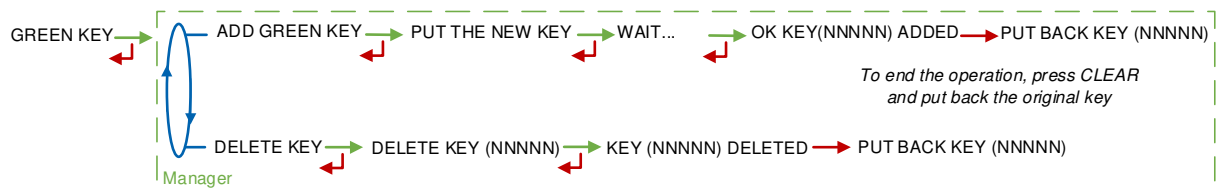

If the key does not match the expected key format, a message is displayed:

OTHER DEVICE KEY: The blue key is locked

KEY FROM THIS DEVICE: Attempt to reset a blue key that corresponds to the recorded blue key


KEY ALREADY INITIALIZED: The blue key is already initialized

KEY ALREADY ADDED: Addition of a green key already recorded

KEY ERROR: The re-applied key is not the right color

INCORRECT KEY: The format of the key is unknown.

2.3 Menu ETHERNET

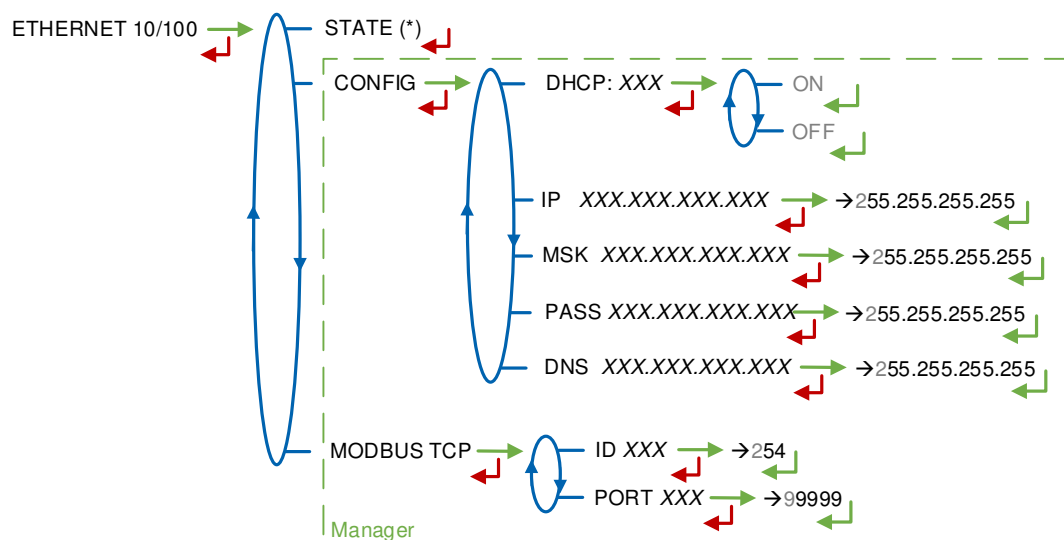

(*) CONNECTED / DISCONNECTED

STATE: Status of the Ethernet connection


CONFIG – Access restricted to the Manager with green key and to the Maintenance with red key

- **DHCP:** If ON is enabled, IP parameters can be initialized through the DHCP protocol. If OFF is enabled, parameters are set manually
- **IP:** MICROCOMPT+ IP address
- **MSK:** Subnet mask (IP mask for the internal IP address allocation)
- **PASS:** Gateway (IP Address for the internet access of the Ethernet interface)
- **DNS:** IP address to access a DNS server

MODBUS TCP – Access restricted to the Manager with green key and to the Maintenance with red key

- **ID:** MICROCOMPT+ Modbus identifier between 0 and 255
- **PORT:** TCP/IP access port for Modbus protocol

2.4 Menu Wi-Fi

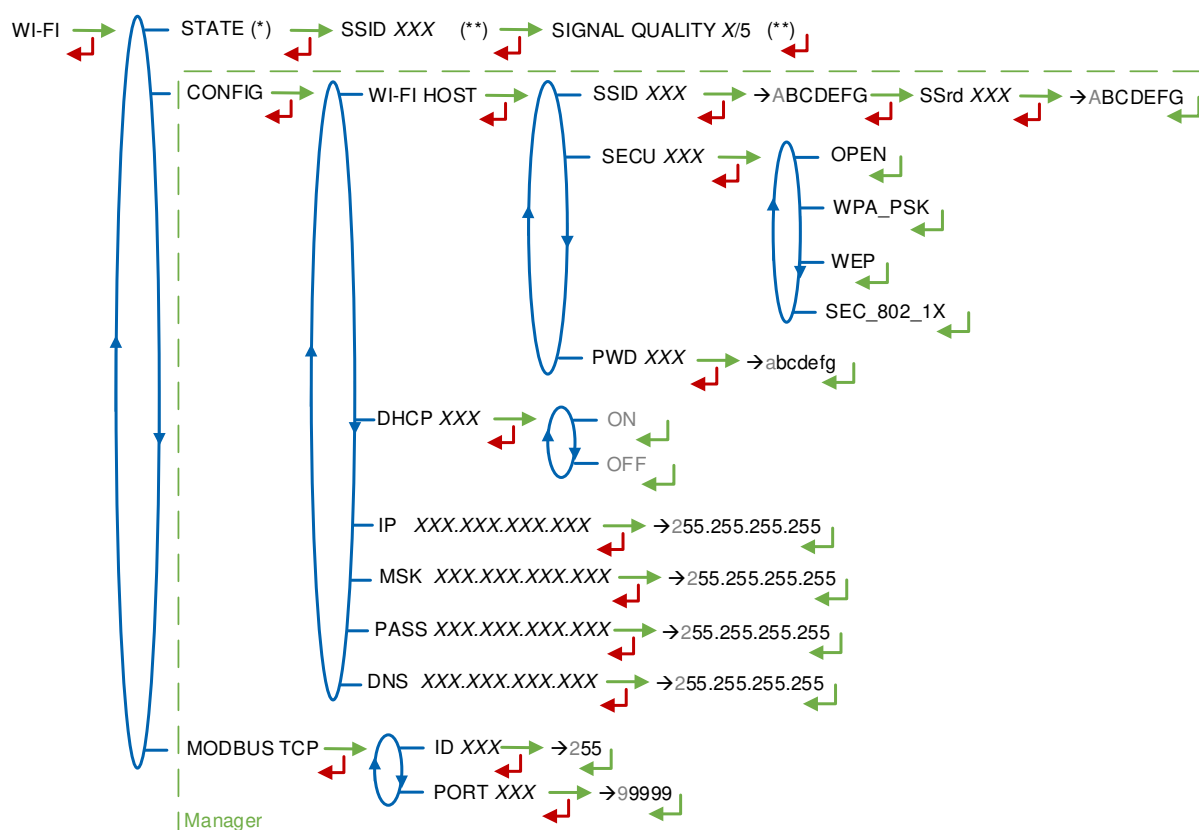

(*) NOT AVAILABLE (the calculator is not equipped) / DISCONNECTED / CONNECTED
 (**) IF CONNECTED

STATE: Status of the Wi-Fi connection. If connection is successful, you can do a check of SSID and quality

CONFIG – Access restricted to the Manager with green key and to the Maintenance with red key


- **WI-FI HOST:** Set the characteristics of the wireless network access point
 - **SSID:** Wi-Fi network name (32 characters-alphanumeric key that identifies the wireless network uniquely)
 - SECU:** Type of security protocol for the network
 - OPEN:** Free Wi-Fi
 - WPA_PSK:** Encryption protocol by a 128 bits-dynamic key
 - WEP:** Encryption protocol by a key encoded in 64 or 128 bits
 - SEC_802-1X:** Encryption protocol compatible with the standard IEEE 802.1X
 - **PWD:** Wi-Fi network password.
 Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
 (Visualization of the permitted characters on the MICROCOMPT+ display)
- **DHCP:** If ON is enabled, IP parameters can be initialized through the DHCP protocol. If OFF is enabled, parameters are set manually
- **IP:** MICROCOMPT+ IP address
- **MSK:** Subnet mask (IP mask for the internal IP address allocation)

- **PASS:** Gateway (IP Address for the internet access of the Ethernet interface)
- **DNS:** IP address to access a DNS server

MODBUS TCP – Access restricted to the Manager with green key and to the Maintenance with red key

- **ID:** MICROCOMPT+ Modbus identifier between 0 and 255
- **PORT:** TCP/IP access port for Modbus protocol

2.5 Menu **BLUETOOTH**

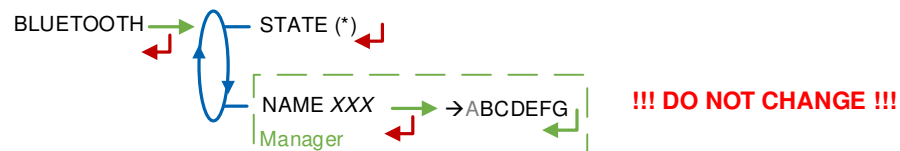


(*) NOT AVAILABLE (the calculator is not equipped) / DISCONNECTED / CONNECTED

STATE: Status of the Bluetooth connection

NAME – Access restricted to the Manager with green key and to the Maintenance with red key. The default name of the Bluetooth device includes the Microcompt+ serial number.

2.6 Menu GSM

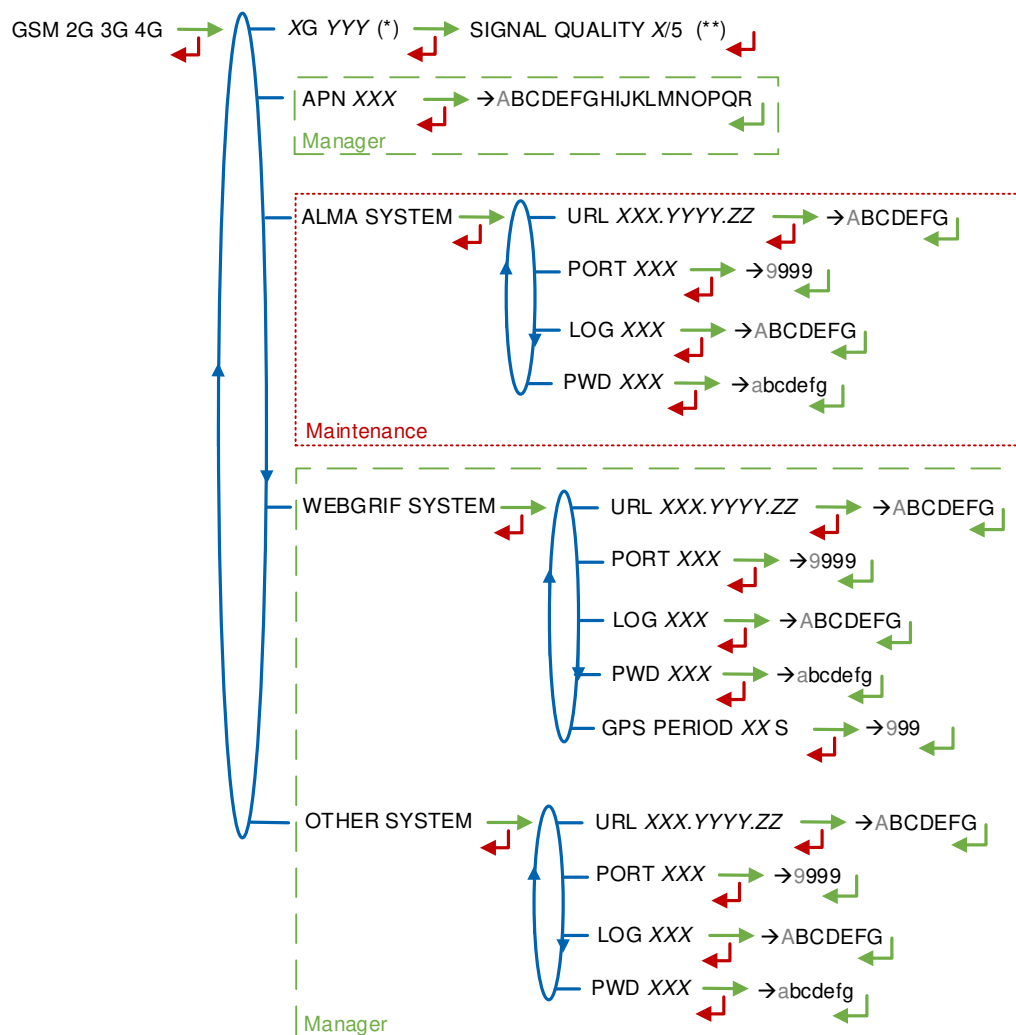

(*) NO SIGNAL ou 2G 3G 4G + INTERNET PROVIDER
 (**) IF CONNECTED

XG YYY: The signal is being received, the type of mobile network is displayed according to the protocols GSM / GPRS / EDGE, UMTS / HSPA+ / LTE, followed by the name of the service provider. Otherwise NO SIGNAL is displayed

APN – Access restricted to the Manager with green key and to the Maintenance with red key Name of the internet access point, only if ALMA does not supply it

ALMA SYSTEM – Access restricted to the Maintenance with red key. Information of connection to the ALMA FTP server for files transfer

- **URL:** Web address of the ALMA FTP server (host)
- **PORT:** ALMA FTP server port, default value: 21
- **LOG:** ALMA FTP server identifier
- **PWD:** ALMA FTP server password.

Permitted characters: <space>! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 ; : < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { | } ~
 (Visualization of the permitted characters on the MICROCOMPT+ display)

WEBGRIF SYSTEM – Access restricted to the Manager with green key and to the Maintenance with red key Information of connection to the Webgrif FTP server for files transfer

- **URL:** Web address of the Webgrif FTP server (host)
- **PORT:** Webgrif FTP server port, default value: 21
- **LOG:** Webgrif FTP server identifier
- **PWD:** Webgrif FTP server password.

Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
(Visualization of the permitted characters on the MICROCOMPT+ display)

GPS PERIOD: Backup period of GPS coordinates (from 1 to 999 seconds)

OTHER SYSTEM – Access restricted to the Manager with green key and to the Maintenance with red key Information of connection to the FTP server for files transfer

- **URL:** Web address of the FTP server (host)
- **PORT:** FTP server port, default value: 21
- **LOG:** FTP server identifier
- **PWD:** FTP server password.

Permitted characters: <space>!"#\$%&'()*+,-./0123456789:;<=>?@ABCD EFGHIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~
(Visualization of the permitted characters on the MICROCOMPT+ display)

2.7 Menu GPS

GPS → STATE (*) → LAT 11.222222 → LONG 33.444444 → NB SAT 99

(*) NO SIGNAL / 2DFIX / 3DFIX

STATE: The signal is being received: the type of signal is displayed 2DFIX or 3DFIX. Validating the data makes the GPS coordinates appear (latitude then longitude), and lastly appears the number of satellites which signals are simultaneously received (that gives information about the position accuracy). Otherwise NO SIGNAL is displayed

2.8 Menu RCT5

RCT5 → STATE (*) → ID XXXX → 1000 → IN PROGRESS

Use red pushbutton to change the digit value


(*) NOT SYNCHRONIZED / SYNCHRONIZED DISCONNECTED/ SYNCHRONIZED CONNECTED

STATE: Status of the MICROCOMPT+ ICOM board

ID: 4-digit MICROCOMPT+ radio ID

RESET: Reset the pairing of the MICROCOMPT+ with the RCT5 remote control

2.9 Menu CANBUS

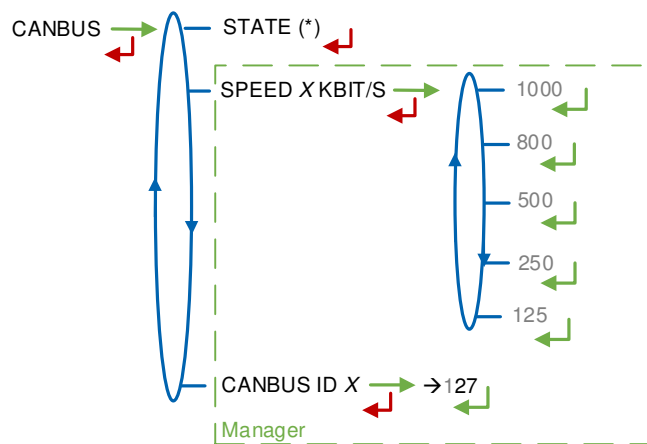

(*) CONNECTED / DISCONNECTED


(**) BETWEEN 1 AND 127

STATE: Status of the CANBus connection

SPEED – Access restricted to the Manager with green key and to the Maintenance with red key Speed of the CANBus connection

CANBUS ID – Access restricted to the Manager with green key and to the Maintenance with red key MICROCOMPT+ identifier for the CANBus protocol (between 1 and 127)


2.10 Menu MODBUS RTU

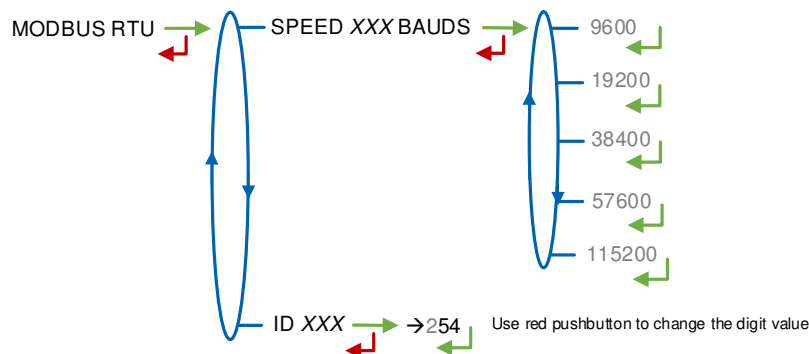

SPEED: Speed of the Modbus connection

ID: Modbus identifier of the slave (between 0 and 254)


2.11 Menu INCLINOMETER

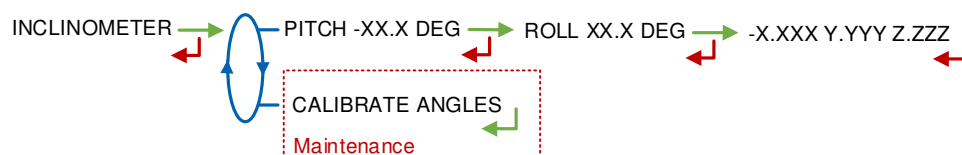

PITCH: Used to display the bank angles of the truck and the inclinometer raw data

CALIBRATE ANGLES – Access restricted to the Maintenance with red key. Used to reset the angles 'pitch' and 'roll' when the truck has a horizontal position in order to correct the assembly tolerances of the MICROCOMPT+ on the truck.

2.12 Menu I-COM CONFIG

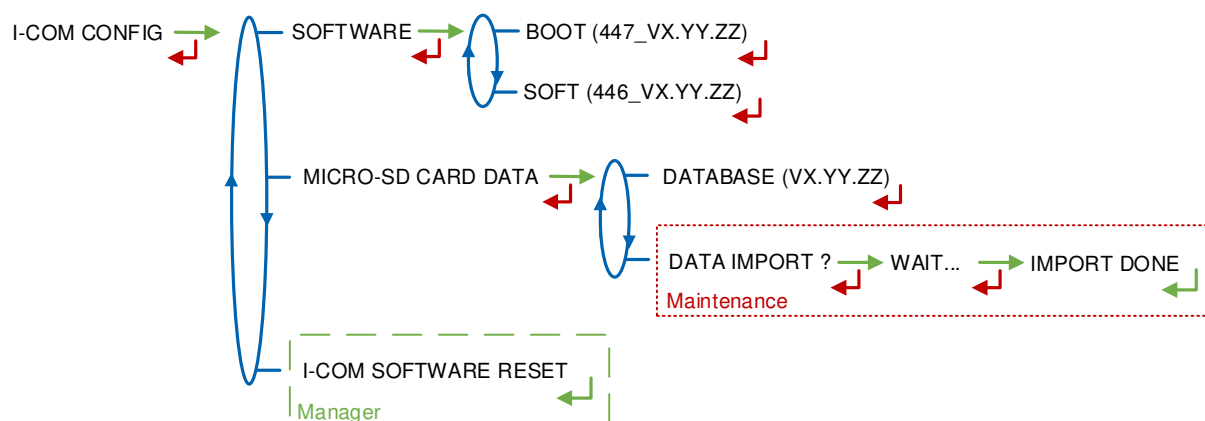

SOFTWARE: Used to display the number and version of the software

MICRO-SD CARD DATA

- **DATABASE (VX.YY.ZZ):** Display the version of the database; the version number is replaced by dashes if there's no database
- **IMPORT DATA ?** – Access restricted to the Maintenance with red key. Import the ICOM settings onto the SD card

I-COM SOFTWARE RESET – Access restricted to the Manager with green key and to the Maintenance with red key. Reboot the I-COM board.

VISUALIZATION OF THE PERMITTED CHARACTERS ON THE MICROCOMPT+ DISPLAY

<SPACE> ! " # \$ % & ' () * + , - . /

0 1 2 3 4 5 6 7 8 9 : ; < = > ?

@ A B C D E F G H I J K L M N O

P Q R S T U V W X Y Z [\] ^ _

` a b c d e f g h i j k l m n o

p q r s t u v w x y z { | } ~