

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 ENB ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° / °") Temperature: °C
	This document is available at www.alma-alma.fr	Page 1 / 45

CONTENTS

1. GENERAL RECOMMENDATIONS	4
1.1. MECANICAL RECOMMENDATIONS	4
1.2. ELECTRICAL RECOMMENDATIONS	5
1.3. PNEUMATIC RECOMMENDATIONS	7
2. GENERAL PRESENTATION.....	8
2.1. USE ACCORDING TO MID CERTIFICATE.....	8
2.2. SPECIAL CONDITIONS FOR INSTALLATION	8
3. PART LIST	8
4. MICROCOMPT+ CMA TRONIQUE NON ATEX OR ATEX	11
4.1. CALCULATOR-INDICATOR MICROCOMPT+ NON ATEX.....	11
4.2. CALCULATOR-INDICATOR MICROCOMPT+ ATEX	12
4.3. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+	13
4.4. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+.....	14
Terminal assignment of the power supply board.....	15
Connection of the network board – Ethernet, RS232/485, CANBus	17
Terminal assignment of the extension board 4DG (IS)	18
Terminal assignment of the extension board “sonde AD” 5 wires (IS)	18
Terminal assignment of the extension board “sonde AD” 2 wires (IS)	19
4.5. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX.....	20
Mounting and wiring of the GSM and GPS antennas.....	21
Mounting of the GSM/GPS cables into the cable glands.....	22
Wiring of the 2-antenna box to the MICROCOMPT+	22
4.6. SPOOL VALVE CONTROL: ELECTRICAL AND HYDRAULIC WIRING	23
Terminal assignment of the relay extension board.....	25
5. ELECTROMAGNETIC METER PD340	26
5.1. ELECTROMAGNETIC METER PD340 51-40	26
5.2. ELECTROMAGNETIC METER PD340 63-80	27
5.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340	28
6. RELATIVE PRESSURE TRANSMITTER CPR3000 NON ATEX OR ATEX	29
6.1. RELATIVE PRESSURE TRANSMITTER CPR3000 NON ATEX	29
6.2. INSTALLATION RECOMMENDATIONS CPR3000 NON ATEX.....	30
6.3. RELATIVE PRESSURE TRANSMITTER CPR3000 ATEX.....	31
6.4. INSTALLATION RECOMMENDATIONS CPR3000 ATEX	32
7. PRINTER	33
7.1. INSTALLATION RECOMMENDATIONS PRINTER	34
8. REGULATOR – CONVERTER 24VDC/24VDC 2.1A 50W.....	35
9. NON-RETURN VALVE KIT DN50 OR DN80.....	36
9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80	37
10. SIGHTGLASS KIT DN50 OR DN80.....	38
10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80.....	39
11. CONNECTION KIT 100X100 DN50 OR DN80	40

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2 / 45

12. NC/NO SOLENOID VALVES KIT NON ATEX OR ATEX	41
12.1. NC/NO SOLENOID VALVES KIT NON ATEX	41
12.2. NC/NO SOLENOID VALVES KIT ATEX	42
13. TEMPERATURE PROBE PT100 – CT1001 ATEX	43
13.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE.....	44
14. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE	45

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 45

1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


1.1. MECHANICAL RECOMMENDATIONS

- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment; the display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 45

1.2. ELECTRICAL RECOMMENDATIONS

- ⇒ According to the ATEX directive or any other regulations in force in the country of destination, the safety protection level of the equipment must agree with the installation area (potentially explosive atmospheres).
- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).

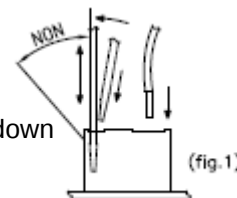

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 5 / 45

- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
- ⇒ Respect a homogeneous wire color code.
- ⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.
- ⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)
METER	24VDC +/-10%		0.7 A (switch-on)

- ⇒ Color code according to DIN 47100.
- ⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

1.3. PNEUMATIC RECOMMENDATIONS

- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area (L = 100 mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Unités	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0.069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)

1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7 / 45

2. GENERAL PRESENTATION

2.1. USE ACCORDING TO MID CERTIFICATE

The CMA TRONIQUE electromagnetic measuring system EM50 or EM60 is covered by the EU type examination certificate N° LNE-14983. Refer to this certificate for any precision about its installation. For the sealing plan, see Annex to EU type examination certificate N° LNE-14983.

2.2. SPECIAL CONDITIONS FOR INSTALLATION

ALMA CPR3000 pressure sensor is to be installed:

- ⇒ If possible by an equal distance between filter and pump entry, and in all cases with a minimal distance 200mm upstream from the pump entry
- ⇒ At the most vertical position regardless of the nipple on the pipe.

Any disruptive system (filter, valve, etc.) cannot be situated between the pressure entry and the pump entry.

Connection pipework between the compartments and the pump must have a minimum gradient of 3%. In case of a manifold configuration, this requirement is limited to the following conditions:

- ⇒ 3% minimum gradient of the pipe between bottom flap and manifold
- ⇒ No reverse slope between manifold and pump entry.


If the measuring system is fitted with two delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Matériel	Désignation	Qté	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ CMA TRONIQUE WITH Bluetooth CONNECTION NON ATEX or ATEX	1	
		Wi-Fi CONNECTION (As an alternative to Bluetooth)		•
		RFID SUPERVISOR KEY		
2		ELECTROMAGNETIC METER PD340 C51-40 (Depending on configuration)	1	
		ELECTROMAGNETIC METER PD340 PD340 C63-80 (Depending on configuration)		

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 8 / 45

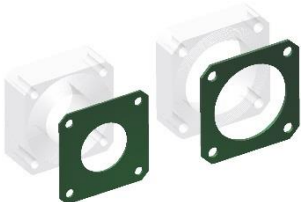EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
3		RELATIVE PRESSURE SENSOR – CPR3000 NON ATEX or ATEX (Supplied with hydraulic shock absorber)	1	
4		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
5		REGULATOR – CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC)	1	
6		NON-RETURN VALVE INOX KIT DN50 or DN80 (Depending on configuration)	1	●
7		SIGHT KIT DN50 or DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	●
8		CONNECTION CARBON STEEL KIT DN50 or DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	●
9		NC/NO SOLENOID VALVES KIT NON ATEX or ATEX	1	●

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 9 / 45

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

Item	Equipment	Designation	Qty	Option*
10		Pt100 TEMPERATURE SENSOR – CT1001 (Supplied with thermowell)	1	●
11		2-ANTENNA BOX GSM AND GPS	1	●
12		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	●
Option*: equipment sold as an option by ALMA must be installed on the measuring system if required by the certificate.				

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 10 / 45



4.2. CALCULATOR-INDICATOR MICROCOMPT+ ATEX



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 ENB ELECTROMAGNETIC CMA EM50 AND EM60


This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° '' ''')
 Temperature: °C


Page 12 / 45

4.3. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: A > 100mm and B > 60mm

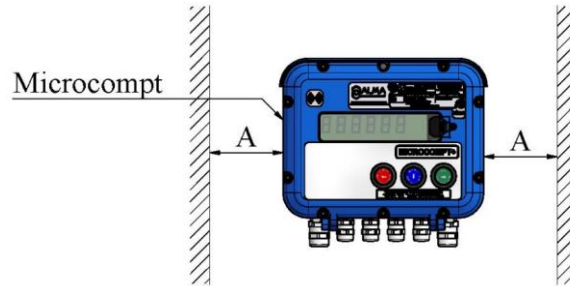

- SOLUTION 1: straight box if it's a breast height.

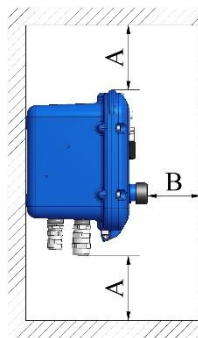


Left hand view
Closed box

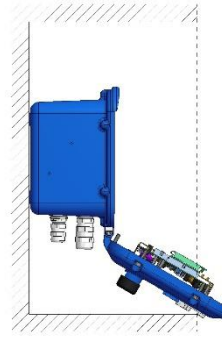


Left hand view
open box

- SOLUTION 2: 20° angle if it's not at breast height.

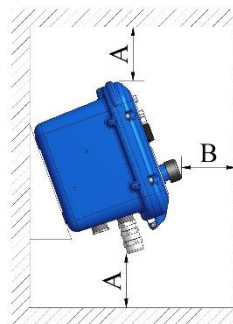


Left hand view
Closed box

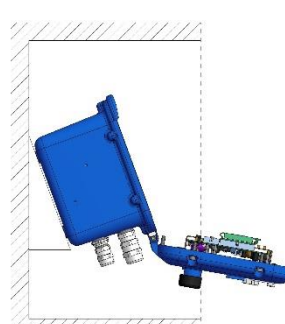

Left hand view
open box

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

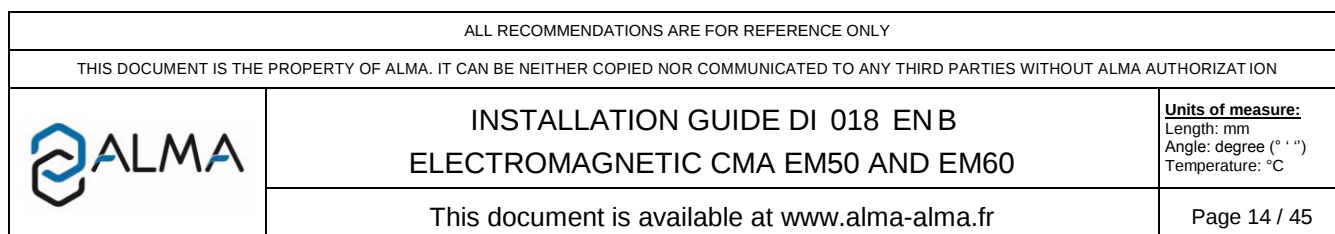


Terminal assignment of the power supply board

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNMENT OF MICROCOMPT+ BOARDS

POWER SUPPLY BOARD

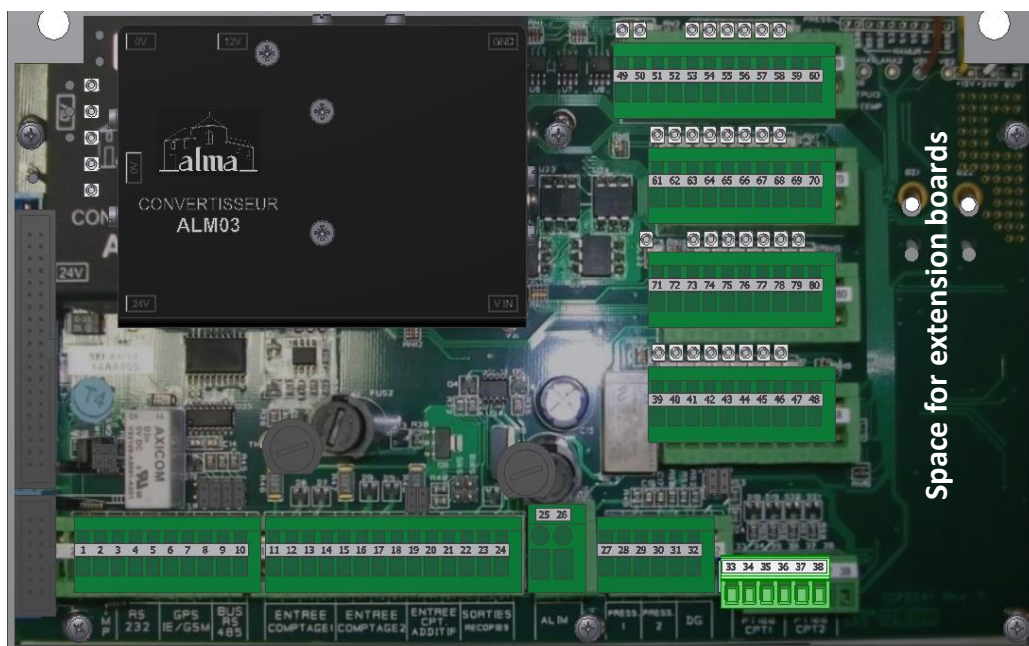

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal			
		No.	CG*	Alma	Type				Function	Observation	
	PRINTER	C1	1/2"NPT	●	ADR 4x0.34 sh.	Rx Printer	Bc	1	Tx	PRINTER	Connect the shielding
						Tx Printer	Mr	2	Rx		
						0V	Vt	3	0V		
•	EMBEDDED COMPUTING	C8	1/2"NPT		3x0.34 sh.	0V		3	0V	RS232	Connect the shielding
						Rx E.C.		4	Tx		
						Tx E.C.		5	Rx	RS485	Remote display type SREI TC5- 10- 24 Ext Use an RS485/RS232 converter
	REMOTE DISPLAY					Tx		9	+		
						Rx		10	-	METER INPUT EMA	Connect the shielding
	ELECTROMAGNETIC METER	C2	1/2"NPT	●	ADR 4x0.34 sh.	V1		12	V1		
						V2		13	V2		
						0V		14	0V	PULSES OUTPUT	Control system / Display Put SW9 and SW10 to have a 0- 24V signal
•	PULSES OUTPUT		1/2"NPT			PO EMA		22	PO EMA		
						PO EMB		23	PO EMB		
						0V		24	0V	POWER SUPPLY	24VDC truck battery (after battery switch and protected by a fuse)
	SUPPLY 24VDC	A1	1/2"NPT		2x1	Bat. (+)	1	25	24VDC		
						Bat. (-)	2	26	0V	PRESSURE	Connect the shielding
	PRESSURE SENSOR (NON ATEX)	C3	1/2"NPT	●	2x0.34 sh.	+	Mr	27	+		
						-	Bl	28	-	Pt100	Connect the shielding
	Pt100 TEMPERATURE PROBE	C4	1/2"NPT	●	ADR 3x0.6 sh.	+	Jn	33	+		
						-	Bc	34	-		
						-	Vt	35	-		

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	MANIFOLD FLAP CONTROL OR PRODUCT RETURN AUTHORISATION (Cpt 4 and 5)				4 to 7x1	Flap 1	1	39	24VDC = opened flap (outputs FET 24V 5W max.) FET: Field Effect Transistor	EV Flaps or Product return authorisation	
						Flap 2	2	40			
						Flap 3	3	41			
						Flap 4	4	42			
						Flap 5	5	43			
						Flap 6	6	44			Or Product return compartment 4
						Flap 7	7	45			Or Product return compartment 5
								46			
					1x1	0V		47	0V		
								48			
	RC-HEATING OIL RECEIVER				2x1	Start/Stop	1	49	Start/Stop	RC-Oil_1	
						LF/HF	2	50	LF/HF	RC-Oil_2	
	COUNTED / PUMPED DISTRIBUTION WAY (with additional commands)				3x1	Gravi/Pmp	1	51	0V	Gravity / Pumped	Closed circuit=product pumped (end position)
						Pct/Pnc	2	52	0V	Pumped counted/ no counted	Closed circuit=product counted
						0V	3	59	0V	0V (GND)	51, 52 and 59 are shunted if manual valves are not instrumented
	PTO CONTROL				1x1	PTO Ctrl		58		PTO control	Power- take- off engaged
	FOOTVALVE CONTROL				1x1	Footvalve			24VDC= cde	FOOTVALVE	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor
	PRODUCT RETURN CONTROL				3 to 6X1	PR1	1	65	24VDC= author.	Return_1	Product return compartment 1to 3 (Outputs FET 24V 5W max.) FET=Field Effect Transistor
						PR2	2	66		Return_2	
						PR3	3	67		Return_3	
						Chasse		68		Cde chasse	
	HOSES 1 AND 2 AUTHORISATION CONTROL	C6			3x1	0V	1	70	0V	0V (GND)	Hoses 1and 2 authorisation control (Outputs FET 24V 5W max.) FET=Field Effect Transistor
						Hose 1	2	75	24VDC= distrib.	Hose_1ctrl	
						Hose 2	3	63		Hose_2 ctrl	
	ADDITIONAL COMMANDS				5X1	PTO	1	61	24VDC= pto	PTO	(Outputs FET 24V 5W max.) FET=Field Effect Transistor
						Stop Mot.	2	62	24VDC= stop	Stop motor	
						Acc. Mot.	3	73	24VDC= acc.	Motor acceleration	
						Clutching	4	76	24VDC= clutchin	Clutching	
						Start Mot.	5	77	24VDC= start	Start motor	
	ADDITIVATION CONTROL				2x1	Power	1	71	NO free contact	Additivition	Closed contact=additivition
						Control	72	50		control	(Output: NO free potential relay)
	KIT SOLENOID VALVES • NC/NO (NON ATEX or ATEX)	C5			[3xG0.75]	NC valve	1 / [Mr]	74	24VDC	NC control	24VDC= opening NC solenoid valve
						Pump bypass	2 / [NI]	80	0V		24VDC= closing NO solenoid valve
						NO valve	1 / [Mr]	79	24VDC	NO control	[cable supplied by ALMA for ATEX version]
						Exhaust	2 / [NI]	80	0V		
	MANIFOLD VENT VALVE CONTROL				1x1	Vent valve		78	24VDC	Vent valve control	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor

SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD


*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 ENB ELECTROMAGNETIC CMA EM50 AND EM60	
	This document is available at www.alma-alma.fr	
		Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
		Page 16 / 45

Connection of the network board – Ethernet, RS232/485, CANBus

Connection to the Ethernet network:

- With the RJ45 connector according to the EIA/TIA-568 standard
- Or with the screw-terminal: see details in the table below.

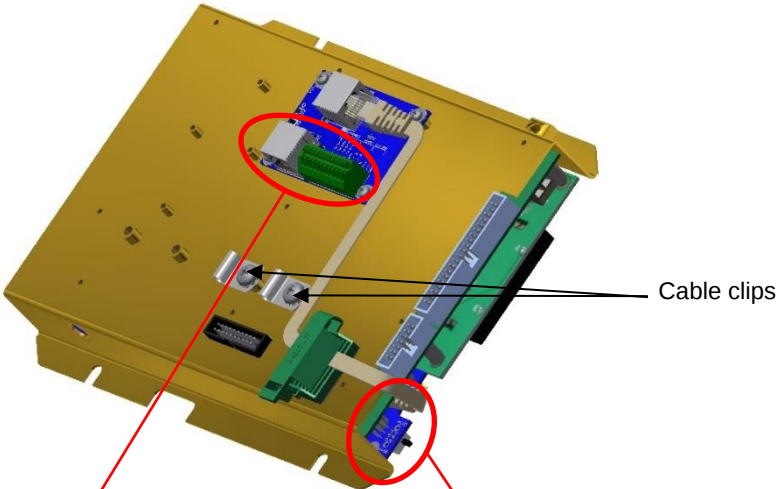

Cable clips

NETWORK BOARD

Ethernet RJ45

RS232 or RS485 Switch

NETWORK CONNECTION TYPE								NETWORK BOARD			
Option	Connection	Cable (for information)				Function	Coulor or No.	Coulor	Function		Observation
		No.	CG*	Alma	Type						
	ETHERNET NETWORK							Vt/Bc	Tx+	Ethernet	Or connection with RJ45 according to EIA/TIA-568
								Vt	Tx-		
								Or/Bc	Rx+		
								Or	Rx-		
	RS232 or RS485									RS232 or RS485	Depending on the switch configuration See above
	CANBus NETWORK									CANBus	

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Terminal assignment of the extension board 4DG (IS)

EXTENSION BOARD 4DG (IS)

A 3D perspective view of the EXTENSION BOARD 4DG (IS). The board is green with various electronic components, including integrated circuits and resistors. A yellow cable with a ring terminal is connected to the top. A label on the board provides technical specifications: 'ALIMENTATION 4 DG DE: SI 70773', 'B (1) G LDC 08 ATEX 0052 X / 01', 'EXHA B B ALMA F19127 VITROLLES', and a CE mark with '0050' below it. The board is mounted on a black base.

NT IN ATEX 506 C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+

EXTENSION BOARD 4DG (IS)

Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	RELATIVE PRESSURE SENSOR CPR3000 (ATEX)	C3			ADR 4x0.34 sh.	PRESSURE	Bc	5	+	PRESSURE	
							Mr	6	-		

**Refer to the Cable Glands Installation Instructions*

Terminal assignment of the extension board “sonde AD” 5 wires (IS)

EXTENSION BOARD SONDE AD 5 wires (IS)

NT IN ATEX 510 C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							EXTENSION BOARD SONDE AD (IS)				
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE	C7			[6x1]	Common	[Nr]	1	-	OVERFILL PREVENTION PROBES	[If cable are supplied by ALMA]
						Supply	[Rg]	2	+		
						From probe	[Or]	3	From probe		
						To probe	[Jn]	4	To probe		

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 18 / 45

Terminal assignment of the extension board “sonde AD” 2 wires (IS)

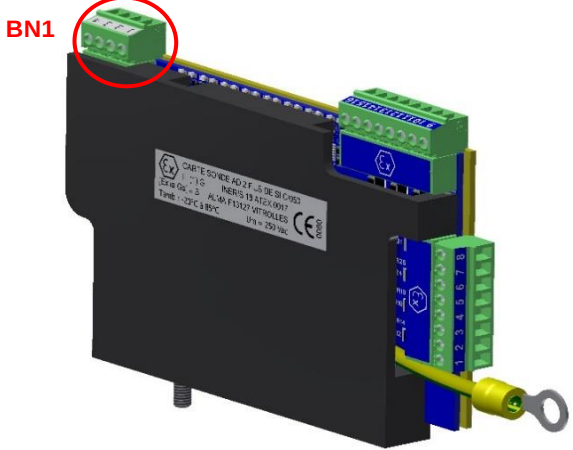
EXTENSION BOARD SONDE AD 2 wires (IS)											
											
EQUIPMENT CONNECTED TO THE MICROCOMPT+						EXTENSION BOARD SONDE AD (IS)					
Option	Equipment	Cable (for information)				Function	Terminal	Function		Colour	Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE 1					Supply	1	Supply +	SIGNAL PROBE 1	Mr	
						Common	2	Common		Bc	
•	OVERFILL PREVENTION PROBE 2					Supply	3	Supply +	SIGNAL PROBE 2	Rg	
						Common	4	Common		Bc	
•	OVERFILL PREVENTION PROBE 3					Supply	5	Supply +	SIGNAL PROBE 3	Or	
						Common	6	Common		Bc	
•	OVERFILL PREVENTION PROBE 4					Supply	7	Supply +	SIGNAL PROBE 4	Jn	
						Common	8	Common		Bc	
•	OVERFILL PREVENTION PROBE 5					Supply	9	Supply +	SIGNAL PROBE 5	Vt	
						Common	10	Common		Bc	
•	OVERFILL PREVENTION PROBE 6					Supply	11	Supply +	SIGNAL PROBE 6	Bl	
						Common	12	Common		Bc	
•	OVERFILL PREVENTION PROBE 7					Supply	13	Supply +	SIGNAL PROBE 7	Vi	
						Common	14	Common		Bc	
•	OVERFILL PREVENTION PROBE 8					Supply	15	Supply +	SIGNAL PROBE 8	Gr	
						Common	16	Common		Bc	

*Refer to the Cable Glands Installation Instructions




- This extension board only works with two-wire optic overfill prevention probes.
- A Dummy device is a two-wire dry probe simulator. Channels that are not connected to overfill prevention probes must be connected to a Dummy device. None of the 8 channels must be open.
- Do not install the Dummy into the MICROCOMPT housing.
- If the MICROCOMPT is off, the probes and the Dummy device shall be electrically isolated.


Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):

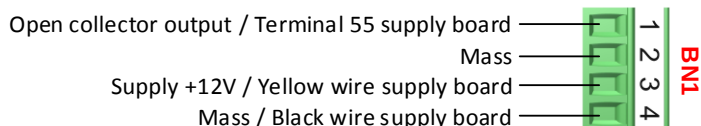

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 19 / 45

4.5. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX

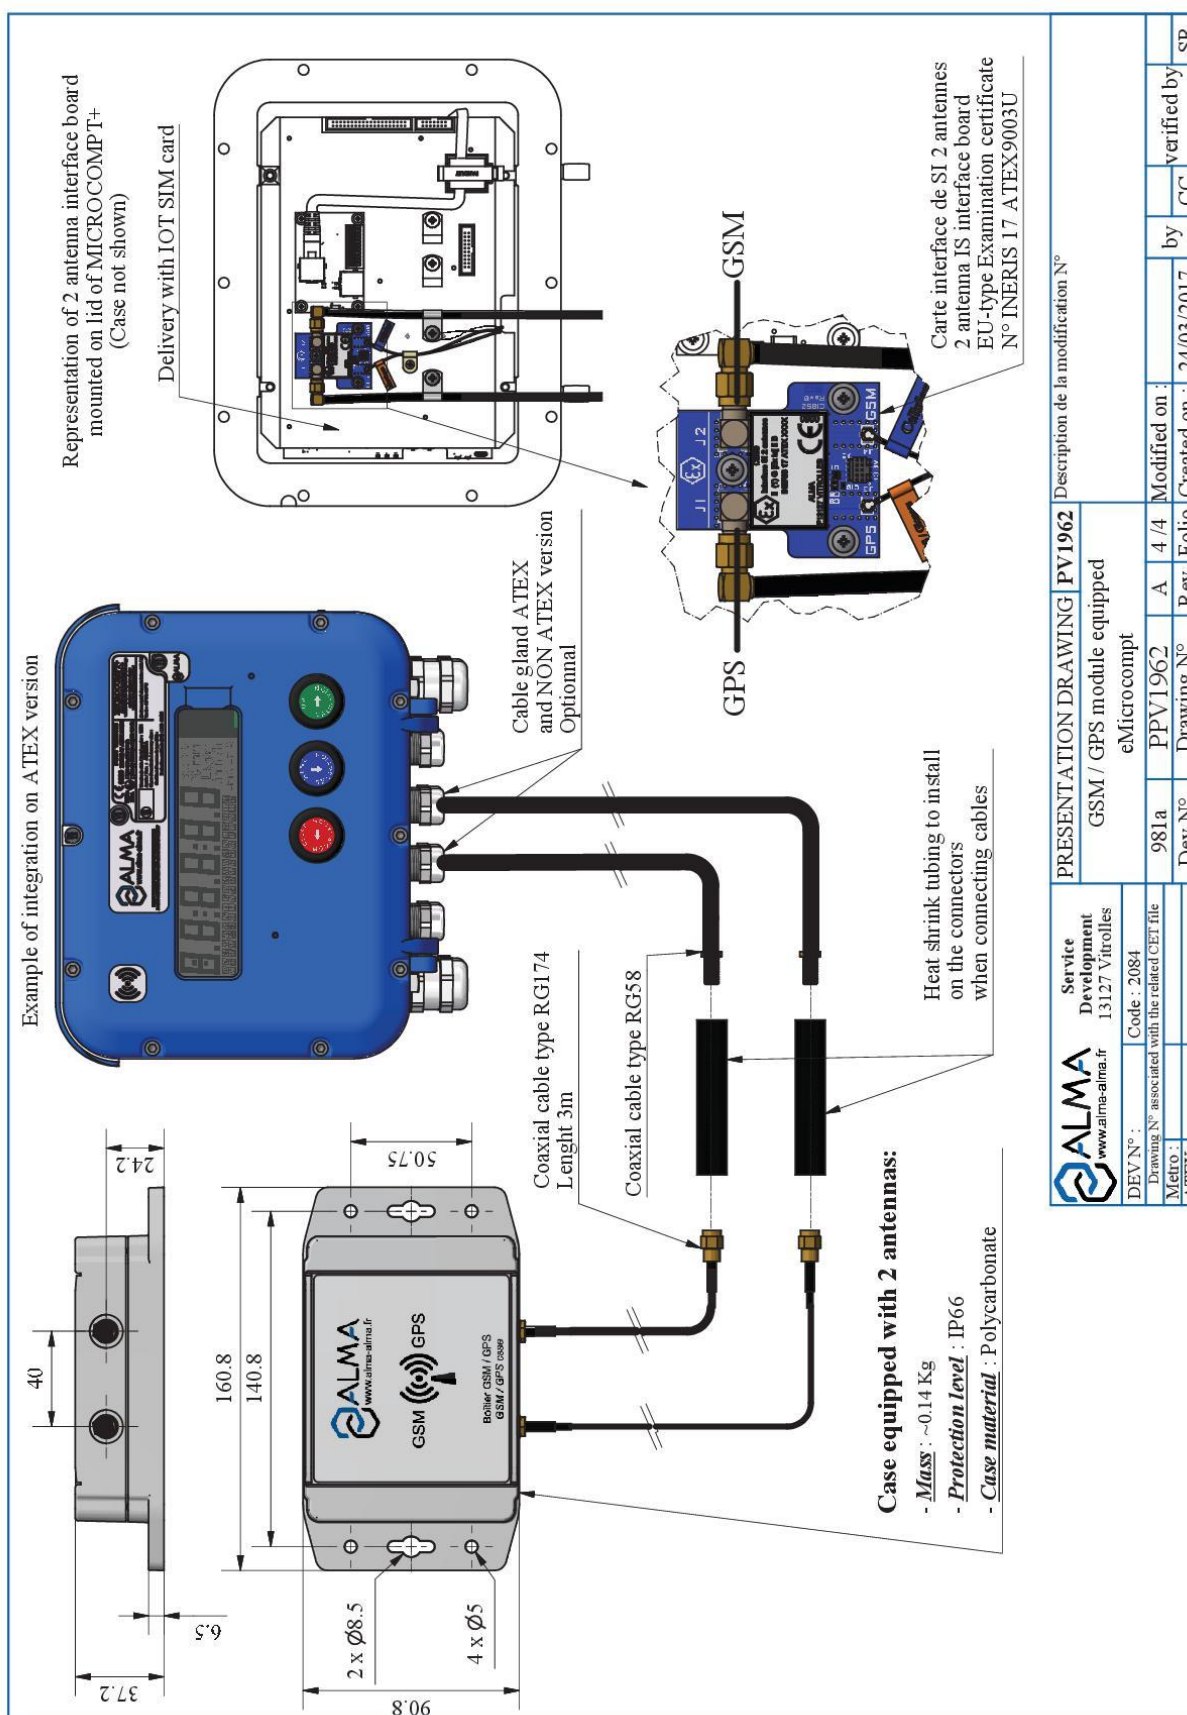

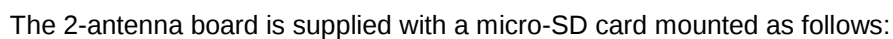

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° / °") Temperature: °C
	This document is available at www.alma-alma.fr	Page 21 / 45

Mounting of the GSM/GPS cables into the cable glands

ALMA connects the GSM and GPS antenna to the MICROCOMPT+ (2-antenna board).



At the outlet of the MICROCOMPT+ box, you must pass both cables through cable glands. In case of an ATEX MICROCOMPT+, cable glands must be ATEX.



Into the MICROCOMPT+, adjust the cable length to easily open and close the cover. Make sure to prevent damage to the cable.

Tighten both cable glands.

Wiring of the 2-antenna box to the MICROCOMPT+

Fasten the box. You must install it in an area free of metallic cover to have a good reception and broadcasting of signal. You can install the box in a horizontal or vertical position.

Put each coaxial cable through the heat shrink sleeve.

Plug the RG58⁽¹⁾ cable from the MICROCOMPT+ with the RG174⁽²⁾ cable from the antenna box and tighten them. Isolate the male/female SMA connectors with the supplied heat shrink sleeve (both antennas in the box are the same, cables don't have to be labelled).

Position and heat up the sleeve on the connectors to prevent corrosion and humidity.



WARNING: The cables of this box can be **neither shortened nor extended**

⁽¹⁾ RG58: Semi-rigid coaxial cable, 5mm diameter

⁽²⁾ RG174: Flexible coaxial cable, 2.7mm diameter

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 22 / 45

4.6. SPOOL VALVE CONTROL: ELECTRICAL AND HYDRAULIC WIRING


EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	MANIFOLD FLAP CONTROL OR PRODUCT RETURN AUTHORISATION (Cpt 4 and 5)				4 to 7x1	Flap 1	1	39	24VDC = opened flap (outputs FET 24V 5W max.) FET=Field Effect Transistor	EV Flaps or Product return authorisation	
						Flap 2	2	40			
						Flap 3	3	41			
						Flap 4	4	42			
						Flap 5	5	43			
						Flap 6	6	44			
						Flap 7	7	45			
						1x1	0V		46	0V	
									47		
									48		
	RC-HEATING OIL RECEIVER				2x1	Start/Stop	1	49	Start/Stop	RC- Oil_1	
						LF/HF	2	50	LF/HF	RC- Oil_2	
	COUNTED / PUMPED DISTRIBUTION WAY (with additional commands)				3x1	Gravi/Pmp	1	51	0V	Gravity / Pumped	Closed circuit=product pumped (end position)
						Pct/Pnc	2	52	0V	Pumped counted/ no counted	Closed circuit=product counted
						0V	3	59	0V	0V (GND)	51, 52 and 59 are shunted if manual valves are not instrumented
	PTO CONTROL				1x1	PTO Ctrl		58		PTO control	Power-take- off engaged
	FOOTVALVE CONTROL				1x1	Footvalve			24VDC= cde	FOOTVALVE	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor
	PRODUCT RETURN CONTROL				3 to 6X1	PR1	1	65	24VDC= author.	Return_1	Product return compartment 1to 3 (Outputs FET 24V 5W max.) FET=Field Effect Transistor
						PR2	2	66		Return_2	
						PR3	3	67		Return_3	
						Chasse		68		Cde chasse	
	ADDITIONAL COMMANDS				5X1	PTO	1	61	24VDC= pto	PTO	(Outputs FET 24V 5W max.) FET=Field Effect Transistor
						Stop Mot.	2	62	24VDC= stop	Stop motor	
						Acc. Mot.	3	73	24VDC= acc.	Motor acceleration	
						Clutching	4	76	24VDC= clutchin	Clutching	
						Start Mot.	5	77	24VDC= start	Start motor	
	ADDITIVATION CONTROL				2x1	Power	1	71	NO free contact	Additivition control	Closed contact=additivition
						Control	72	50			(Output: NO free potential relay)
	SPOOL VALVE CONTROL				2x1	HF		74	HF solenoid valve	Spool valve (hydraulic motor)	
						Author.		75	Author. Solenoid valve		
	MANIFOLD VENT VALVE CONTROL				1x1	Vent valve		78	24VDC	Vent valve control	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor
SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD											

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 23 / 45

Terminal assignment of the relay extension board

RELAY EXTENSION BOARD (used to control a minimum 5W spool valve)

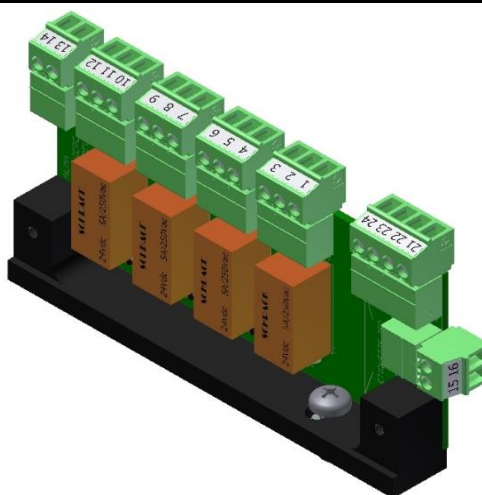

EQUIPEMENT CONNECTED TO THE MICROCOMPT+							RELAY EXTENSION BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	AUTHORISATION SOLENOID VALVE					Author.		1	NC free contact	RELAY 1 Hydraulic control of hydraulic pump
								2	0V/24VDC	
								3	NO free contact	
	HIGH FLOW SOLENOID VALVE					High flow		4	NC free contact	RELAY 2 High flow control of hydraulic pump
								5	0V/24VDC	
								6	NO free contact	

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 25 / 45



5.2. ELECTROMAGNETIC METER PD340 63-80

Technical data:

- **Mass** : 5Kg
- **Max. Flow** : 80 m³/h
- **Liquide temperature** : -30°C to 100°C
- **Max. pressure** : 10 Bar
- **Power supply** : 24V AC ±15% or 24 DC ±15%
- **Output** : pulse output calibrated at 10 imp/L
- **Max. power** : 6W

Optional:

Clamp connection kit (Code: 1823)

x2

Electrical connection

SW1 position

SW2 position

Power supply 24Vdc

0V

2 output OC in quadrature

V2

0V

V1

Terminal	Function
16	V1
17	0V
18	V2
2	24Vdc

Service Development		PRESENTATION DRAWING		Description of amendment N°	
www.alma-alma.fr		Electromagnetic meter		Changing the output type indication	
DEV N° : 950	Code : 1824	950	PPV1878	B	2/2
Drawing N° associated with the related CET file		PD 340 C63 - 80			
Metro : ATEX		Dev N°	Drawing N°	Rev	Folio
		950	PPV1878	B	2/2
		Created on :	08/02/2016	by	CC
		Modified on :	01/10/2018	CC	verified by
					SR


5.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340




To function properly, the PD340 electromagnetic meter must be filled with liquid ; otherwise pulses are automatically generated.

To ensure a correct filling, ALMA recommends the installation of a sightglass nearby the meter.

- Turn the meter so that the identification plate is visible and accessible. The meter must be laid flat with horizontal pipe, and cable glands pointing downwards:

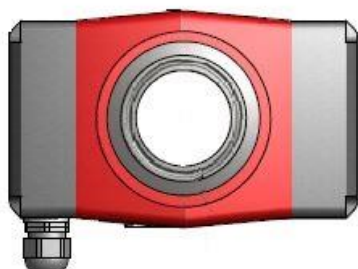

(Or optionally: the meter can be installed with vertical pipe with upward flow):

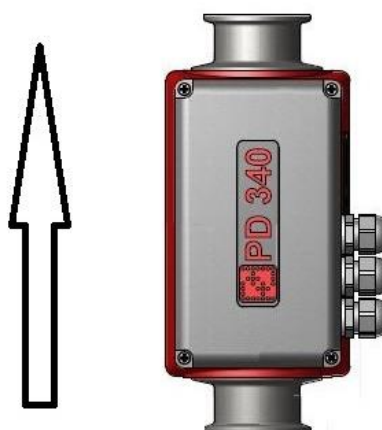

- Leave an open space all around the meter in order to ease wiring, maintenance and verification.
- In the unique situation using very hot products with large flowrate, the meter must be installed between straight pipe sections which length is at least equal to 3 times the nominal diameter of the meter. This is aimed at avoiding cavitation problems.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 28 / 45

6. RELATIVE PRESSURE TRANSMITTER CPR3000 NON ATEX OR ATEX

6.1. RELATIVE PRESSURE TRANSMITTER CPR3000 NON ATEX

Dimensions: 45, 25, 129, 36, 20, 25, 1/2"NPT, Ø38, SW 27 (torque max. 50Nm)

Breather capillaries
Brown wire (+) power supply
Blue wire (-) power supply
Cable screening

Technical data:

- Protection class: IP67
- Temperature range: -20°C to +60°C
- Operating voltage: 8-30VDC - Output signal: 4-20mA - Range: 3.8-20.5mA
- Fault signal: 22mA - Signal resolution: 5µA - Max. output current: 22mA
- Run-up time: approx. 2s - Dead time: ≤ 10ms - Step response time: ≤ 20ms (0...63%)
- Pressure: 0-250mbar
- Process fitting: 1/2"NPT SS 316L - Body: brass, nickel-plated - Seal: FKM
- Cable: 2x0.34 shielded with breather capillaries - Ø ext.: 6 L=5m
- Mass: 0.5 kg

ALMA Service Development 13127 Vitrolles www.alma-alma.fr		PRESENTATION DRAWING Relative pressure sensor CPR3000		Description of the amendment: N° : - English version of presentation drawing.	
DEV N° : 907	Code : 6929	B	2 / 2	Modified on : 26/02/2014	EG
Drawing N° associated with the related CET file	-	PPN904	Rev	Folio	EG
Metro : -	-	907	Drawing N°	Created on : 11/05/2009	DSM
ATEX: -	-			by	FDS

 Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY


THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 ENB ELECTROMAGNETIC CMA EM50 AND EM60

 This document is available at www.alma-alma.fr
Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

- Mount the pressure sensor on a boss 1/2"NPT welded on the vertical or horizontal axis of the pipe.

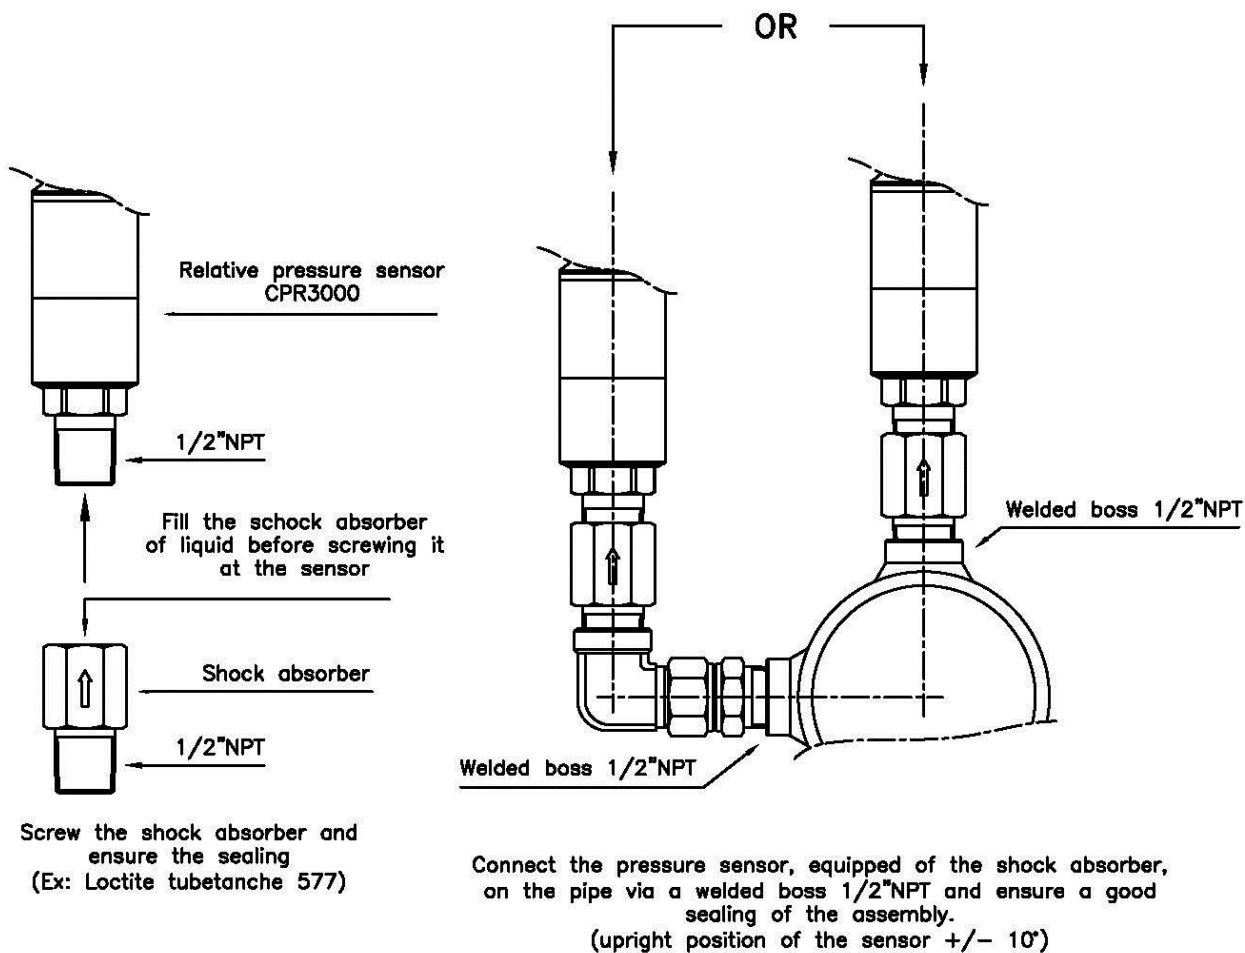

DISTANCE BETWEEN THE PRESSURE SENSOR AND THE SUCTION FLANGE OF THE PUMP MUST BE AT LEAST 200mm.

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 018 EN B

ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

6.3. RELATIVE PRESSURE TRANSMITTER CPR3000 ATEX

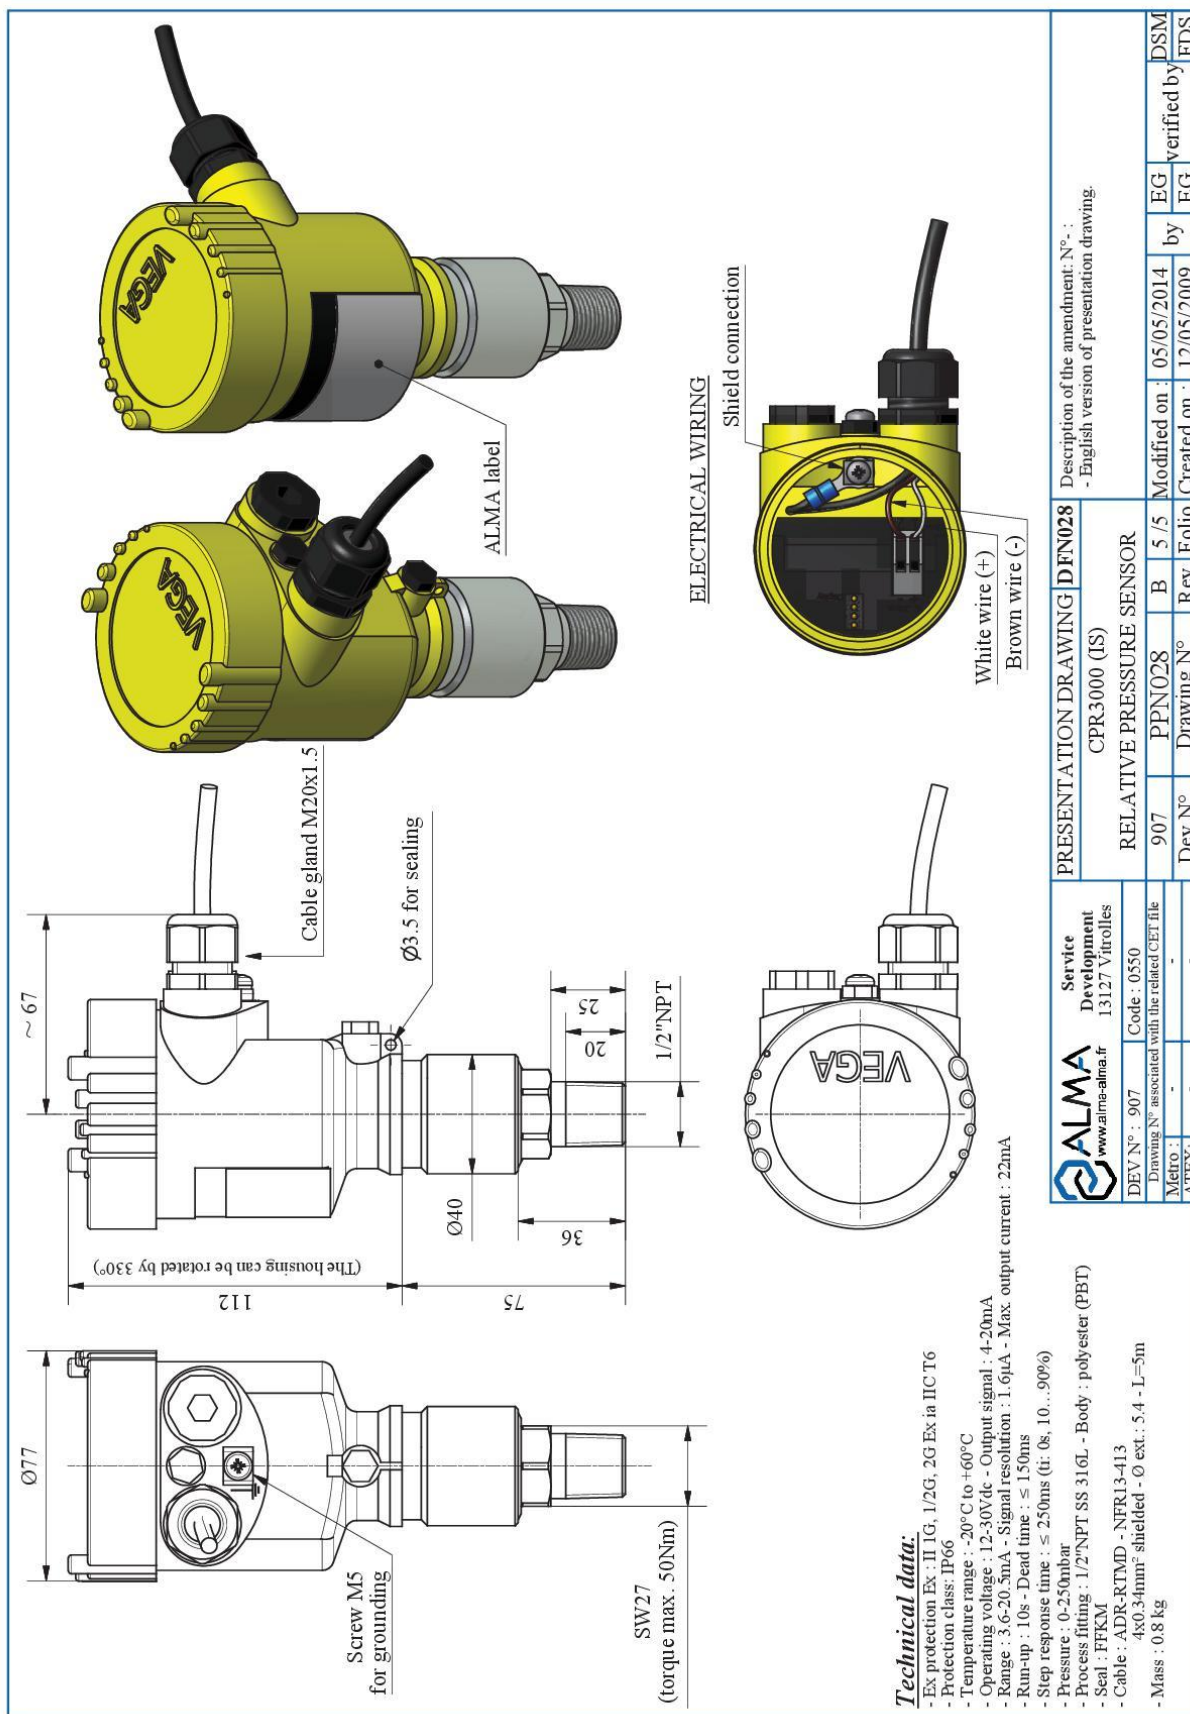

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 018 ENB ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

Page 31 / 45

6.4. INSTALLATION RECOMMENDATIONS CPR3000 ATEX

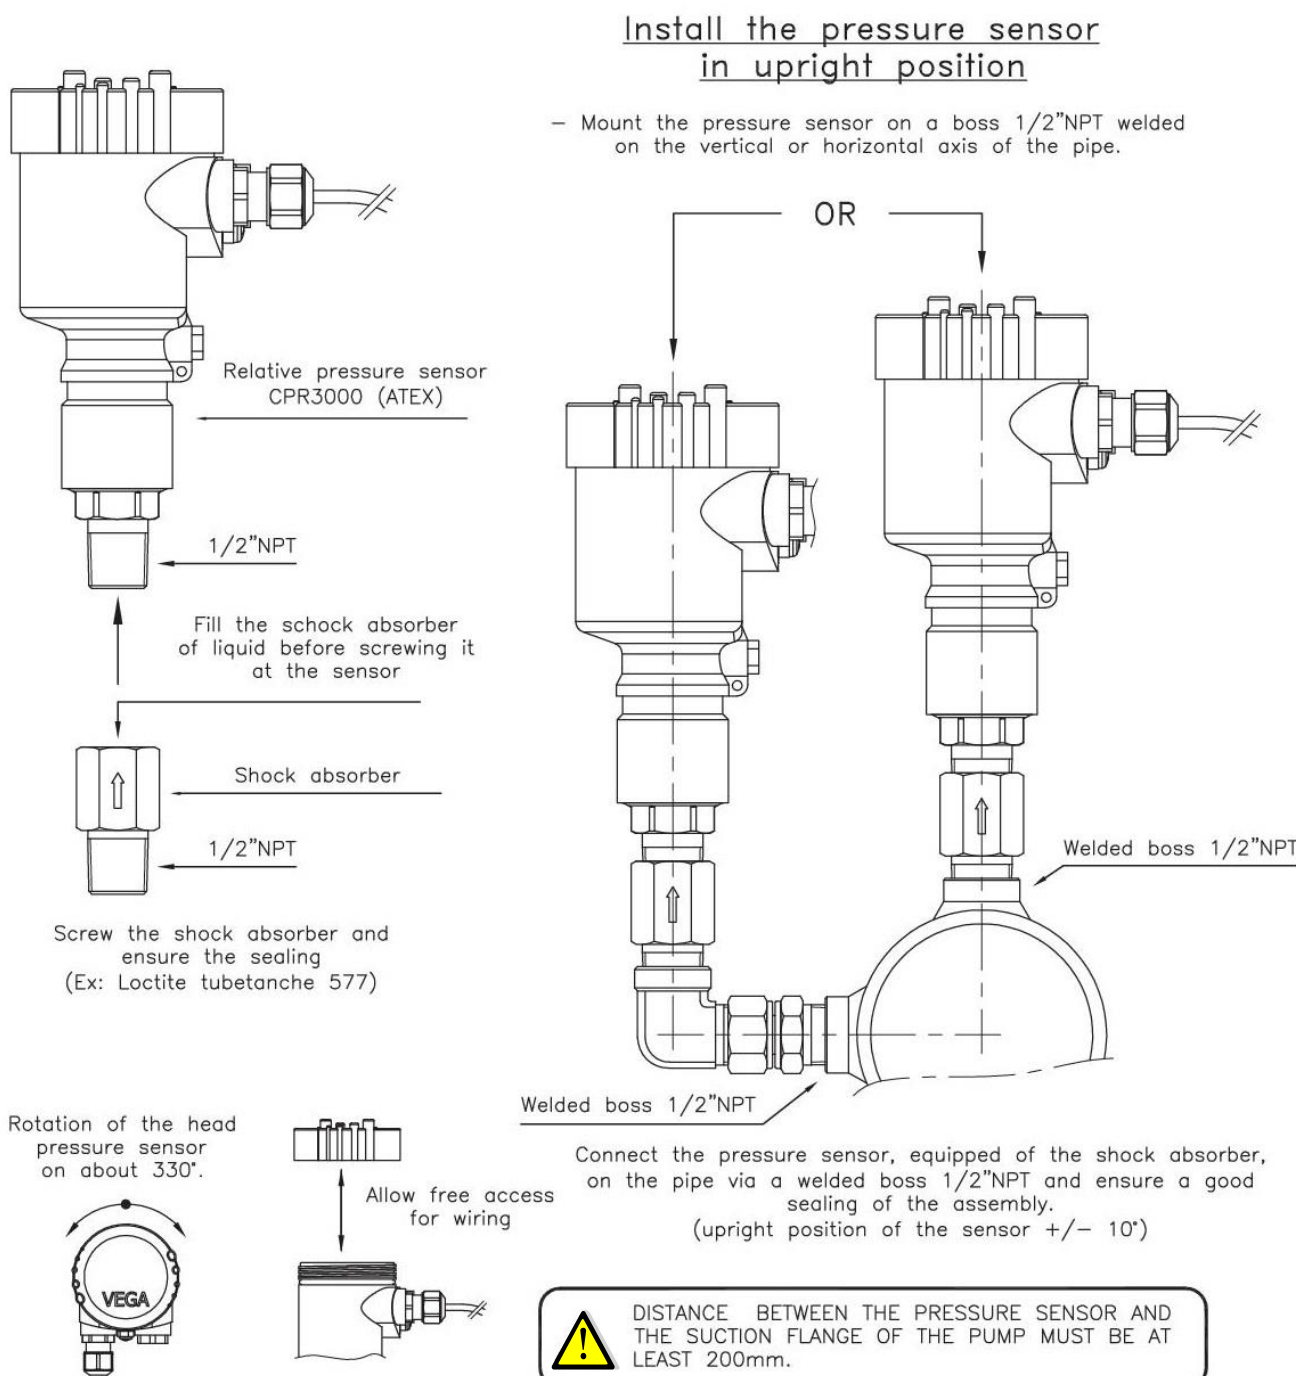

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° / °") Temperature: °C
	This document is available at www.alma-alma.fr	Page 32 / 45

7. PRINTER

Without printer

PRINTER KIT:

- 1 Printer.
- 1 Printer link cable (Length= 5 or 10m).
- 1 Printer holder (SS 304L thickness 2mm - Mass 1.5 kg).

Printer kit
with TM-U295 printer
Code: 0284 (with 5 meters cable)
Code: 0765 (with 10 meters cable)
(Printer presentation drawing PPN901)

DO NOT EXPOSE THE PRINTER
TO ANY HEAT-SOURCE,
AND PROTECT IT FROM VIBRATIONS
AND FROM WATER PROJECTIONS.

IF IT'S NOT IN THE TRUCK CABIN,
THE PRINTER MUST BE INSTALLED
IN A TIGHT BOX IN ORDER
TO FACILITATE INTRODUCTION AND
EXTRACTION OF PAPER.

Printer kit
with SP298MD printer
Code: 0766 (with 5 meters cable)
Code: 0767 (with 10 meters cable)
(Printer presentation drawing PPN900)

* ADR-RTMD - NFR13-413 cable

PRINTER LINK CABLE		COLOUR WIRE	FUNCTION
TYPE	CABLE	White (WH) Brown (BN) Yellow (YE) Green (GN) Shielding	24Vdc 0v Tx printer Rx printer Shielding
Shielded cable* 4x0.75mm ² Ø ext. 8 L=5m / Code 4339 L=10m / Code 4578			

Service
Development
13127 Vitrolles
www.alma-alma.fr

PRESENTATION DRAWING PPN902

PRINTER KIT

DEV N° : 907	Code : -	907	PPN902	B	2 / 2	Modified on : 06/05/2014	EG	verified by	DSM
Metro : -	Drawing N° associated with the related CEF file	Dev N°	Drawing N°	Rev	Folio	Created on : 25/03/2010	EG		XS
ATEX:									

 Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY


THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60


 This document is available at www.alma-alma.fr
Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

-

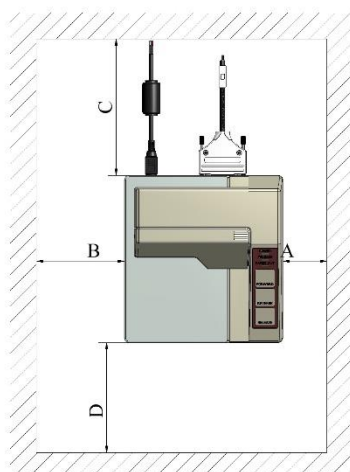

DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE.
PROTECT IT FROM VIBRATIONS AND WATER PROJECTIONS.

8. REGULATOR – CONVERTER 24VDC/24VDC 2.1A 50W

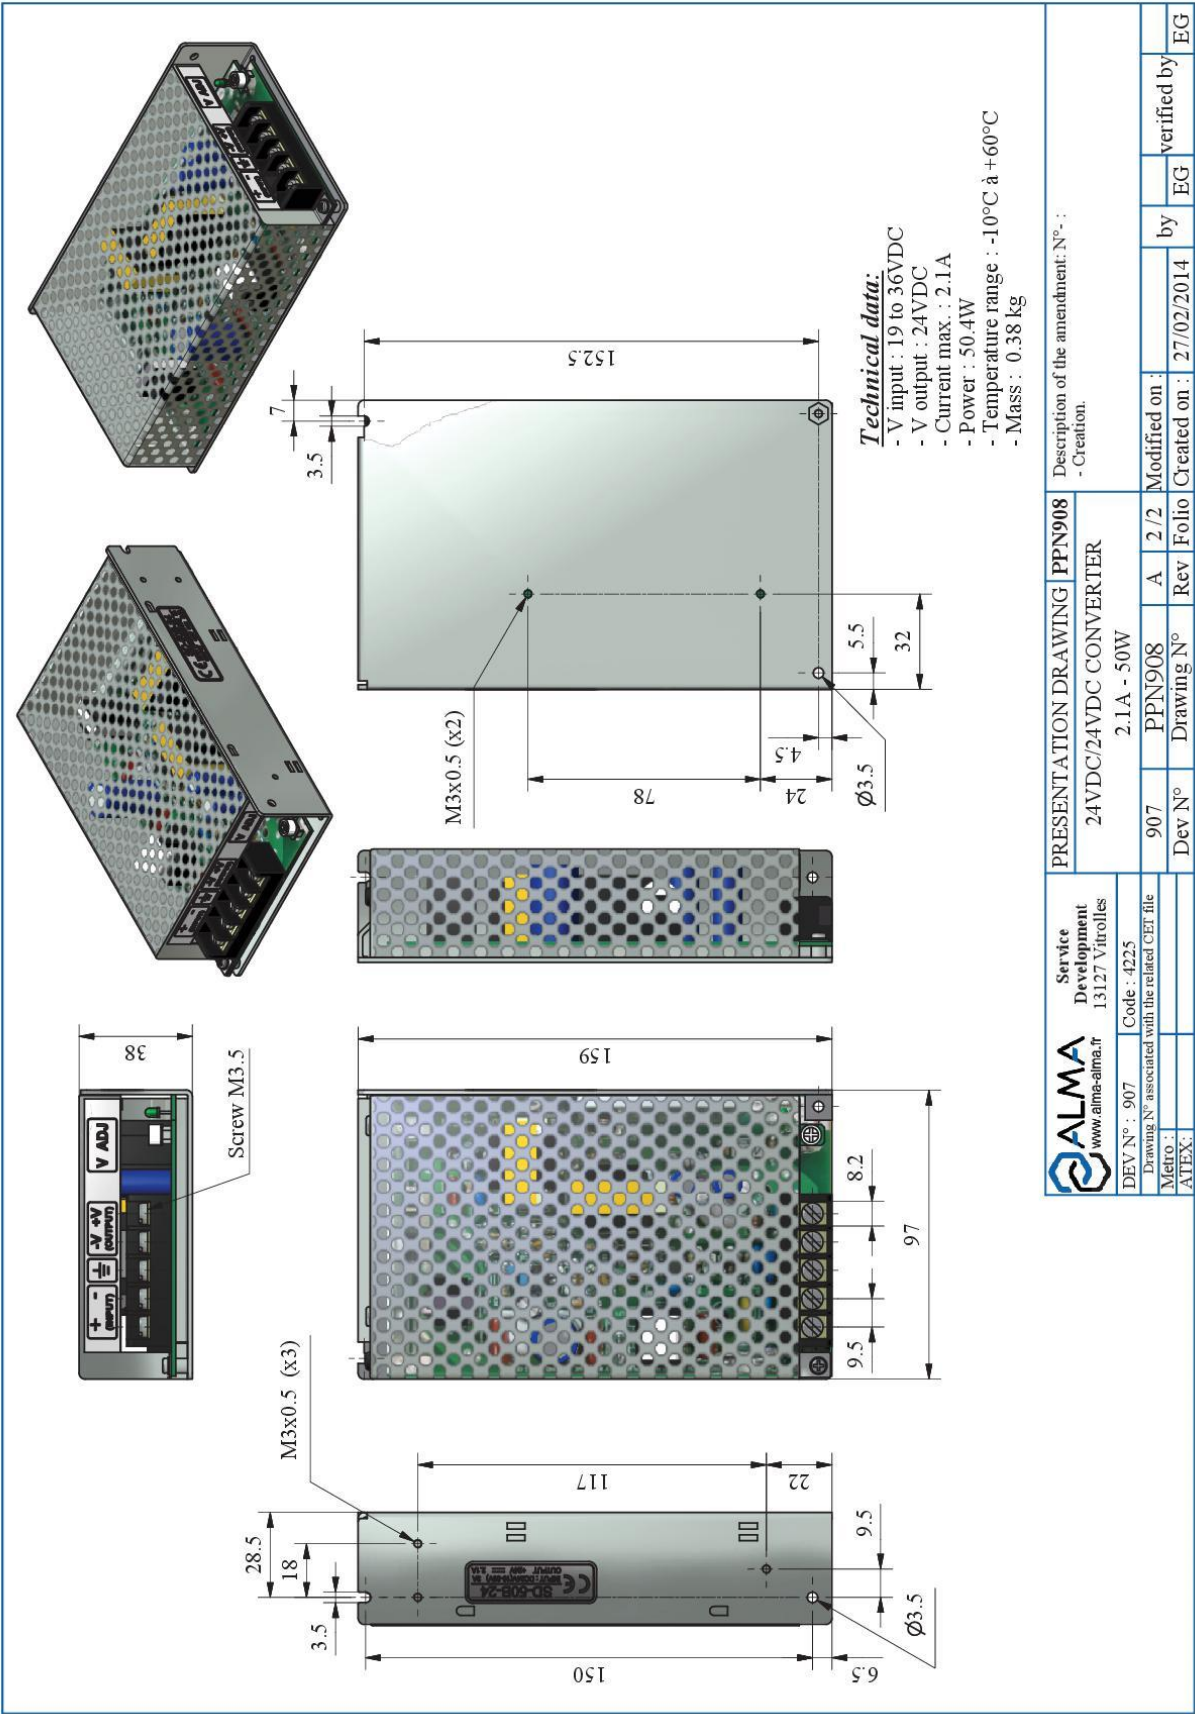

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

9. NON-RETURN VALVE KIT DN50 OR DN80

Technical drawing of a Kiti non return valve, showing a top view and a side view.

Top View Dimensions:

- Outer Diameter: Ø152
- Inner Diameter: Ø144

Side View Dimensions:

- Outer Diameter: Ø144
- Height: 50

Technical Specifications:

- Mass:** ~ 2.5Kg
- Material:** Inox 316L
- Operating temperature:** -10°C to +350°C
- Permissible operating pressure:** 40 bar
- Maximum permissible pressure:**
 - Liquid 1: 25 bar
 - Gas 1: 12 bar
 - Liquid 2: 40 bar
 - Gas 2: 40 bar
- Pressure drop:** 0.2 bar at 50 m³/h
- Mounting:** Between downstream flange of the turbine
- Tightness:** Flat gasket
- Standards:**
 - CE conformity directive 97/23/CE
 - CE ATEX conformity directive 94/9/CE

Ø108

Ø88.9

40

98.3

4 screws CHC M8 x 80 including 2 screws drilled for sealing

- **Mass** : ~ 1Kg

- **Material** : - Valve: Inox 316L
- Flat gasket: KINGLERSIL

- **Operating temperature** : -10°C to +350°C

- **Permissible operating pressure** : 40 bar

- **Maximum permissible pressure** : - Liquid 1: 40 bar
- Gas 1: 20 bar
- Liquid 2: 40 bar
- Gas 2: 40 bar

- **Pressure drop** : 0.4 bar at 25 m³/h

- **Mounting** : Between downstream flange of the turbine

- **Tightness** : Flat gasket

- **Standards** : - CE conformity directive 97/23/CE
- CE ATEX conformity directive 94/9/CE


- Screws: Inox A4-70

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° · °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 36 / 45

9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

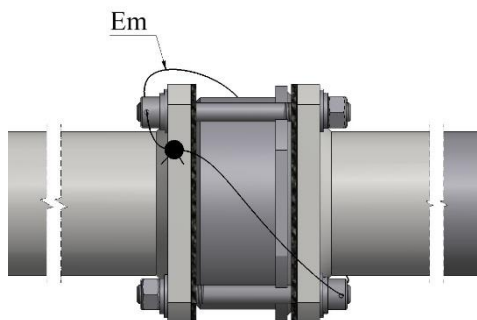

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 37 / 45

10. SIGHTGLASS KIT DN50 OR DN80

Technical drawing of the sightglass kit DN50 or DN80. It includes an exploded view of the components: a main body (1), a flange (2), a gasket (3), a washer (4), and a CHC screw (5). The main body has a diameter of Ø110 and a height of 29.2. The flange has a diameter of Ø80 and a thickness of 120. The mounting example shows the kit installed on a pipe with a diameter of Ø110. A scale of B (1.5 : 1) is indicated.

Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Sightglass DN80 110x110	Moulded PAMMA	A0533	B		0908	
2	3	CHC screw M10 x 70 (ISO 4762)	Stainless A4-70				8595	
3	1	Washer W M10 (DIN 127)	Stainless A4-70				8474	
4	1	Washer M M10 (NFE 25-514)	Stainless A4-70				8430	
5	1	CHC screw M10 x 70 (ISO 4762) with head pierced	Stainless A4-70	PN0030	B	A	3465	

Put parts in a bag

Service Development
13127 Vitrolles
www.alma-alma.fr

MAINT. : 0.2
Tol. : ± 0.2
Code : 8099
Drawing N° associated with the related CEF file
Metro :
ATEX :

Adriane turbine meter DN80 24X
Sightglass kit 110 x 110
Description of amendment N°530
Integration of drill head screws

Modified on : 17/02/2017 by CC verified by SR
Created on : 30/03/2016 by CC verified by SR

Technical drawing of the sightglass kit DN50. It includes an exploded view of the components: a main body (1), a flange (2), a gasket (3), a washer (4), a CHC screw (5), and a CHC screw (6). The main body has a diameter of Ø110 and a height of 38. The flange has a diameter of Ø52.6 and a thickness of 100. The mounting example shows the kit installed on a pipe with a diameter of Ø110. A scale of B (1.5 : 1) is indicated.

Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Sightglass DN50	Moulded PAMMA	A0389	C		8062	
2	1	Flange gasket DN50 100x100	Klingersil C-H30	A0386	B		8251	
3	4	Washer M M8 (NFE 25-514)	Stainless A4-70				8245	
4	4	Washer W M8 (DIN 127)	Stainless A4-70				8244	
5	3	CHC screw M8 x 80 (ISO 4762)	Stainless A4-70				8247	
6	1	CHC screw M8 x 80 (ISO 4762) with head pierced	Stainless A4-70	PN0030	B	A	2178	

Put parts in a bag

Service Development
13127 Vitrolles
www.alma-alma.fr

MAINT. : 0.2
Tol. : ± 0.2
Code : 8099
Drawing N° associated with the related CEF file
Metro :
ATEX :

Adriane DN50 24X
Sightglass kit
Description of amendment N°530
Integration of drill head screws

Modified on : 17/02/2017 by CC verified by SR
Created on : 30/03/2016 by CC verified by SR

Document available on website alma-alma.fr

10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 39 / 45

11. CONNECTION KIT 100x100 DN50 OR DN80

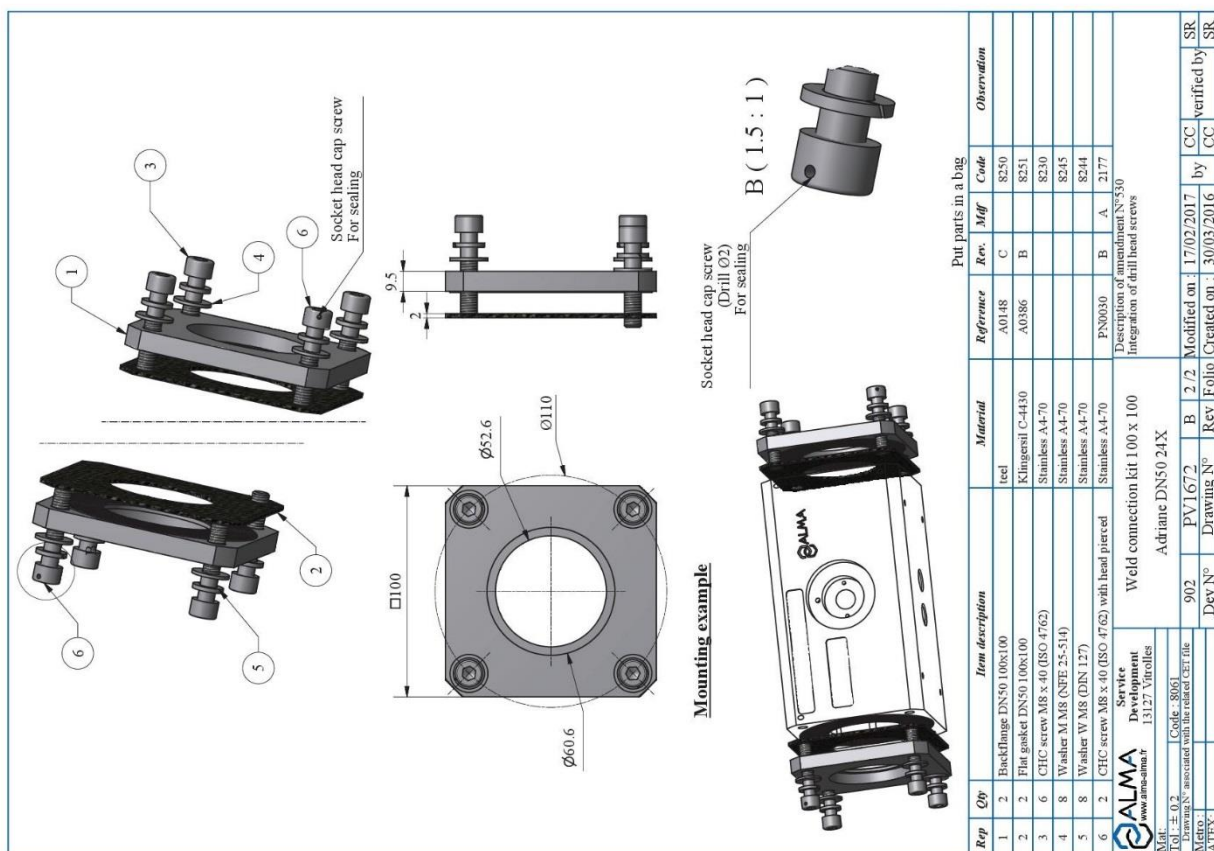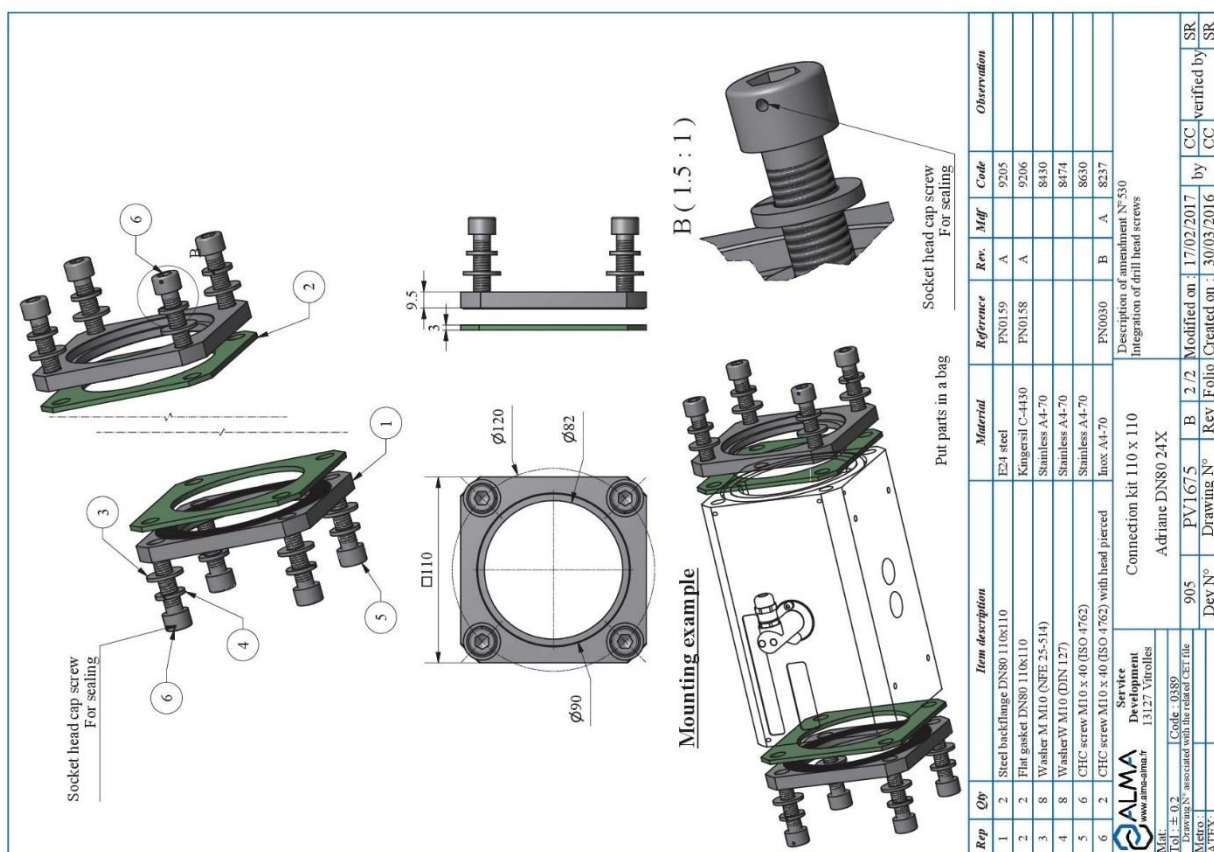

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B

ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

12. NC/NO SOLENOID VALVES KIT NON ATEX OR ATEX

12.1. NC/NO SOLENOID VALVES KIT NON ATEX

CONNECTOR SUPPLIED UNASSEMBLED

Connector and seal

Terminal block

TERMINALS
Terminal 1 (+)
Terminal 2 (-)
Earth terminal

Pneumatic diagram
2/2NC - 2/2NO

Air supply

Air output

Technical data:

- Tamb. max. : -10°C to +60°C
- Protection class : IP65
- Operating voltage : 24Vdc - Power : 5W
- Pressure : 0 - 10 bar max.
- Body : Brass G1/8 - Orifice : DN1,2 - Seal : FKM
- Pneumatic fitting : G1/8 for pipe 6/4
- Plug-in connector : Cable : Ø 6-7mm
- Installation : the kit can be mounted in any position
- Mass : 0.3 kg

Service Development
www.alma-alma.fr
13127 Vitrolles

DEV N° : 907 Code : 4146

PPN032 B 5/5 Modified on : 05/05/2014
Drawing N° Rev. Eolio Created on : 10/06/2009


PRESENTATION DRAWING DFN032
NC/NO - NON A TEX
SOLENOID VALVES KIT

EG verified by DMS
by DMS
05/05/2014
Created on : 10/06/2009

Document available on website alma-alma.fr


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° / °") Temperature: °C
	This document is available at www.alma-alma.fr	Page 41 / 45

12.2. NC/NO SOLENOID VALVES KIT ATEX

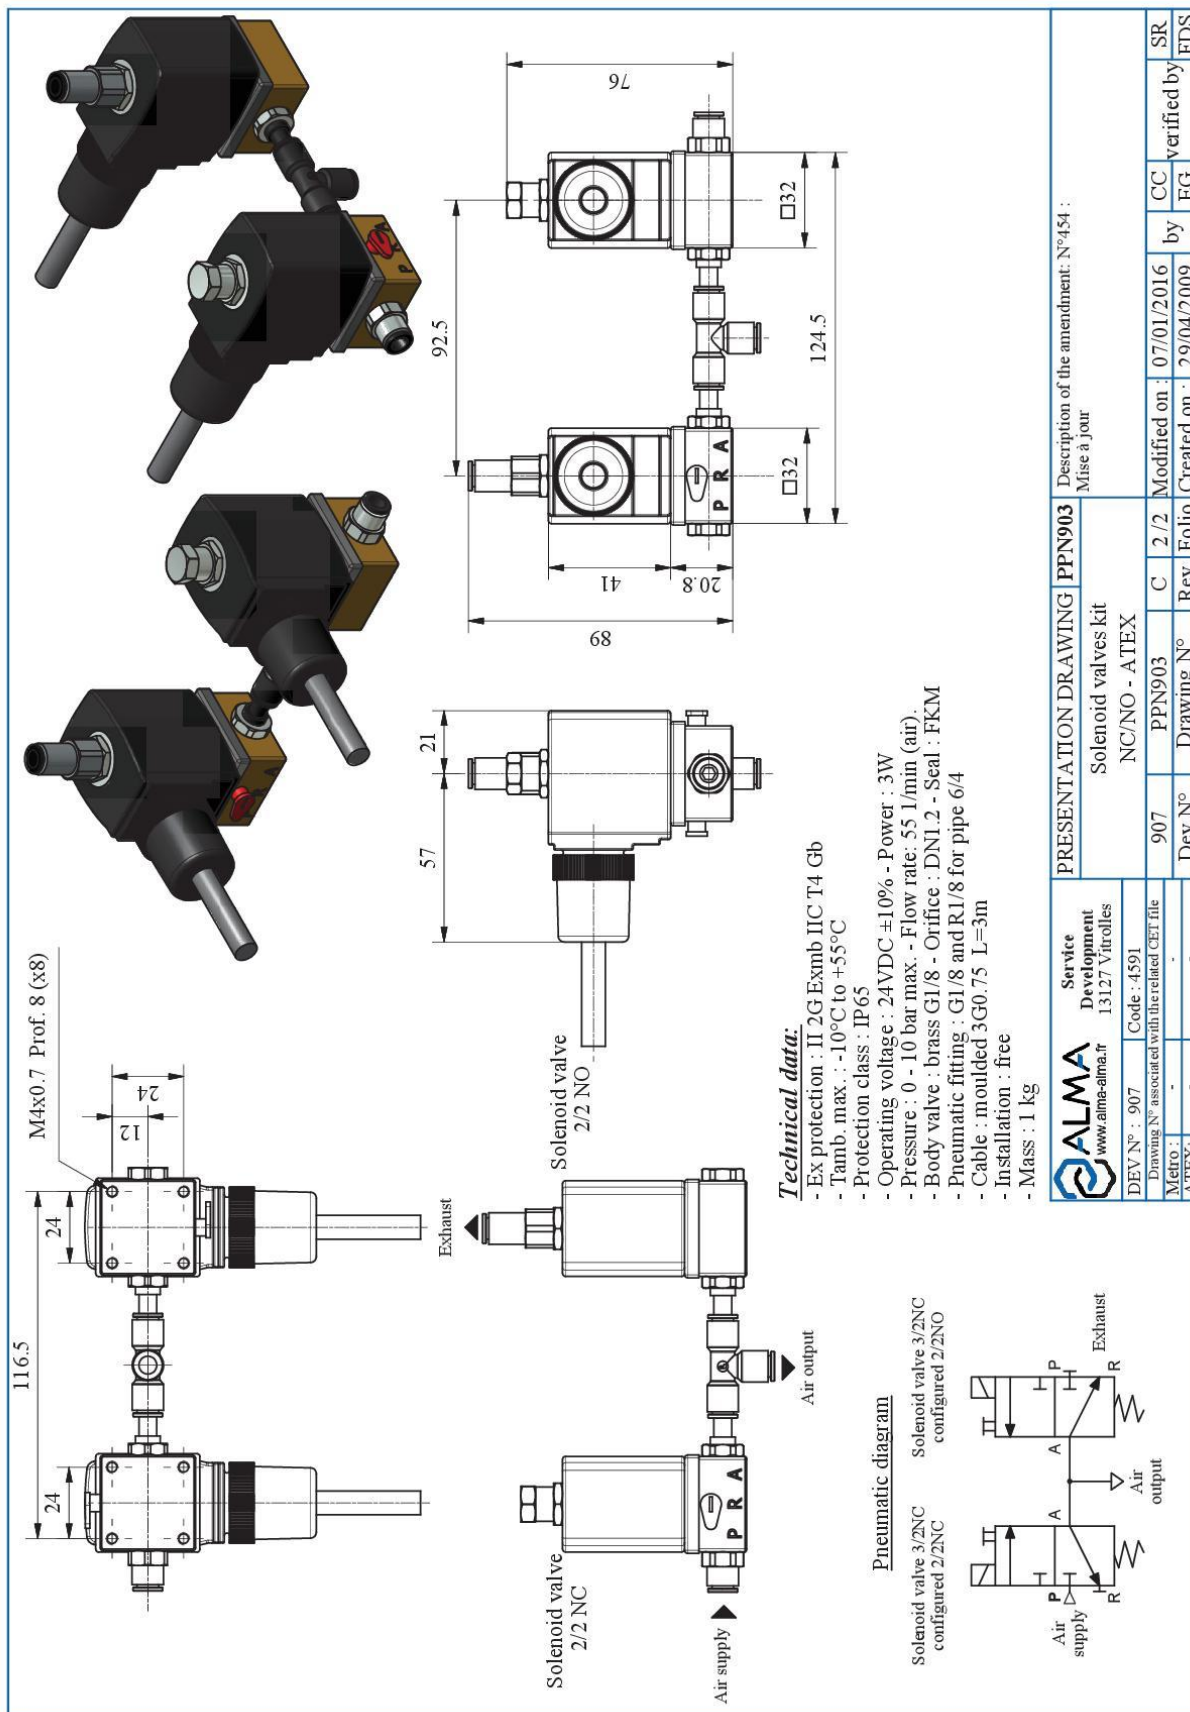

Document available on website alma-alma.fr

13. TEMPERATURE PROBE Pt100 – CT1001 ATEX

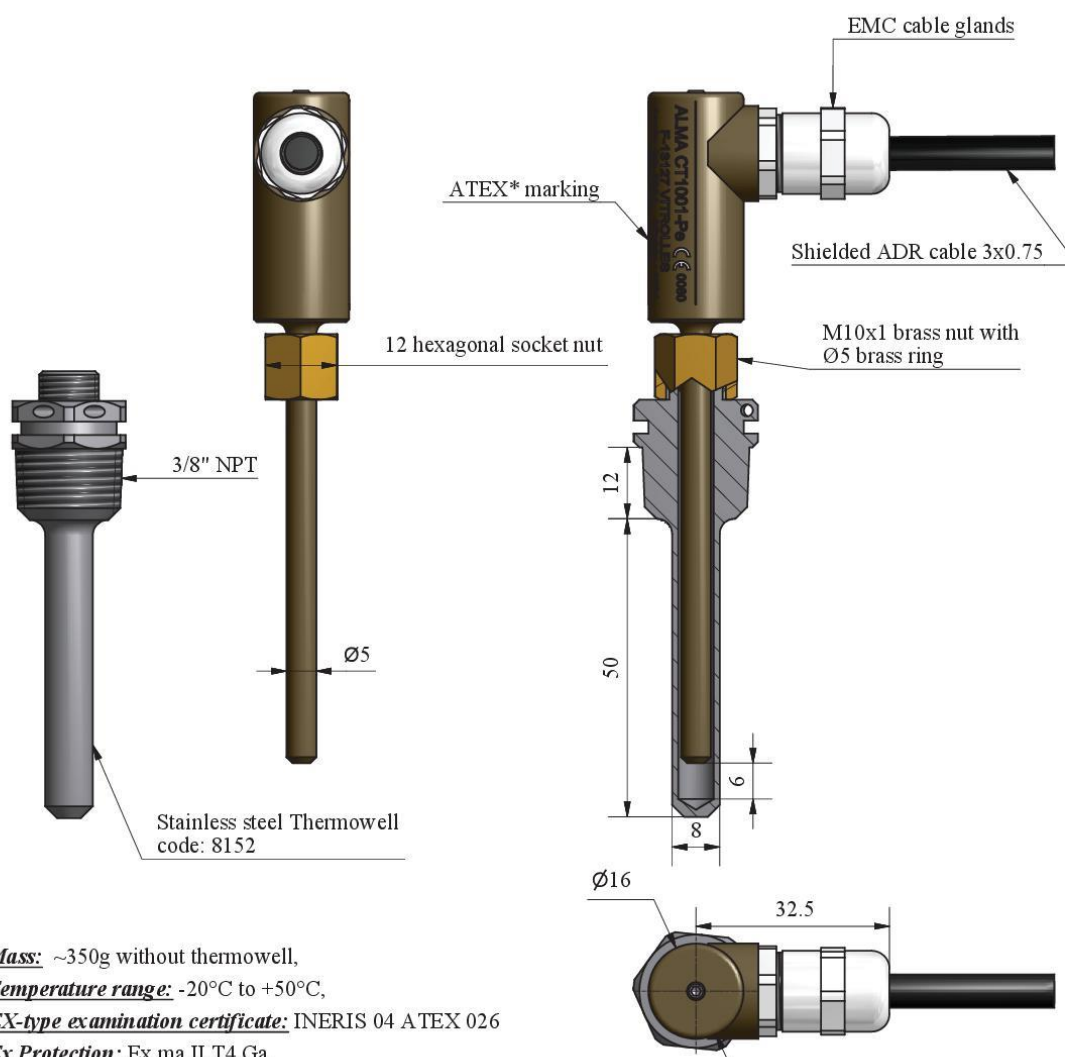

- **Mass:** ~350g without thermowell,
- **Temperature range:** -20°C to +50°C,
- **EX-type examination certificate:** INERIS 04 ATEX 026
- **Ex Protection:** Ex ma II T4 Ga

The sensor body is made of bronze color anodized aluminum alloy; The ring and the nut are made of brass. The probe can be mounted either on a ALMA thermowell or on a thimble connection 1/4 "BSP (M10x1 n5). Before installation, lubricate the parts in contact with the thermowell or the boss, to prevent corrosion

PT100 features:

- 3 wires
- 1/3 DIN

*ATEX "ma" certification.
For installation and use in hazardous areas see Instruction manual

Also available with output connector according to IEC 60947-5-2


Connecting the cable		
<i>Function</i>	<i>Marking on the wire</i>	<i>Color wire</i>
PT100/1	1	Yellow
PT100/2	2	White
PT100/3	3	Green

 ALMA www.alma-aima.fr	Service Development 13127 Vitrolles		PRESENTATION DRAWING DFV042		Description of the amendment N° 596 - Compliance with ATEX marking - Replacement of the ADR cable - Modification of CI051			
	DEVN° : 949d Code : 8151		Temperature probe CT1001-Pe					
	Drawing N° associated with the related CET file		949d PPV042		K 5 / 7	Modified on : 21/02/2018 Created on : 13/09/2003	by ROC BM	verified by CC BM
Metro : ATEX :	INERIS 04 ATEX 0026		Dev N° Drawing N°	Rev Folio				

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	<u>Units of measure:</u> Length: mm Angle: degree (° / °") Temperature: °C
	This document is available at www.alma-alma.fr	Page 43 / 45

13.1. **INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE**

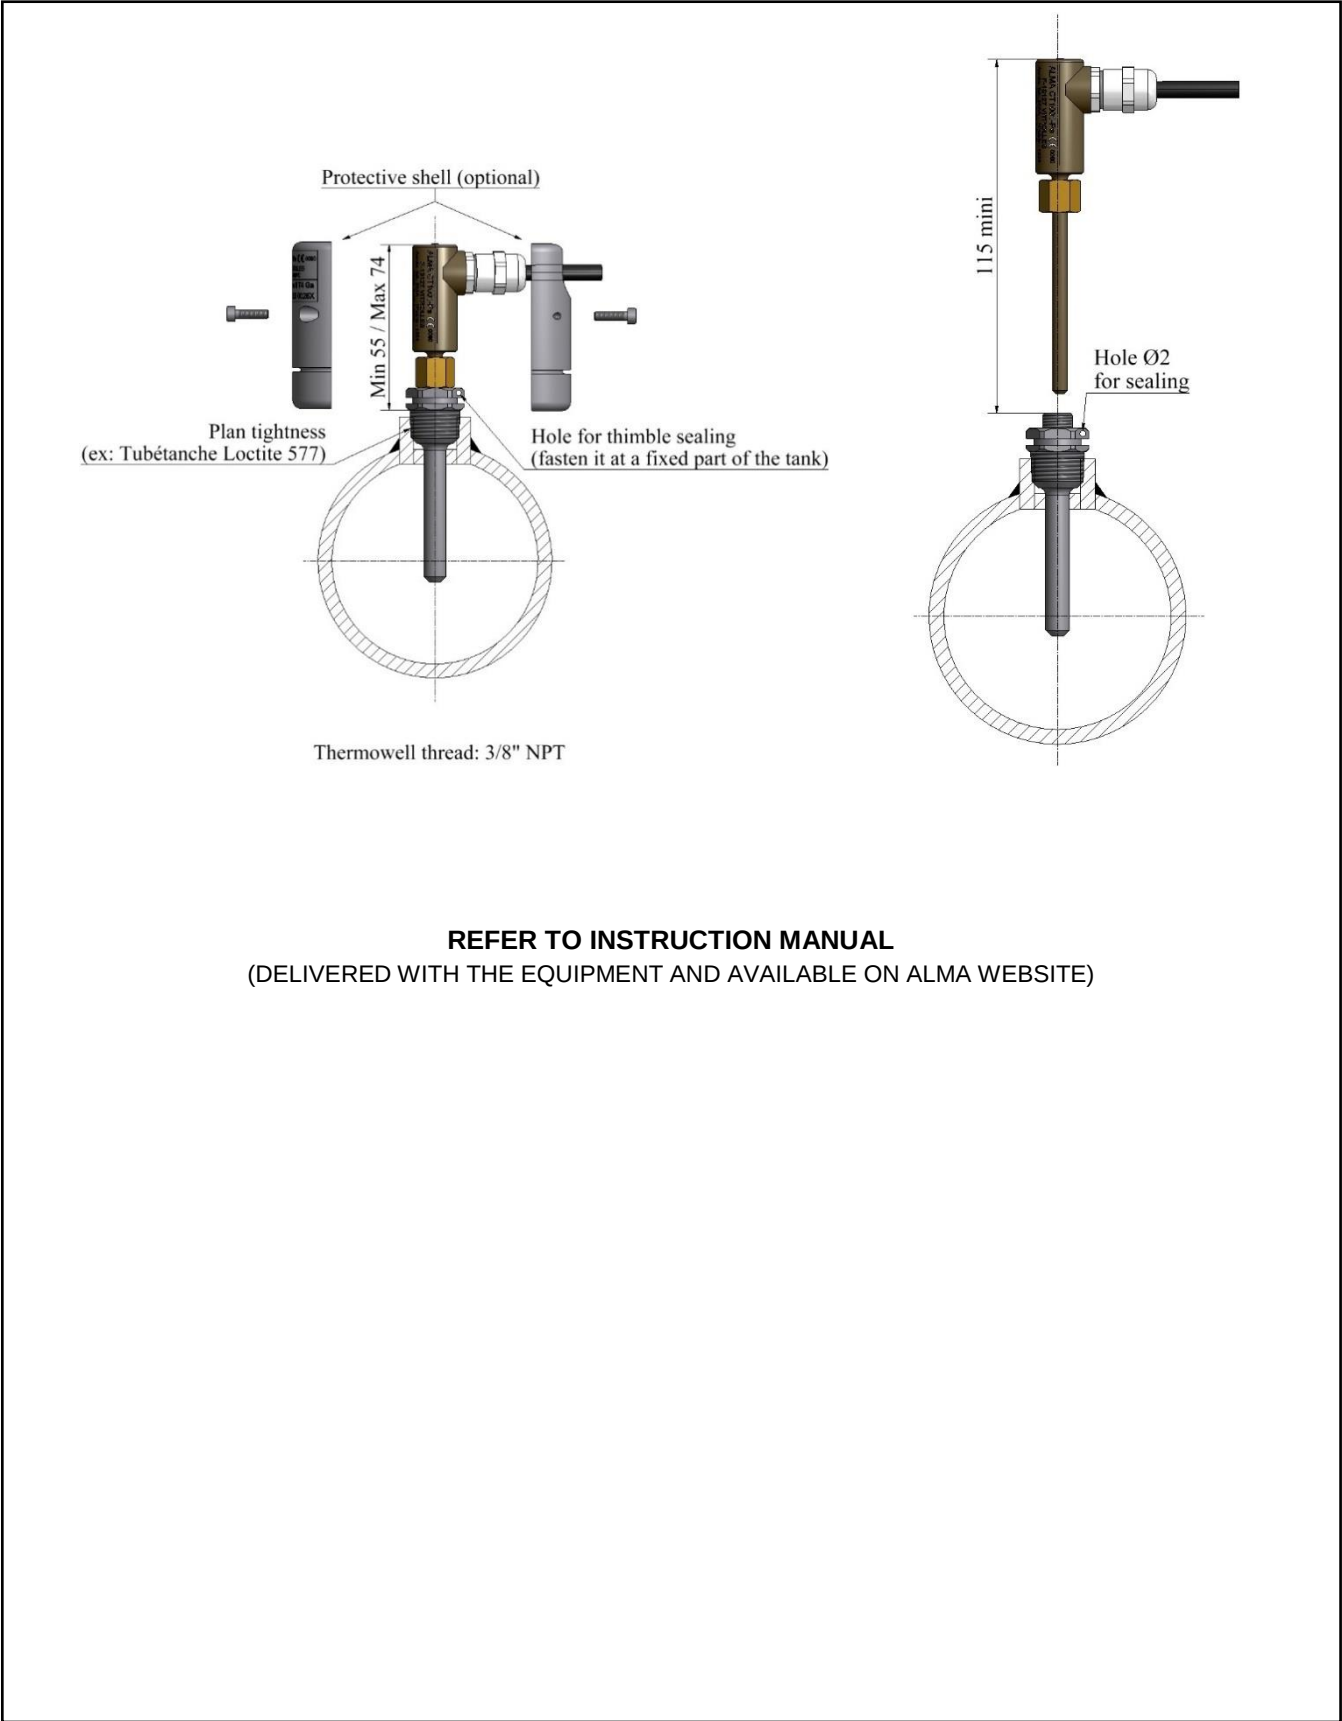


REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 44 / 45

14. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

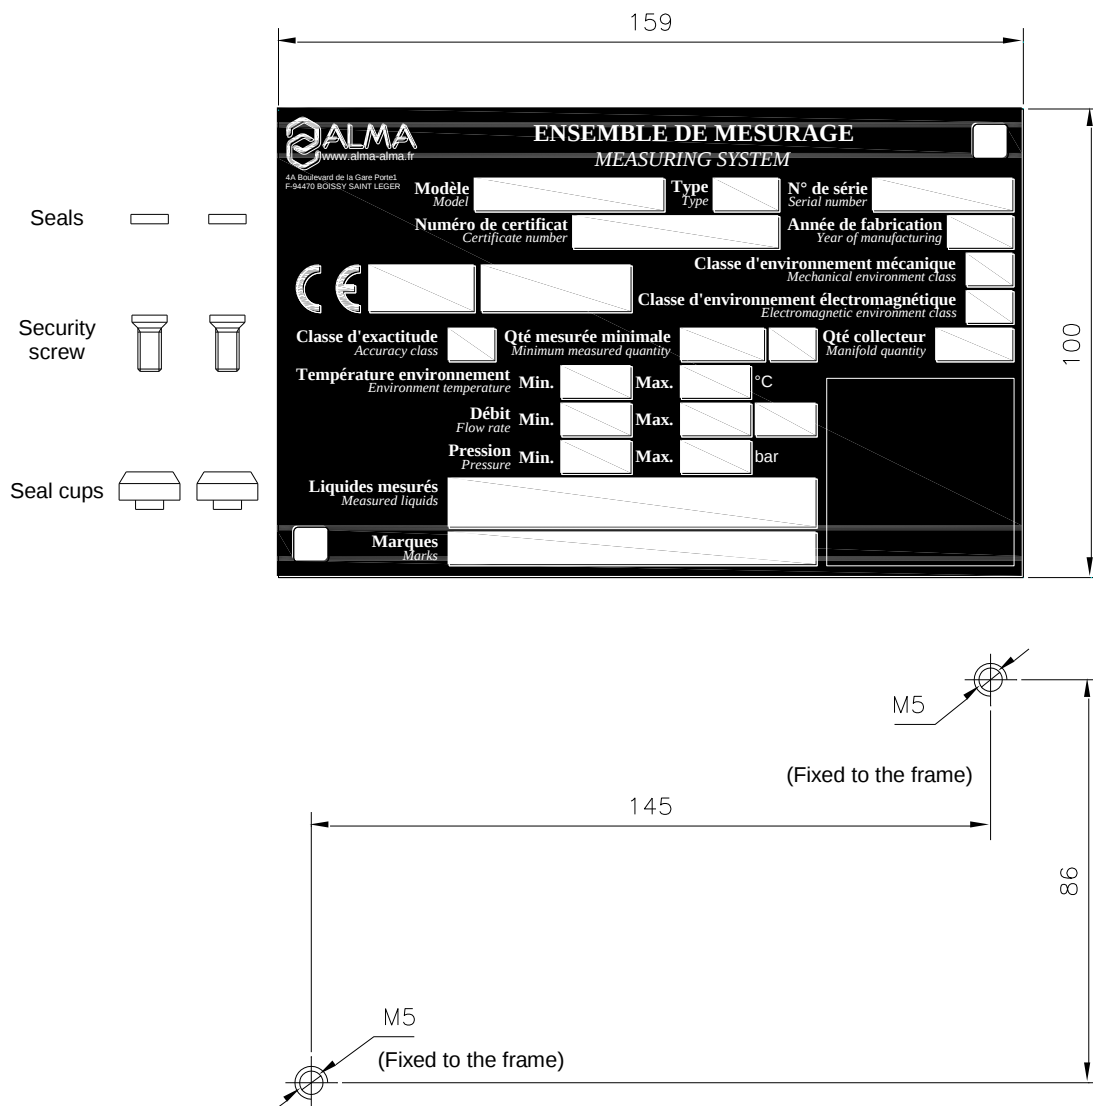

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 018 EN B ELECTROMAGNETIC CMA EM50 AND EM60

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 45 / 45