

INSTALLATION GUIDE


DI 021 EN B

ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Described in EU-type examination certificate N°: LNE-26664




B	2018/10/30	Electrical wiring (electromagnetic meter supply), New FORM DOC for connectivity [PJA074], Flow valves and authorization wiring, Drawings update	DSM	MV
A	2017/09/11	Creation [PJV126]	DSM	PJ
Issue	Date	Nature of modifications	Written by	Approved by

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx			Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr			Page 1 / 39

CONTENTS

1. GENERAL RECOMMENDATIONS	3
1.1. MECHANICAL RECOMMENDATIONS	3
1.2. ELECTRICAL RECOMMENDATIONS	4
1.3. PNEUMATIC RECOMMENDATIONS	6
2. GENERAL PRESENTATION.....	7
2.1. USE ACCORDING TO MID CERTIFICATE	7
2.2. SPECIAL CONDITIONS FOR INSTALLATION	7
3. PART LIST	8
4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM	10
5. MICROCOMPT+ TURBOTRONIQUE (NON ATEX)	12
5.1. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+	13
5.2. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+.....	14
Terminal assignment of the power supply board.....	15
Connection of the network board – Ethernet, RS232/485, CANBus	17
Terminal assignment of the extension board ‘sonde AD’ 5 wires (IS)	18
Terminal assignment of the extension board “sonde AD” 2 wires (IS)	19
5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX.....	20
Mounting and wiring of the GSM and GPS antennas.....	21
Mounting of the GSM/GPS cables into the cable glands.....	22
Wiring of the 2-antenna box to the MICROCOMPT+	22
5.4. SPOOL VALVE CONTROL: ELECTRICAL AND HYDRAULIC WIRING	23
Terminal assignment of the relay extension board.....	25
6. ELECTROMAGNETIC METER PD340	26
6.1. ELECTROMAGNETIC METER PD340 C51 - 40	26
6.2. ELECTROMAGNETIC METER PD340 C63 - 80	27
6.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340	28
7. PRINTER	29
7.1. INSTALLATION RECOMMENDATIONS PRINTER	30
8. CONVERTER 24VDC/24VDC 2.1A 50W.....	31
9. NON-RETURN VALVE KIT DN50 OR DN80.....	32
9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80	33
10. SIGHTGLASS KIT DN50 OR DN80.....	34
10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80.....	35
11. CONNECTION KIT 100X100 DN50 OR DN80	36
12. TEMPERATURE PROBE PT100 – CT1001.....	37
12.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE.....	38
13. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE	39

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2 / 39


1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


1.1. MECHANICAL RECOMMENDATIONS

- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment; the display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 39

1.2. ELECTRICAL RECOMMENDATIONS

- ⇒ According to the ATEX directive or any other regulations in force in the country of destination, the safety protection level of the equipment must agree with the installation area (potentially explosive atmospheres).
- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.

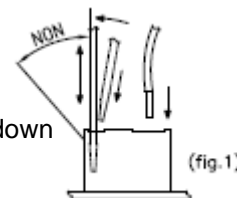

- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 39

- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
- ⇒ Respect a homogeneous wire color code.
- ⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.
- ⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)
METER	24VDC +/-10%	-	0.7 A (switch-on)

- ⇒ Color code according to DIN 47100.
- ⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 5 / 39


1.3. PNEUMATIC RECOMMENDATIONS

- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area (L = 100 mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Unités	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0.069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)

1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 6 / 39

2. GENERAL PRESENTATION

2.1. USE ACCORDING TO MID CERTIFICATE

The measuring system TURBOTRONIQUE type MEMP-xx is covered by the EU type examination certificate N° LNE-26664. Refer to this certificate for any precision about its installation.


For the sealing plan, see Annex to EU type examination certificate N° LNE-26664.

2.2. SPECIAL CONDITIONS FOR INSTALLATION

- ⇒ The ALMA model TURBOTRONIQUE measuring systems should be installed on road tankers.
- ⇒ The installation of the measuring system covered by this certificate must be in conformity with the plan which is presented in § “securing and sealing” of the certificate.
- ⇒ If the measuring system is fitted with two delivery points, it has to be equipped with a positive security device enabling a liquid delivery by only one point at once.
- ⇒ The measuring system can be equipped with an additive injection device. This injection has to occur upstream of the meter. If the additive injection is situated downstream of the gas elimination device, the installation has to avoid air injection by means of positive safety detection device, sealed and placed at the low level of the additive tank, which stops injection in case of additive lack.
- ⇒ The measuring system may be fitted with OPW, ALPECO, or EMCO WHEATON product return devices, as well as with a magnetic valve for venting, associated with the wind concentrator enabling product transfers towards the compartments. This has to be installed so that no air or venting of the wind concentrator may occur during delivery.
- ⇒ If a printing device not covered by an evaluation certificate is connected to the ALMA electronic calculator-indicator, a notice stating that the data printed is not subject to legal control must be clearly printed on the delivery notes.
- ⇒ The special installation conditions of the gas elimination devices FSGB48E, SG 80.1 AL, SG 80 IN PERNIN EQUIPEMENTS and FS24 SATAM are defined in the relevant evaluation certificates.
- ⇒ It is mandatory to install a non-return valve on the pipe between the gas elimination device and the transfer point. The non-return valve may be placed and sealed upstream of the meter or downstream as well.

Otherwise, if the liquid level in the gas elimination device may be lower than the liquid level in the meter, a non-return valve has to be installed at the device outlet, or placed and sealed between the device and the meter.

- ⇒ The hose allowing gas removal at the outlet of the gas elimination device has to be non-pinchable or keep the deformation mark.
- ⇒ The special installation conditions of the meters are defined in evaluation certificate NoTC-7204.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7 / 39

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ TURBOTRONIQUE WITH Bluetooth CONNECTION NON ATEX	1	
		Wi-Fi CONNECTION (As an alternative to Bluetooth)		•
		RFID SUPERVISOR KEY		
2		ELECTROMAGNETIC METER PD340 C51 or PD340 C63 (Depending on configuration)	1	
3		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
4		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC)	1	
5		NON-RETURN VALVE INOX KIT DN50 or DN80 (Depending on configuration)	1	•
6		SIGHTGLASS KIT DN50 or DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	•

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION







INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 8 / 39

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

Item	Equipment	Designation	Qty	Option*
7		CONNECTION CARBON STEEL KIT DN50 or DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	•
9		Pt100 TEMPERATURE PROBE – CT1001-Pe (Supplied with thermowell)	1	•
10		2-ANTENNA BOX GSM AND GPS	1	•
11		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	•
Option*: equipment sold as an option by ALMA must be installed on the measuring system if required by the certificate.				

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENB **ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx**

This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

Page 9 / 39

4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM

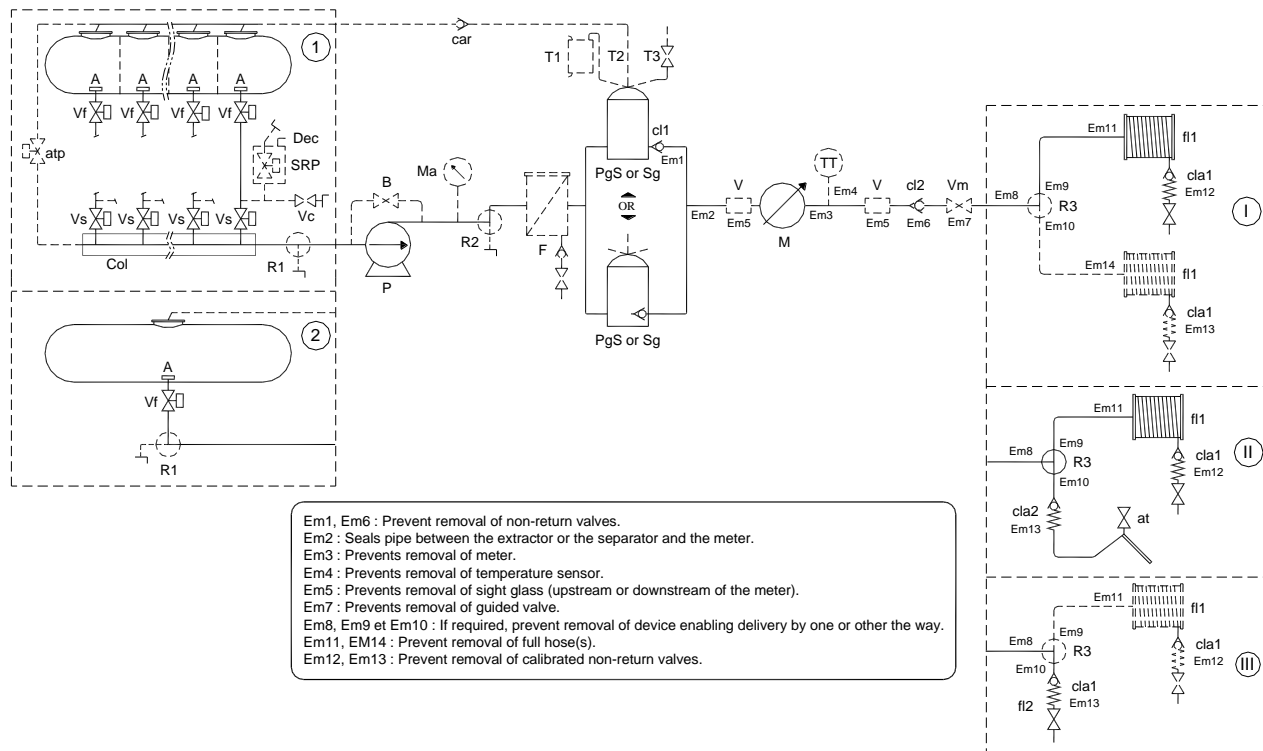

- A: Anti-swirl device.
 R1: Two-way cock enabling delivery per meter, draining and filling of the tank without using the meter (optional).
 P: The pump may be reversible. In that case, a non-return valve has to be added between cock R2 and gas separator Sg.
 B: Pump bypass
 Ma: Manometer indicating the forcing back pressure of the pump (optional).
 R2: Two-way cock for pumped delivery without meter (optional).
 F: Filter which, when external to the separator or the extractor, may be fitted with a draining cock.
 Sg: Gas separator.
 PgS: Specific gas extractor.
 cl1: Non-return valve (compulsory when the gas elimination device is not fitted with internal non-return valve).
- T1, T2, T3: Variants authorized for gas evacuation device:
T1: Use of a container to retrieve the liquid particles carried along by gas,
T2: Foam going back to the tank,
T3: Use of a valve for draining.
- car: Non-return valve on foam return (optional).
 M: Meter
 V: Sight glass (compulsory with a specific gas extractor (gas indicator), optional with a gas separator).
 cl2: Non-return valve (optional).
 TT: Temperature sensor Pt100 (optional).
 Vm: Guided valve (optional).
 R3: Device enabling, when the measuring system has two delivery paths, to make deliveries one or the other way.
 fl1: Full hose on hose reel
 fl2: Very short full hose enabling delivery with flowrate (optional).
 cla1: Calibrated non-return valve preventing draining of the full hose.
 cla2: Calibrated non-return valve preventing draining of the empty hose.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

Page 10 / 39

I, II, III: Variant of the delivery device:

Variant I: One or two full hoses with reel,

Variant II: Combination of full hose on reel and empty hose,

Variant III: Combination of short full hose and full hose on reel, if applicable.

Vf: Valve for compartment bottom.

Col: Wind concentrator.

atp: Guided venting (optional).

Vs: Selection valve, installed on pipe of each compartment, enabling communication with wind concentrator (guided or manual).

Vc: Valve for source loading, installed on pipe of each compartment (optional).


SRP: Return Product System on one or more compartment(s) (optional).

Déc: Decompression control (secured).

1, 2: Variants of devices associated with the tank

Variant 1: Tank with several compartments and wind concentrator,

Variant 2: Single compartment tank.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 11 / 39

5. MICROCOMPT+ TURBOTRONIQUE (NON ATEX)



Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx


This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° '' ''')
 Temperature: °C


Page 12 / 39

5.1. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: $A > 100\text{mm}$ and $B > 60\text{mm}$

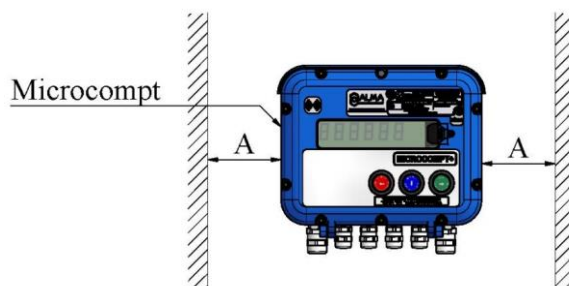

- SOLUTION 1: straight box if it's a breast height.

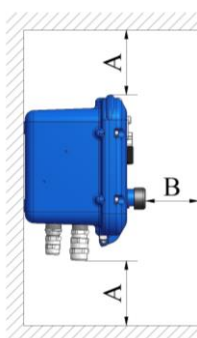


Left hand view
Closed box

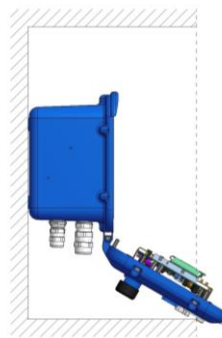

Left hand view
open box

- SOLUTION 2: 20° angle if it's not at breast height.

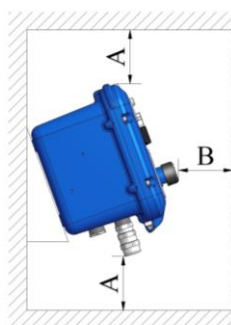

Left hand view
Closed box



Left hand view
open box

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 13 / 39

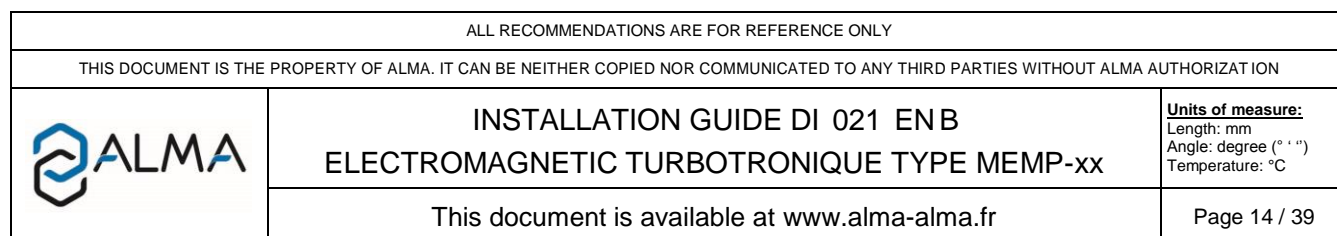


Terminal assignment of the power supply board

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNMENT OF MICROCOMPT+ BOARDS

POWER SUPPLY BOARD

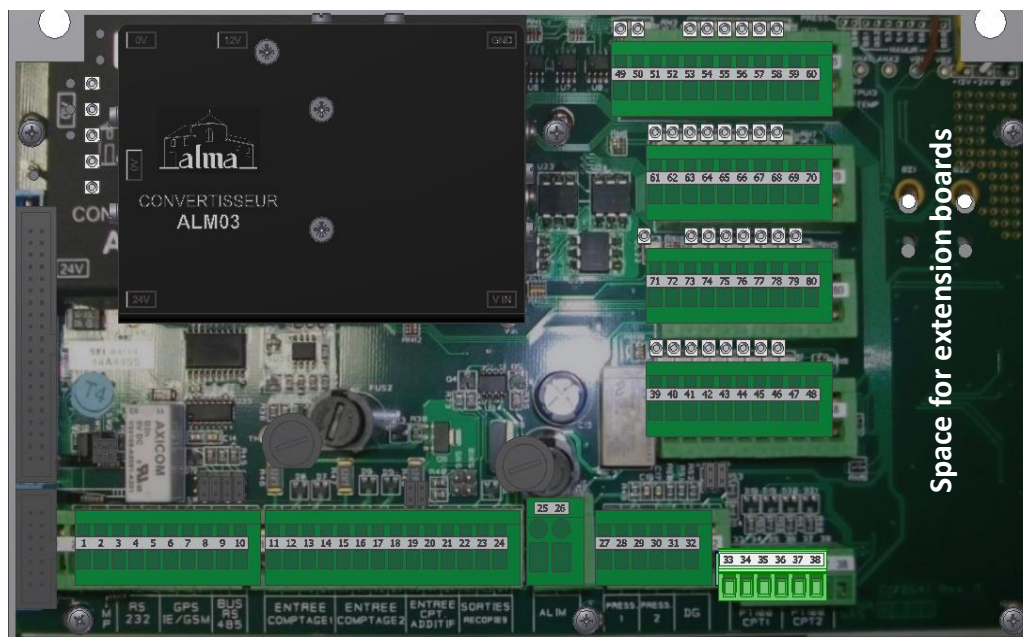

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	PRINTER	C1	1/2"NPT	●	ADR 4x0.34 sh.	Rx Printer	Bc	1	Tx	PRINTER	Connect the shielding
						Tx Printer	Mr	2	Rx		
						0V	Vt	3	0V		
•	EMBEDDED COMPUTING	C8	1/2"NPT		3x0.34 sh.	0V		3	0V	RS232	Connect the shielding. ALMA or FTL Light Protocol
						Rx E.C.		4	Tx		
						Tx E.C.		5	Rx		
•	REMOTE DISPLAY					Tx		9	+	RS485	Remote display type SREI TC5- 10- 24 Ext Use an RS485/RS232 converter
						Rx		10	-		
	ELECTROMAGNETIC METER	C2	1/2"NPT	●	ADR 4x0.34 sh.	V1		12	V1	METER INPUT EMA	Connect the shielding
						V2		13	V2		
						0V		14	0V		
•	PULSES OUTPUT		1/2"NPT			PO EMA		22	12V	PULSES OUTPUT	Control system / Display Put SW9 and SW10 to have a 0- 24V signal
						PO EMB		23	V1		
						0V		24	0V		
	SUPPLY 24VDC	A1	1/2"NPT		2x1	Bat. (+)	1	25	24VCC	POWER SUPPLY	24VDC truck battery (after battery switch and protected by a fuse)
						Bat. (-)	2	26	0V		
•	Pt100 TEMPERATURE PROBE	C4	1/2"NPT	●	ADR 3x0.6 sh.	+	Jn	33	+	Pt100	Connect the shielding
						-	Bc	34	-		
						-	Vt	35	-		

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 15 / 39

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	MANIFOLD FLAP CONTROL OR PRODUCT RETURN AUTHORISATION AND/OR ADDITIVATION 2 CONTROL				4 to 7x1	Flap 1	1	39	24VDC = opened flap (outputs FET 24V 5W max.) FET=Field Effect Transistor	EV Flaps or Product return additivition	Or Product return compartment 4 Or Product return compartment 5
						Flap 2	2	40			
						Flap 3	3	41			
						Flap 4	4	42			
						Flap 5	5	43			
						Flap 6	6	44			
						Flap 7	7	45			
								46			
					1x1	0V		47	0V		
								48			
	RC-HEATING OIL RECEIVER			2x1	Start/Stop	1	49	Start/Stop	RC-Oil_1		
					LF/HF	2	50	LF/HF	RC-Oil_2		
	COUNTED / PUMPED DISTRIBUTION WAY (with additional commands)			3x1	Gravi/Pmp	1	51	0V	Gravity / Pumped	Closed circuit=product pumped (end position)	
					Pct/Pnc	2	52	0V	Pumped counted/ no counted	Closed circuit=product counted	
					0V	3	59	0V	0V (GND)	51, 52 and 59 are shunted if manual valves are not instrumented	
	PTO CONTROL			1x1	PTO Ctrl		58		PTO control	Power-take- off engaged	
	FOOTVALVE CONTROL			1x1	Footvalve		64	24VDC= cde	FOOTVALVE	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor	
	PRODUCT RETURN CONTROL			3 to 6X1	PR1	1	65	24VDC= author.	Return_1	Product return compartments 1 to 3 (Outputs FET 24V 5W max.) FET=Field Effect Transistor	
					PR2	2	66		Return_2		
					PR3	3	67		Return_3		
					Chasse		68		Cde chasse		
	HOSES 1 AND 2 AUTHORIZATION CONTROL, HIGH AND LOW FLOW	C6		5x1	0V	1	70	0V	0V (GND)	(Outputs FET 24V 5W max.) FET=Field Effect Transistor	
					Hose 1 / Low flow	2	75	24VDC= distrib.	Hose_1ctrl		
					Hose 2	3	63		Hose_2 ctrl		
					High flow	4	74		High flow		
					0V	5	80	0V			
	ADDITIONAL COMMANDS			5X1	PTO	1	61	24VDC= pto	PTO	(Outputs FET 24V 5W max.) FET=Field Effect Transistor	
					Stop Mot.	2	62	24VDC= stop	Stop motor		
					Acc. Mot.	3	73	24VDC= acc.	Motor acceleration		
					Clutching	4	76	24VDC= clutchin	Clutching		
					Start Mot.	5	77	24VDC= start	Start motor		
	ADDITIVATION 1 CONTROL			2x1	Power	1	71	NO free contact	Additivition 1	Closed contact=additivition (Output: NO free potential relay)	
					Control	72	72				
	MANIFOLD VENT VALVE CONTROL			1x1	Vent valve		78	24VDC	Vent valve control	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor	
SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD											


*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	
	This document is available at www.alma-alma.fr	
		Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
		Page 16 / 39

Connection of the network board – Ethernet, RS232/485, CANBus

Connection to the Ethernet network:

- With the RJ45 connector according to the EIA/TIA-568 standard
- Or with the screw-terminal: see details in the table below.

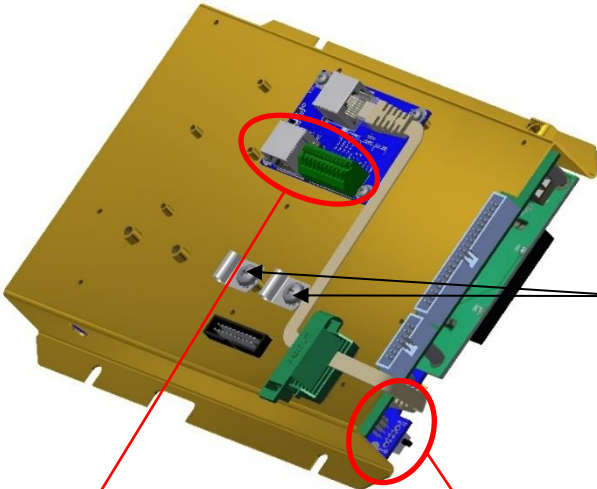

Cable clips

NETWORK BOARD

Ethernet RJ45

RS232 or RS485 Switch

NETWORK CONNECTION TYPE								NETWORK BOARD			
Option	Connection	Cable (for information)				Function	Coulor or No.	Coulor	Function		Observation
		No.	CG*	Alma	Type						
	ETHERNET NETWORK							Vt/Bc	Tx+	Ethernet	Or connection with RJ45 according to EIA/TIA-568
								Vt	Tx-		
								Or/Bc	Rx+		
								Or	Rx-		
	RS232 or RS485							Tx / A	RS232 or RS485	Depending on the switch configuration See above	
								Rx / B			
								GND			
	CANBus NETWORK							CAN+	CANBus		
								CAN-			
								GND			

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 17 / 39

Terminal assignment of the extension board 'sonde AD' 5 wires (IS)

EXTENSION BOARD SONDE AD 5 wires (IS)



NT IN ATEX 510 C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							EXTENSION BOARD SONDE AD (IS)				
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE	C7			[6x1]	Common	[Nr]	1	-	OVERFILL PREVENTION PROBES	[If cable are supplied by ALMA]
						Power	[Rg]	2	+		
						From probe	[Or]	3	From probe		
						To probe	[In]	4	To probe		

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 18 / 39

Terminal assignment of the extension board "sonde AD" 2 wires (IS)

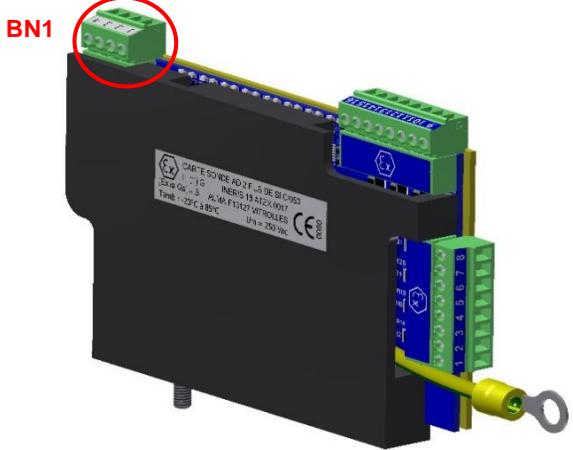
EXTENSION BOARD SONDE AD 2 wires (IS)											
											
EQUIPMENT CONNECTED TO THE MICROCOMPT+						EXTENSION BOARD SONDE AD (IS)					
Option	Equipment	Cable (for information)				Function	Terminal	Function		Colour	Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE 1					Supply	1	Supply +	SIGNAL PROBE 1	Mr	
						Common	2	Common		Bc	
•	OVERFILL PREVENTION PROBE 2					Supply	3	Supply +	SIGNAL PROBE 2	Rg	
						Common	4	Common		Bc	
•	OVERFILL PREVENTION PROBE 3					Supply	5	Supply +	SIGNAL PROBE 3	Or	
						Common	6	Common		Bc	
•	OVERFILL PREVENTION PROBE 4					Supply	7	Supply +	SIGNAL PROBE 4	Jn	
						Common	8	Common		Bc	
•	OVERFILL PREVENTION PROBE 5					Supply	9	Supply +	SIGNAL PROBE 5	Vt	
						Common	10	Common		Bc	
•	OVERFILL PREVENTION PROBE 6					Supply	11	Supply +	SIGNAL PROBE 6	Bl	
						Common	12	Common		Bc	
•	OVERFILL PREVENTION PROBE 7					Supply	13	Supply +	SIGNAL PROBE 7	Vi	
						Common	14	Common		Bc	
•	OVERFILL PREVENTION PROBE 8					Supply	15	Supply +	SIGNAL PROBE 8	Gr	
						Common	16	Common		Bc	


*Refer to the Cable Glands Installation Instructions




- This extension board only works with two-wire optic overfill prevention probes.
- A Dummy device is a two-wire dry probe simulator. Channels that are not connected to overfill prevention probes must be connected to a Dummy device. None of the 8 channels must be open.
- Do not install the Dummy into the MICROCOMPT housing.
- If the MICROCOMPT is off, the probes and the Dummy device shall be electrically isolated.


Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):

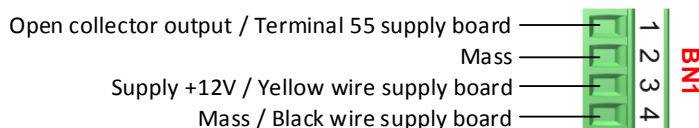



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 19 / 39

5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX

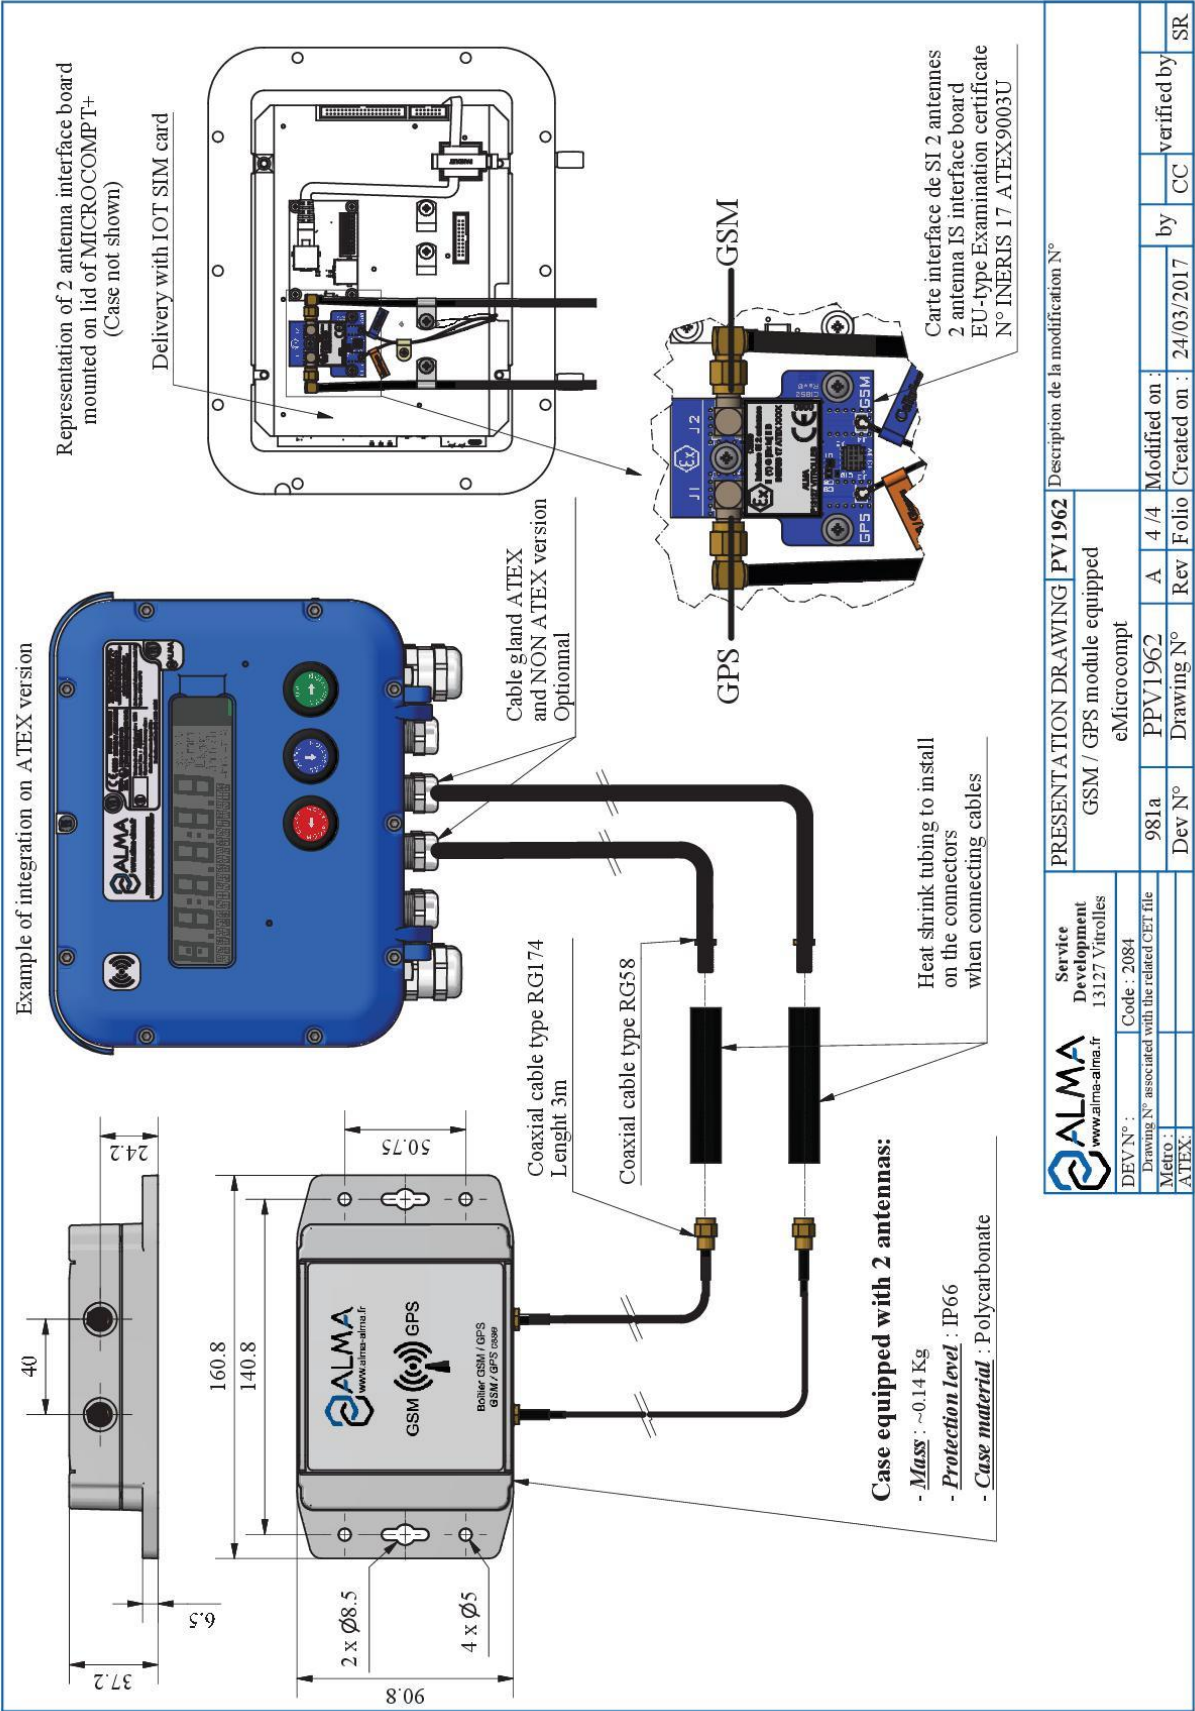

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° '' ''') Temperature: °C
	This document is available at www.alma-alma.fr	Page 20 / 39




ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	<u>Units of measure:</u> Length: mm Angle: degree (°) Temperature: °C
	This document is available at www.alma-alma.fr	Page 21 / 39

Mounting of the GSM/GPS cables into the cable glands

ALMA connects the GSM and GPS antenna to the MICROCOMPT+ (2-antenna board).



At the outlet of the MICROCOMPT+ box, you must pass both cables through cable glands. In case of an ATEX MICROCOMPT+, cable glands must be ATEX.

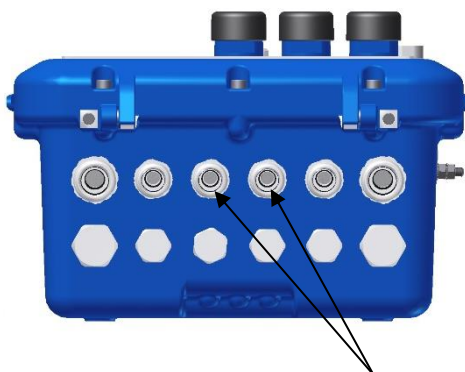

RECOMMENDED CABLE GLANDS
(FOR INFORMATION ONLY)

Into the MICROCOMPT+, adjust the cable length to easily open and close the cover. Make sure to prevent damage to the cable.

Tighten both cable glands.

Wiring of the 2-antenna box to the MICROCOMPT+

Fasten the box. You must install it in an area free of metallic cover to have a good reception and broadcasting of signal. You can install the box in a horizontal or vertical position.

Put each coaxial cable through the heat shrink sleeve.

Plug the RG58⁽¹⁾ cable from the MICROCOMPT+ with the RG174⁽²⁾ cable from the antenna box and tighten them. Isolate the male/female SMA connectors with the supplied heat shrink sleeve (both antennas in the box are the same, cables don't have to be labelled).

Position and heat up the sleeve on the connectors to prevent corrosion and humidity.



WARNING: The cables of this box can be **neither shortened nor extended**

⁽¹⁾ RG58: Semi-rigid coaxial cable, 5mm diameter

⁽²⁾ RG174: Flexible coaxial cable, 2.7mm diameter

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 22 / 39

5.4. SPOOL VALVE CONTROL: ELECTRICAL AND HYDRAULIC WIRING

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	MANIFOLD FLAP CONTROL OR PRODUCT RETURN AUTHORISATION AND/OR ADDITIVATION 2 CONTROL				4 to 7x1	Flap 1	1	39	24VDC = opened flap (outputs FET 24V 5W max.) FET=Field Effect Transistor	EV Flaps or Product return autorisation and/or Additivition 2	Depending on configuration: direct connection or via plexmi electronic board. Refer to the assignment table and to the connection table of the relevant plexmi board
						Flap 2	2	40			
						Flap 3	3	41			
						Flap 4	4	42			
						Flap 5	5	43			
						Flap 6	6	44			
						Flap 7	7	45			
								46			
					1x1	0V		47	0V		
								48			
	RC-HEATING OIL RECEIVER				2x1	Start/Stop	1	49	Start/Stop	RC- Oil_1	
						LF/HF	2	50	LF/HF	RC- Oil_2	
	COUNTED / PUMPED DISTRIBUTION WAY (with additional commands)				3x1	Gravi/Pmp	1	51	0V	Gravity / Pumped	Closed circuit=product pumped (end position)
						Pct/Pnc	2	52	0V	Pumped counted/ no counted	Closed circuit=product counted
						0V	3	59	0V	0V (GND)	51, 52 and 59 are shunted if manual valves are not instrumented
	PTO CONTROL				1x1	PTO Ctrl		58		PTO control	Power-take- off engaged
	FOOTVALVE CONTROL				1x1	Footvalve		64	24VDC= cde	FOOTVALVE	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor
	PRODUCT RETURN CONTROL				3 to 6X1	PR1	1	65	24VDC= author.	Return_1	Depending on configuration: direct connection (Outputs FET Field Effect Transistor 24V 5W max.) or via plexmi electronic board. Refer to the assignment table and to the connection table of the relevant plexmi board
						PR2	2	66		Return_2	
						PR3	3	67		Return_3	
						Chasse		68		Cde chasse	
	ADDITIONAL COMMANDS				5X1	PTO	1	61	24VDC= pto	PTO	(Outputs FET 24V 5W max.) FET=Field Effect Transistor
						Stop Mot.	2	62	24VDC= stop	Stop motor	
						Acc. Mot.	3	73	24VDC= acc.	Motor acceleration	
						Clutching	4	76	24VDC= clutchin	Clutching	
						Start Mot.	5	77	24VDC= start	Start motor	
	ADDITIVATION 1 CONTROL				2x1	Power	1	71	NO free contact	Additivition 1 control	Closed contact=additivition
						Control	2	72			(Output: NO free potential relay)
	SPOOL VALVE CONTROL				2x1	HF		74	HF solenoid valve	Spool valve (hydraulic motor)	
						Author.		75	Author. Solenoid valve		
	MANIFOLD VENT VALVE CONTROL				1x1	Vent valve		78	24VDC	Vent valve control	24VDC=opening (Outputs FET 24V 5W max.) FET=Field Effect Transistor

SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD

*Refer to the Cable Glands installation instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 23 / 39

Terminal assignment of the relay extension board

RELAY EXTENSION BOARD (used to control a minimum 5W spool valve)

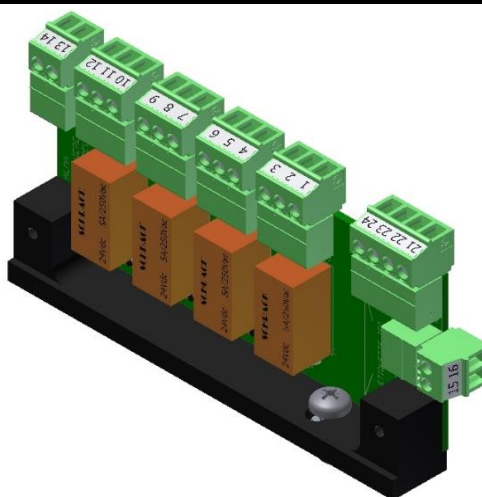

EQUIPEMENT CONNECTED TO THE MICROCOMPT+							RELAY EXTENSION BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	AUTHORISATION SOLENOID VALVE					Author.		1	NC free contact	Hydraulic control of hydraulic pump
								2	0V/24VDC	
								3	NO free contact	
	HIGH FLOW SOLENOID VALVE					High flow		4	NC free contact	High flow control of hydraulic pump
								5	0V/24VDC	
								6	NO free contact	

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 25 / 39



6.2. ELECTROMAGNETIC METER PD340 C63 - 80

Technical data:

- **Mass** : 5Kg
- **Max. Flow** : 80 m³/h
- **Liquide temperature** : -30°C to 100°C
- **Max. pressure** : 10 Bar
- **Power supply** : 24V AC \pm 15% or 24 DC \pm 15%
- **Output** : pulse output calibrated at 10 imp/L
- **Max. power** : 6W

Electrical connection

Terminal	Function
16	V1
17	0V
18	V2
2	0V

Optional:

Clamp connection kit (Code: 1823)

x2

Service Development
13127 Vitrolles
www.alma-alma.fr
Code : 1824
Drawing N° associated with the related CEI file
DEV N° : 950
Metro : ABBV

PRESENTATION DRAWING PV1878
Electromagnetic meter
PD 340 C63 - 80

950 PPV1878 B 2 / 2 Modified on : 01/10/2018
Dev N° : Drawing N° Rev : Folio Created on : 08/02/2016
by CC verified by SR


6.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340



To function properly, the PD340 electromagnetic meter must be filled with liquid ; otherwise pulses are automatically generated.

To ensure a correct filling, ALMA recommends the installation of a sightglass nearby the meter.

- Turn the meter so that the identification plate is visible and accessible. The meter must be laid flat with horizontal pipe, and cable glands pointing downwards:

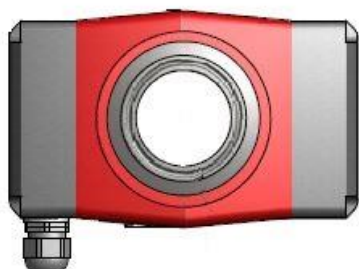

(Or optionally: the meter can be installed with vertical pipe with upward flow):



- Leave an open space all around the meter in order to ease wiring, maintenance and verification.
- In the unique situation using very hot products with large flowrate, the meter must be installed between straight pipe sections which length is at least equal to 3 times the nominal diameter of the meter. This is aimed at avoiding cavitation problems.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 28 / 39

7. PRINTER

Printer kit
with **TM-U295 printer**
Code: 0284 (with 5 meters cable)
Code: 0765 (with 10 meters cable)
(Printer presentation drawing PPN901)

Printer kit
with **SP298MD printer**
Code: 0766 (with 5 meters cable)
Code: 0767 (with 10 meters cable)
(Printer presentation drawing PPN900)

* ADR-RTMD - NFR13-413 cable

Printer kit:
- 1 Printer.
- 1 Printer link cable (Length= 5 or 10m).
- 1 Printer holder (SS 304L thickness 2mm - Mass 1.5 kg).

PRINTER LINK CABLE		PRINTER KIT	
TYPE	CABLE	COLOUR WIRE	FUNCTION
Shielded cable * 4x0.75mm ² Ø ext 8 L=5m / Code 4339 L=10m / Code 4578	White (WH) Brown (BN) Yellow (YE) Green (GN) Shielding	24Vdc 0v Tx printer Rx printer Shielding	

Service Development
13127 Vitrolles
www.alma-alma.fr

DEV N° : 907 Code : -
Drawing N° associated with the related CEF file
Metro : -


PRESENTATION DRAWING **PPN902**
PRINTER KIT

Description of the amendment: N° : -
- English version of presentation drawing.


Modified on : 06/05/2014
Created on : 25/03/2010
EG verified by :
EG

DSM
vs

-
- Technical drawings of the 3D printer showing dimensions A, B, C, and D. Dimension A is the height of the printer. Dimension B is the width of the printer. Dimension C is the length of the printer with the filament spool holder. Dimension D is the length of the printer without the filament spool holder.

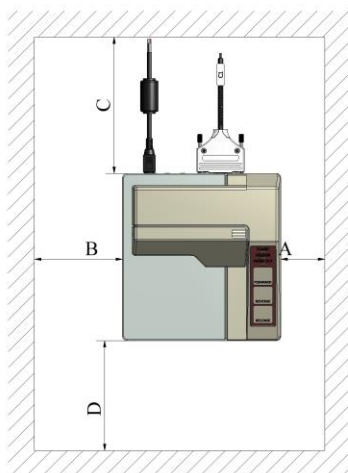


8. CONVERTER 24VDC/24VDC 2.1A 50W

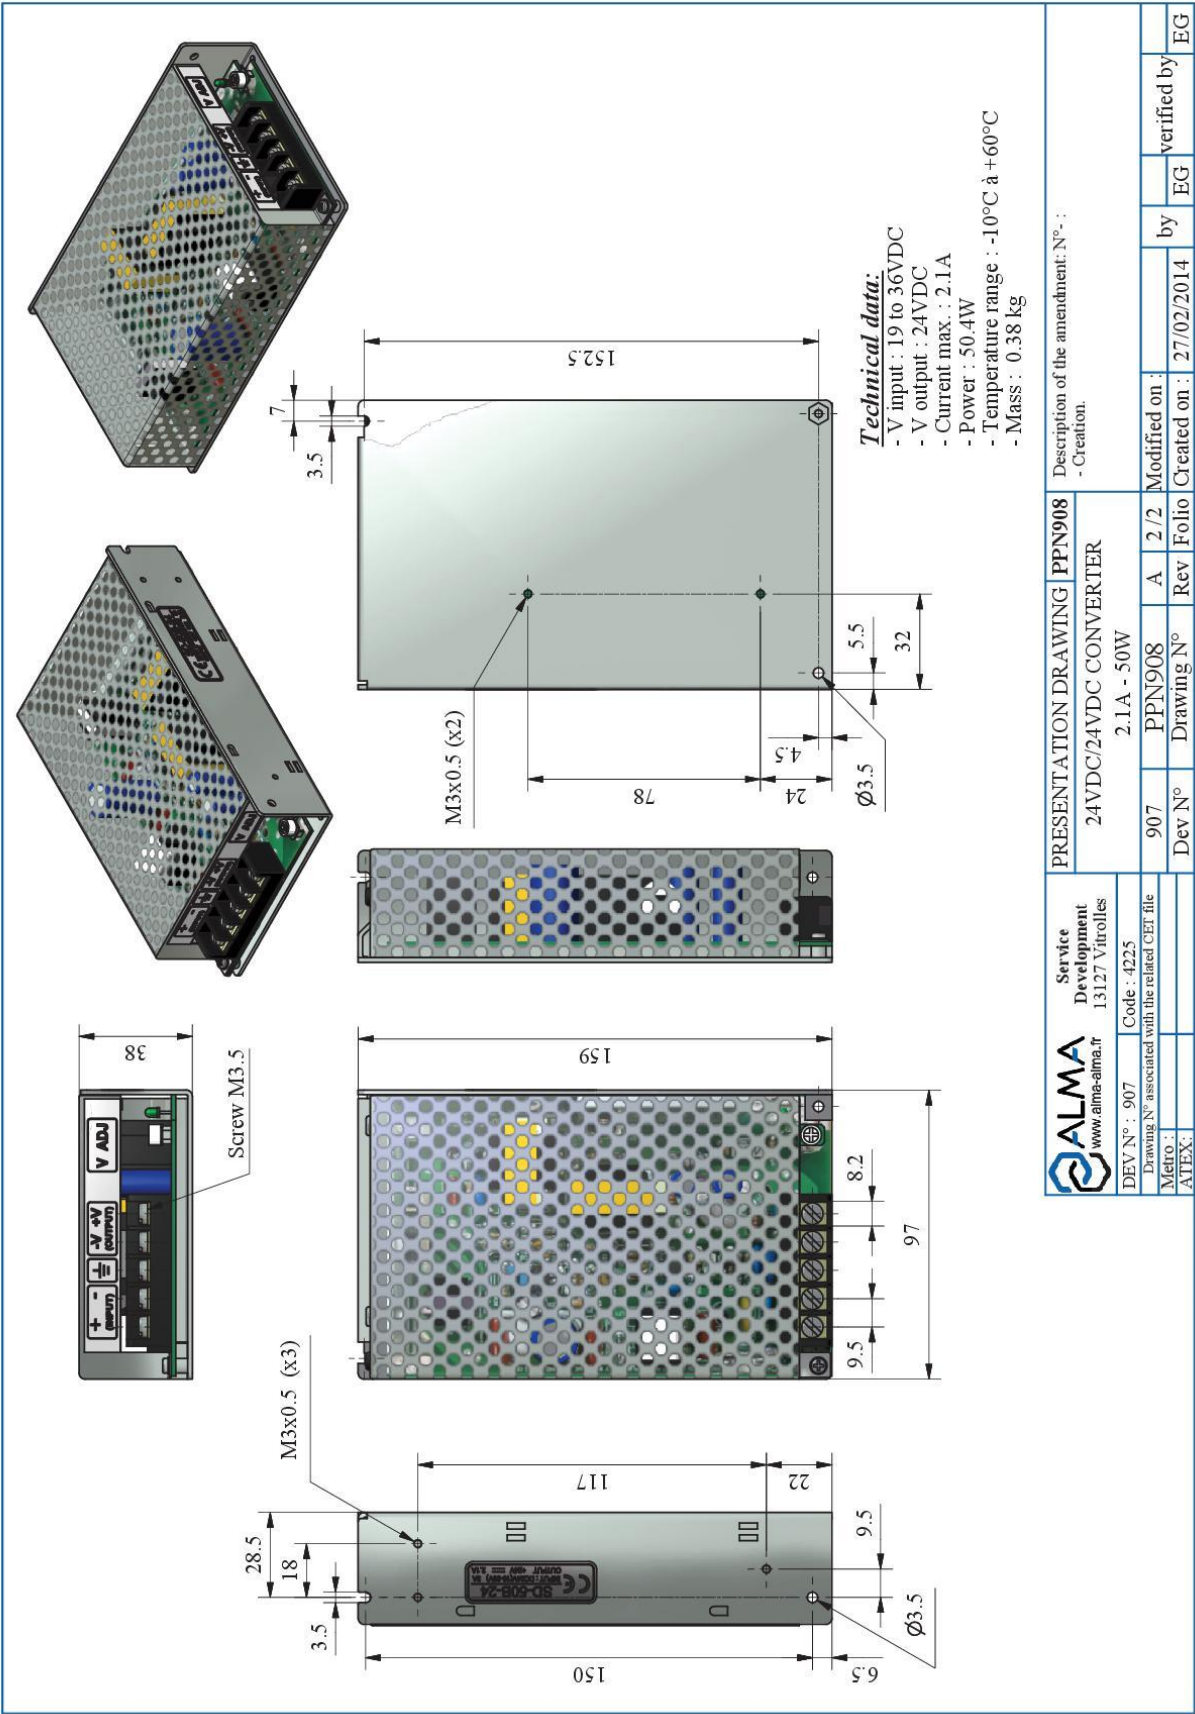

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

9. NON-RETURN VALVE KIT DN50 OR DN80

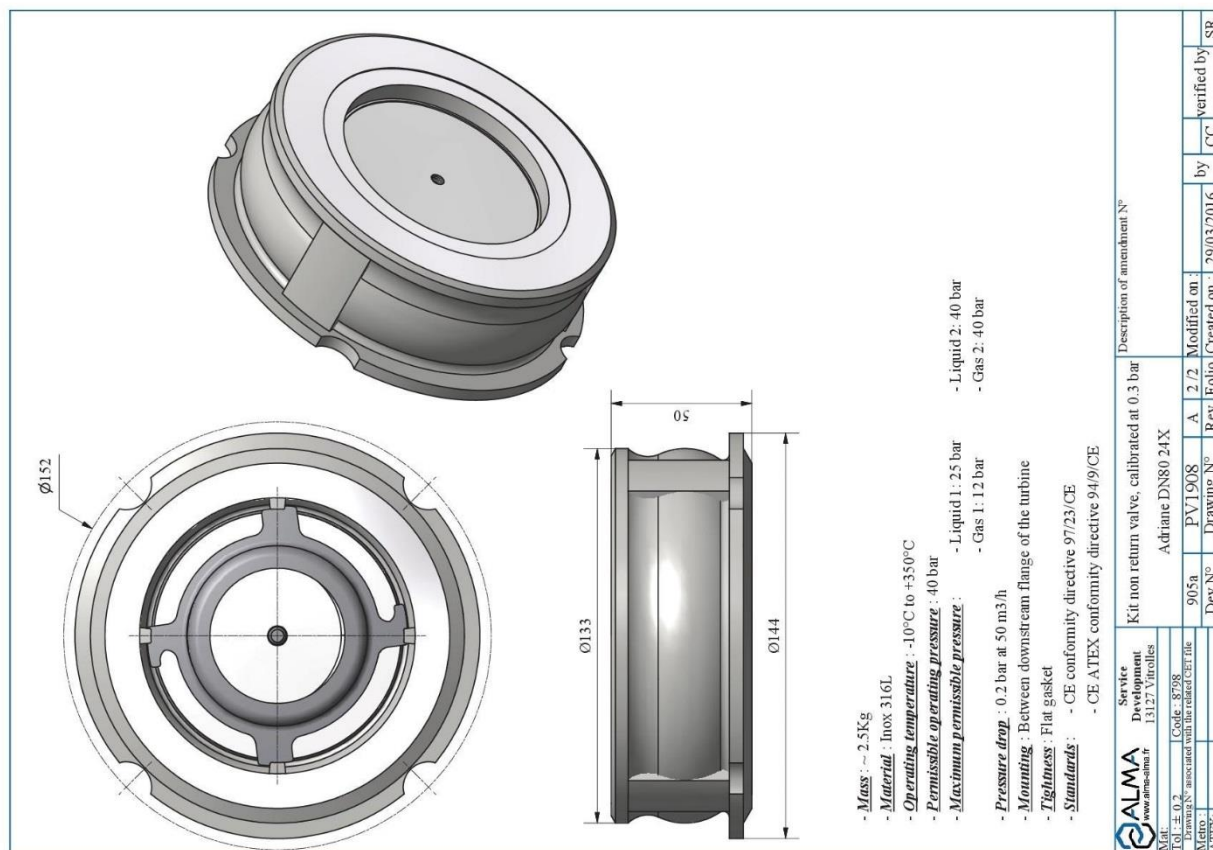

Document available on [website alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

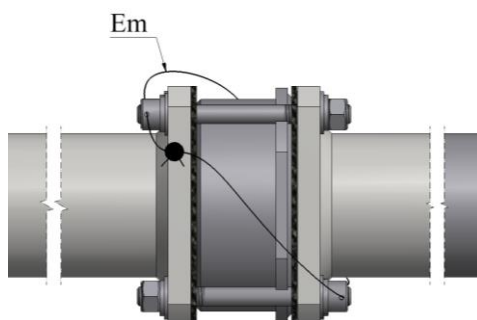

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 33 / 39

10. SIGHTGLASS KIT DN50 OR DN80

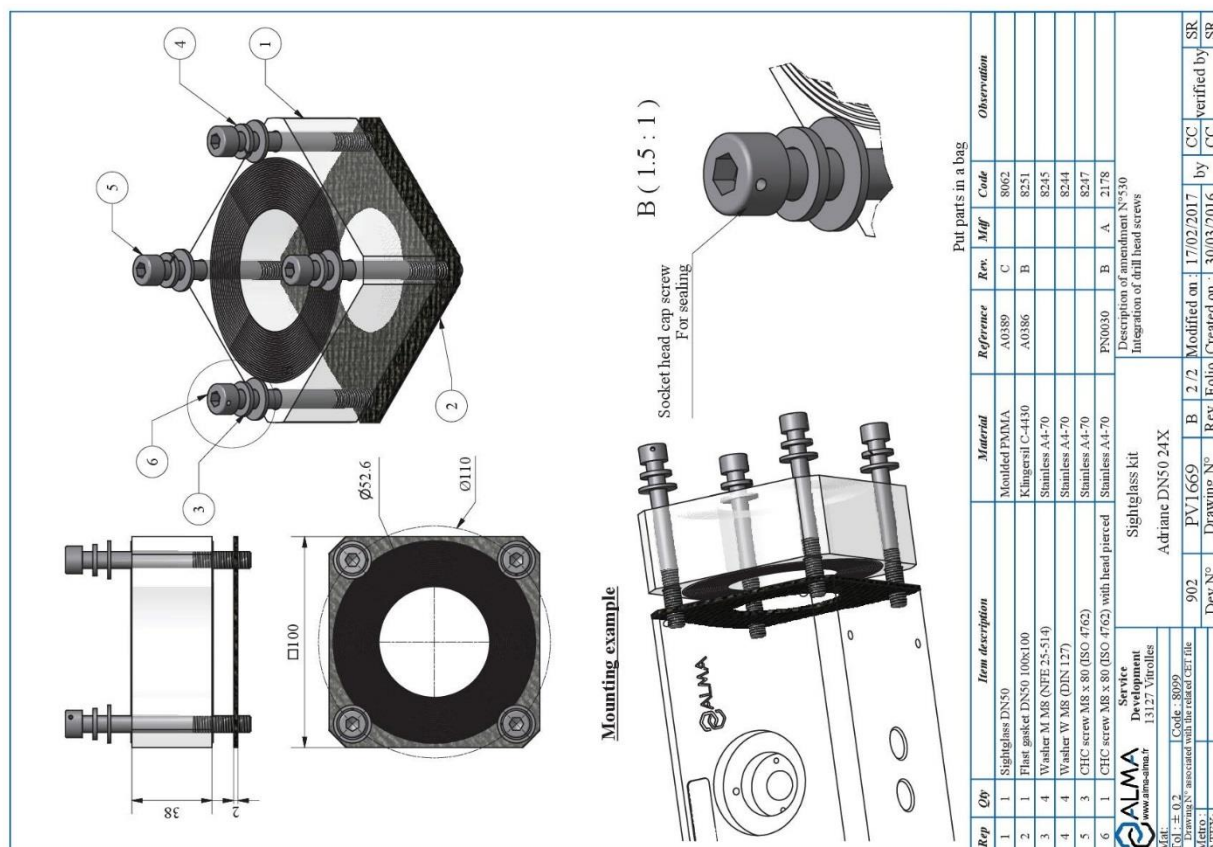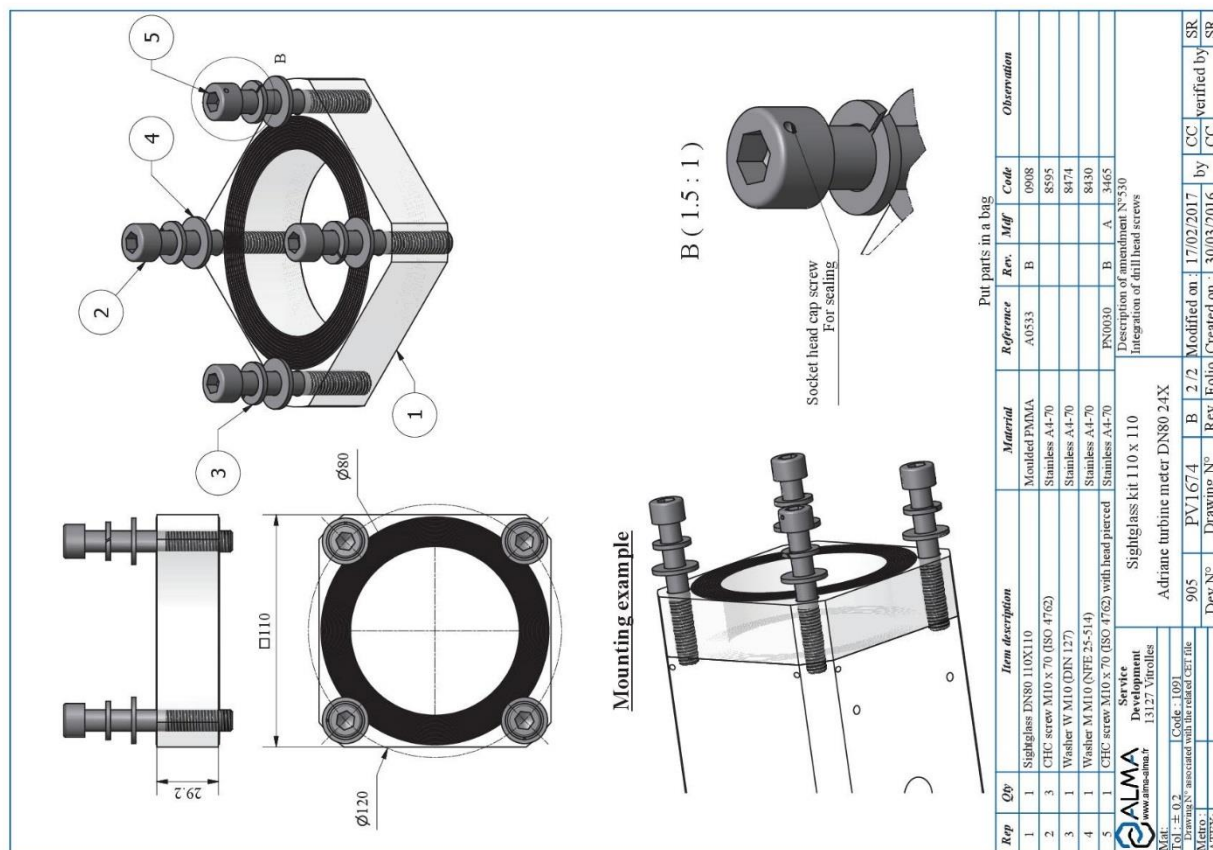

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$ ' ")
Temperature: $^{\circ}\text{C}$

10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 35 / 39

11. CONNECTION KIT 100x100 DN50 OR DN80

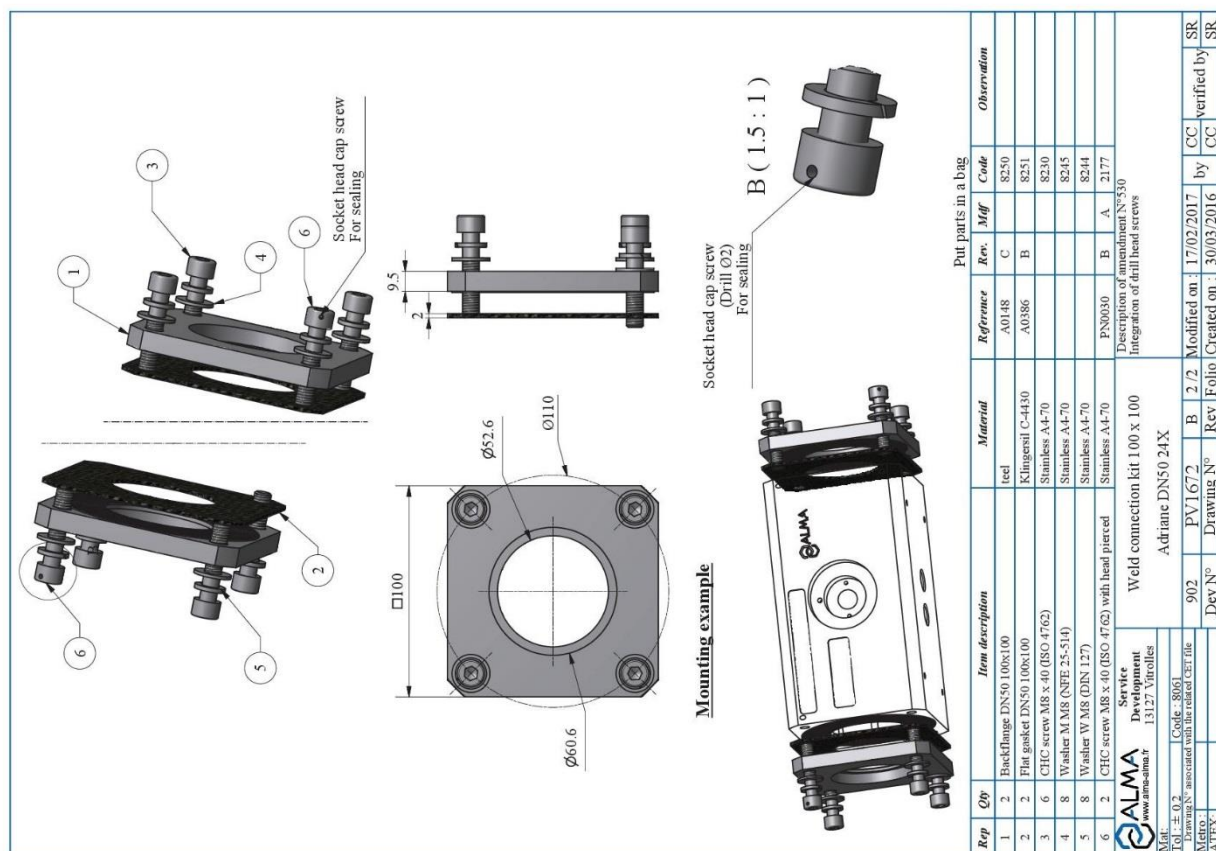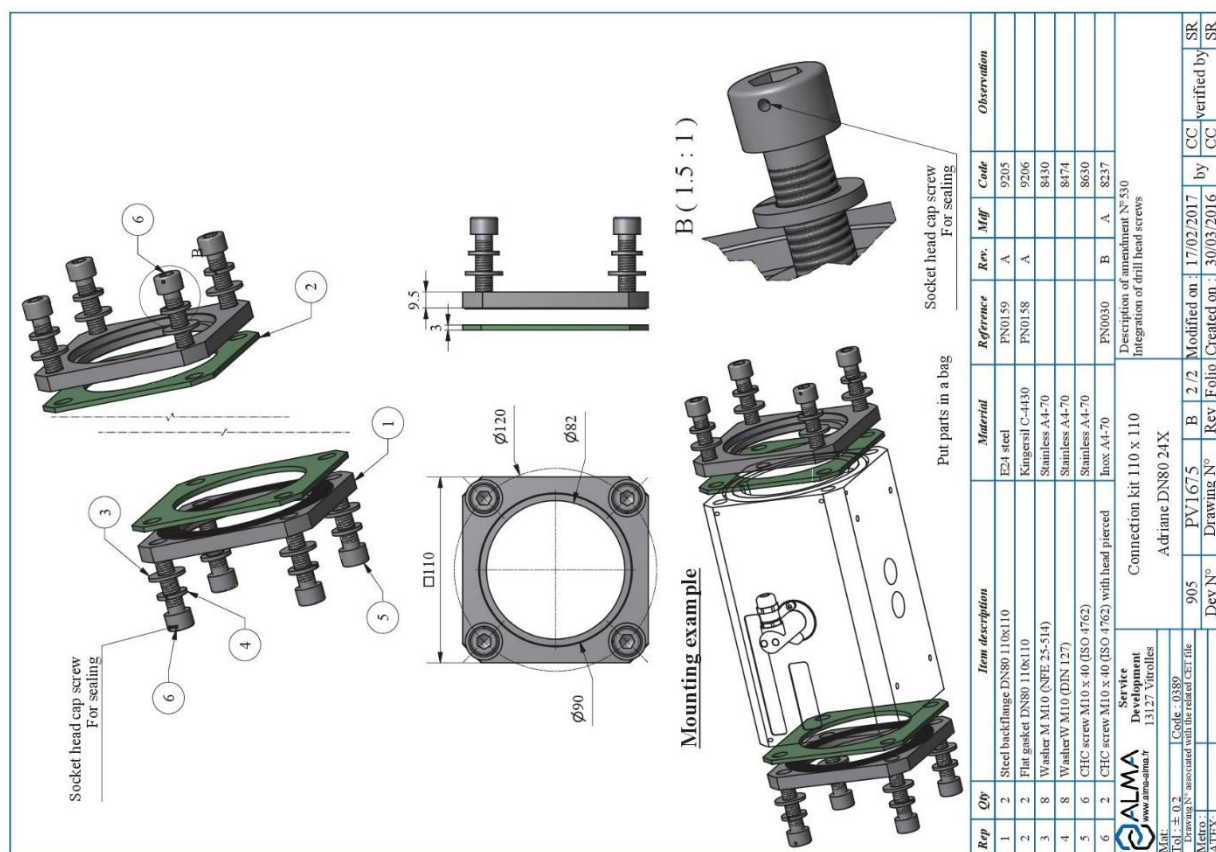

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

12. TEMPERATURE PROBE Pt100 – CT1001

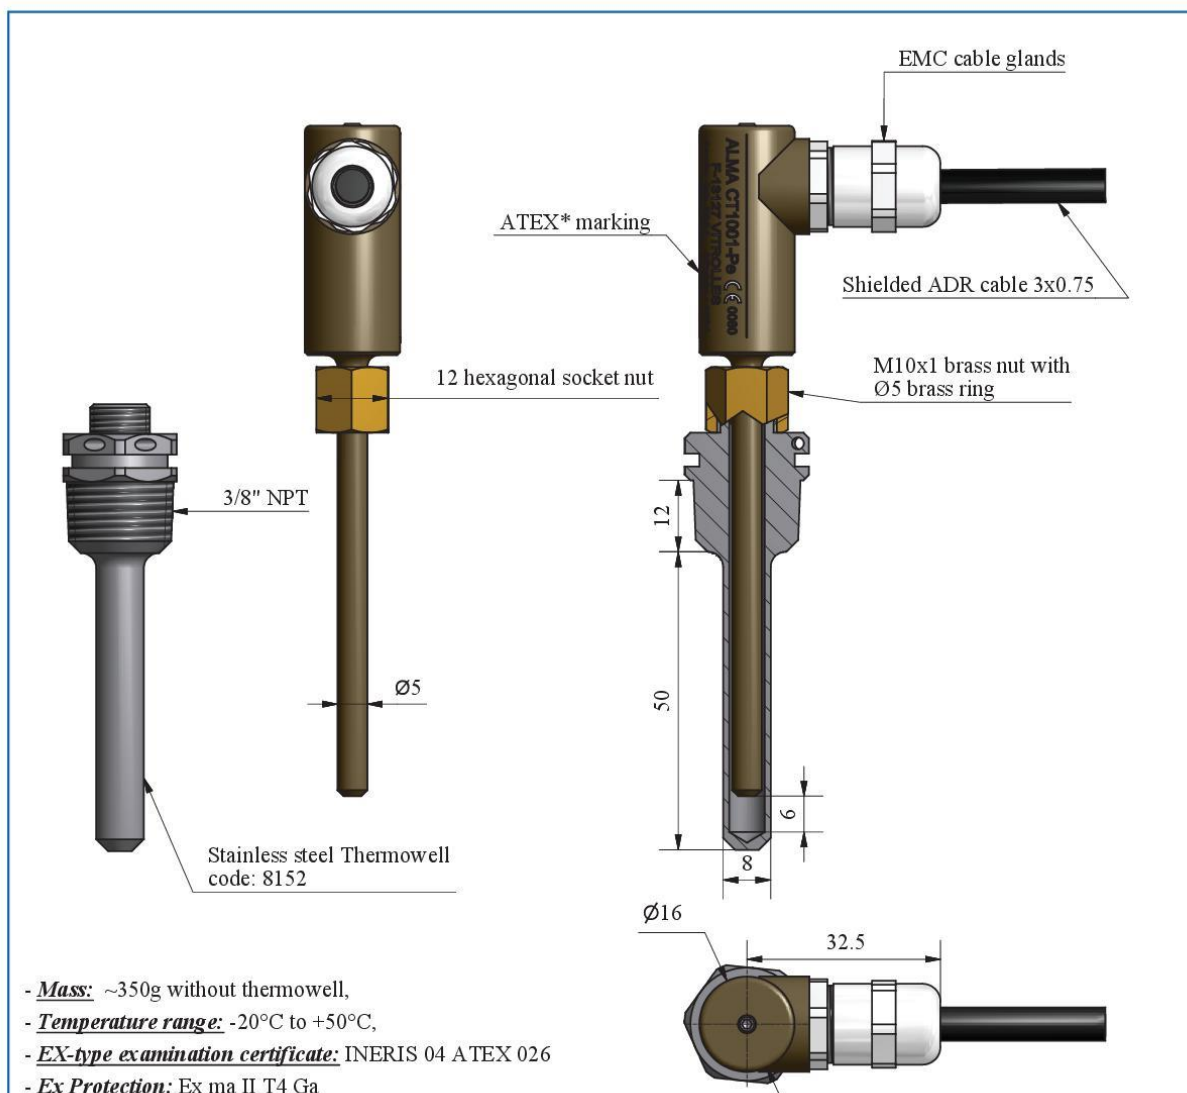

- **Mass:** ~350g without thermowell,
- **Temperature range:** -20°C to +50°C,
- **EX-type examination certificate:** INERIS 04 ATEX 026
- **Ex Protection:** Ex ma II T4 Ga

The sensor body is made of bronze color anodized aluminum alloy;
The ring and the nut are made of brass.
The probe can be mounted either on a ALMA thermowell or on a
thimble connection 1/4 "BSP (M10x1 n5).
Before installation, lubricate the parts in contact with the thermowell or
the boss, to prevent corrosion.

PT100 features:

- 3 wires
- 1/3 DIN

*ATEX "ma" certification.

For installation and use in hazardous areas see Instruction manual

Also available with output connector according to IEC 60947-5-2


Connecting the cable		
Function	Marking on the wire	Color wire
PT100/1	1	Yellow
PT100/2	2	White
PT100/3	3	Green

ALMA www.alma-alma.fr Service Development 13127 Vitrolles		PRESENTATION DRAWING DFV042		Description of the amendment N° 596	
DEV N° : 949d Code : 8151		Temperature probe		- Compliance with ATEX marking	
Drawing N° associated with the related CET file		CT1001-Pe		- Replacement of the ADR cable	
Metro : 949d		PPV042		- Modification of CI051	
ATEX : INERIS 04 ATEX 0026		Dev N°	Drawing N°	Rev	Folio
		Modified on :	21/02/2018	by	ROC
		Created on :	13/09/2003	BM	verified by
					CC
					BM

Document available on website alma-alma.fr


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 37 / 39



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENB ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	<u>Units of measure:</u> Length: mm Angle: degree (°) Temperature: °C
	This document is available at www.alma-alma.fr	Page 38 / 39

13. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

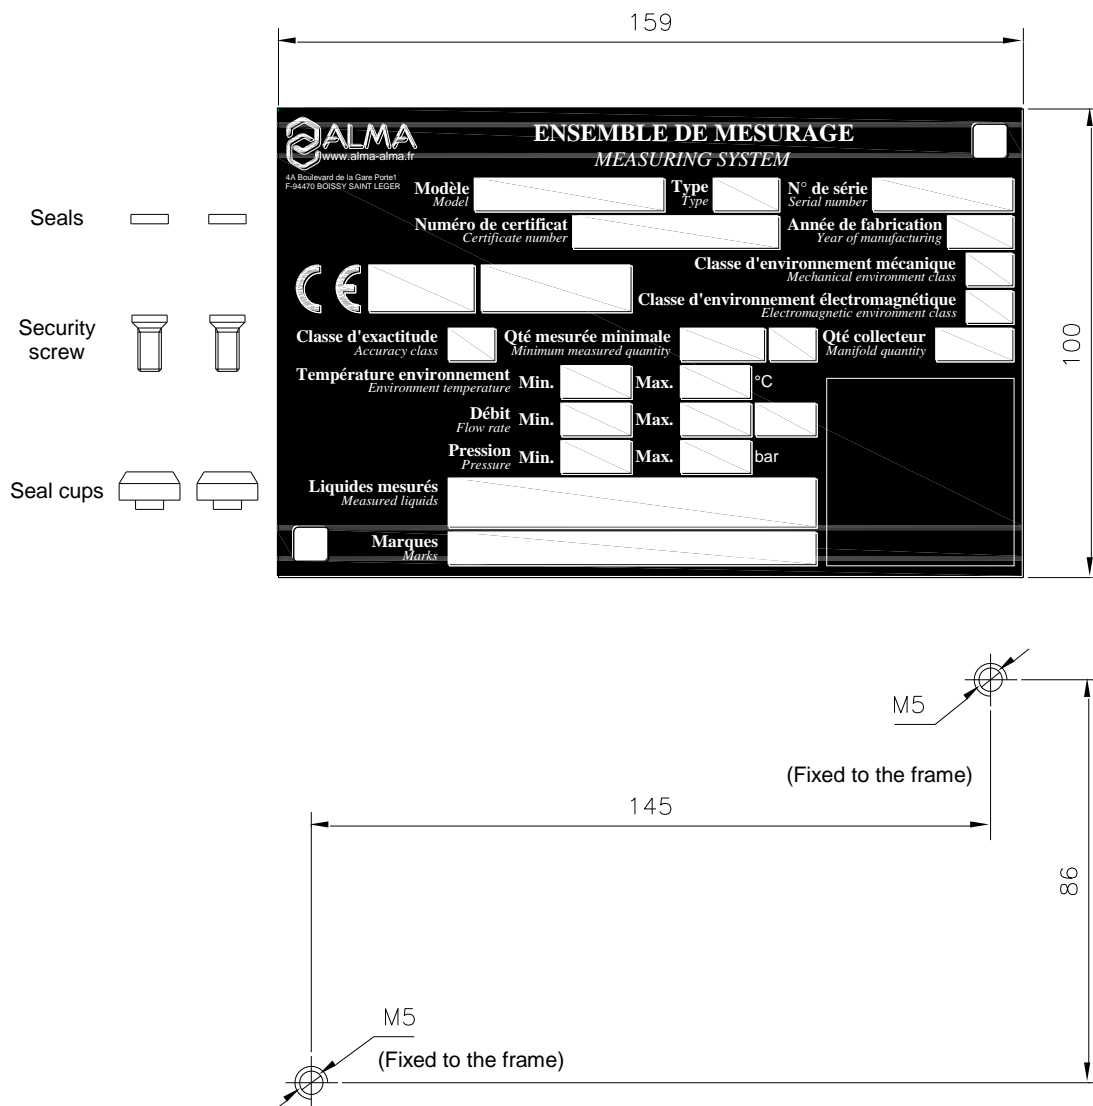

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENB
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 39 / 39