

INSTALLATION GUIDE

DI 021 EN C

ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Described in EU-type examination certificate N°: LNE-26664




C	2021/05/19	I/O modification for new software platform, New CPR3000 pressure sensor, Removal of the PD-340 voltage stabilizer, Terminal assignment of the extension board 'sonde AD' 5 wires, Update of drawings	DSM	FDS
B	2018/10/30	Electrical wiring (electromagnetic meter supply), New FORM DOC for connectivity [PJA074], Flow valves and authorization wiring, Drawings update	DSM	MV
A	11/09/2017	Creation [PJV126]	DSM	PJ
Issue	Date	Nature of modifications	Written by	Approved by


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx		Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr		Page 1/41

CONTENTS

1. GENERAL RECOMMENDATIONS.....	4
1.1. MECANICAL RECOMMENDATIONS	4
1.2. ELECTRICAL RECOMMENDATIONS	5
1.3. PNEUMATIC RECOMMENDATIONS	7
2. GENERAL PRESENTATION	8
2.1. USE ACCORDING TO MID CERTIFICATE	8
2.2. SPECIAL CONDITIONS FOR INSTALLATION	8
3. PART LIST	9
4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM.....	11
5. MICROCOMPT+ TURBOTRONIQUE (NON ATEX).....	13
5.1. INSTALLATION RECOMMENDATIONS REMOTE CALCULATOR-INDICATOR MICROCOMPT+	14
5.2. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+.....	15
Terminal assignment of the power supply board.....	16
Connection of the network board – Ethernet, RS232/485, CANBus	19
Terminal assignment of the extension board “sonde AD” 5 wires (IS)	20
Terminal assignment of the extension board “sonde AD” 2 wires (IS)	21
5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX.....	22
Mounting and wiring of the GSM and GPS antennas.....	23
Mounting of the GSM/GPS cables into the cable glands.....	24
Wiring of the 2-antenna box to the MICROCOMPT+	24
5.4. ELECTRICAL WIRING SPOOL VALVE CONTROL	25
Terminal assignment of the power supply board.....	25
Terminal assignment of the relay extension board.....	25
6. ELECTROMAGNETIC METER.....	26
6.1. ELECTROMAGNETIC METER PD340 C51 - 40	26
6.2. ELECTROMAGNETIC METER PD340 C63 - 80	27
6.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340	28
7. PRINTER KIT	29
7.1. INSTALLATION RECOMMENDATIONS PRINTER	30
7.2. ELECTRICAL WIRING PRINTER	31
Supply cable	31
Serial link cable.....	31
8. CONVERTER 24VDC/24VDC 2.1A 50W	32
9. NON-RETURN VALVE KIT DN50 OR DN80.....	33
9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80	34
10. SIGHTGLASS KIT DN50 OR DN80.....	35
10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80.....	36
11. CONTROL OF THE PUMP	37
11.1. HYDRAULIC SPOOL VALVE CONTROL DIAGRAM	37
11.2. PNEUMATIC DIAGRAM HIGH FLOW CONTROL OF THE BY-PASS	38
12. TEMPERATURE PROBE PT100 – CT1001 ATEX	39

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2/41

12.1.	INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE.....	40
13.	KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE.....	41

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3/41


1. GENERAL RECOMMENDATIONS

**IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE,
PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.**

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


1.1. MECANICAL RECOMMENDATIONS


- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment. The display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4/41

1.2. ELECTRICAL RECOMMENDATIONS

- ⇒ According to the ATEX directive or any other regulations in force in the country of destination, the safety protection level of the equipment must agree with the installation area (potentially explosive atmospheres).
- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).
- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.

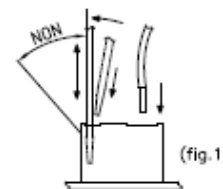

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 5/41

- ⇒ Respect a homogeneous wire color code.
- ⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.
- ⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)
METER	24VDC +/-10%	-	0.7 A (switch-on)

- ⇒ Color code according to DIN 47100.
- ⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
White	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

1.3. PNEUMATIC RECOMMENDATIONS


- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area (L = 100 mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Units	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0.069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)
 1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7/41

2. GENERAL PRESENTATION

2.1. USE ACCORDING TO MID CERTIFICATE

The measuring system TURBOTRONIQUE type MTS-xx or MTP-xx is covered by the EU type examination certificate N° LNE-26664. Refer to this certificate for any precision about its installation.


For the sealing plan, see Annex to EU type examination certificate N° LNE-26664.

2.2. SPECIAL CONDITIONS FOR INSTALLATION

- ⇒ The ALMA model TURBOTRONIQUE measuring systems should be installed on road tankers.
- ⇒ The installation of the measuring system covered by this certificate must be in conformity with the plan which is presented in § “securing and sealing” of the certificate.
- ⇒ If the measuring system is fitted with two delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.
- ⇒ The measuring system can be equipped with an additive injection device. This injection has to occur upstream of the meter. If the additive injection is situated downstream of the gas elimination device, the installation has to avoid air injection by means of positive safety detection device, sealed and placed at the low level of the additive tank, which stops injection in case of additive lack.
- ⇒ The measuring system may be fitted with OPW, ALPECO, or EMCO WHEATON product return devices, as well as with a magnetic valve for venting, associated with the wind concentrator enabling product transfers towards the compartments. This has to be installed so that no air or venting of the wind concentrator may occur during delivery.
- ⇒ If a printing device not covered by an evaluation certificate is connected to the ALMA electronic calculator-indicator, a notice stating that the data printed is not subject to legal control must be clearly printed on the delivery notes.
- ⇒ The special installation conditions of the gas elimination devices FSGB48E, SG 80.1 AL, SG 80 IN PERNIN EQUIPEMENTS and FS24 SATAM are defined in the relevant evaluation certificates.
- ⇒ It is mandatory to install a non-return valve on the pipe between the gas elimination device and the transfer point. The non-return valve may be placed and sealed upstream of the meter or downstream as well.

Otherwise, if the liquid level in the gas elimination device may be lower than the liquid level in the meter, a non-return valve has to be installed at the device outlet, or placed and sealed between the device and the meter.


- ⇒ The hose allowing gas removal at the outlet of the gas elimination device has to be non-pinchable or keep the deformation mark.
- ⇒ The special installation conditions of the meters are defined in evaluation certificate NoTC-7204.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 8/41




3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ TURBOTRONIQUE WITH Bluetooth CONNECTION NON ATEX version	1	
		Wi-Fi CONNECTION (As an alternative to Bluetooth)		•
		RFID SUPERVISOR KEY		
2		ELECTROMAGNETIC METER PD340 C51-40 or C63-80 (Depending on configuration) (Supplied with a connection kit and 2 sealing screws)	1	
3		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
4		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC) (Supplied by Alma or Customer)	1	•
5		NON-RETURN VALVE KIT DN50 OR DN80 (Depending on configuration)	1	•
6		SIGHTGLASS KIT DN50 OR DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	•

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 9/41

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

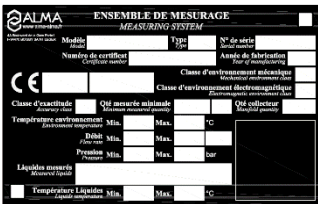Item	Equipment	Designation	Qty	Option*
7		Pt100 TEMPERATURE PROBE – CT1001-Pe ATEX (Supplied with thermowell)	1	●
8		2-ANTENNA BOX GSM AND GPS	1	●
9		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	●
Option*: equipment sold as an option by ALMA. It must be installed on the measuring system if required by the certificate.				

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 EN C **ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx**

Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

This document is available at www.alma-alma.fr

Page 10/41

4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM

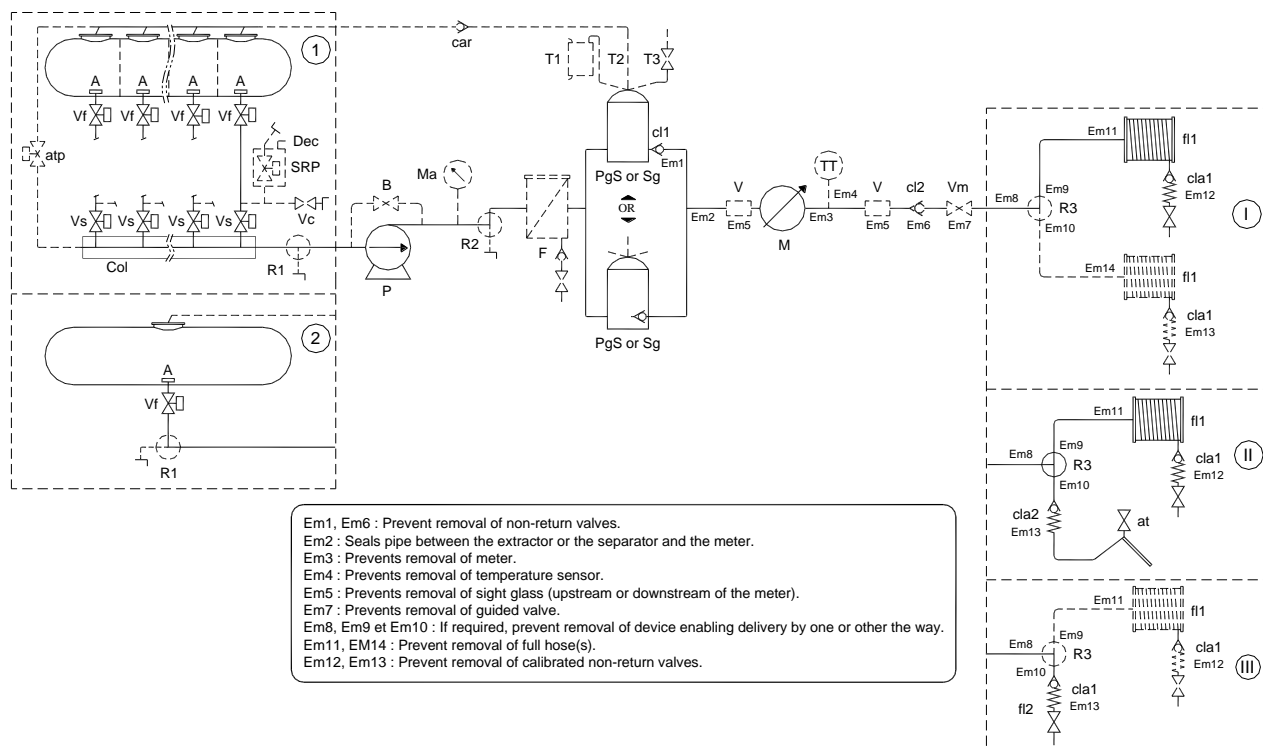


- A: Anti-swirl device.
 R1: Two-way cock enabling delivery per meter, draining and filling of the tank without using the meter (optional).
 P: The pump may be reversible. In that case, a non-return valve has to be added between cock R2 and gas separator Sg.
 B: Pump bypass
 Ma: Manometer indicating the forcing back pressure of the pump (optional).
 R2: Two-way cock for pumped delivery without meter (optional).
 F: Filter which, when external to the separator or the extractor, may be fitted with a draining cock.
 Sg: Gas separator
 PgS: Specific gas extractor.
 cl1: Non-return valve (compulsory when the gas elimination device is not fitted with internal non-return valve).

T1, T2, T3: Variants authorized for gas evacuation device:

- T1: Use of a container to retrieve the liquid particles carried along by gas,
T2: Foam going back to the tank,
T3: Use of a valve for draining.

- car: Non-return valve on foam return (optional).
 M: Meter
 V: Sight glass (compulsory with a specific gas extractor (gas indicator), optional with a gas separator).
 cl2: Non-return valve (optional).
 TT: Temperature sensor Pt100 (optional).
 Vm: Guided valve (optional).
 R3: Device enabling, when the measuring system has two delivery paths, to make deliveries one or the other way.
 fl1: Full hose on hose reel
 fl2: Very short full hose enabling delivery with flowrate (optional).
 cla1: Calibrated non-return valve preventing draining of the full hose.
 cla2: Calibrated non-return valve preventing draining of the empty hose.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 11/41

I, II, III: Variant of the delivery device:

Variant I: One or two full hoses with reel,

Variant II: Combination of full hose on reel and empty hose,

Variant III: Combination of short full hose and full hose on reel, if applicable.

Vf: Valve for compartment bottom.

Col: Wind concentrator.

atp: Guided venting (optional).

Vs: Selection valve, installed on pipe of each compartment, enabling communication with wind concentrator (guided or manual).

Vc: Valve for source loading, installed on pipe of each compartment (optional).


SRP: Return Product System on one or more compartment(s) (optional).

Déc. : Decompression control (secured).

1, 2: Variants of devices associated with the tank

Variant 1: Tank with several compartments and wind concentrator,

Variant 2: Single compartment tank.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 12/41

5. MICROCOMPT+ TURBOTRONIQUE (NON ATEX)



Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx


This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° '' ''')
 Temperature: °C


Page 13/41

5.1. INSTALLATION RECOMMENDATIONS REMOTE CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: $A > 100\text{mm}$ and $B > 60\text{mm}$

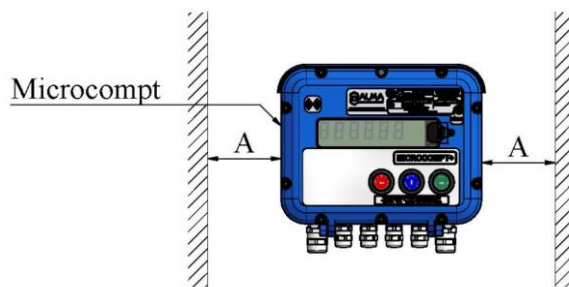

- SOLUTION 1: straight box if it's a breast height.

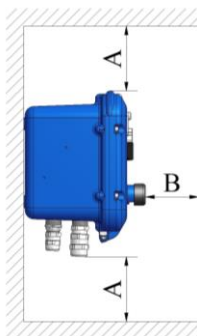


Left hand view
Closed box

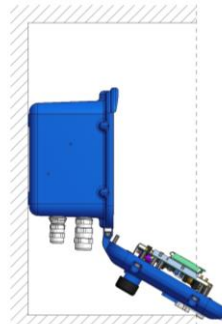


Left hand view
open box

- SOLUTION 2: 20° angle if it's not at breast height.

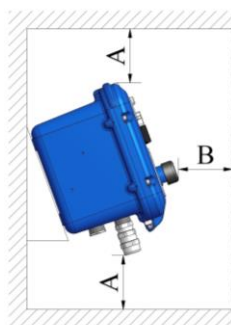

Left hand view
Closed box

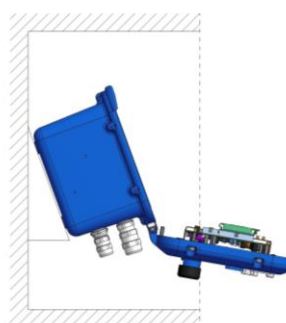

Left hand view
open box

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 ENC
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 14/41

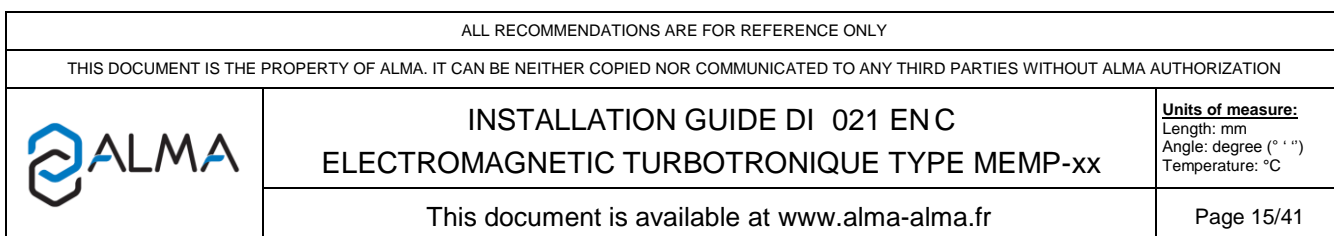


Terminal assignment of the power supply board

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNEMENT OF MICROCOMPT+ BOARDS

POWER SUPPLY BOARD

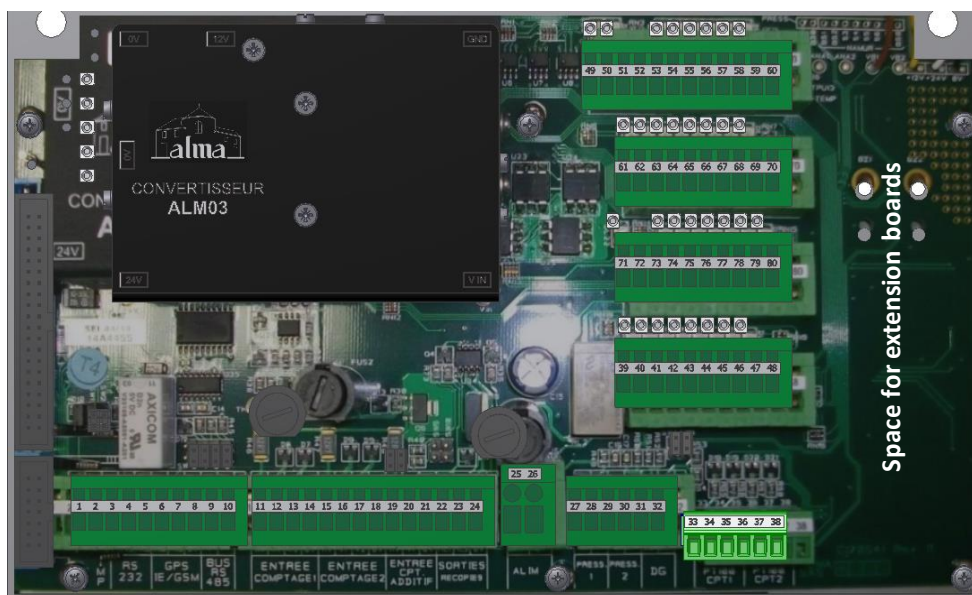

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	PRINTER	C1	1/2"NPT	●	ADR 4x0.34 sh.	Rx Printer	Bc	1	Tx	Printer	Connect the shielding
						Tx Printer	Mr	2	Rx		
						0V	Vt	3	0V		
•	EMBEDDED COMPUTING	C8	1/2"NPT		3x0.34 sh.	0V		3	0V	RS232	Connect the shielding. Alma or FTL Light Protocol
						Rx IE		4	Tx		
						Tx IE		5	Rx	DSPGI	Gauging system for product identification
•	DSPGI DEVICE					Rx	Vt	6	Tx		
						Tx	Bc	7	Rx		
						Ground	Nr	8	Ground		
	METERING	C2	1/2"NPT	●	ADR 4x0.34 sh.	V1		12	V1	Product metering input	Connect the shielding
						V2		13	V2		
						0V		14	0V		
	ADDITIVE METERING OR INJECTOR 1 FEEDBACK CONTROL							19	12V	Additive metering or Injector 1 feedback ctrl	
								20	V1		
								21	0V		

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 16/41

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	PULSES OUTPUT		1/2"NPT			PO EMA		22	EMA Pulses output	Pulses output	Control system / Display Put SW9 and SW10 to have a 0-24V signal
						PO EMB		23	EMB Pulses output		
						0V		24	0V		
	SUPPLY 24VDC	A1	1/2"NPT		2x1	Bat. (+)	1	25	24VDC	Power supply	24VDC truck battery (after battery switch and protected by a fuse)
						Bat. (-)	2	26	0V		
•	TEMPERATURE PROBE	C4	1/2"NPT	•	ADR 3x0.6 sh	+	Jn	33	+	Pt100	Connect the shielding
						-	Bc	34	-		
						-	Vt	35	-		
	MANIFOLD FLAP, PRODUCT RETURN and-or INJECTOR 2 CONTROL				4 to 7x1	See tables	1	39	24VDC	See tables	Depending on configuration: direct connection or via plexmi electronic board. See the assignment table and the connection table of the relevant plexmi board (page 19)
							2	40			
							3	41			
							4	42			
							5	43			
							6	44			
							7	45			
•	RC-HEATING OIL RECEIVER				1x1	Start/Stop	1	49	Start/Stop	RC-Oil_1	
					1x1	LF/HF	2	50	Low/High flow	RC-Oil_2	
	DISTRIBUTION WAY PUMPED COUNTED- NOT COUNTED				2x1	PC/PNC	2	52	0V	Pumped counted/ not counted	Closed circuit=Pumped counted (end position)
						0V	3	59	0V	0V (GND)	
	INJECTOR 1 LEVEL CONTROL				1x1	Ctrl INJ1		53		Injector 1 low level control	
	INJECTOR 2 LEVEL CONTROL				1x1	Ctrl INJ2		54		Injector 2 low level control	
	OVERFILL PROBE CONTROL				1x1	Ctrl AD truck		55		Truck overfill probe control	Wiring according to the relevant extension board (5 fils or 2 fils)
	INJECTOR 2 FEEDBACK CONTROL				1x1	Ctrl INJ2		56		Injector2 feedback control	
	CUSTOMER TANK OVERFILL PROBE				1x1	Ctrl AD customer		57		Customer overfill probe control	

*Refer to the Cable Glands Installation Instructions


EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	POWER-TAKE-OFF CONTROL				1x1	PTO control		58		PTO control	Power-take-off engaged
	FOOTVALVE CONTROL				1x1	Footvale		64	24VDC	Footvalve	24VDC= opening
	PRODUCT RETURN CONTROL				3 to 6x1	PR1	1	65	24VDC	Return_1	Depending on configuration: direct connection or via plexmi electronic board. See the assignment table and the connection table of the relevant plexmi board (page 19)
						PR2	2	66		Return_2	
						PR3	3	67		Return_3	
						Drain		68		Drain control	
	INJECTOR 1 CONTROL					Supply		71	NO free contact	Injector 1 control	Closed contact=additivation (Output: NO free potential relay)
						Control		72			
						0V		70	0V	0V (GND)	
	HOSE 2							63	24VDC	Hose 2 control	Outputs Field Effect Transistor 24V 5W max.: applicable to any 24VDC- output (from 61 to 69 and from 73 to 79)
	HOSE 1							75	24VDC	Hose 1 control	
	LOW FLOWRATE							79	24VDC	Low flow control	
	HIGH FLOWRATE							74	24VDC	High flow control	
								80	0V		
	POWER-TAKE-OFF					PTO	1	61	24VDC	PTO	
	STOP MOTOR					Stop Mot.	2	62	24VDC	Stop motor	
	ACCELERATION MOTOR					Acc. Mot.	3	73	24VDC	Motor acceleration	
	DECLUTCHING					Declut.	4	76	24VDC	Declutching	
	START MOTOR					Start Mot.	5	77	24VDC	Start motor	
	MANIFOLD VENT VALVE CONTROL				1x1	Vent valve		78	24VDC	Vent valve control	24VDC=opening
SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD											
<i>*Refer to the Cable Glands Installation Instructions</i>											

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	
	This document is available at www.alma-alma.fr	
		Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
		Page 18/41

Connection of the network board – Ethernet, RS232/485, CANBus

Connection to the Ethernet network:

- With the RJ45 connector according to the EIA/TIA-568 standard
- Or with the screw-terminal: see details in the table below.

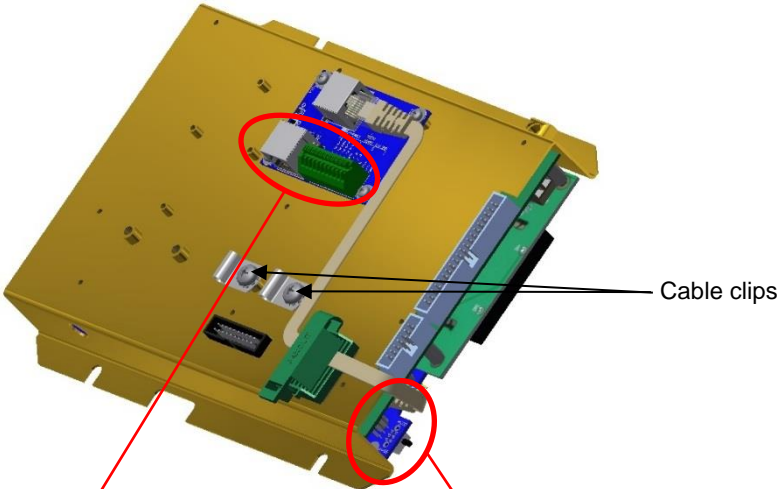

Cable clips

RS232 or RS485 Switch

Ethernet RJ45

NETWORK BOARD

NETWORK CONNECTION TYPE								NETWORK BOARD			
Option	Connection	Cable (for information)				Function	Coulor or No.	Coulor	Function	Observation	
		No.	CG*	Alma	Type						
	ETHERNET NETWORK						Vt/Bc	Tx+	Ethernet	Or connection with RJ45 according to EIA/TIA-568	
							Vt	Tx-			
							Or/Bc	Rx+			
							Or	Rx-			
	RS232 or RS485						Tx / A	RS232 or RS485	Depending on the switch configuration See above		
							Rx / B				
							GND				
	CANBus NETWORK						CAN+	CANBus			
							CAN-				
							GND				

**Refer to the Cable Glands Installation Instructions*

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 19/41

Terminal assignment of the extension board "sonde AD" 5 wires (IS)

EXTENSION BOARD SONDE AD 5 wires (IS)

BN1




NT IN ATEX 510 C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								EXTENSION BOARD SONDE AD (IS)			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE	C7			[6x1]	Common	[Nr]	5	-	Overfill prevention probes	[If cable are supplied by ALMA]
						Supply	[Rg]	6	+		
						From probe	[Or]	7	From probe		
						To probe	[Jn]	8	To probe		

*Refer to the Cable Glands Installation Instructions

Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):

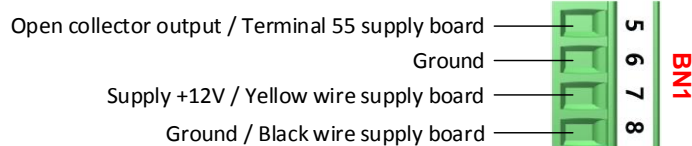

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 EN C
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 20/41

Terminal assignment of the extension board "sonde AD" 2 wires (IS)

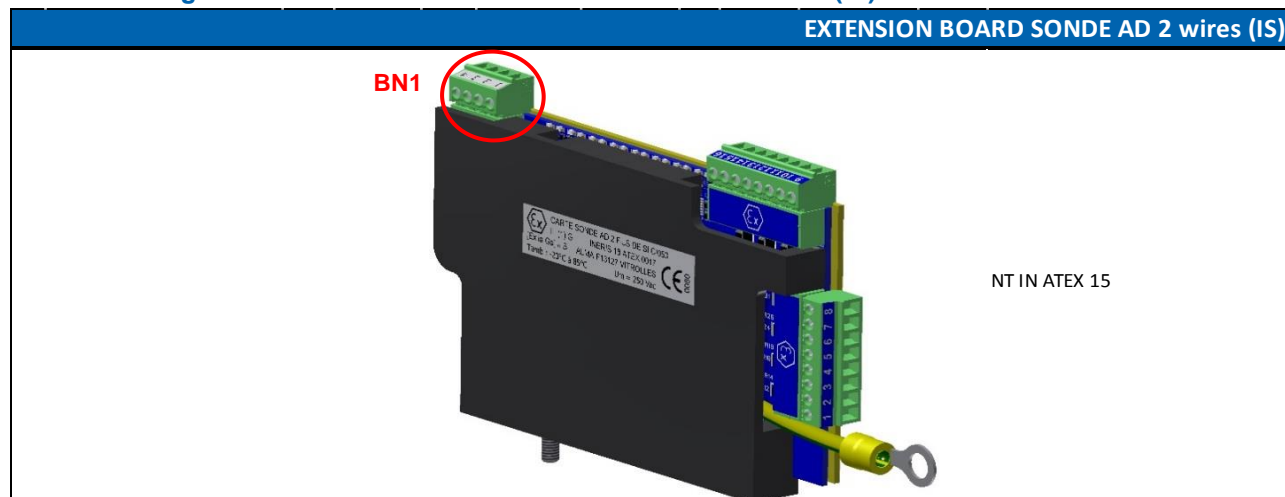

EQUIPMENT CONNECTED TO THE MICROCOMPT+							EXTENSION BOARD SONDE AD (IS)				
Option	Equipment	Cable (for information)				Function	Terminal	Function		Colour	Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE 1					Supply	1	Supply +	SIGNAL PROBE 1	Mr	
						Common	2	Common		Bc	
•	OVERFILL PREVENTION PROBE 2					Supply	3	Supply +	SIGNAL PROBE 2	Rg	
						Common	4	Common		Bc	
•	OVERFILL PREVENTION PROBE 3					Supply	5	Supply +	SIGNAL PROBE 3	Or	
						Common	6	Common		Bc	
•	OVERFILL PREVENTION PROBE 4					Supply	7	Supply +	SIGNAL PROBE 4	Jn	
						Common	8	Common		Bc	
•	OVERFILL PREVENTION PROBE 5					Supply	9	Supply +	SIGNAL PROBE 5	Vt	
						Common	10	Common		Bc	
•	OVERFILL PREVENTION PROBE 6					Supply	11	Supply +	SIGNAL PROBE 6	Bl	
						Common	12	Common		Bc	
•	OVERFILL PREVENTION PROBE 7					Supply	13	Supply +	SIGNAL PROBE 7	Vi	
						Common	14	Common		Bc	
•	OVERFILL PREVENTION PROBE 8					Supply	15	Supply +	SIGNAL PROBE 8	Gr	
						Common	16	Common		Bc	


*Refer to the Cable Glands Installation Instructions

- This extension board only works with two-wire optic overfill prevention probes.
- A Dummy device is a two-wire dry probe simulator. Channels that are not connected to overfill prevention probes must be connected to a Dummy device. None of the 8 channels must be open.




- Do not install the Dummy into the MICROCOMPT housing.
- If the MICROCOMPT is off, the probes and the Dummy device shall be electrically isolated.

Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):

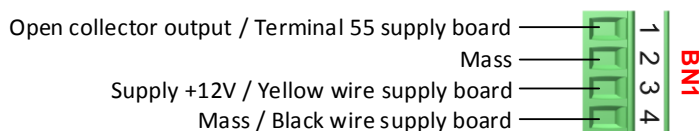

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 21/41

5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX

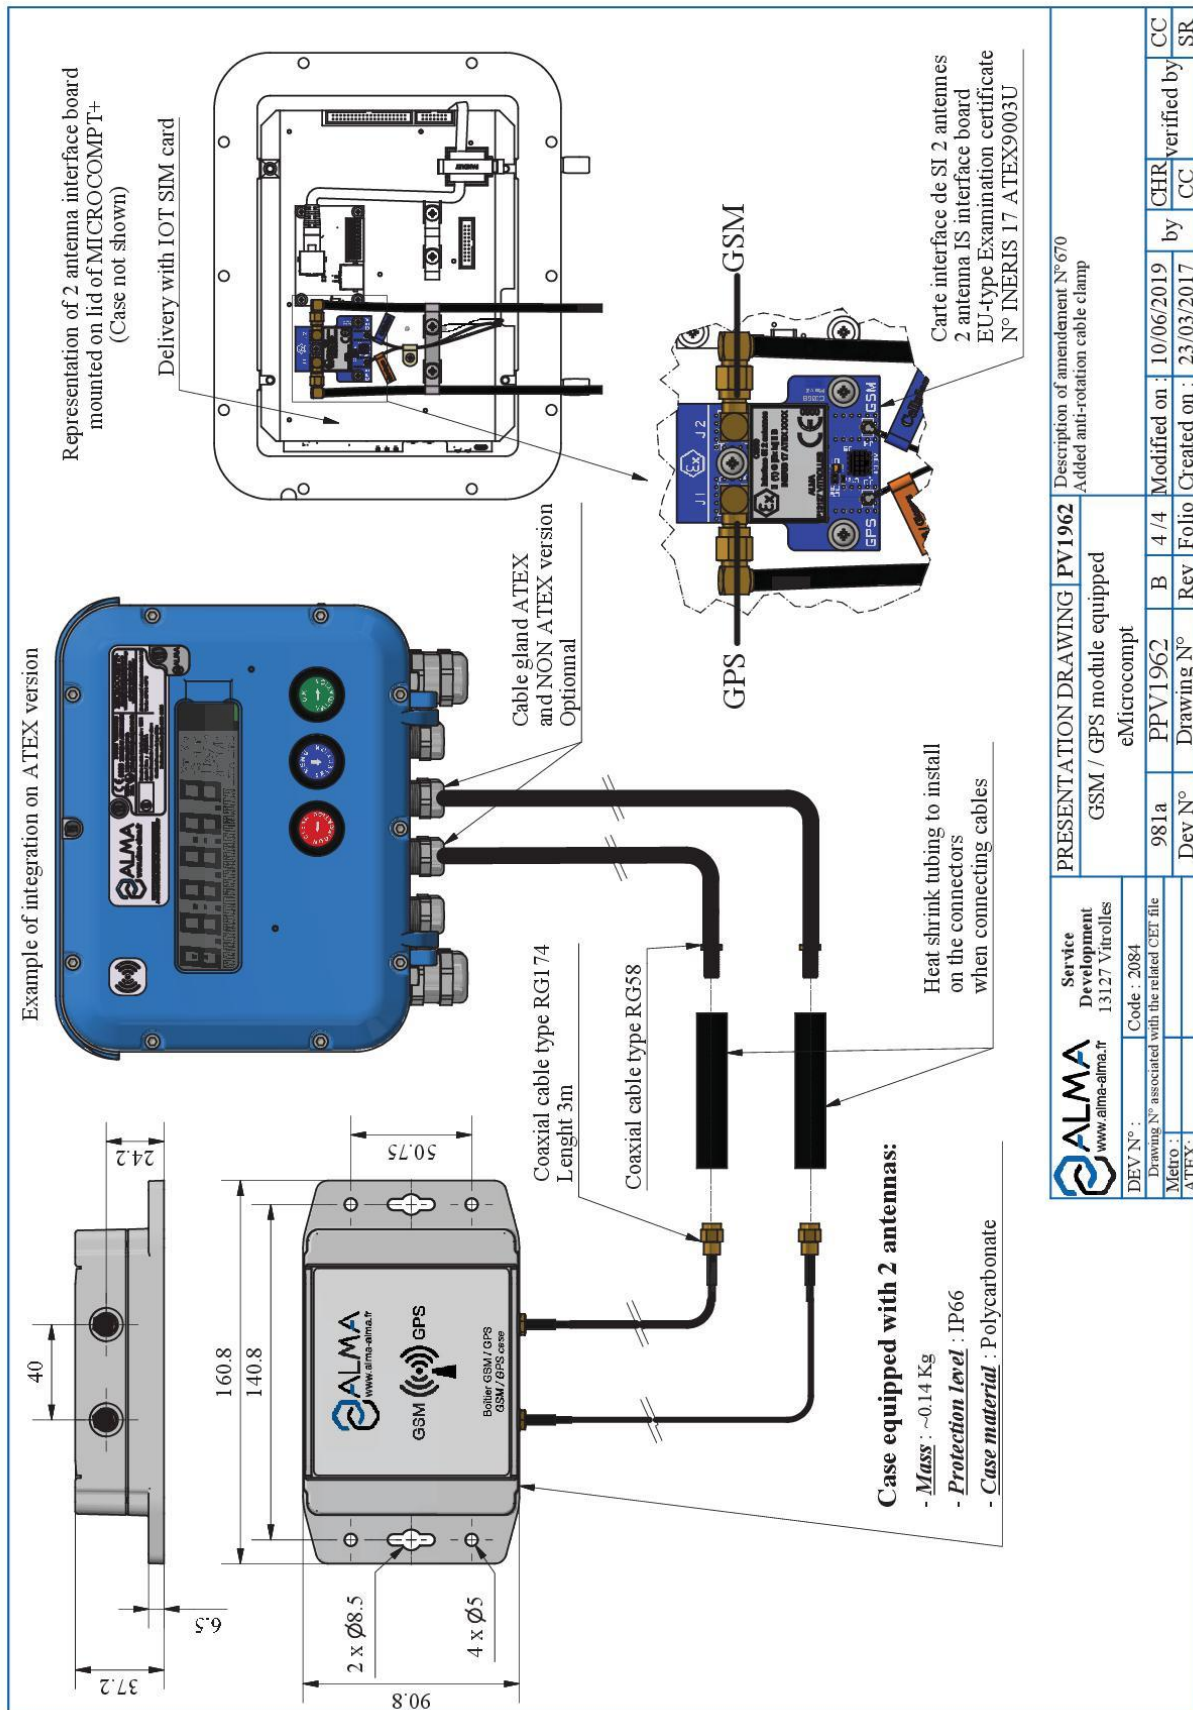

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 22/41




ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p align="center">INSTALLATION GUIDE DI 021 ENC</p> <p align="center">ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx</p>	<p><u>Units of measure:</u></p> <p>Length: mm</p> <p>Angle: degree (° + ' + ")</p> <p>Temperature: °C</p>
	<p align="center">This document is available at www.alma-alma.fr</p>	<p align="right">Page 23/41</p>

Mounting of the GSM/GPS cables into the cable glands

ALMA connects the GSM and GPS antenna to the MICROCOMPT+ (2-antenna board).



At the outlet of the MICROCOMPT+ box, you must pass both cables through cable glands. In case of an ATEX MICROCOMPT+, cable glands must be ATEX.

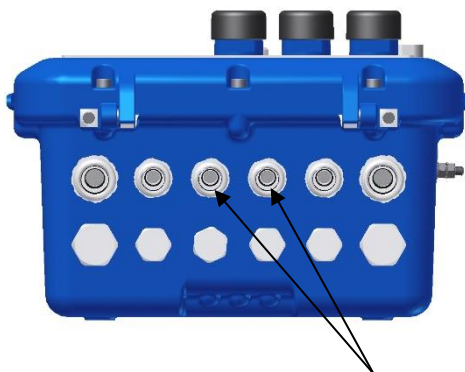

RECOMMENDED CABLE GLANDS
(FOR INFORMATION ONLY)

Into the MICROCOMPT+, adjust the cable length to easily open and close the cover.
Tighten both cable glands.

Wiring of the 2-antenna box to the MICROCOMPT+

Fasten the box. You must install it in an area free of metallic cover to have a good reception and broadcasting of signal. You can install the box in a horizontal or vertical position.

Put each coaxial cable through the heat shrink sleeve.

Plug the RG58⁽¹⁾ cable from the MICROCOMPT+ with the RG174⁽²⁾ cable from the antenna box and tighten them. Isolate the male/female SMA connectors with the supplied heat shrink sleeve (both antennas in the box are the same, cables don't have to be labelled).

Position and heat up the sleeve on the connectors to prevent corrosion and humidity.



WARNING: The cables of this box can be **neither shortened nor extended**

⁽¹⁾ RG58: Semi-rigid coaxial cable, 5mm diameter

⁽²⁾ RG174: Flexible coaxial cable, 2.7mm diameter

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 EN C
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 24/41

5.4. ELECTRICAL WIRING SPOOL VALVE CONTROL

Terminal assignment of the power supply board

POWER SUPPLY BOARD

EQUIPMENTS CONNECTED TO THE MICROCOMPT+

POWER SUPPLY BOARD

Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	SPOOL VALVE CONTROL					High flow		74	EV HF	Spool valve	
						Authorization		79	EV Autor.		

*Refer to the Cable Glands installation instructions

*Refer to the Cable Glands installation instructions

Terminal assignment of the relay extension board

RELAY EXTENSION BOARD (used to control a minimum 5W spool valve)

EQUIPEMENT CONNECTED TO THE MICROCOMPT+								RELAY EXTENSION BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal			Observation
		No.	CG*	Alma	Type						
	AUTHORIZATION SOLENOID VALVE					Author.		1	NC free contact	Relay R1	Hydraulic control of hydraulic pump
								2	0V/24VDC		
								3	NO free contact		
	HIGH FLOW SOLENOID VALVE					High flow		4	NC free contact	Relay R2	High flow control of hydraulic pump
								5	0V/24VDC		
								6	NO free contact		

*Refer to the Cable Glands Installation Instructions

*Refer to the Cable Glands installation instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 EN C
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 25/41



6.2. ELECTROMAGNETIC METER PD340 C63 - 80

[illegible]


6.3. INSTALLATION RECOMMENDATIONS ELECTROMAGNETIC METER PD340




To function properly, the PD340 electromagnetic meter must be filled with liquid ; otherwise pulses are automatically generated.

To ensure a correct filling, ALMA recommends the installation of a sightglass nearby the meter.

- Turn the meter so that the identification plate is visible and accessible. The meter must be laid flat with horizontal pipe, and cable glands pointing downwards:

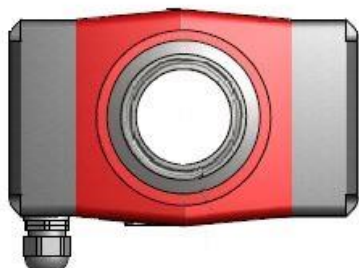

(Or optionally: the meter can be installed with vertical pipe with upward flow)

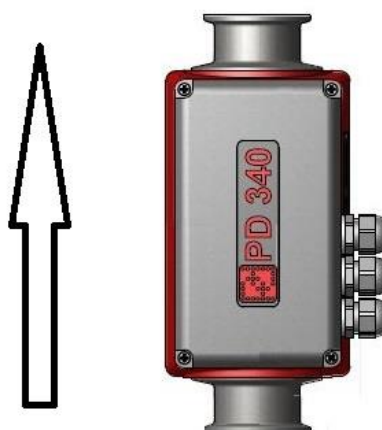

- Leave an open space all around the meter in order to ease wiring, maintenance and verification.
- In the unique situation using very hot products with large flowrate, the meter must be installed between straight pipe sections which length is at least equal to 3 times the nominal diameter of the meter. This is aimed at avoiding cavitation problems.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 28/41

7. PRINTER KIT

Dimensions:

- Front view: 180 (width), 190 (height)
- Side view: 101.5 (depth)

Labels and Connections:

- Switch SW1 (under printer)
- Switch 3 ON
- D-Sub connector 25 pin female
- 24Vdc connector

Warnings:

- DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE, AND PROTECT IT FROM VIBRATIONS AND FROM WATER PROJECTIONS.
- IF IT'S NOT IN THE TRUCK CABIN, THE PRINTER MUST BE INSTALLED IN A TIGHT BOX IN ORDER TO FACILITATE INTRODUCTION AND EXTRACTION OF PAPER.

Technical data:

- Power supply : 24Vdc $\pm 10\%$
- Current consumption (at 24V) :
 - Mean : approx. 600mA
 - Peak : approx. 5.5A
- Standby : approx. 100mA
- Temperature : $+5^{\circ}\text{C}$ to $+40^{\circ}\text{C}$
- Mass: 1.6 kg

Service Development:

ALMA
www.alma-alma.fr

DEV N° : 907 Code : 6176

Drawing N° associated with the related CET file

Metro : - - -

Presentation Drawing: PPN901 Flatbed printer TM-U295

Description of the amendment: N° :



Removing the wiring

Modified on : 11/01/2019
Created on : 24/03/2010

by : CC EG
verified by : SR VS

7.1. INSTALLATION RECOMMENDATIONS PRINTER

- The printer must be installed in a tight box and be laid out so as not to obstruct the introduction/extraction of sheet of paper (Dimension D).
- Do not store anything above the printer.
- Leave an open space all around the printer to ease maintenance.
- Dimensions: $A \geq 50\text{mm}$, $B \geq 100\text{mm}$, $C \geq 120\text{mm}$.

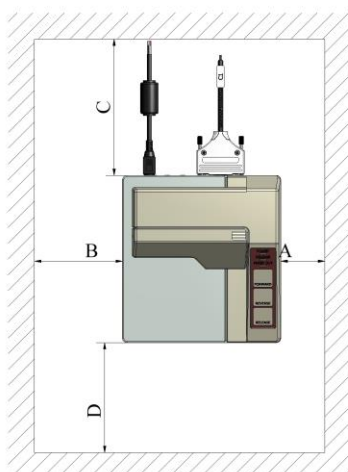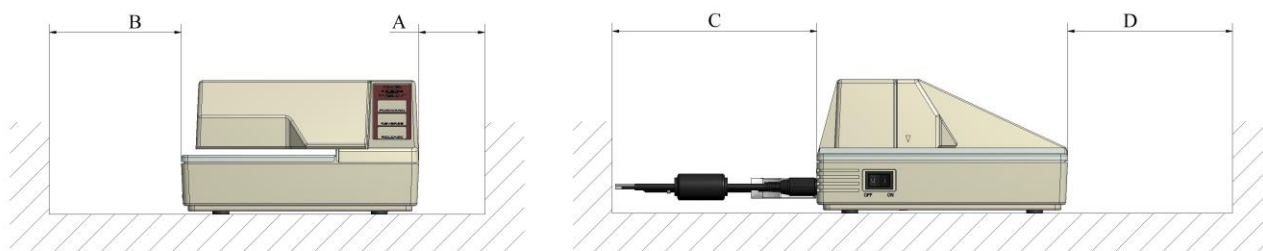

DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE.
PROTECT IT FROM VIBRATIONS AND WATER PROJECTIONS.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 30/41

7.2. ELECTRICAL WIRING PRINTER


Supply cable

PRINTER SUPPLY CABLE



CONVERTER 220VAC/24VCC					PRINTER	
Option	Equipment	Function	Colour		Function	Observation
•	CONVERTER 220VCC/24VDC	24VDC	Nr	White- coated (Bc)	PRINTER SUPPLY	Cable: 2x9mm2 External diameter: 5mm Length : 1,50m
		0V	Bc	Red- coated (Rg)		
		Shielding	Braid			

Serial link cable

PRINTER SERIAL LINK CABLE										
										
								PRINTER		
Option	Equipment	Cable (for information)				Function	Colour or No.	Colour	Function	Observation
		No.	CG*	Alma	Type					
					ADR 4x0.34 sh.			Bc	Rx	PRINTER SERIAL LINK External diameter: 5.4mm Length: 10m or 25m
								Mr	Tx	
								Vt	0V	
								Jn	Not used	
								Braid	Shielding	

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C


Page 31/41

8. CONVERTER 24VDC/24VDC 2.1A 50W

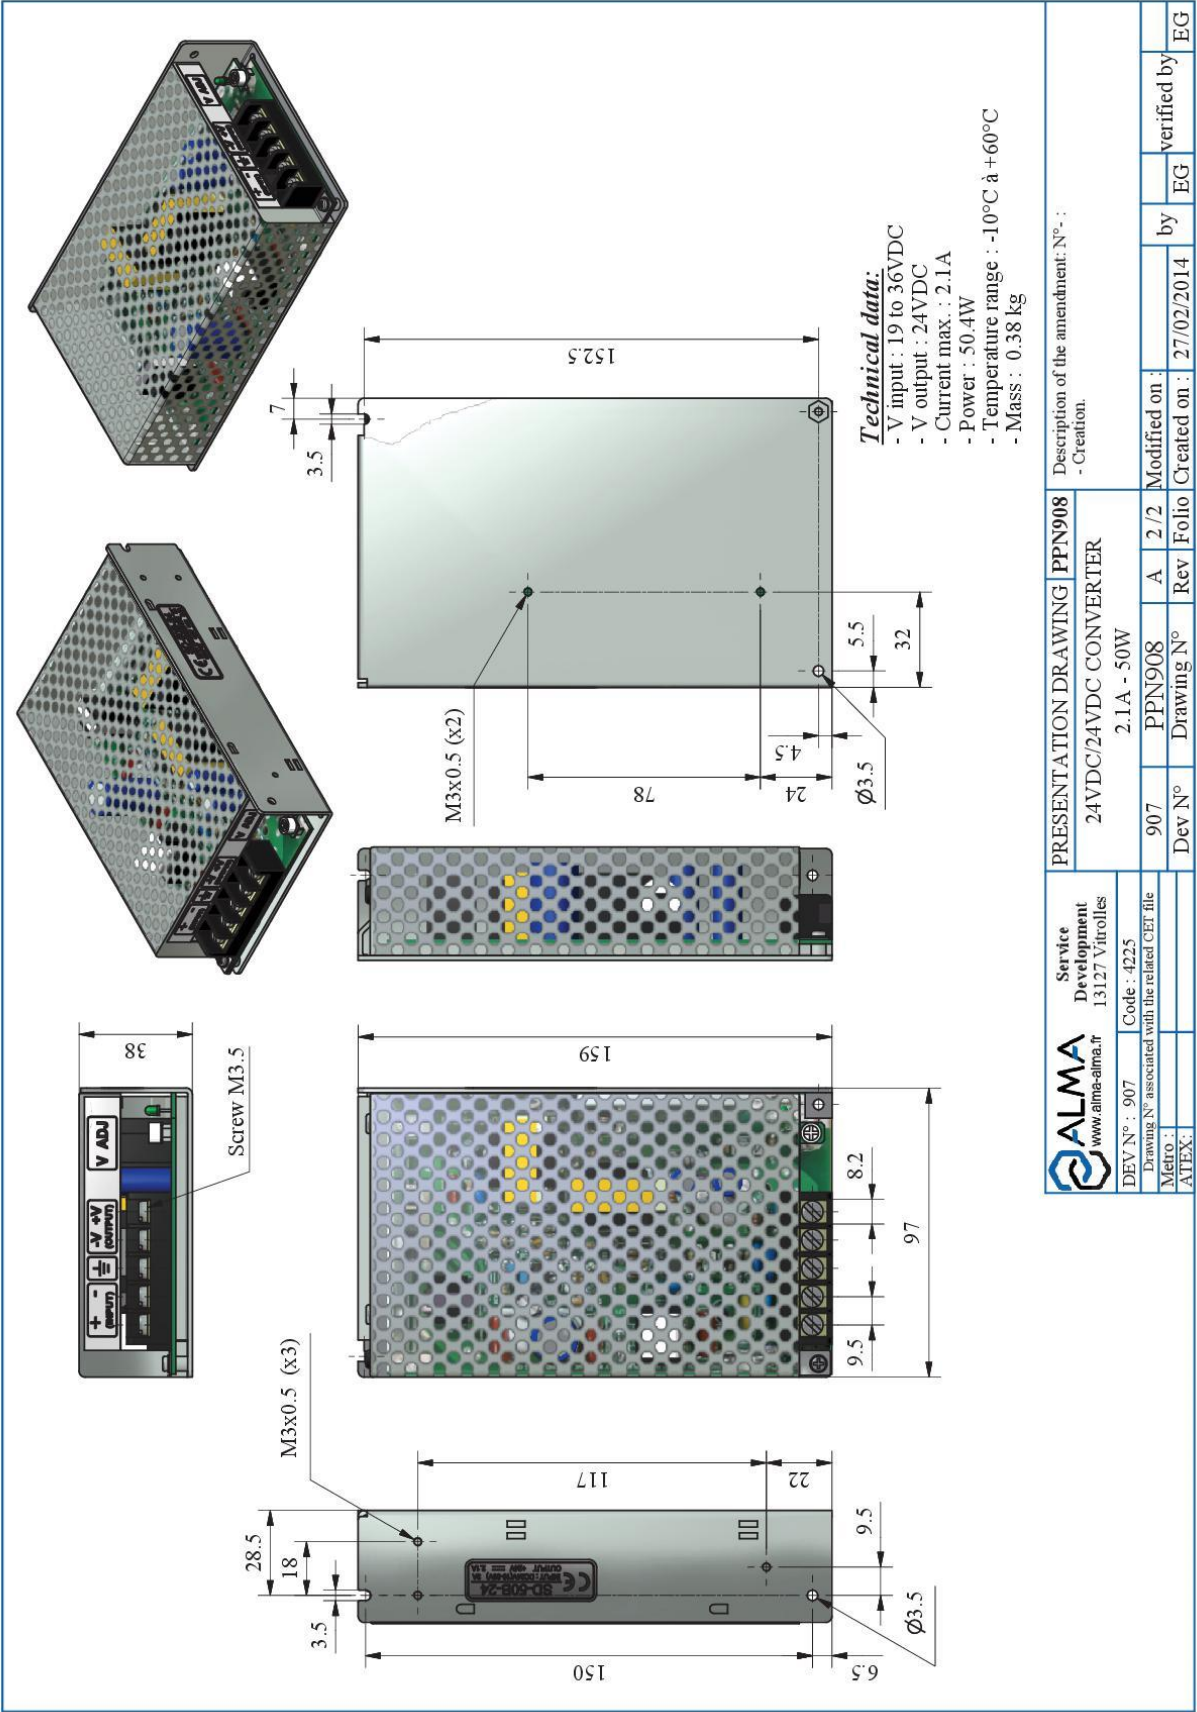

Document available on website www.alma-alma.fr

9. NON-RETURN VALVE KIT DN50 OR DN80

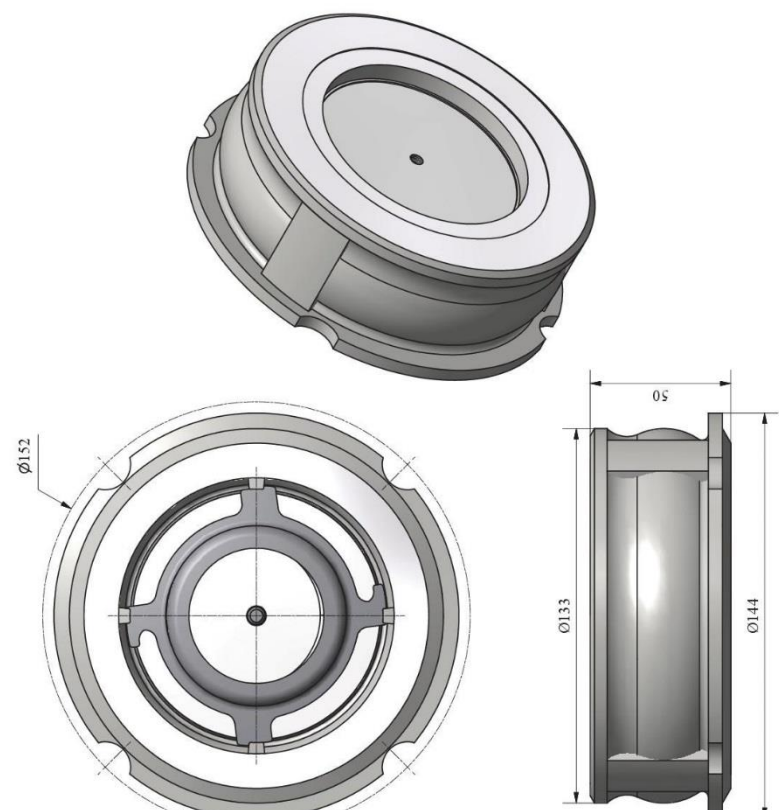

4 screws CHC M8 x 80 including 2 screws drilled for sealing

Ø152

Ø133

144

50

- **Mass** : ~ 2,5 Kg
- **Material** : Inox 316L
- **Operating temperature** : -10°C to +350°C
- **Permissible operating pressure** : 40 bar
- **Maximum permissible pressure** :
 - Liquid 1 : 25 bar
 - Gas 1 : 12 bar
 - Liquid 2 : 40 bar
 - Gas 2 : 40 bar
- **Pressure drop** : 0.2 bar at 50 m³/h
- **Mounting** : Between downstream flange of the turbine
- **Tightness** : Flat gasket
- **Standards** :
 - CE conformity directive 97/23/CE
 - CE ATEX conformity directive 94/9/CE

ALMA Service Development www.alma-alma.fr		Kit non return valve, calibrated at 0.3 bar Adriane DN80 24X		Description of amendment N°	
Nat	Code : 87508	Dev N°	905a	Modified on	29/03/2016
Tol : ± 0.2	Drawing N° associated with the related CEI file	Drawing N°	PV1908	Rev	Folio
Metro : ATEX					
				by	CC
				verified by	SR



4 screws CHC M8 x 80 including 2 screws drilled for sealing

Ø108

Ø88.9

98.3


40

2

- **Mass** : ~ 1 Kg
- **Material** :
 - Valve : Inox 316L
 - Flat gasket : KINGLERSIL
- **Operating temperature** : -10°C to +350°C
- **Permissible operating pressure** : 40 bar
- **Maximum permissible pressure** :
 - Liquid 1 : 40 bar
 - Gas 1 : 20 bar
 - Liquid 2 : 40 bar
 - Gas 2 : 40 bar
- **Pressure drop** : 0.4 bar at 25 m³/h
- **Mounting** : Between downstream flange of the turbine
- **Tightness** : Flat gasket
- **Standards** :
 - CE conformity directive 97/23/CE
 - CE ATEX conformity directive 94/9/CE


ALMA Service Development www.alma-alma.fr		Kit non return valve Adriane DN50 24X		Description of amendment N°	
Nat	Code : 6932	Dev N°	902	Modified on	29/03/2016
Tol : ± 0.2	Drawing N° associated with the related CEI file	Drawing N°	PV1909	Rev	Folio
Metro : ATEX					
				by	CC
				verified by	SR

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	
	This document is available at www.alma-alma.fr	
		Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
		Page 33/41

9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

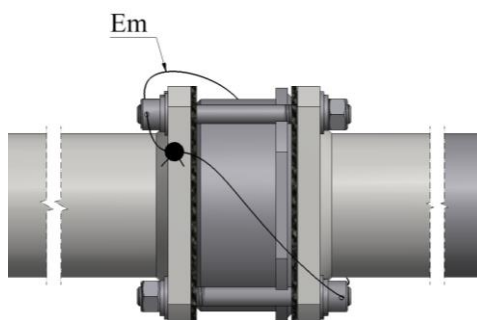

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 021 EN C ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 34/41

10. SIGHTGLASS KIT DN50 OR DN80

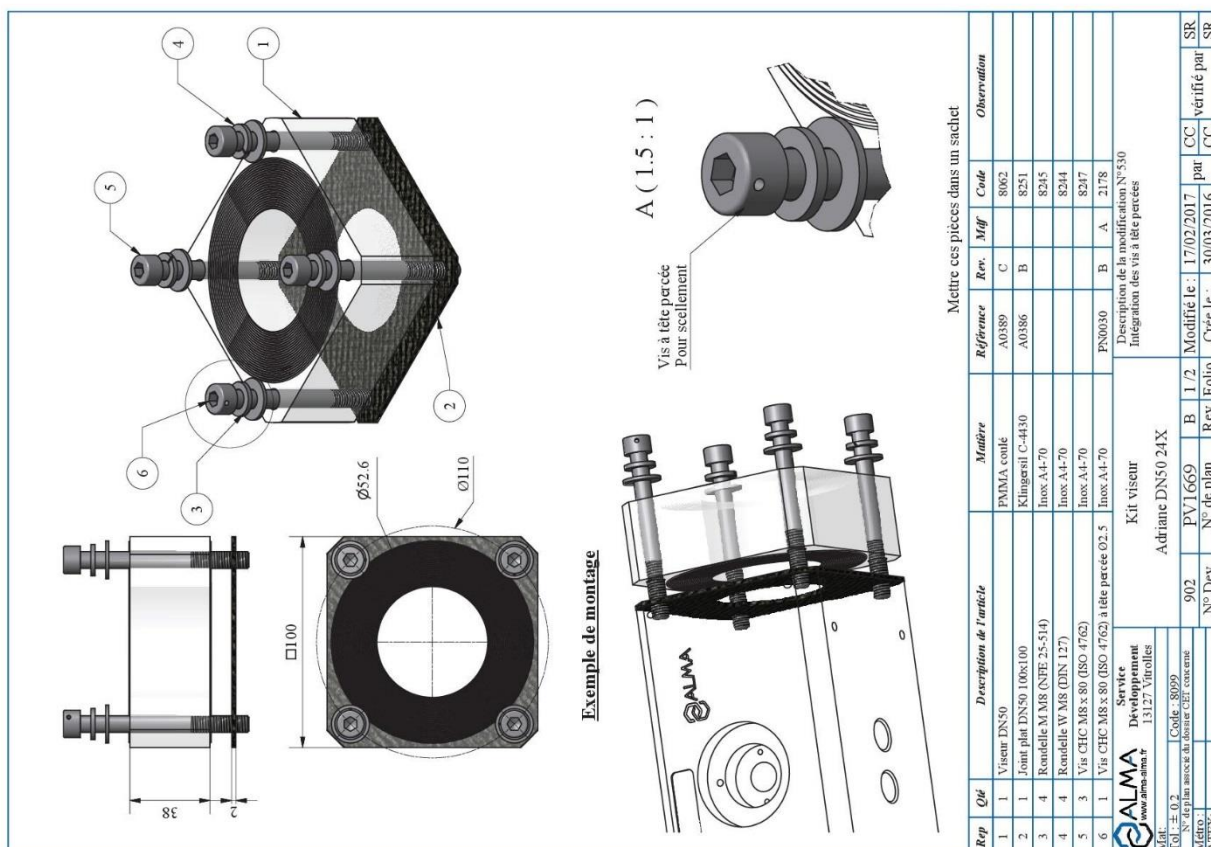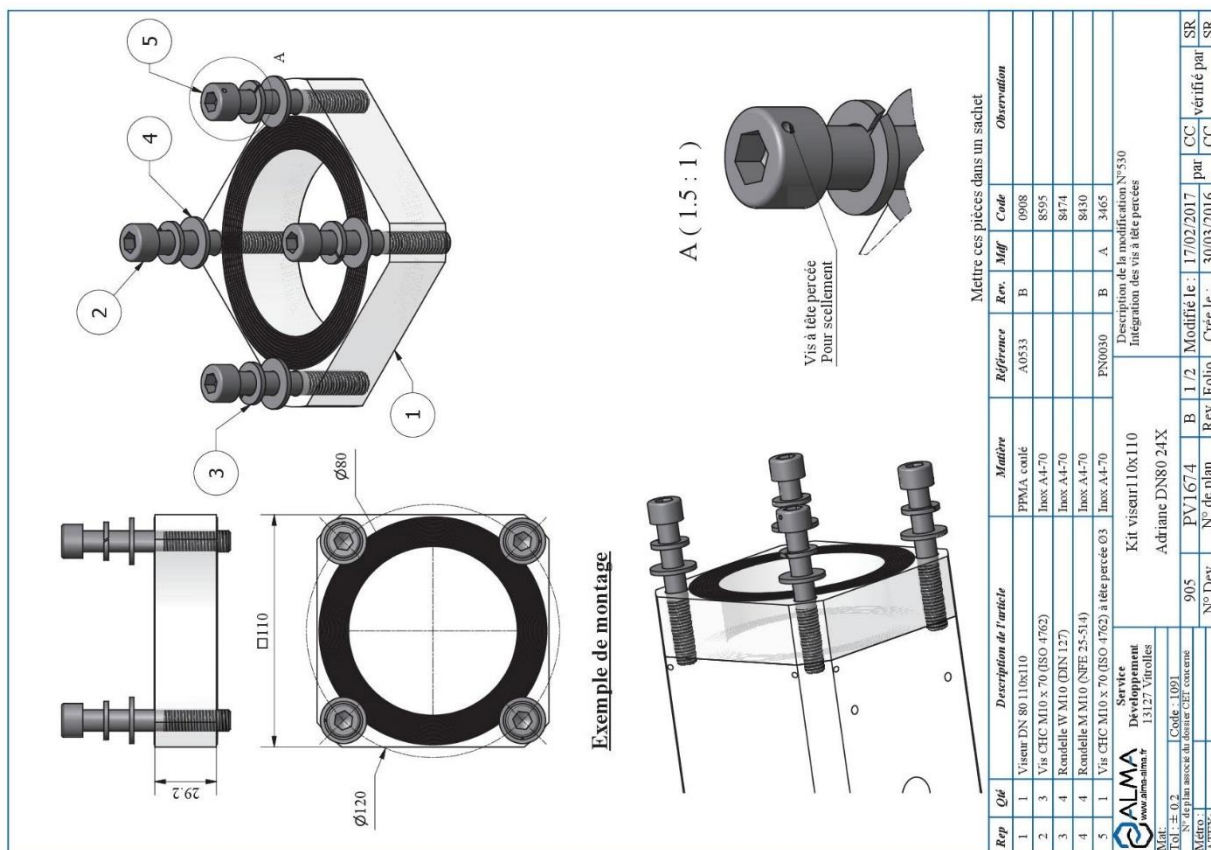

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 ENC
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 021 EN C
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx


Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C

This document is available at www.alma-alma.fr

Page 36/41

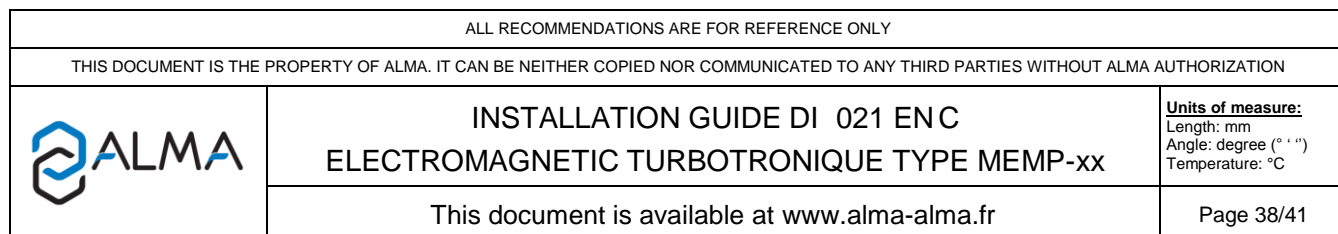

12. TEMPERATURE PROBE Pt100 – CT1001 ATEX

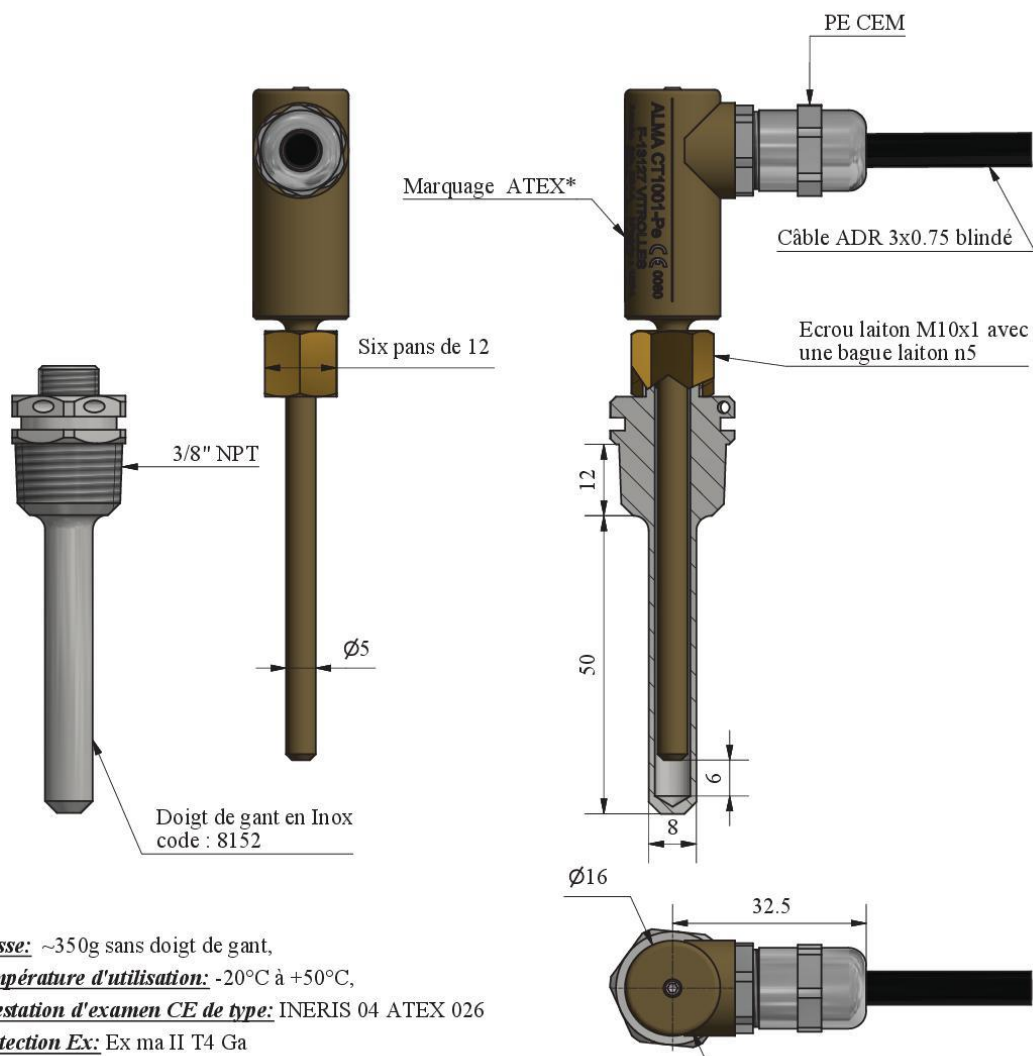

PE CEM
 Câble ADR 3x0.75 blindé
 Ecrou laiton M10x1 avec une bague laiton n5
 Marquage ATEX*
 Six pans de 12
 3/8" NPT
 Doigt de gant en Inox code : 8152
 Ø5
 12
 50
 6
 8
 Ø16
 32.5

- **Masse:** ~350g sans doigt de gant,
- **Température d'utilisation:** -20°C à +50°C,
- **Attestation d'examen CE de type:** INERIS 04 ATEX 026
- **Protection Ex:** Ex ma II T4 Ga

Le corps du capteur est en alliage d'aluminium anodisé de couleur bronze;
 La bague et l'écrou sont en laiton.
 La sonde peut être montée soit sur un doigt de gant ALMA soit sur un raccord à bague 1/4" BSP mâle (filetage M10x1 n5).
 Il est conseillé de graisser les parties en contact avec le doigt de gant ou le bossage avant le montage pour éviter les phénomènes de corrosion.


Caractéristiques de la PT100 :

- 3 fils
- 1/3 DIN


Certification ATEX "ma".
 Pour l'installation et l'utilisation en atmosphère explosible, voir la Notice d'instruction

Existe aussi en version sortie sur connecteur suivant IEC 60947-5-2


Fonction	Repère sur le fil	Couleur de
PT100/1	1	Jaune
PT100/2	2	Blanc
PT100/3	3	Vert

 Service Développement 13127 Vitrolles	PLAN DE PRESENTATION		DFV042		Description de la modification N°662 : Suppression de l'exigence des 5mm apparents sur le câblage				
	Sonde de température		CT1001-Pe						
	N° de DEV : 949d	Code : 8151	949d	PPV042	L	4 / 6	Modifié le :	29/03/2019	par CHR
	N° de plan associé du dossier CET concerné								
Métro :			N° Dev	N° de plan	Rev	Folio	Crée le :	13/09/2003	par BM
ATEX :		INERIS 04 ATEX 0026							BM

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 021 ENC ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx	Units of measure: Length: mm Angle: degree (° ' ' ') Temperature: °C
	This document is available at www.alma-alma.fr	Page 39/41


12.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE

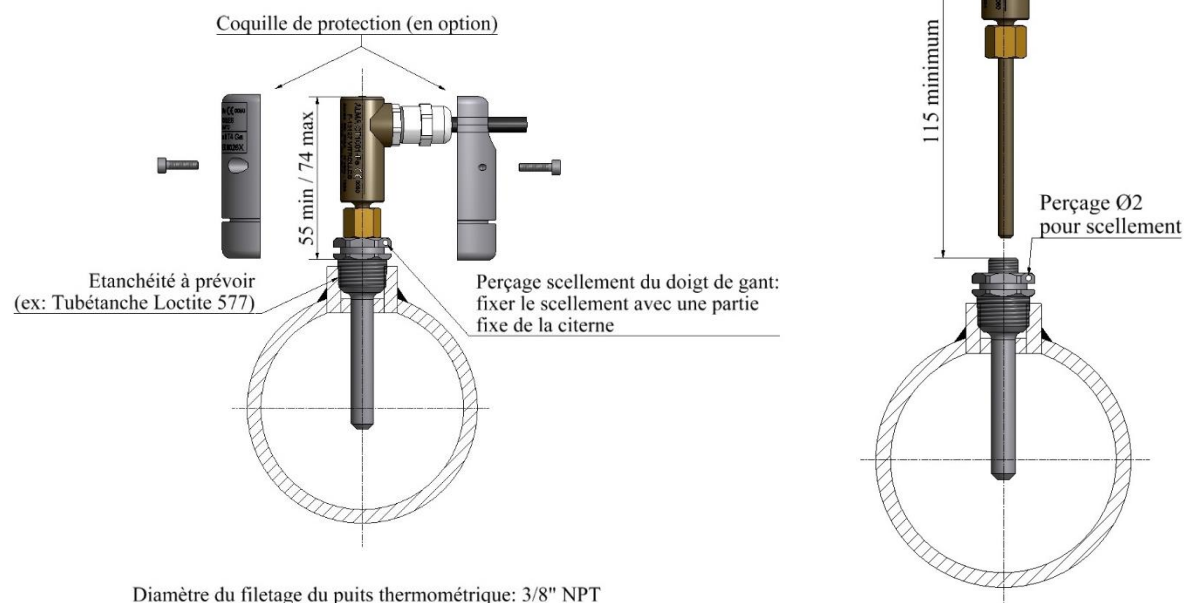

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

13. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

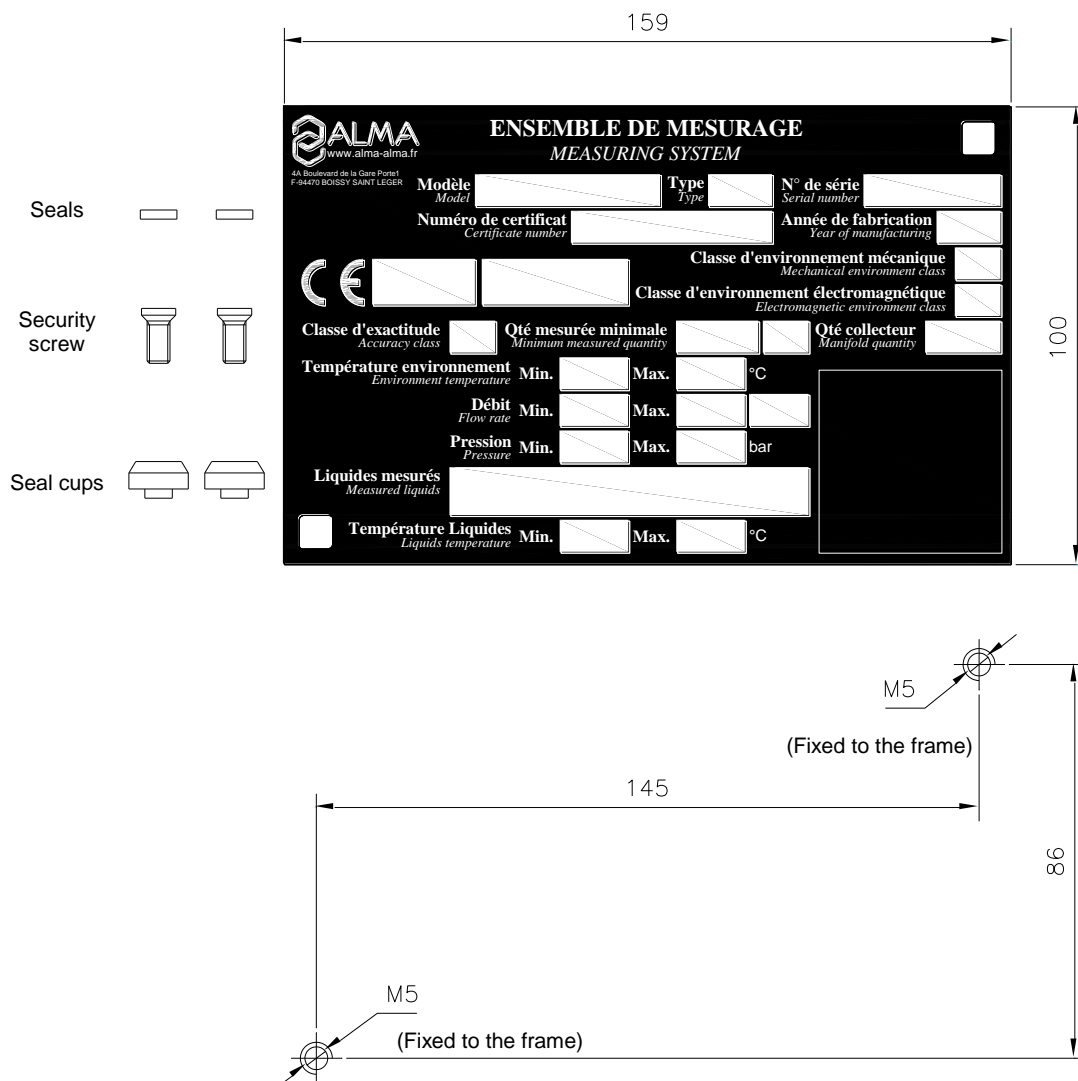

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 021 EN C
ELECTROMAGNETIC TURBOTRONIQUE TYPE MEMP-xx

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 41/41