

INSTALLATION GUIDE

DI 020 EN D

TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

Described in EU-type examination certificate N°: LNE-26664



D	2021/05/19	I/O modification for new software platform, New CPR3000 pressure sensor, Update of drawings	DSM	FDS
C	2018/10/30	New FORM DOC for connectivity [PJA074], Flow valves and authorization wiring, Drawings update	DSM	MV
A	11/09/2017	Creation [PJY126]	DSM	PJ
Issue	Date	Nature of modifications	Written by	Approved by

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 1/46

CONTENTS

1. GENERAL RECOMMENDATIONS.....	4
1.1. MECHANICAL RECOMMENDATIONS	4
1.2. ELECTRICAL RECOMMENDATIONS	5
1.3. PNEUMATIC RECOMMENDATIONS	7
2. GENERAL PRESENTATION	8
2.1. USE ACCORDING TO MID CERTIFICATE	8
2.2. SPECIAL CONDITIONS FOR INSTALLATION	8
3. PART LIST	9
4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM.....	11
5. MICROCOMPT+ TURBOTRONIQUE NON ATEX OR ATEX.....	13
5.1. CALCULATOR-INDICATOR MICROCOMPT+ NON ATEX.....	13
5.2. CALCULATOR-INDICATOR MICROCOMPT+ ATEX	14
5.3. INSTALLATION RECOMMENDATIONS REMOTE CALCULATOR-INDICATOR MICROCOMPT+	15
5.4. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+.....	16
Terminal assignment of the power supply board.....	17
Connection of plexmi electronic boards for manifold flaps and product returns	20
Connection of the network board – Ethernet, RS232/485, CANBus	22
Terminal assignment of the extension board “sonde AD” 5 wires (IS)	23
Terminal assignment of the extension board “sonde AD” 2 wires (IS)	24
5.5. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX.....	25
Mounting and wiring of the GSM and GPS antennas.....	26
Mounting of the GSM/GPS cables into the cable glands.....	27
Wiring of the 2-antenna box to the MICROCOMPT+	27
5.6. ELECTRICAL WIRING SPOOL VALVE CONTROL	28
Terminal assignment of the power supply board.....	28
Terminal assignment of the relay extension board.....	28
6. ADRIANE TURBINE METER.....	29
6.1. ADRIANE TURBINE METER DN50-50 243 100x100.....	29
6.2. ADRIANE TURBINE METER DN80-80 243 110x110.....	30
6.3. ADRIANE TURBINE METER DN80-80 373 PN16 Ad BLUE®.....	31
6.4. INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER.....	32
6.5. CONNECTION KIT ADRIANE DN50 OR DN80	33
7. PRINTER KIT	34
7.1. INSTALLATION RECOMMENDATIONS PRINTER	35
7.2. INSTALLATION RECOMMENDATIONS PRINTER	36
Supply cable	36
Serial link cable.....	36
8. CONVERTER 24VDC/24VDC 2.1A 50W	37
9. NON-RETURN VALVE KIT DN50 OR DN80.....	38
9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80	39
10. SIGHTGLASS KIT DN50 OR DN80.....	40
10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80.....	41

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

 ALMA	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 2/46

11. CONTROL OF THE PUMP	42
11.1. PNEUMATIC DIAGRAM HIGH FLOW CONTROL OF THE BY-PASS	42
11.2. HYDRAULIC SPOOL VALVE CONTROL DIAGRAM	43
12. TEMPERATURE PROBE PT100 – CT1001 ATEX	44
12.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE.....	45
13. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE.....	46

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

 ALMA	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 3/46

1. GENERAL RECOMMENDATIONS

**IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE,
PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.**

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


1.1. MECANICAL RECOMMENDATIONS

- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment. The display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).
- ⇒  See § INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
 ALMA	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 4/46

1.2. ELECTRICAL RECOMMENDATIONS

- ⇒ According to the ATEX directive or any other regulations in force in the country of destination, the safety protection level of the equipment must agree with the installation area (potentially explosive atmospheres).
- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is doing in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment). Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).

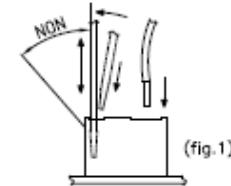

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 5/46

- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
- ⇒ Respect a homogeneous wire color code.
- ⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.
- ⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)

- ⇒ Color code according to DIN 47100.
- ⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
White	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	

1.3. PNEUMATIC RECOMMENDATIONS

- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area ($L = 100$ mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Units	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0,069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)

1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	

2. GENERAL PRESENTATION

2.1. USE ACCORDING TO MID CERTIFICATE

The measuring system TURBOTRONIQUE type MTS-xx or MTP-xx is covered by the EU type examination certificate N° LNE-26664. Refer to this certificate for any precision about its installation.
For the sealing plan, see Annex to EU type examination certificate N° LNE-26664.

2.2. SPECIAL CONDITIONS FOR INSTALLATION

- ⇒ The ALMA model TURBOTRONIQUE measuring systems should be installed on road tankers.
- ⇒ The installation of the measuring system covered by this certificate must be in conformity with the plan which is presented in § "securing and sealing" of the certificate.
- ⇒ If the measuring system is fitted with two delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.
- ⇒ The measuring system can be equipped with an additive injection device. This injection has to occur upstream of the meter. If the additive injection is situated downstream of the gas elimination device, the installation has to avoid air injection by means of positive safety detection device, sealed and placed at the low level of the additive tank, which stops injection in case of additive lack.
- ⇒ The measuring system may be fitted with OPW, ALPECO, or EMCO WHEATON product return devices, as well as with a magnetic valve for venting, associated with the wind concentrator enabling product transfers towards the compartments. This has to be installed so that no air or venting of the wind concentrator may occur during delivery.
- ⇒ If a printing device not covered by an evaluation certificate is connected to the ALMA electronic calculator-indicator, a notice stating that the data printed is not subject to legal control must be clearly printed on the delivery notes.
- ⇒ The special installation conditions of the gas elimination devices FSGB48E, SG 80.1 AL, SG 80 IN PERNIN EQUIPEMENTS and FS24 SATAM are defined in the relevant evaluation certificates.
- ⇒ It is mandatory to install a non-return valve on the pipe between the gas elimination device and the transfer point. The non-return valve may be placed and sealed upstream of the meter or downstream as well.
Otherwise, if the liquid level in the gas elimination device may be lower than the liquid level in the meter, a non-return valve has to be installed at the device outlet, or placed and sealed between the device and the meter.
- ⇒ The hose allowing gas removal at the outlet of the gas elimination device has to be non-pinchable or keep the deformation mark.
- ⇒ The special installation conditions of the meters are defined in evaluation certificates LNE-12393.


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
 ALMA	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 8/46

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ TURBOTRONIQUE WITH Bluetooth CONNECTION NON ATEX or ATEX version	1	●
		Wi-Fi CONNECTION (As an alternative to Bluetooth)		
		RFID SUPERVISOR KEY		
2	2a 	ADRIANE TURBINE METER DN50-50 or DN80-80 (Depending on configuration)	1	
	2b 	ADRIANE TURBINE METER DN80-80 373 PN16 Ad blue® (Only for TURBOTRONIQUE Adblue®)		
3		CONNECTION KIT ADRIANE DN50 OR DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	●
4		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
5		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC) (Supplied by Alma or Customer)	1	●

Non-contractual pictures


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 9/46

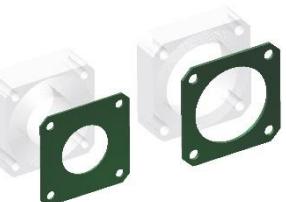EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
6		NON-RETURN VALVE KIT DN50 OR DN80 (Depending on configuration)	1	●
7		SIGHTGLASS KIT DN50 OR DN80 (Depending on configuration) (Supplied with pre-drilled screws for sealing)	1	●
8		Pt100 TEMPERATURE PROBE – CT1001-Pe ATEX (Supplied with thermowell)	1	●
9		2-ANTENNA BOX GSM AND GPS	1	●
10	 	KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	●
Option*: equipment sold as an option by ALMA. It must be installed on the measuring system if required by the certificate.				

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 10/46

4. OVERALL DRAWING OF THE TURBOTRONIQUE MEASURING SYSTEM

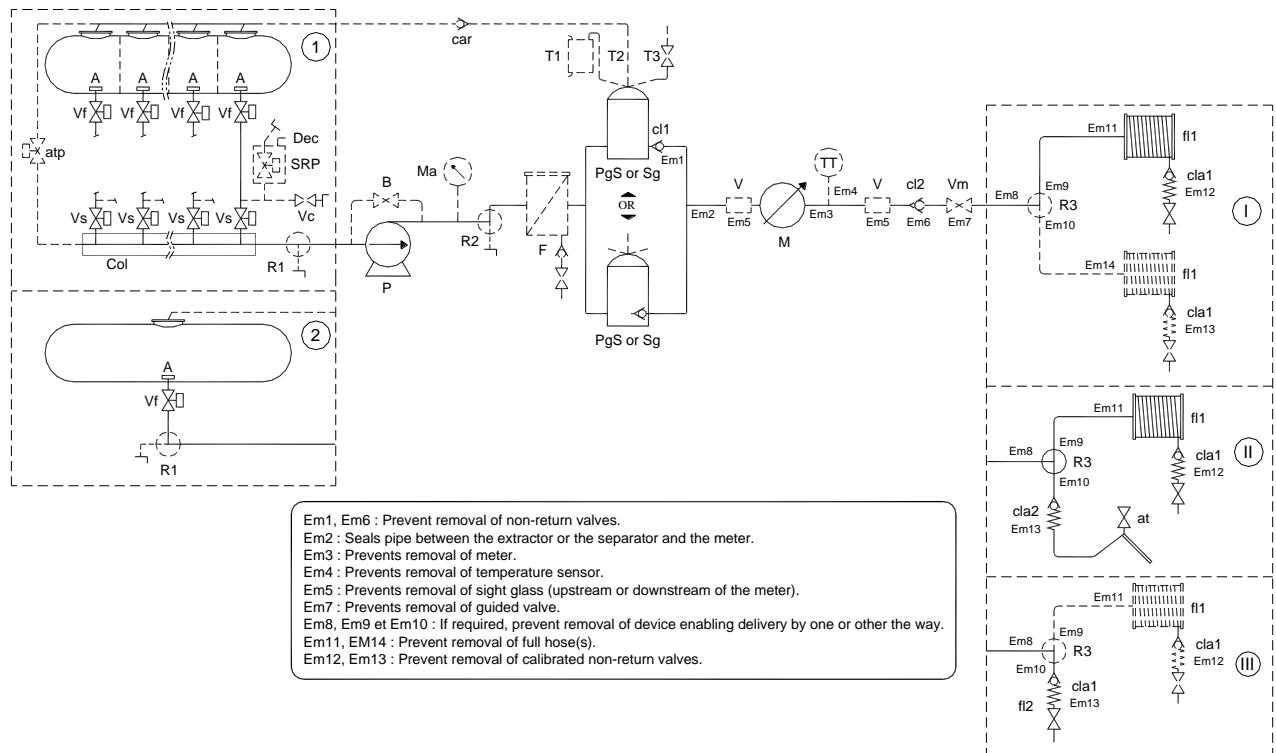

- A: Anti-swirl device.
R1: Two-way cock enabling delivery per meter, draining and filling of the tank without using the meter (optional).
P: The pump may be reversible. In that case, a non-return valve has to be added between cock R2 and gas separator Sg.
B: Pump bypass
Ma: Manometer indicating the forcing back pressure of the pump (optional).
R2: Two-way cock for pumped delivery without meter (optional).
F: Filter which, when external to the separator or the extractor, may be fitted with a draining cock.
Sg: Gas separator
PgS: Specific gas extractor.
cl1: Non-return valve (compulsory when the gas elimination device is not fitted with internal non-return valve).

T1, T2, T3: Variants authorized for gas evacuation device:

- T1: Use of a container to retrieve the liquid particles carried along by gas,
- T2: Foam going back to the tank,
- T3: Use of a valve for draining.

- car: Non-return valve on foam return (optional).
M: Meter
V: Sight glass (compulsory with a specific gas extractor (gas indicator), optional with a gas separator).
cl2: Non-return valve (optional).
TT: Temperature sensor Pt100 (optional).
Vm: Guided valve (optional).
R3: Device enabling, when the measuring system has two delivery paths, to make deliveries one or the other way.
fl1: Full hose on hose reel
fl2: Very short full hose enabling delivery with flowrate (optional).
cla1: Calibrated non-return valve preventing draining of the full hose.
cla2: Calibrated non-return valve preventing draining of the empty hose.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 11/46

I, II, III: Variant of the delivery device:

Variant I: One or two full hoses with reel,

Variant II: Combination of full hose on reel and empty hose,

Variant III: Combination of short full hose and full hose on reel, if applicable.

Vf: Valve for compartment bottom.

Col: Wind concentrator.

atp: Guided venting (optional).

Vs: Selection valve, installed on pipe of each compartment, enabling communication with wind concentrator (guided or manual).

Vc: Valve for source loading, installed on pipe of each compartment (optional).

SRP: Return Product System on one or more compartment(s) (optional).

Déc. : Decompression control (secured).

1, 2: Variants of devices associated with the tank

Variant 1: Tank with several compartments and wind concentrator,

Variant 2: Single compartment tank.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 12/46

5. MICROCOMPT+ TURBOTRONIQUE NON ATEX OR ATEX

5.1. CALCULATOR-INDICATOR MICROCOMPT+ NON ATEX



PRESENTATION DRAWING		DEV080	Description of amendment N°756 : Modification of the producer data plate + Add of desiccant bag	
Service Development	13127 Villennes	MICROCOMPT+		
Code : 0071 / 2805				
DEV N° : 973				
Drawing N° associated with the related CET file	973	PPV080	L 6/8	CHR by CC verified by BEB SR
Metro : LNE-15270/LNE-13624	Dev N°	Drawing N°	Modified on : 01/03/2021 Rev Folio Created on : 17/07/2009	
ATEX :				

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

	ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
	THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
INSTALLATION GUIDE DI 020 EN D			
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx			Units of measure:
This document is available at www.alma-alma.fr			Length: mm Angle: degree (° ° °) Temperature: °C
			Page 13/46

5.2. CALCULATOR-INDICATOR MICROCOMPT+ ATEX




Document available on website [alma-alma.fr](http://www.alma-alma.fr)



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 020 EN D		Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	TURBOTRONIQUE TYPE MTS-xx ET MTP-xx		
This document is available at www.alma-alma.fr			Page 14/46

5.3. INSTALLATION RECOMMENDATIONS REMOTE CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: A > 100mm and B > 60mm

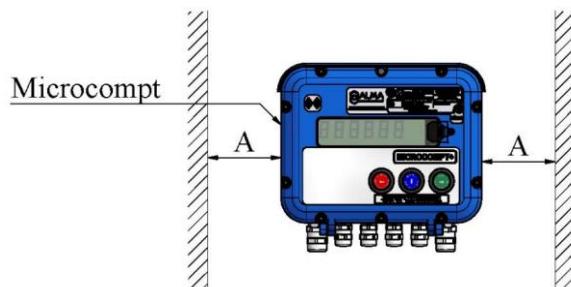

- SOLUTION 1: straight box if it's a breast height.

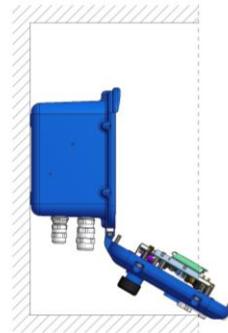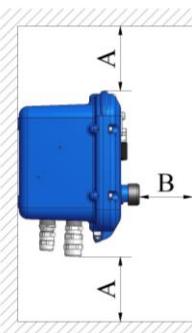Left hand view
Closed boxLeft hand view
open box

- SOLUTION 2: 20° angle if it's not at breast height.

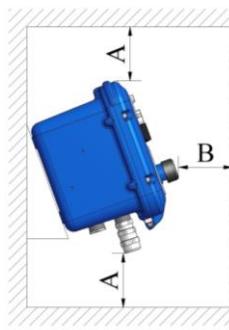Left hand view
Closed boxLeft hand view
open box

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 15/46

5.4. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+

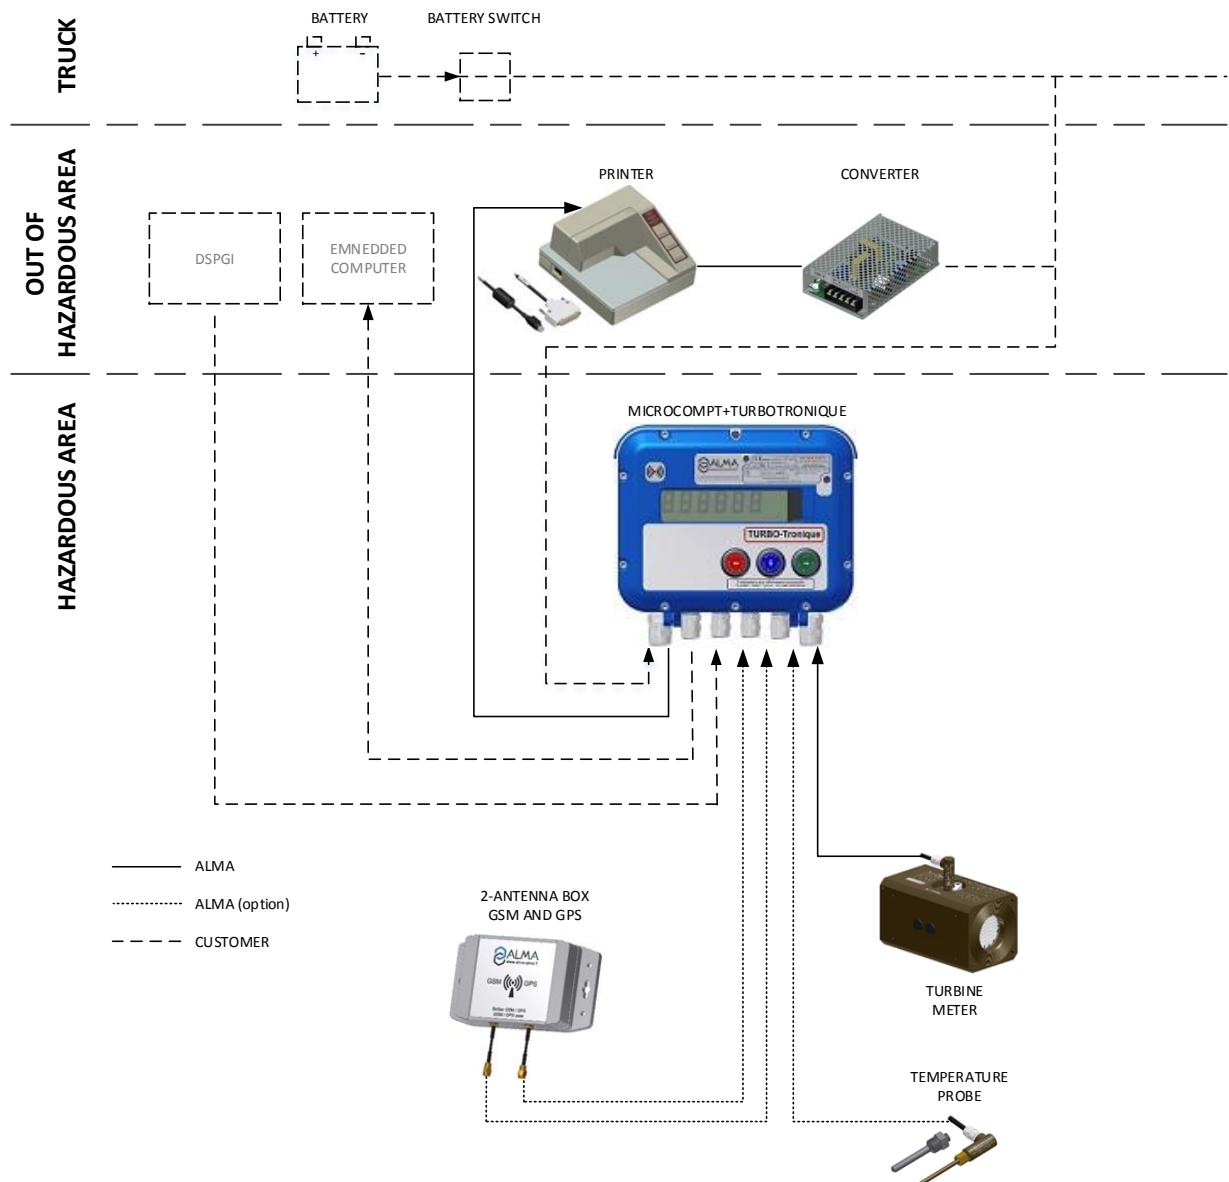

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION


	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 16/46

Terminal assignment of the power supply board

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNEMENT OF MICROCOMPT+ BOARDS

POWER SUPPLY BOARD

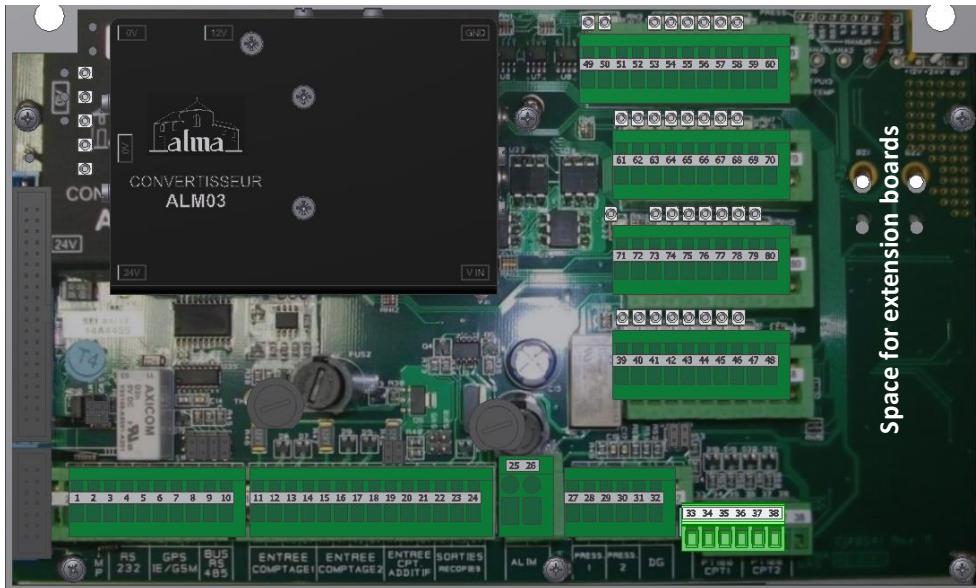

EQUIPMENTS CONNECTED TO THE MICROCOMPT+

POWER SUPPLY BOARD

Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
•	PRINTER	C1	1/2"NPT	●	ADR 4x0.34 sh.	Rx Printer	Bc	1	Tx	Connect the shielding
						Tx Printer	Mr	2	Rx	
						0V	Vt	3	0V	
•	EMBEDDED COMPUTING	C8	1/2"NPT		3x0.34 sh	0V		3	0V	Connect the shielding ALMA or FTL Light Protocol
						Rx IE		4	Tx	
						Tx IE		5	Rx	
•	DSPGI DEVICE					Rx	Vt	6	Tx	Gauging system for product identification
						Tx	Bc	7	Rx	
						Ground	Nr	8	Ground	
•	METERING	C2	1/2"NPT	●	ADR 4x0.34 sh.	12V	Jn	11	12V	Product metering input
						V1	Mr	12	V1	
						V2	Vt	13	V2	
						0V	Bc	14	0V	
•	ADDITIVE METERING OR INJECTOR 1 FEEDBACK CONTROL							19	12V	Additive metering or Injector 1 feedback ctrl
								20	V1	
								21	0V	

*Refer to the Cable Glands installation instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 17/46

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	PULSES OUTPUT		1/2"NPT			PO EMA		22	EMA Pulses output	Control system / Display Put SW9 and SW10 to have a 0-24V signal
						PO EMB		23	EMB Pulses output	
						OV		24	0V	
	SUPPLY 24VDC	A1	1/2"NPT		2x1	Bat. (+)	1	25	24VDC	24VDC truck battery (after battery switch and protected by a fuse)
						Bat. (-)	2	26	0V	
	• TEMPERATURE PROBE	C4	1/2"NPT	●	ADR 3x0.6 sh	+	Jn	33	+	Connect the shielding
						-	Bc	34	-	
						-	Vt	35	-	
	MANIFOLD FLAP, PRODUCT RETURN and-or INJECTOR 2 CONTROL				4 to 7x1	See tables	1	39	24VDC	Depending on configuration: direct connection or via plexmi electronic board. See the assignment table and the connection table of the relevant plexmi board (page 19)
							2	40		
							3	41		
							4	42		
							5	43		
							6	44		
							7	45		
	• RC-HEATING OIL RECEIVER				1x1	Start/Stop	1	49	Start/Stop	RC-Oil_1
					1x1	LF/HF	2	50	Low/High flow	
	DISTRIBUTION WAY PUMPED COUNTED-NOT COUNTED				2x1	PC/PNC	2	52	0V	Pumped counted/not counted
						0V	3	59	0V	
	INJECTOR 1 LEVEL CONTROL				1x1	Ctrl INJ1		53		Injector 1 low level control
					1x1	Ctrl INJ2		54		
	OVERFILL PROBE CONTROL				1x1	Ctrl AD truck		55		Injector 2 low level control
					1x1	Ctrl INJ2		56		
	INJECTOR 2 FEEDBACK CONTROL				1x1	Ctrl AD customer		57		Customer overfill probe control
					1x1	Ctrl AD customer		58		
*Refer to the Cable Glands Installation Instructions										

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 18/46

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							POWER SUPPLY BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	POWER-TAKE-OFF CONTROL				1x1	PTO control		58		PTO control Power-take-off engaged
	FOOTVALVE CONTROL				1x1	Footvalve		64	24VDC	Footvalve 24VDC = opening
	PRODUCT RETURN CONTROL			3 to 6x1	PR1	1	65	24VDC	Return_1	Depending on configuration: direct connection or via plexmi electronic board. See the assignment table and the connection table of the relevant plexmi board (page 19)
					PR2	2	66		Return_2	
					PR3	3	67		Return_3	
					Drain		68		Drain control	
	INJECTOR 1 CONTROL				Supply		71	NO free contact	Injector 1 control	Closed contact=additivation (Output: NO free potential relay)
					Control		72			
					0V		70	0V	0V (GND)	
	HOSE 2						63	24VDC	Hose 2 control	Outputs Field Effect Transistor 24V 5W max.: applicable to any 24VDC output (from 61 to 69 and from 73 to 79)
	HOSE 1						75	24VDC	Hose 1 control	
	LOW FLOWRATE						79	24VDC	Low flow control	
	HIGH FLOWRATE						74	24VDC	High flow control	
							80	0V		
	POWER-TAKE-OFF				PTO	1	61	24VDC	PTO	
	STOP MOTOR				Stop Mot.	2	62	24VDC	Stop motor	
	ACCELERATION MOTOR				Acc. Mot.	3	73	24VDC	Motor acceleration	
	DECLUTCHING				Declut.	4	76	24VDC	Declutching	
	START MOTOR				Start Mot.	5	77	24VDC	Start motor	
	MANIFOLD VENT VALVE CONTROL			1x1	Vent valve		78	24VDC	Vent valve control 24VDC=opening	

SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD

*Refer to the Cable Glands Installation Instructions


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 19/46

Assignments table according to the number of flaps, product returns and depending on the presence or not of a second additive injector:

				MICROCOMPT+ power supply board V1 (from REV11)										
Nb of Flaps	Nb of Returns	Addit #1	Addit #2	45	44	43	42	41	40	39	67	66	65	
5	0-4	yes	yes	addit#2	ret#4	flap#5	flap#4	flap#3	flap#2	flap#1	ret#3	ret#2	ret#1	
5	5	yes	no	ret#5	ret#4	flap#5	flap#4	flap#3	flap#2	flap#1	ret#3	ret#2	ret#1	
6	0-3	yes	yes	addit#2	flap#6	flap#5	flap#4	flap#3	flap#2	flap#1	ret#3	ret#2	ret#1	
6	4	yes	no	ret#4	flap#6	flap#5	flap#4	flap#3	flap#2	flap#1	ret#3	ret#2	ret#1	
6	5-7	yes	yes	addit#2	flap#6	flap#5	flap#4	flap#3	flap#2	flap#1	PLEXMI 1 (ret#1-ret#7)			
7	0-3	yes	no	flap#7	flap#6	flap#5	flap#4	flap#3	flap#2	flap#1	ret#3	ret#2	ret#1	
7	4-7	yes	no	flap#7	flap#6	flap#5	flap#4	flap#3	flap#2	flap#1	PLEXMI 1 (ret#1-ret#7)			
8	0-6	yes	no	ret#6	ret#5	ret#4	flap#8	PLEXMI 1 (flap#1flap#7)			ret#3	ret#2	ret#1	
9	0-5	yes	no	ret#5	ret#4	flap#9	flap#8	PLEXMI 1 (flap#1flap#7)			ret#3	ret#2	ret#1	
9	6-9	yes	no	ret#9	ret#8	flap#9	flap#8	PLEXMI 1 (flap#1flap#7)			PLEXMI 2 (ret#1-ret#7)			

If both PLEXMI electronic boards are useful, PLEXMI 1 is fixed to the MICROCOMPT+ frame and PLEXMI 2 (ret#1-ret#7) has to be installed in a 24VDC-supplied independent box.

Connection of plexmi electronic boards for manifold flaps and product returns

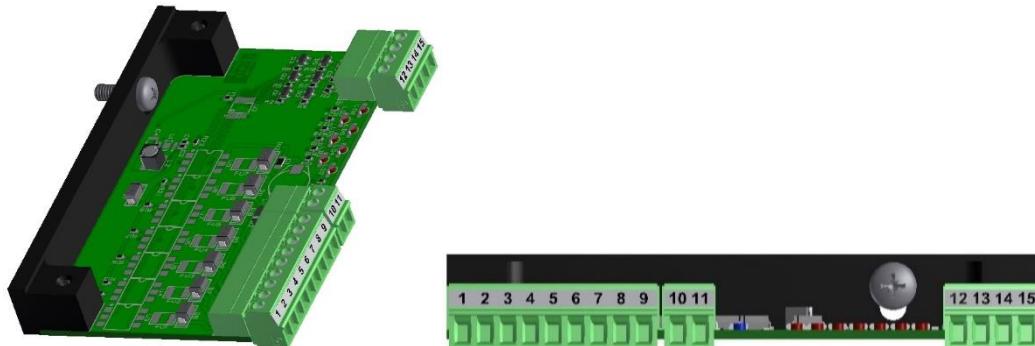

Multiplexing table:

MULTIPLEXING TABLE									
Input 1 (12)	Input 2 (13)	Input 3 (14)	Output 1 (1)	Output 2 (2)	Output 3 (3)	Output 4 (4)	Output 5 (5)	Output 6 (6)	Output 7 (7)
0	0	0	0	0	0	0	0	0	0
24V	0	0	24V	0	0	0	0	0	0
0	24V	0	0	24V	0	0	0	0	0
24V	24V	0	0	0	24V	0	0	0	0
0	0	24V	0	0	0	24V	0	0	0
24V	0	24V	0	0	0	0	24V	0	0
0	24V	24V	0	0	0	0	0	24V	0
24V	24V	24V	0	0	0	0	0	0	24V

	ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
	THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx			
This document is available at www.alma-alma.fr			Page 20/46	

PLEXMI board connection table for manifold flaps:

CONNECTED EQUIPMENT							PLEXMI ELECTRONIC BOARD						MICROCOMPT+									
Option	Equipment	Cable (for information)			Function	Colour or No	Termin	OUTPUTS		INPUTS		Termin	POWER SUPPLY BOARD									
		No	CG*	Alma				Function	Observation	Observation	Function		SUPPLY	24VDC	10	S2						
●	MANIFOLD FLAP CONTROL				4 to 7x1	Flap#1	1	1	Outputs 24VDC (24VDC = opened flap)	Flap#1	Multiplexing** for flap#1 to flap#7	Input 1	12	39	Outputs 24VDC (24VDC = opened flap) outputs FET 24V 5W max	Flap#1 to Flap#7						
						Flap#2	2	2		Flap#2		Input 2	13	40	Supply via Microcompt+							
						Flap#3	3	3		Flap#3		Input 3	14	41								
						Flap#4	4	4		Flap#4												
						Flap#5	5	5		Flap#5												
						Flap#6	6	6		Flap#6												
						Flap#7	7	7		Flap#7												
									500 mA max				SUPPLY	24VDC	10	S2	24VDC (white)	Supply via Microcompt+				
										0V	GND				0V	11	S4	0V (black)				
						1x1	0V			0V	GND					15	47	0V				

*Refer to the Cable Glands installation instructions

**Refer to the multiplexing table

PLEXMI board connection table for product returns:

CONNECTED EQUIPMENT							PLEXMIELECTRONIC BOARD						MICROCOMPT+							
Option	Equipment	Cable (for information)			Function	Colour or No	Termin	OUTPUTS		INPUTS		Termin	POWER SUPPLY BOARD							
		No	CG*	Alma				Function	Observation	Observation	Function		SUPPLY	24VDC	10	S2	24VDC (white)	Supply via Microcompt+		
●	PRODUCT RETURN CONTROL				4 to 7x1	Return#1	1	1	Outputs 24VDC (24VDC = opened return)	Return#1	Multiplexing** from return#1 to return#7	Input 1	12	65	24VDC = authorisation	Product return compartment 1 to 7	Output FET 24V 5W max			
						Return#2	2	2		Return#2		Input 2	13	66						
						Return#3	3	3		Return#3		Input 3	14	67						
						Return#4	4	4		Return#4										
						Return#5	5	5		Return#5										
						Return#6	6	6		Return#6										
						Return#7	7	7		Return#7										
									500 mA max				SUPPLY	24VDC	10	S2	24VDC (white)	Supply via Microcompt+		
										0V	GND				0V	11	S4	0V(black)		
						1x1	0V			0V	GND					15	47	0V		

*Refer to the Cable Glands installation instructions

**Refer to the multiplexing table

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY


THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
		This document is available at www.alma-alma.fr
		Page 21/46

Connection of the network board – Ethernet, RS232/485, CANBus

Connection to the Ethernet network:

- With the RJ45 connector according to the EIA/TIA-568 standard
- Or with the screw-terminal: see details in the table below.

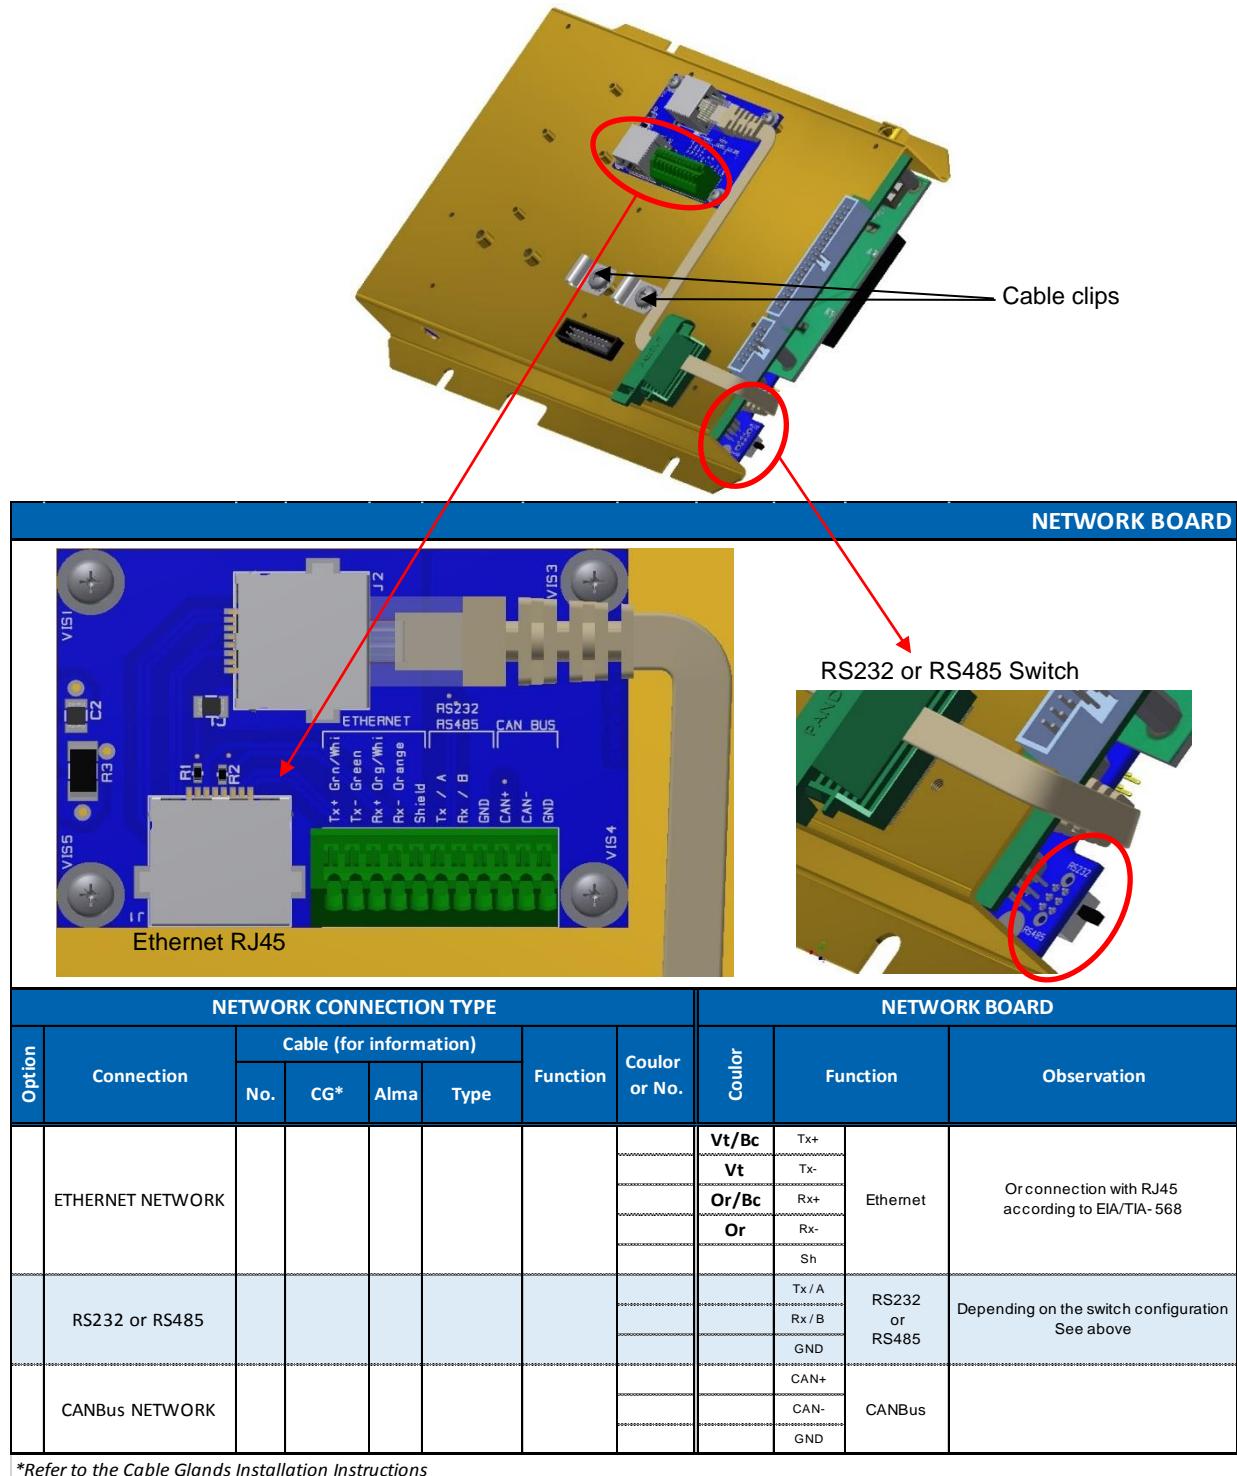

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 22/46


Terminal assignment of the extension board "sonde AD" 5 wires (IS)

EXTENSION BOARD SONDE AD 5 wires (IS)



EQUIPMENTS CONNECTED TO THE MICROCOMPT+						EXTENSION BOARD SONDE AD (IS)					
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE	C7	[6x1]			Common	[Nr]	5	-	Overfill prevention probes	[If cable are supplied by ALMA]
						Supply	[Rg]	6	+		
						From probe	[Or]	7	From probe		
						To probe	[In]	8	To probe		

*Refer to the Cable Glands Installation Instructions

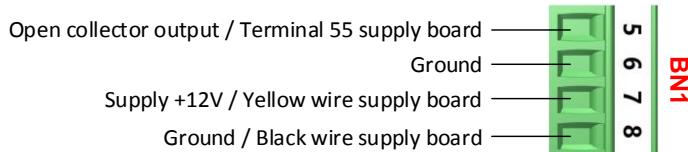Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):


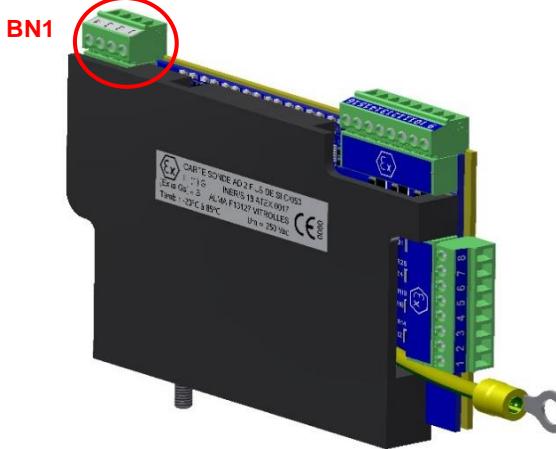
ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 23/46

Terminal assignment of the extension board "sonde AD" 2 wires (IS)

EXTENSION BOARD SONDE AD 2 wires (IS)



The diagram shows a black rectangular extension board with a green terminal block labeled BN1 at the top left. A red circle highlights terminal BN1. On the right side, there is another green terminal block with several pins labeled 1 through 8. A yellow cable is connected to pin 1. The text "NT IN ATEX 15" is located to the right of the board.


EQUIPMENT CONNECTED TO THE MICROCOMPT+								EXTENSION BOARD SONDE AD (IS)			
Option	Equipment	Cable (for information)				Function	Terminal	Function		Colour	Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE 1					Supply	1	Supply +	SIGNAL PROBE1	Mr	
						Common	2	Common		Bc	
•	OVERFILL PREVENTION PROBE 2					Supply	3	Supply +	SIGNAL PROBE2	Rg	
						Common	4	Common		Bc	
•	OVERFILL PREVENTION PROBE 3					Supply	5	Supply +	SIGNAL PROBE3	Or	
						Common	6	Common		Bc	
•	OVERFILL PREVENTION PROBE 4					Supply	7	Supply +	SIGNAL PROBE4	Jn	
						Common	8	Common		Bc	
•	OVERFILL PREVENTION PROBE 5					Supply	9	Supply +	SIGNAL PROBE5	Vt	
						Common	10	Common		Bc	
•	OVERFILL PREVENTION PROBE 6					Supply	11	Supply +	SIGNAL PROBE6	Bl	
						Common	12	Common		Bc	
•	OVERFILL PREVENTION PROBE 7					Supply	13	Supply +	SIGNAL PROBE7	Vi	
						Common	14	Common		Bc	
•	OVERFILL PREVENTION PROBE 8					Supply	15	Supply +	SIGNAL PROBE8	Gr	
						Common	16	Common		Bc	

*Refer to the Cable Glands Installation Instructions

- This extension board only works with two-wire optic overfill prevention probes.
- A Dummy device is a two-wire dry probe simulator. Channels that are not connected to overfill prevention probes must be connected to a Dummy device. None of the 8 channels must be open.



- Do not install the Dummy into the MICROCOMPT housing.
- If the MICROCOMPT is off, the probes and the Dummy device shall be electrically isolated.

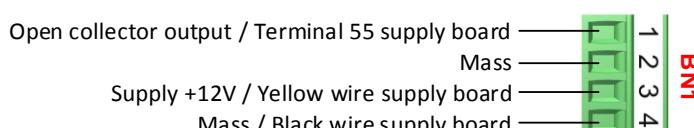
Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 24/46

5.5. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX

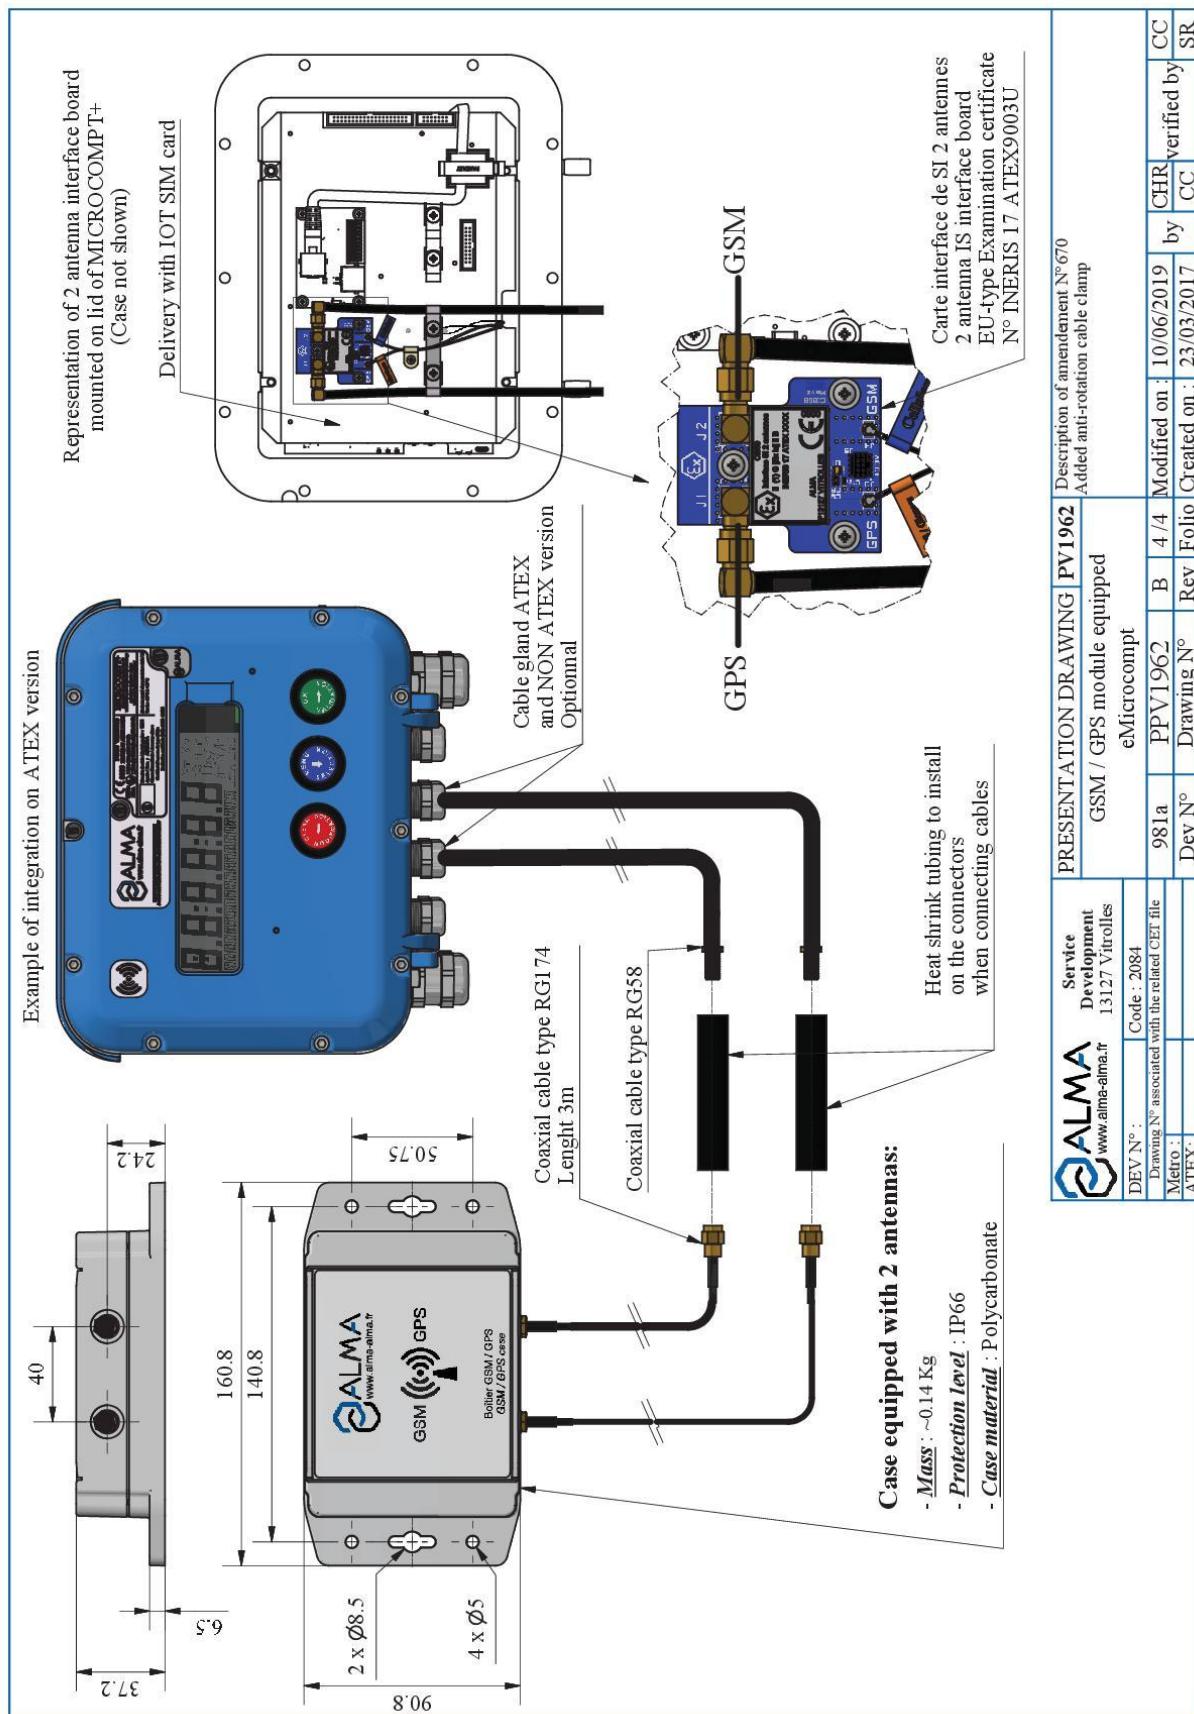

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 25/46

Mounting and wiring of the GSM and GPS antennas

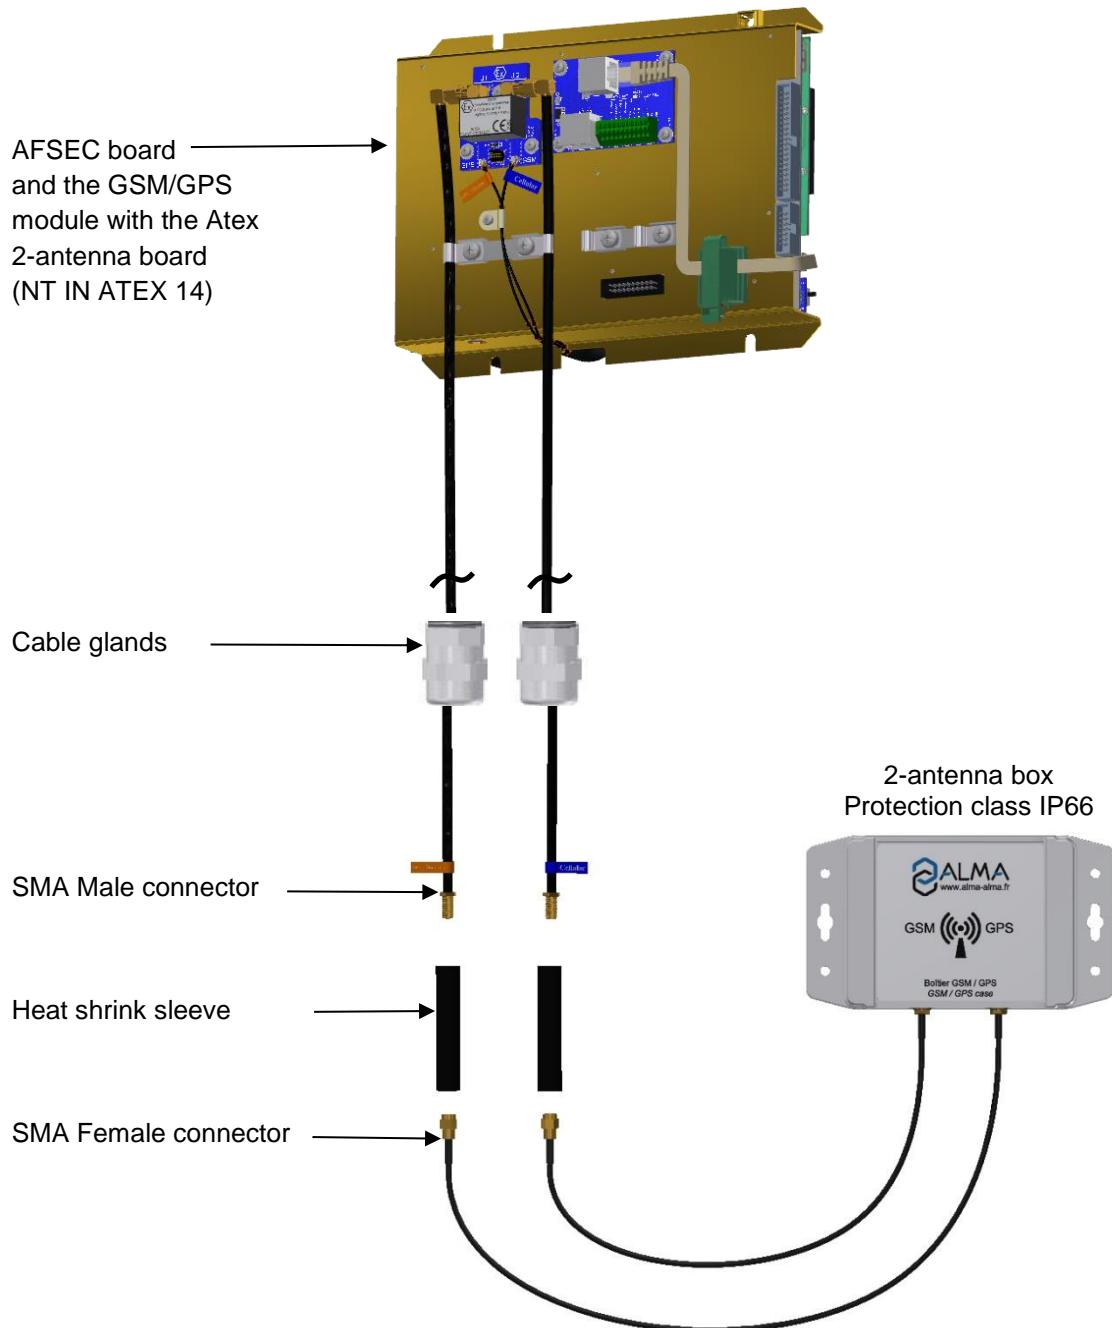

The 2-antenna board is supplied with a micro-SD card mounted as follows:



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 26/46

Mounting of the GSM/GPS cables into the cable glands

ALMA connects the GSM and GPS antenna to the MICROCOMPT+ (2-antenna board).



At the outlet of the MICROCOMPT+ box, you must pass both cables through cable glands. In case of an ATEX MICROCOMPT+, cable glands must be ATEX.



Into the MICROCOMPT+, adjust the cable length to easily open and close the cover.

Tighten both cable glands.

Wiring of the 2-antenna box to the MICROCOMPT+

Fasten the box. You must install it in an area free of metallic cover to have a good reception and broadcasting of signal. You can install the box in a horizontal or vertical position.

Put each coaxial cable through the heat shrink sleeve.

Plug the RG58⁽¹⁾ cable from the MICROCOMPT+ with the RG174⁽²⁾ cable from the antenna box and tighten them. Isolate the male/female SMA connectors with the supplied heat shrink sleeve (both antennas in the box are the same, cables don't have to be labelled).

Position and heat up the sleeve on the connectors to prevent corrosion and humidity.



WARNING: The cables of this box can be **neither shortened nor extended**

⁽¹⁾ RG58: Semi-rigid coaxial cable, 5mm diameter

⁽²⁾ RG174: Flexible coaxial cable, 2.7mm diameter

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 27/46

5.6. ELECTRICAL WIRING SPOOL VALVE CONTROL

Terminal assignment of the power supply board

POWER SUPPLY BOARD										
EQUIPMENTS CONNECTED TO THE MICROCOMPT+										
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	SPOOL VALVE CONTROL					High flow		74	EV HF	Spool valve
						Authorization		79	EV Autor.	

*Refer to the Cable Glands installation instructions

Terminal assignment of the relay extension board

RELAY EXTENSION BOARD (used to control a minimum 5W spool valve)											
EQUIPEMENT CONNECTED TO THE MICROCOMPT+											
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation	
		No.	CG*	Alma	Type						
	AUTHORIZATION SOLENOID VALVE					Author.		1	NC free contact	Relay R1	Hydraulic control of hydraulic pump
								2	0V/24VDC		
								3	NO free contact		
	HIGH FLOW SOLENOID VALVE					High flow		4	NC free contact	Relay R2	High flow control of hydraulic pump
								5	0V/24VDC		
								6	NO free contact		

*Refer to the Cable Glands Installation Instructions


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
		This document is available at www.alma-alma.fr

6. ADRIANE TURBINE METER

6.1. ADRIANE TURBINE METER DN50-50 243 100x100

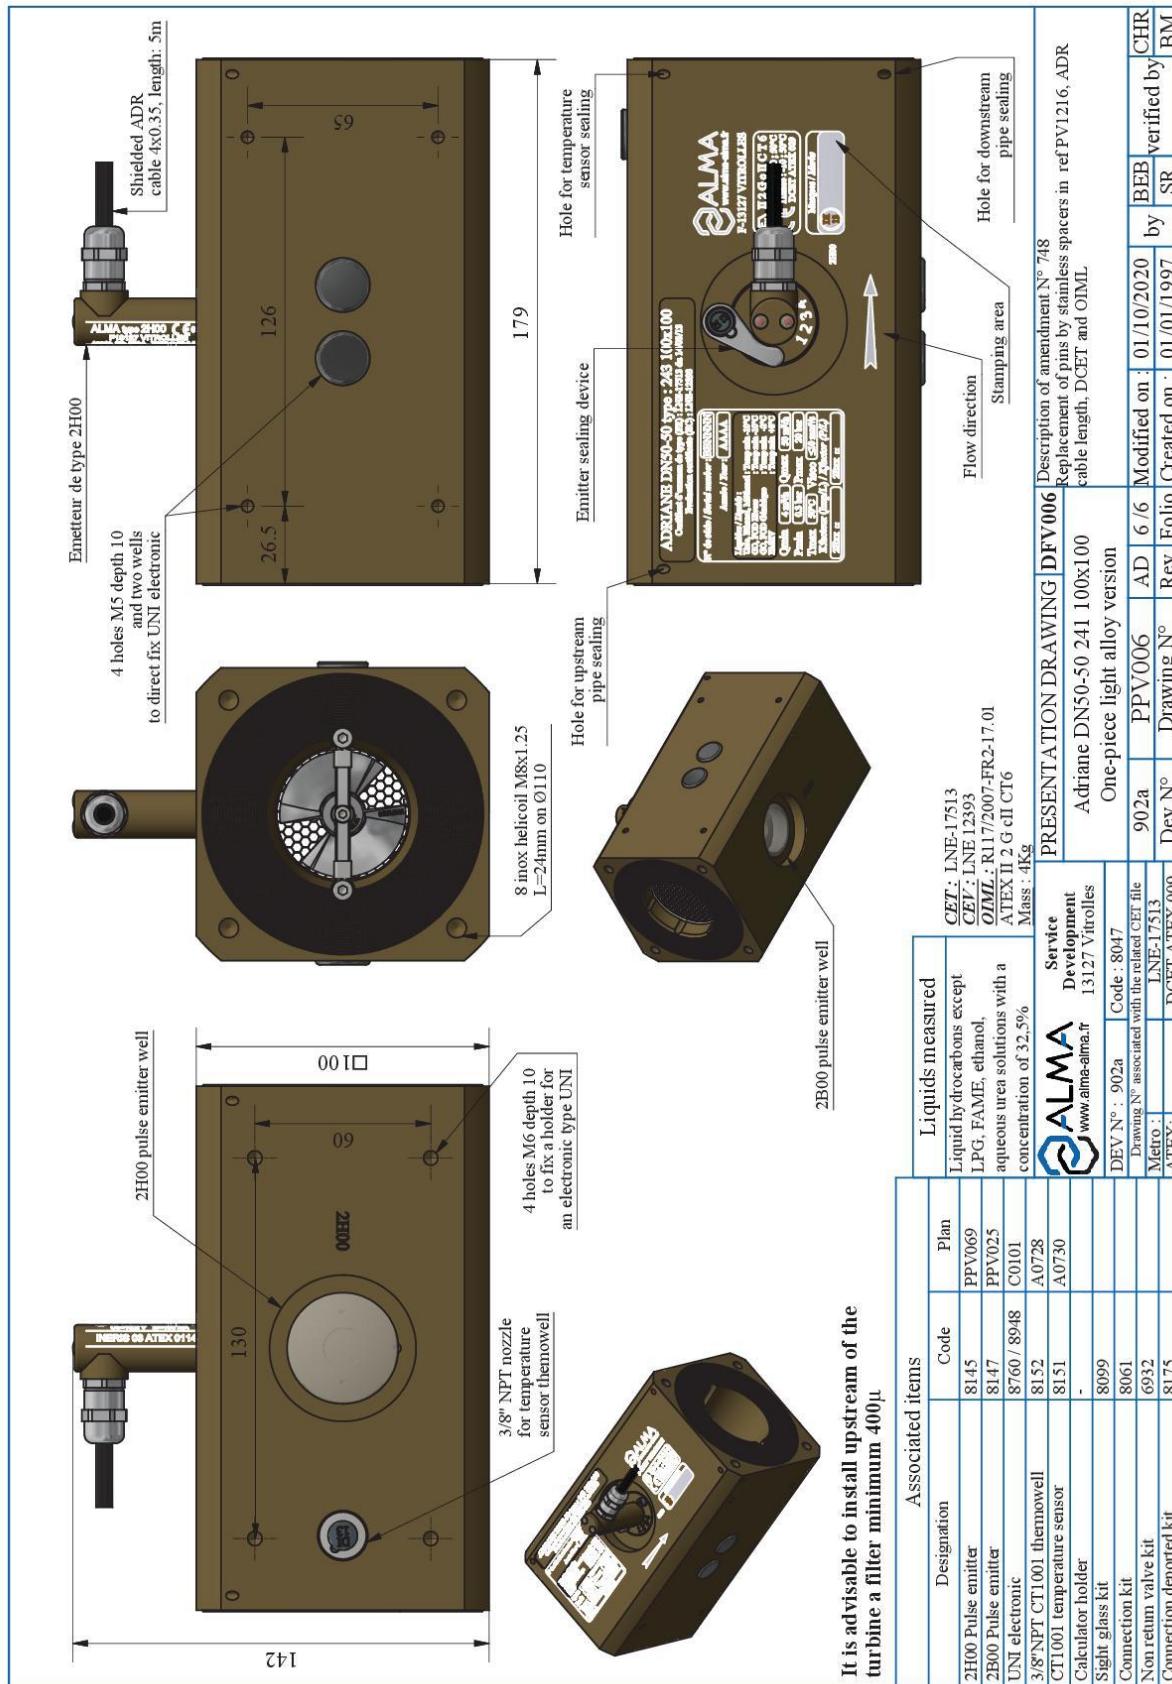

It is advisable to install upstream of the turbine a filter minimum 400μ

RD PARTIES WITHOUT ALMA AUTHORIZATION	
D MTP-xx	Units of measure: Length: mm Angle: degree ($^{\circ}$, $'$, $''$) Temperature: $^{\circ}\text{C}$
alma.fr	Page 29/46

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION.



INSTALLATION GUIDE DI 020 END
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$ ' '')
Temperature: $^{\circ}\text{C}$

Page 29/46

Document available on website alma-alma.fr

6.2. ADRIANE TURBINE METER DN80-80 243 110x110

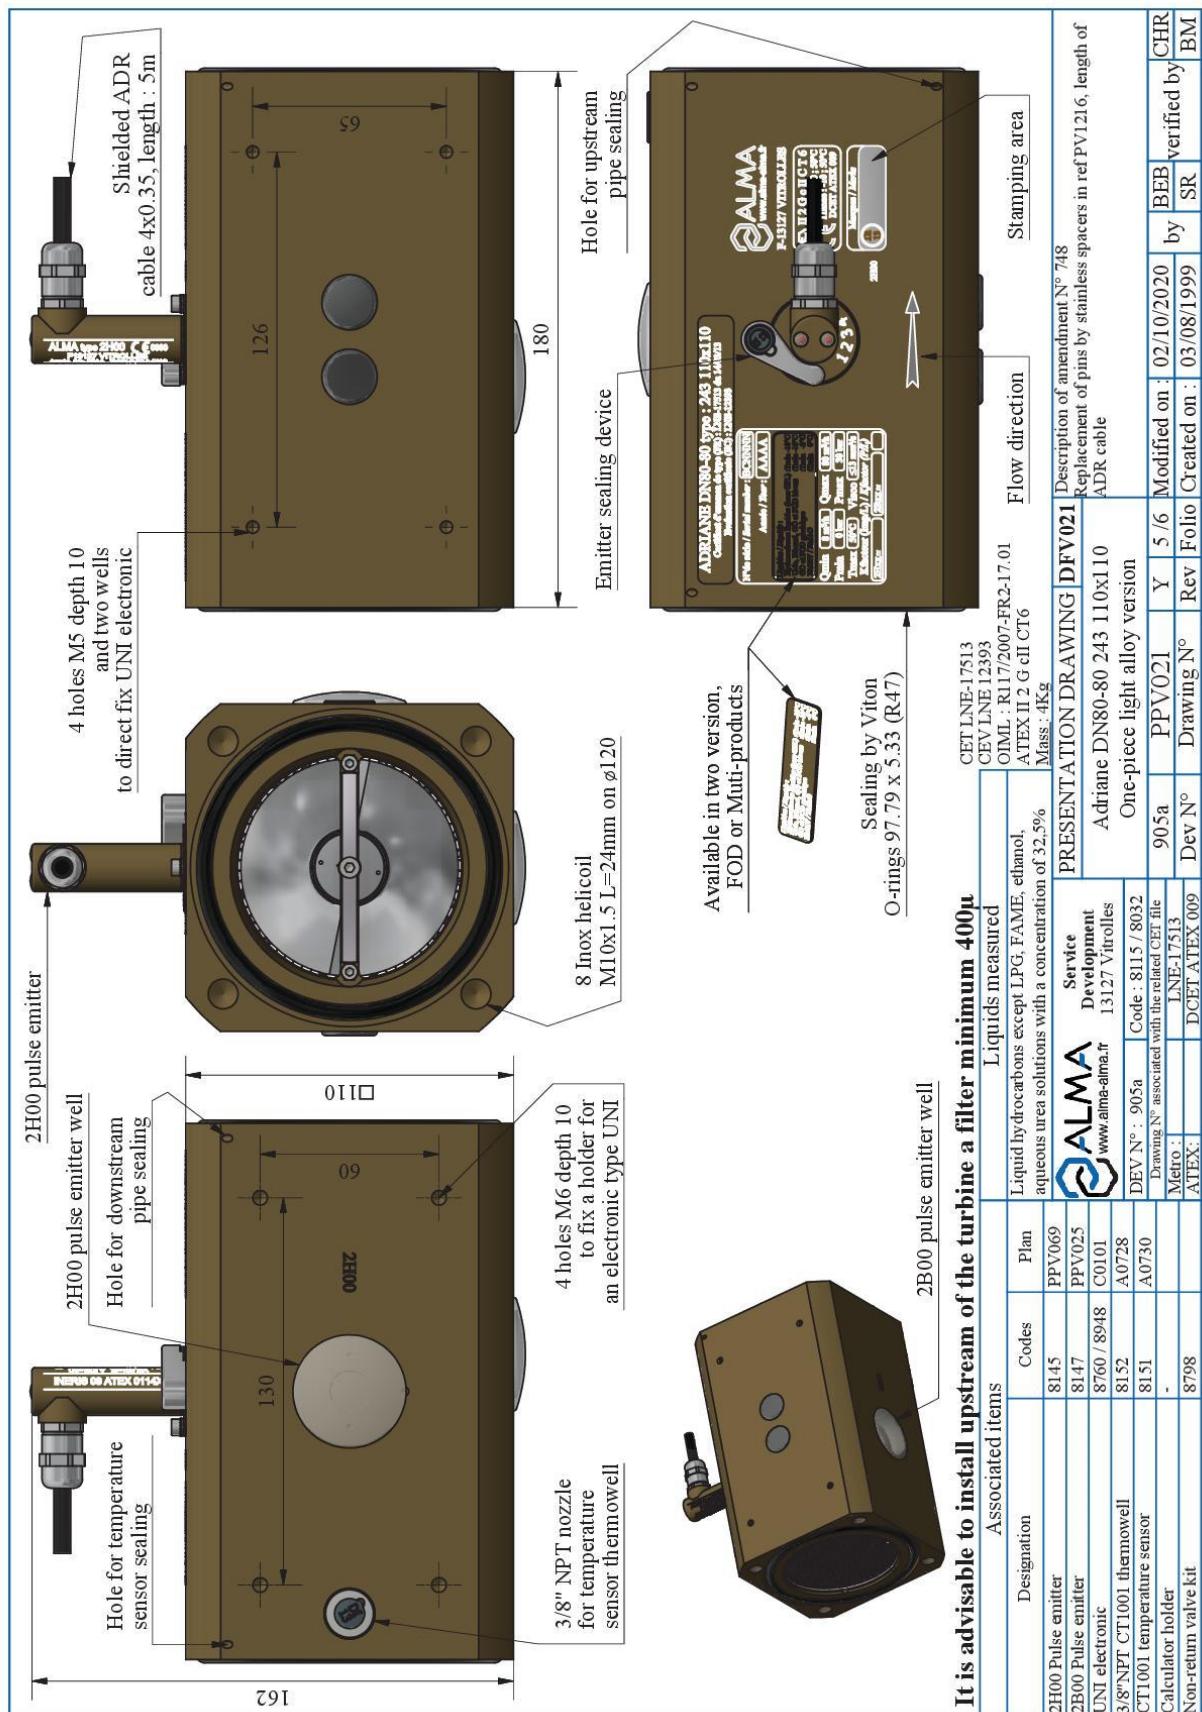

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 30/46

6.3. ADRIANE TURBINE METER DN80-80 373 PN16 Ad blue®

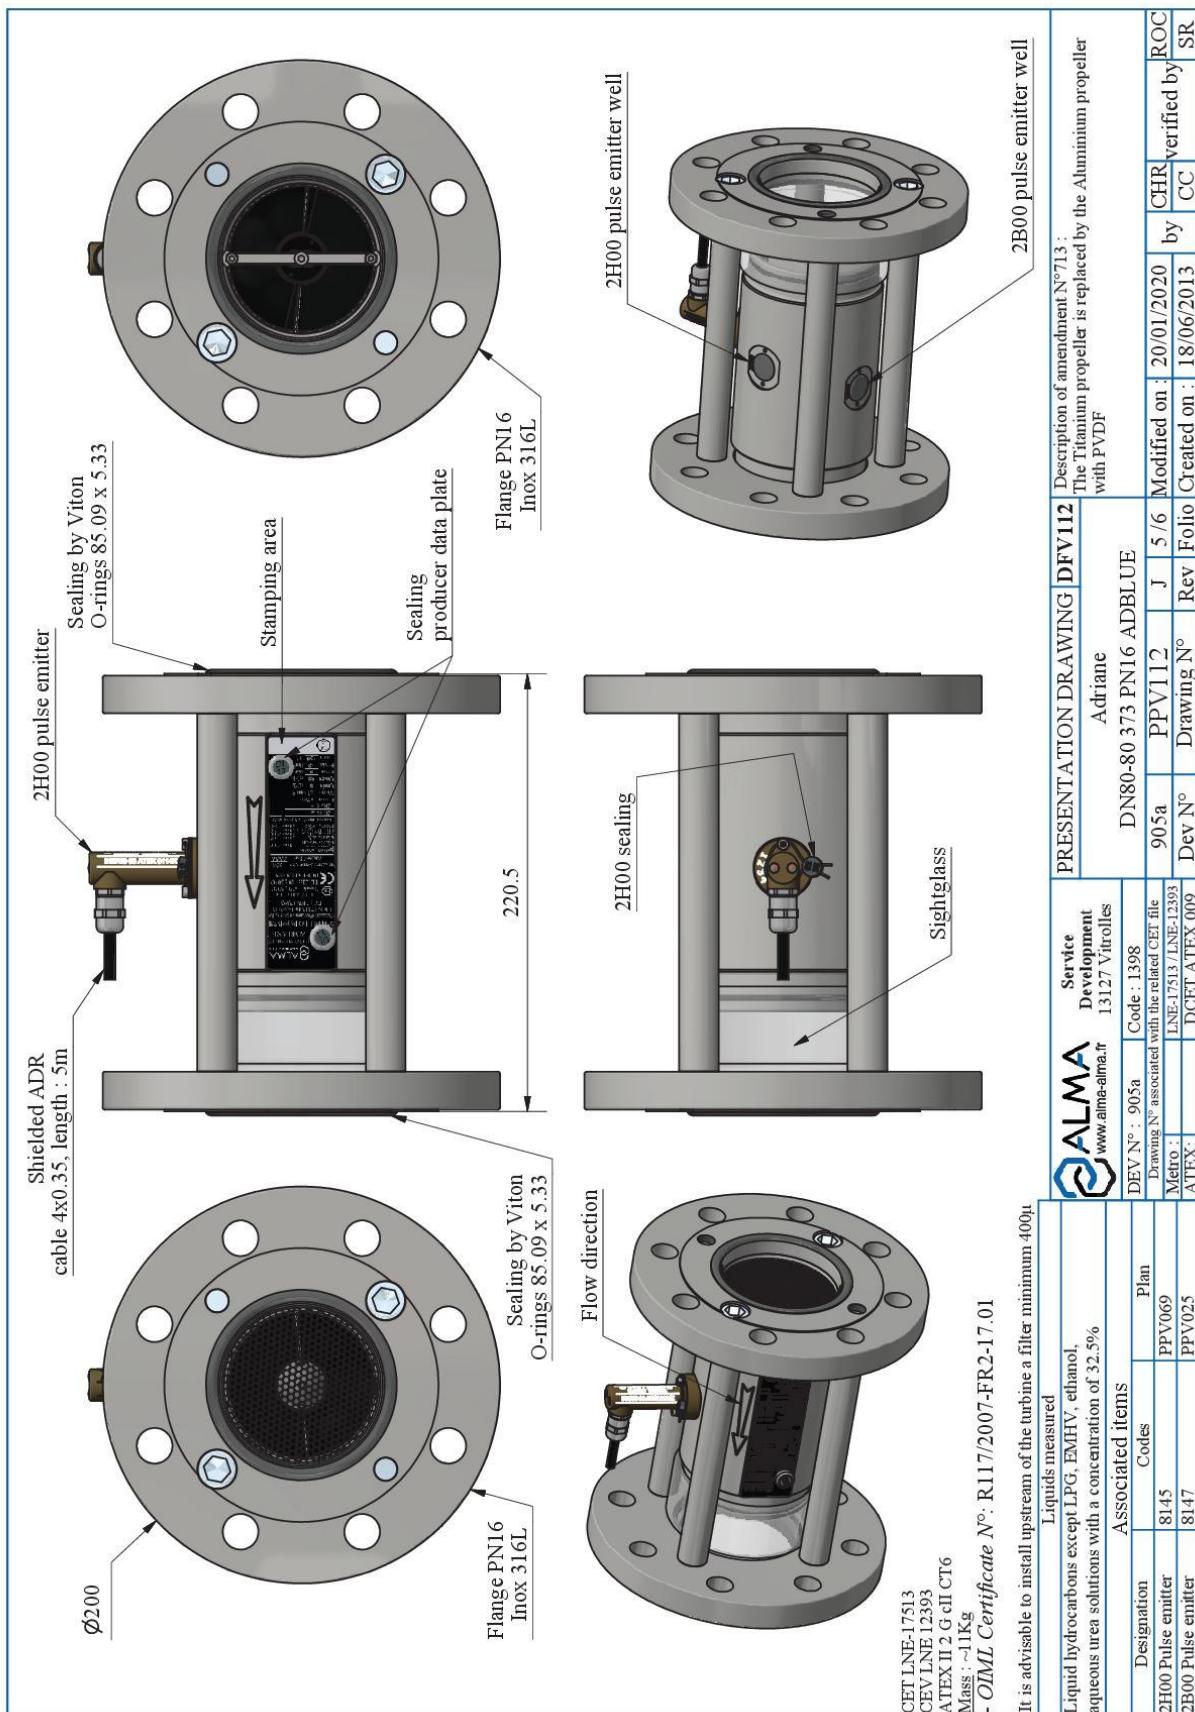


Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
	This document is available at www.alma-alma.fr		Page 31/46

6.4. INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER

- The identification plate and the led of the pulse emitter(s) shall be visible and accessible.
- The turbine must be installed with respect to the flow direction.
- Put sealing rings each other sides between the turbine and the backflanges.
- Leave an open space all around the turbine in order to ease maintenance.
- Install a 400 μ filter (mini) on the pipe upstream from the turbine meter.
- After installation or during the commissioning period, if the new or modified pipes have not been perfectly cleaned or pickled and passivated, the turbine should be protected by a honeycomb sieve – max. 1mm mesh. It must be placed between two flanges upstream from the turbine.
- Dimensions: A > 100mm.

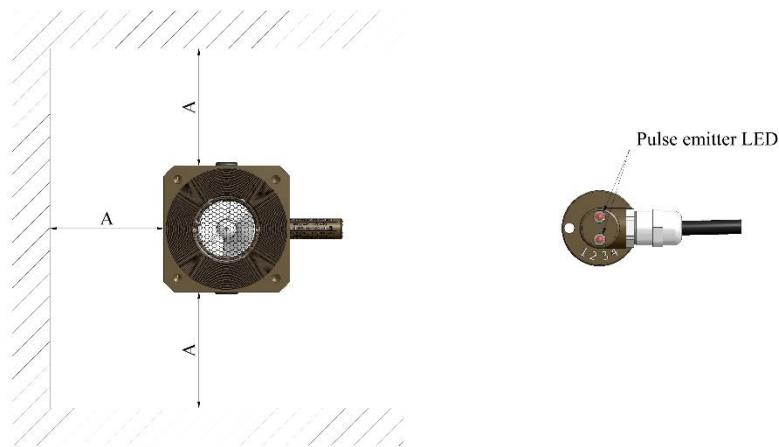

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



For accuracy class 0.5 and 1.0 measuring systems, the pipes and equipment upstream or downstream the turbine meter must have the same nominal diameter as the meter on a length at least equal to 10 times this diameter upstream and 5 times this diameter downstream.

These lengths can be straight or bent.

It is mandatory that no flowrate adjustment device (e.g. a variable-opening valve) is located upstream at a distance less than 10 times the nominal diameter of the meter. Do not create derivation circuits with sample or bypass, specially make sure that no nozzle is present on this pipe.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C


Page 32/46

6.5. CONNECTION KIT ADRIANE DN50 OR DN80

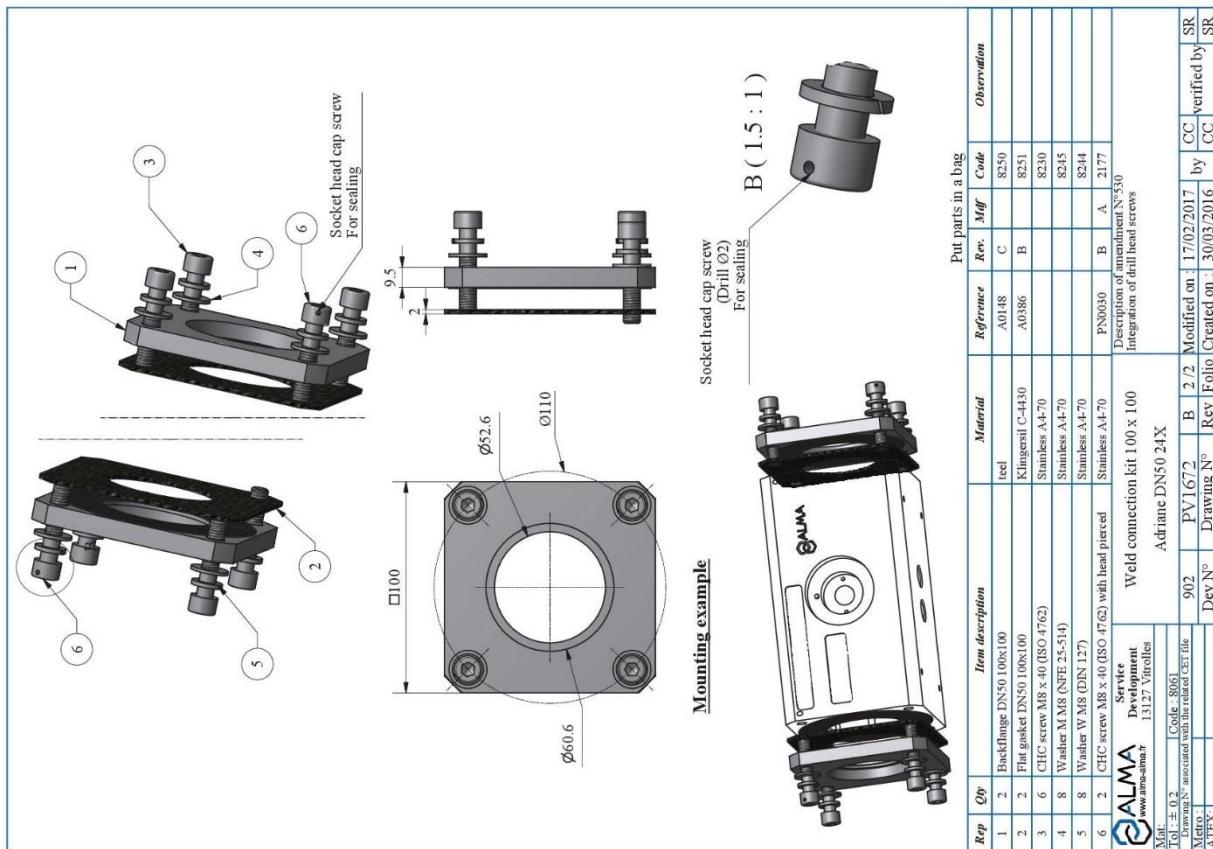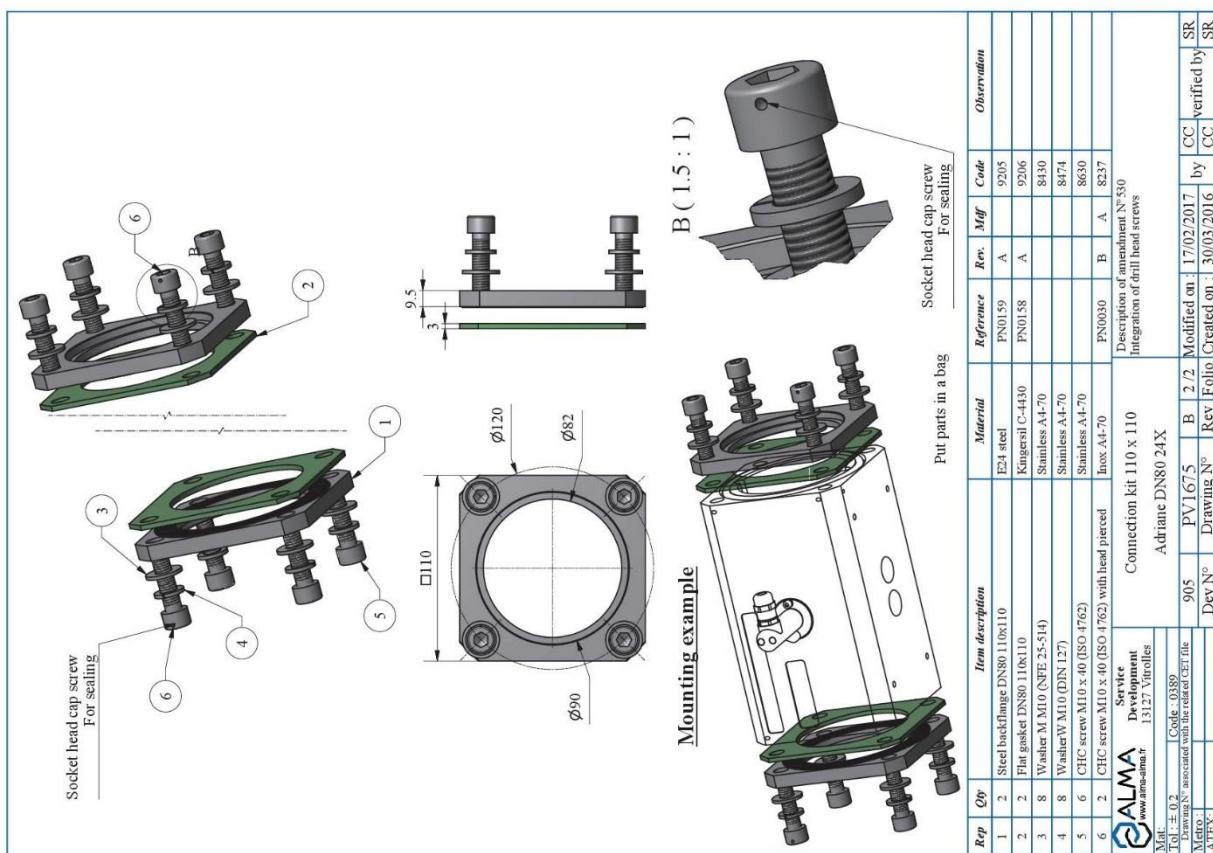

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY								
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION								
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx						Units of measure:	
	This document is available at www.alma-alma.fr						Length: mm	
							Angle: degree (° ° °)	
							Temperature: °C	
							Page 33/46	

7. PRINTER KIT

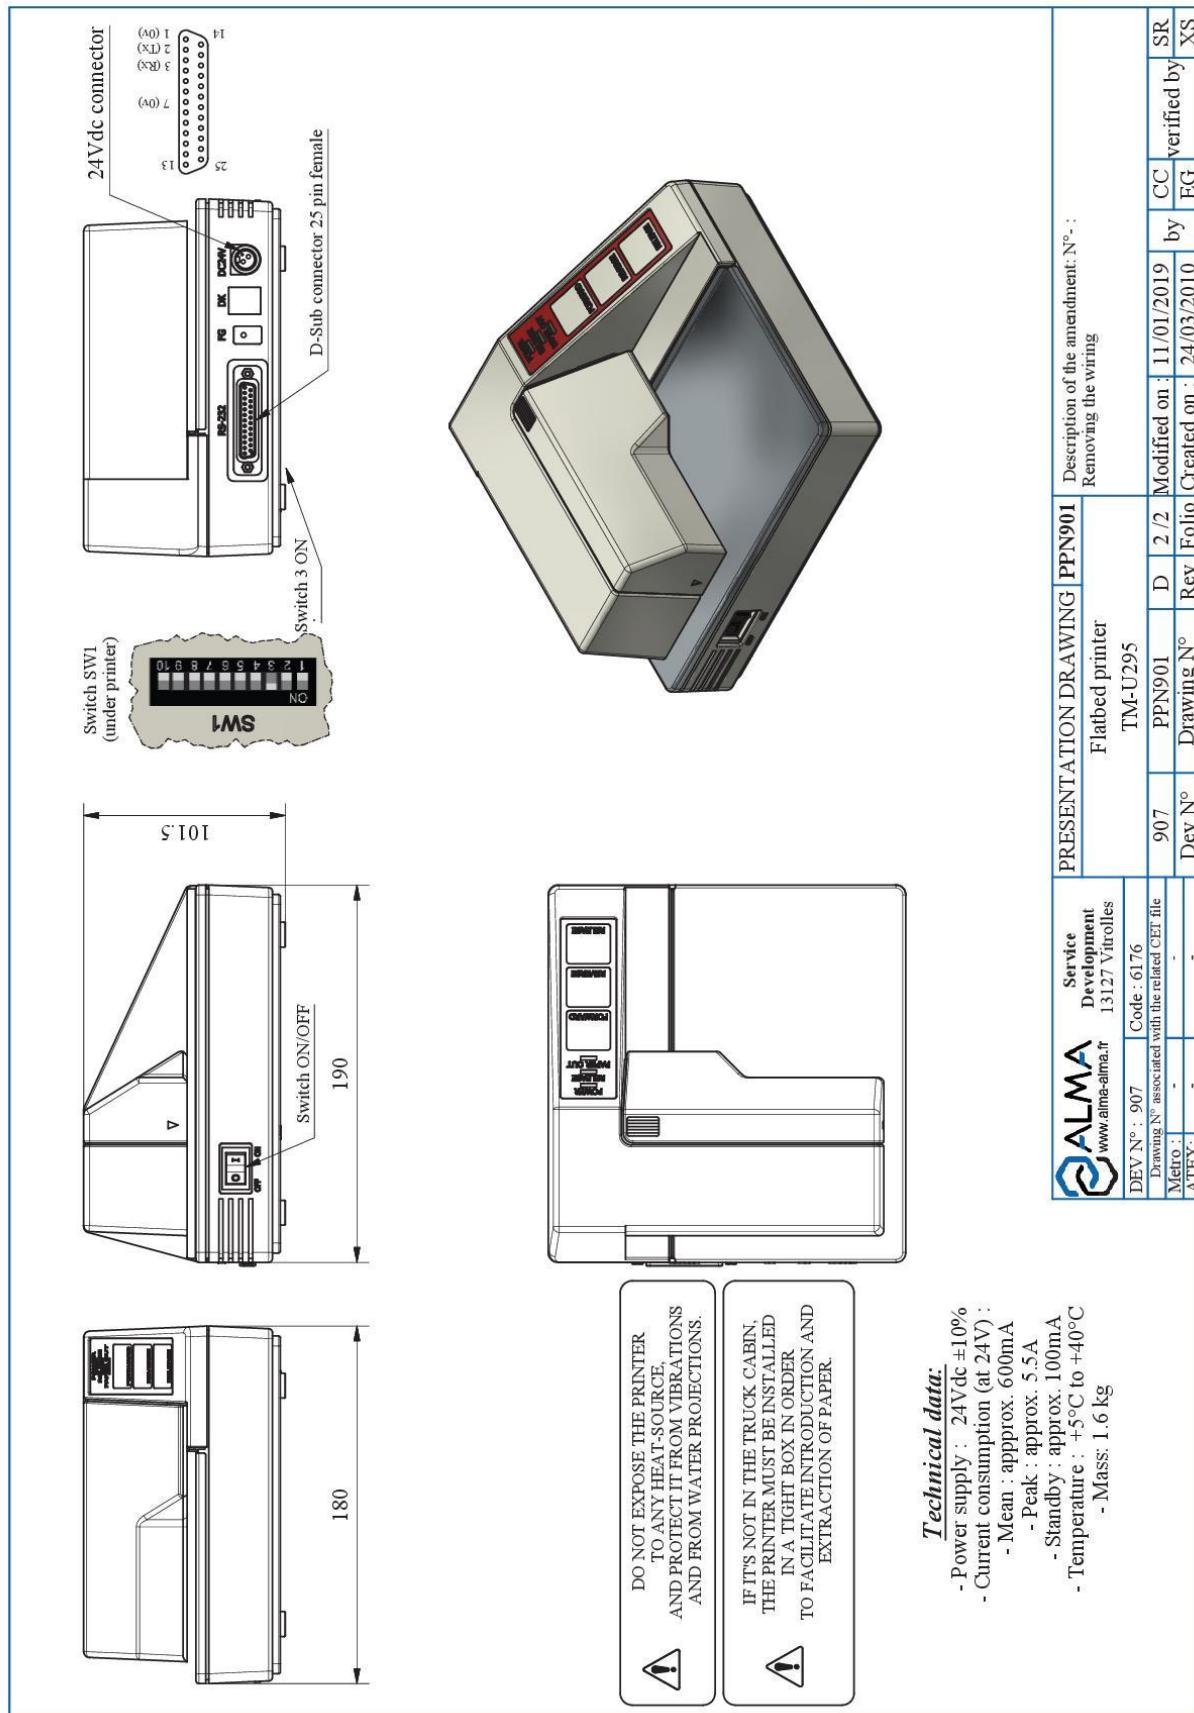

- Technical data:**
- Power supply : 24Vdc ±10%
 - Current consumption (at 24V) :
 - Mean : approx. 600mA
 - Peak : approx. 5.5A
 - Standby : approx. 100mA
 - Temperature : +5°C to +40°C
 - Mass : 1.6 kg

ALMA Service Development www.alma-alma.it 13127 Vittorio DEV N° : 907 Drawing N° associated with the related CER file Metro : - ATEX : -	PRESENTATION DRAWING PPN901 Flatbed printer TM-U295	Description of the amendment: N° : Renoving the wiring		
		907	PPN901	D 2/2 Modified on : 11/01/2019 Rev Folio Created on : 24/03/2010 by CC EG verified by SR XS



Document available on website alma-alma.fr

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY
		THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C

7.1. INSTALLATION RECOMMENDATIONS PRINTER

- The printer must be installed in a tight box and be laid out so as not to obstruct the introduction/extraction of sheet of paper (Dimension D).
- Do not store anything above the printer.
- Leave an open space all around the printer to ease maintenance.
- Dimensions: A ≥ 50mm, B ≥ 100mm, C ≥ 120mm.

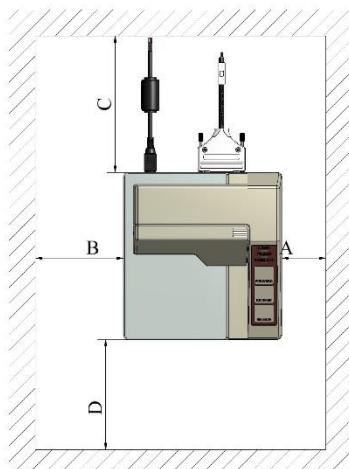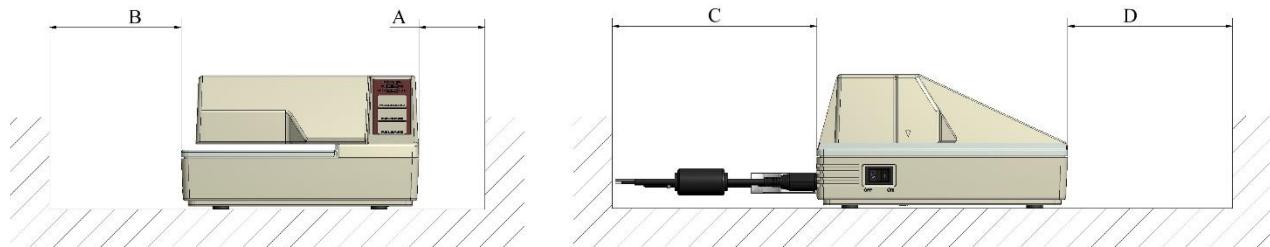

DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE.
PROTECT IT FROM VIBRATIONS AND WATER PROJECTIONS.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 35/46

7.2. INSTALLATION RECOMMENDATIONS PRINTER

Supply cable

PRINTER SUPPLY CABLE					
CONVERTER 220VAC/24VCC				PRINTER	
Option	Equipment	Function	Colour	Function	Observation
•	CONVERTER 220VCC/24VDC	24VDC	Nr	White-coated (Bc)	PRINTER SUPPLY Cable: 2x9mm ² External diameter: 5mm Length : 1,50m
		0V	Bc	Red-coated (Rg)	
		Shielding		Braid	

Serial link cable


PRINTER SERIAL LINK CABLE										
Option	Equipment	Cable (for information)				Function	Colour or No.	PRINTER		
		No.	CG*	Alma	Type			Colour	Function	Observation
		ADR 4x0.34 sh.						Bc	Rx	PRINTER SERIAL LINK External diameter: 5.4mm Length: 10m or 25m
								Mr	Tx	
								Vt	0V	
								Jn	Not used	
								Braid	Shielding	

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 36/46

8. CONVERTER 24VDC/24VDC 2.1A 50W

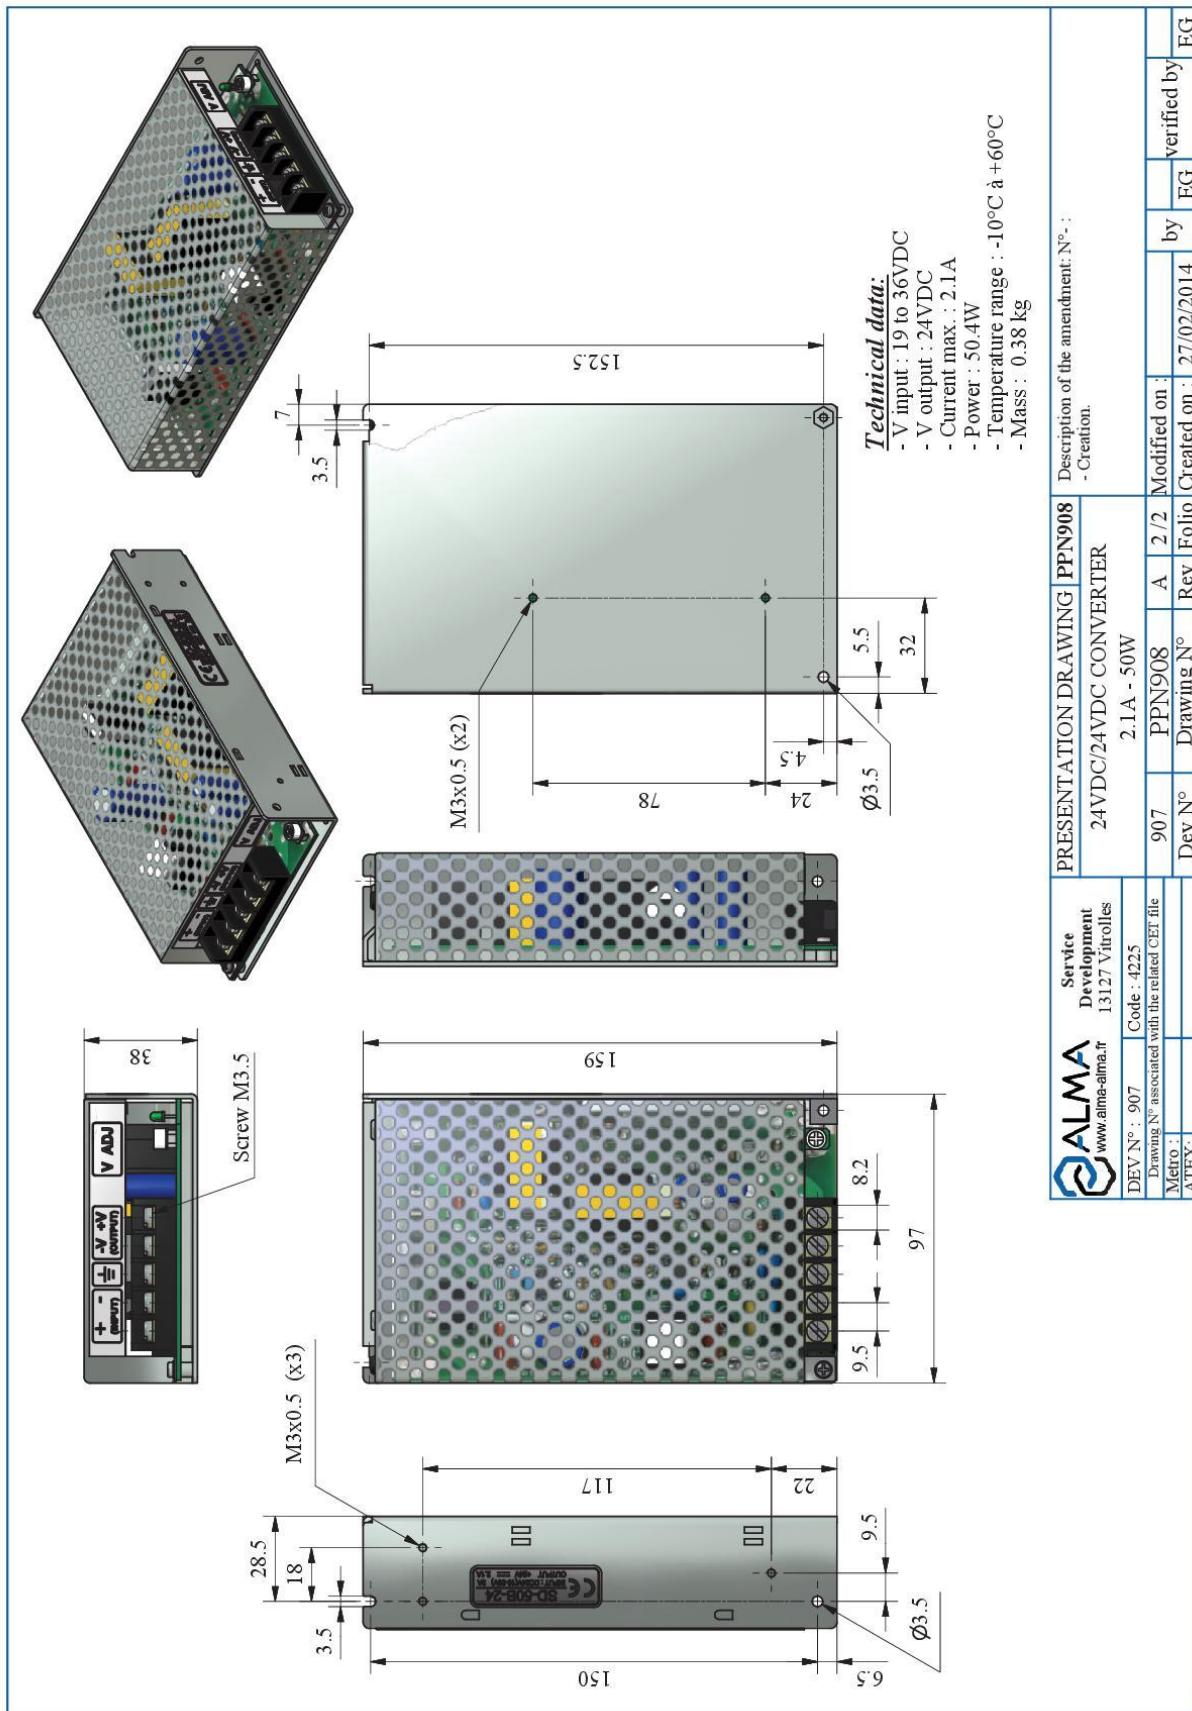

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° °)
Temperature: °C

9. NON-RETURN VALVE KIT DN50 OR DN80

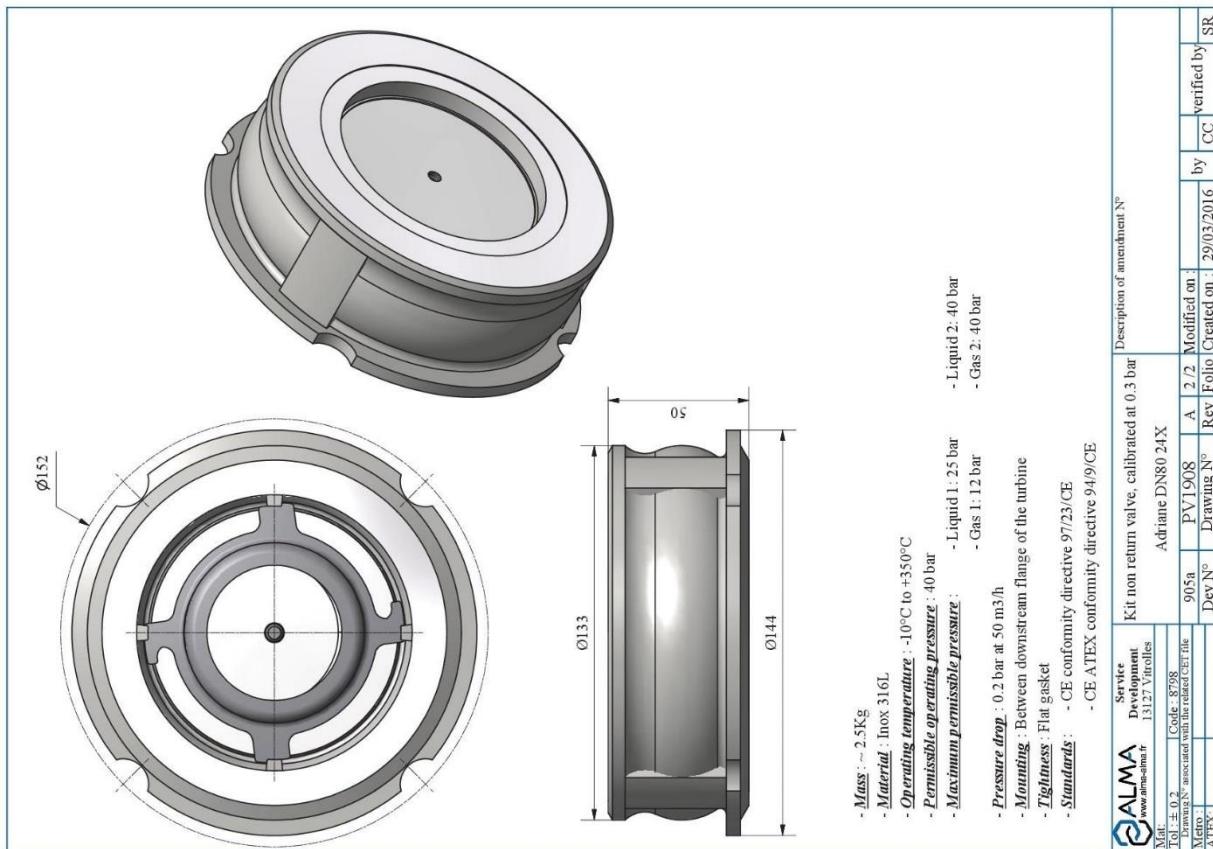

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 END
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
length: mm
angle: degree ($^{\circ}$)
temperature: $^{\circ}\text{C}$

9.1. INSTALLATION RECOMMENDATIONS NON-RETURN VALVE KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

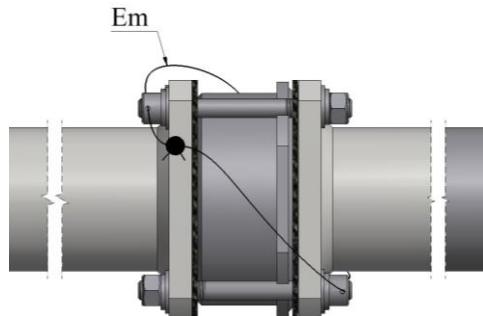

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

This document is available at www.alma-alma.fr

Page 39/46

10. SIGHTGLASS KIT DN50 OR DN80

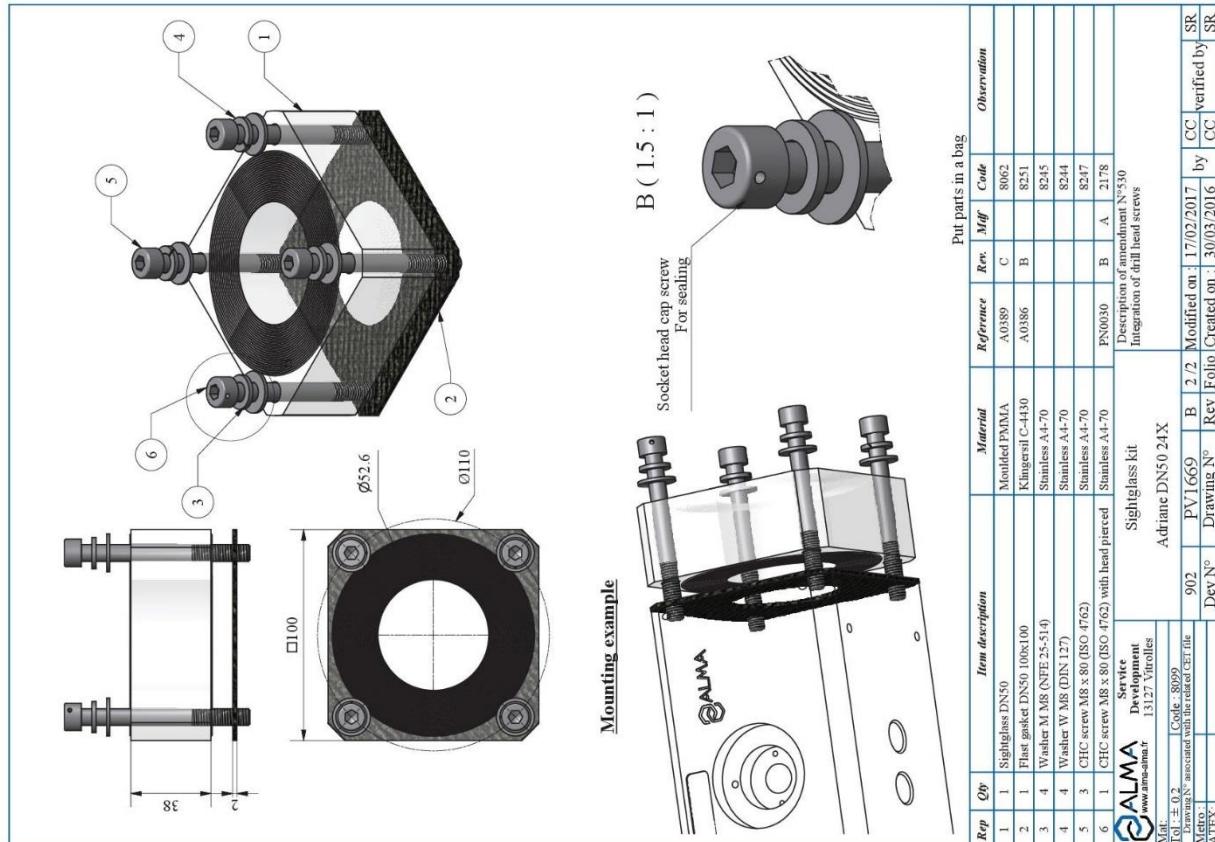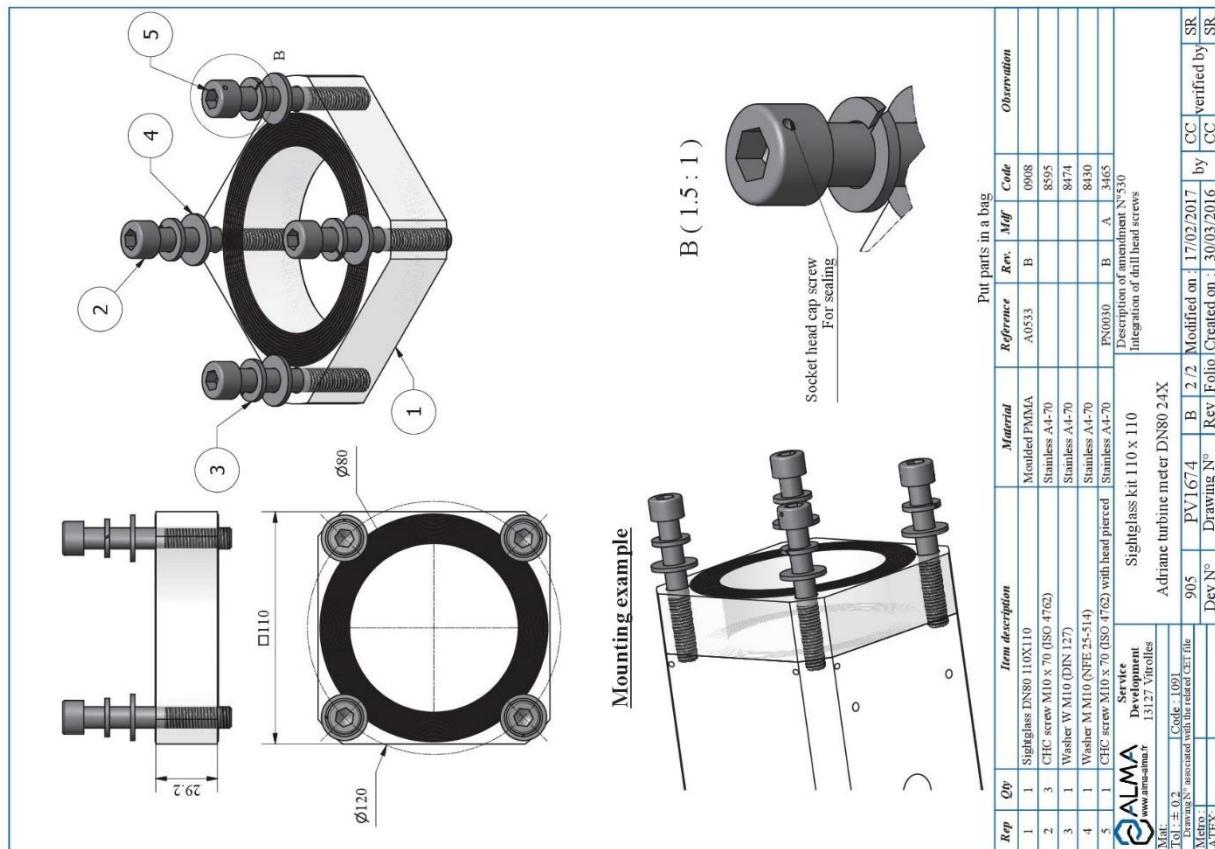

		ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY					
		THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION					
		INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx				Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
		This document is available at www.alma-alma.fr				Page 40/46	
Mati:	Tol: ± 0.2	Code: 8099	Code: 1091	Modified on: 17/02/2017	by CC	verified by SR	
Drawings associated with the related CFD file		902	PV1669	B / 2 / 2			
Metro:		Dev N°	Drawing N°	Rev Folio	Created on: 30/03/2016		
ATEX:		Dev N°	Dev N°	Dev N°	Drawing N°	Rev	Modified on: 17/02/2017

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

10.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN50 OR DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 41/46

11. CONTROL OF THE PUMP

11.1. PNEUMATIC DIAGRAM HIGH FLOW CONTROL OF THE BY-PASS

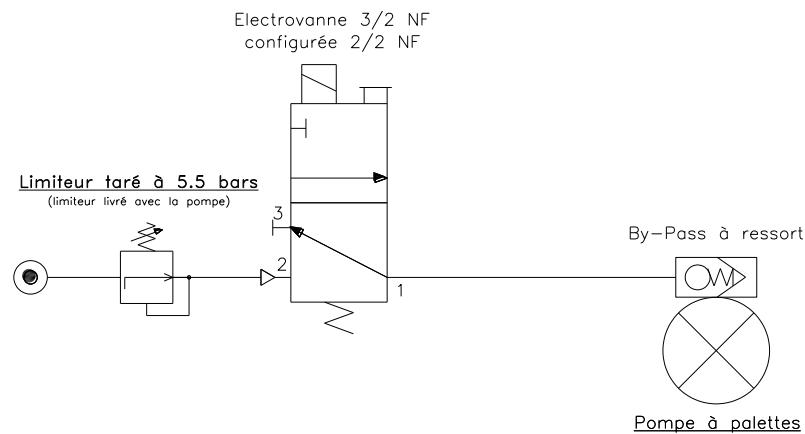


- Arrivée d'air, pression MAX. de l'installation:
 - 5,5 bar pour les pompes de type CC8 40/50
 - 5,5 bar pour les pompes de type CC10 24
 - 7 bar pour les pompes de type TXH3-AV.

— Tube RILSAN diamètre 6/4.

**POUR EVITER TOUT PROBLEME DE FUITE D'AIR,
UTILISER LES OUTILS ADEQUATS ET RESPECTER
LES RAYONS DE COURBURE.**

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
ALMA	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 42/46

11.2. HYDRAULIC SPOOL VALVE CONTROL DIAGRAM

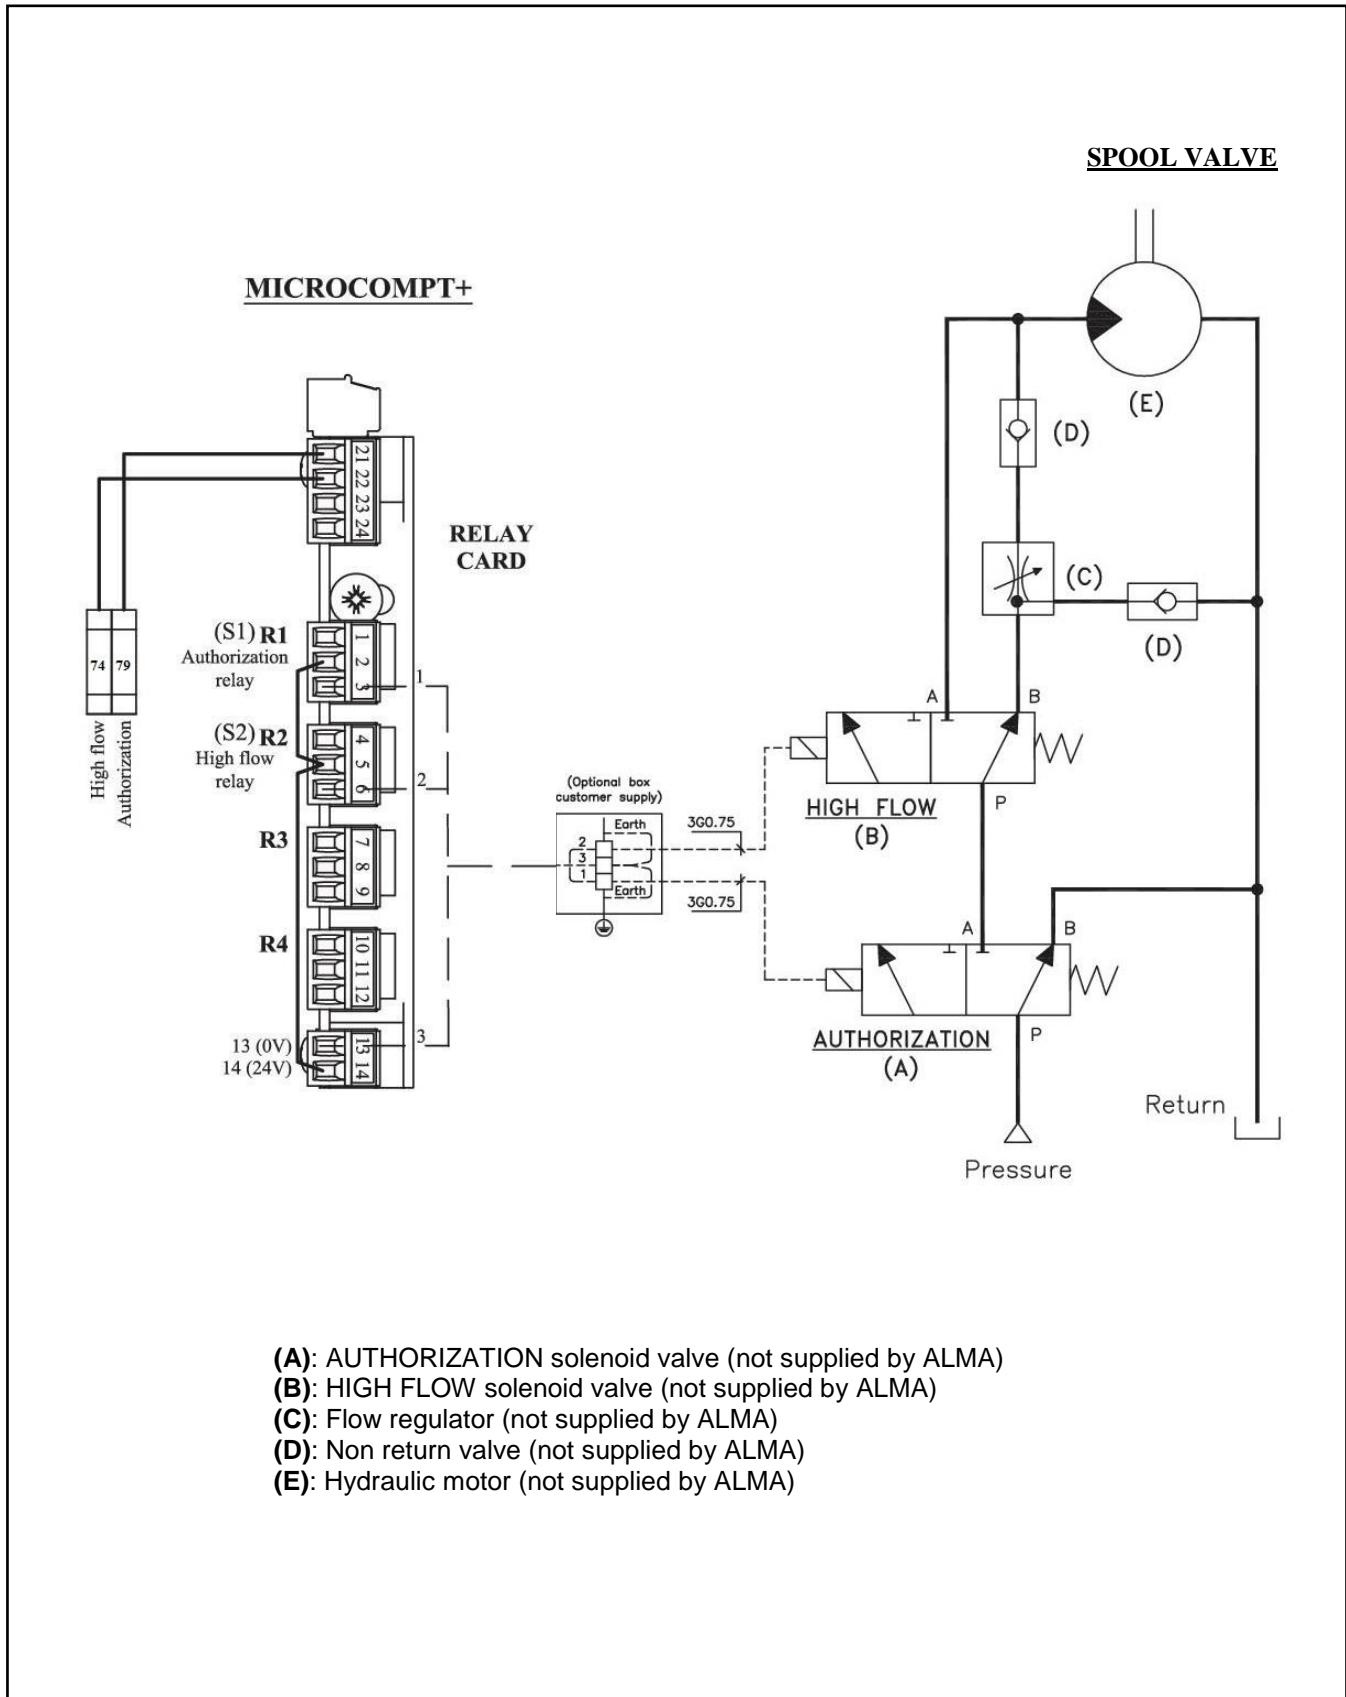

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 43/46

12. TEMPERATURE PROBE Pt100 – CT1001 ATEX

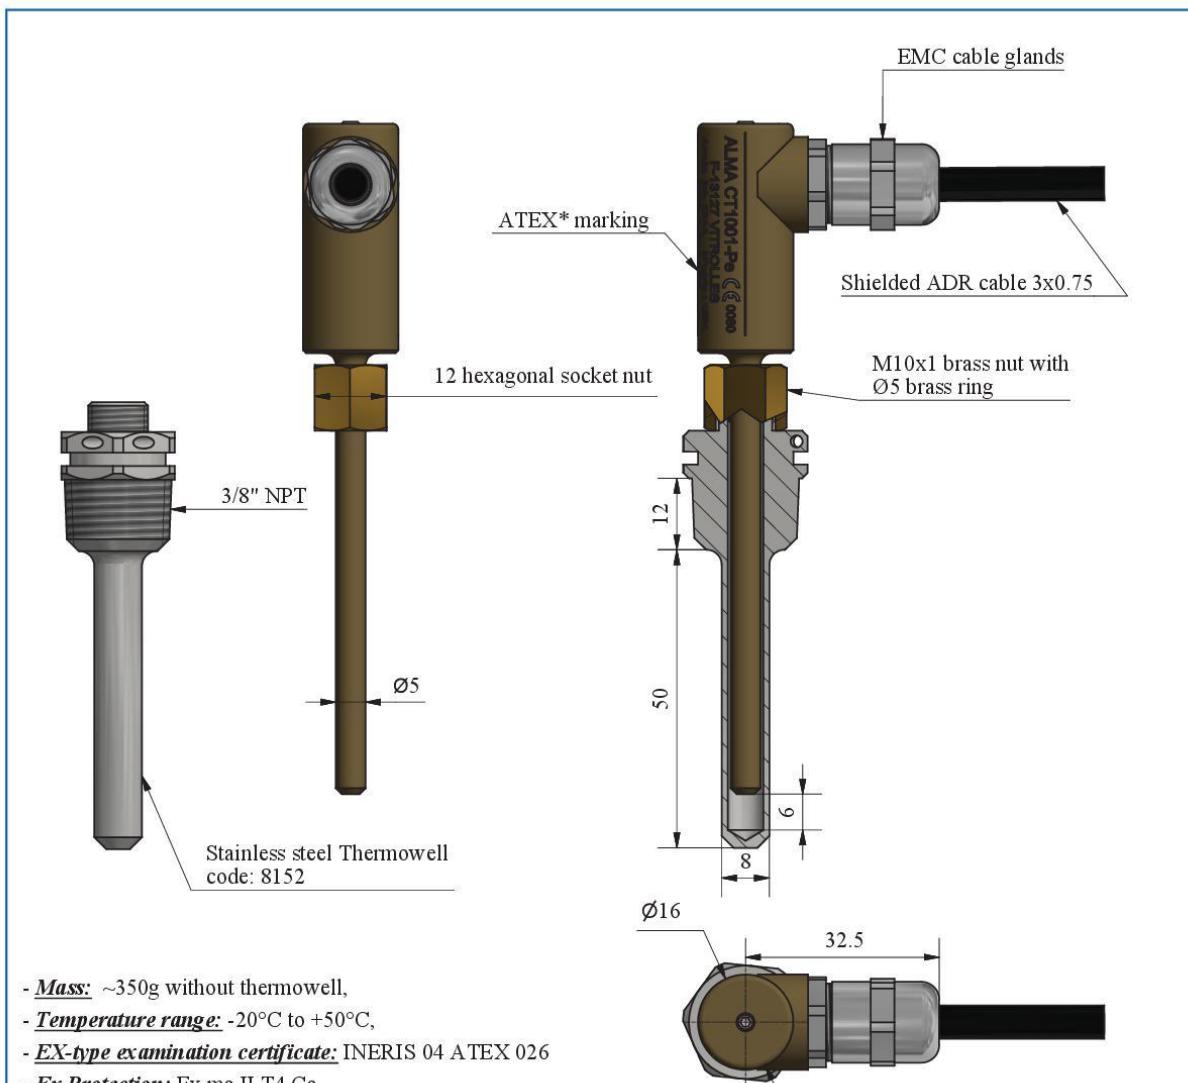

- **Mass:** ~350g without thermowell,
- **Temperature range:** -20°C to +50°C,
- **EX-type examination certificate:** INERIS 04 ATEX 026
- **Ex Protection:** Ex ma II T4 Ga

The sensor body is made of bronze color anodized aluminum alloy; The ring and the nut are made of brass. The probe can be mounted either on a ALMA thermowell or on a thimble connection 1/4 "BSP (M10x1 n5). Before installation, lubricate the parts in contact with the thermowell or the boss, to prevent corrosion

PT100 features:

- 3 wires
- 1/3 DIN

*ATEX "ma" certification.
For installation and use in hazardous areas see Instruction manual


Also available with output connector according to IEC 60947-5-2

Connecting the cable		
Function	Marking on the wire	Color wire
PT100/1	1	Yellow
PT100/2	2	White
PT100/3	3	Green

ALMA www.alma-alma.fr Service Development 13127 Vitrolles DEV N° : 949d Code : 8151 Drawing N° associated with the related CET file Metro : ATEX :	PRESENTATION DRAWING DFV042				Description of the amendment N°662 Removal of the apparent 5mm requirement on the wiring			
	Temperature probe CT1001-Pe							
949d	PPV042	L	5 / 6	Modified on :	29/03/2019	by	CHR	verified by CC
Dev N°	Drawing N°	Rev	Folio	Created on :	13/09/2003	by	BM	verified by BM

	ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY							
	THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION							
	INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx							
	This document is available at www.alma-alma.fr							Page 44/46
	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C							

12.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE

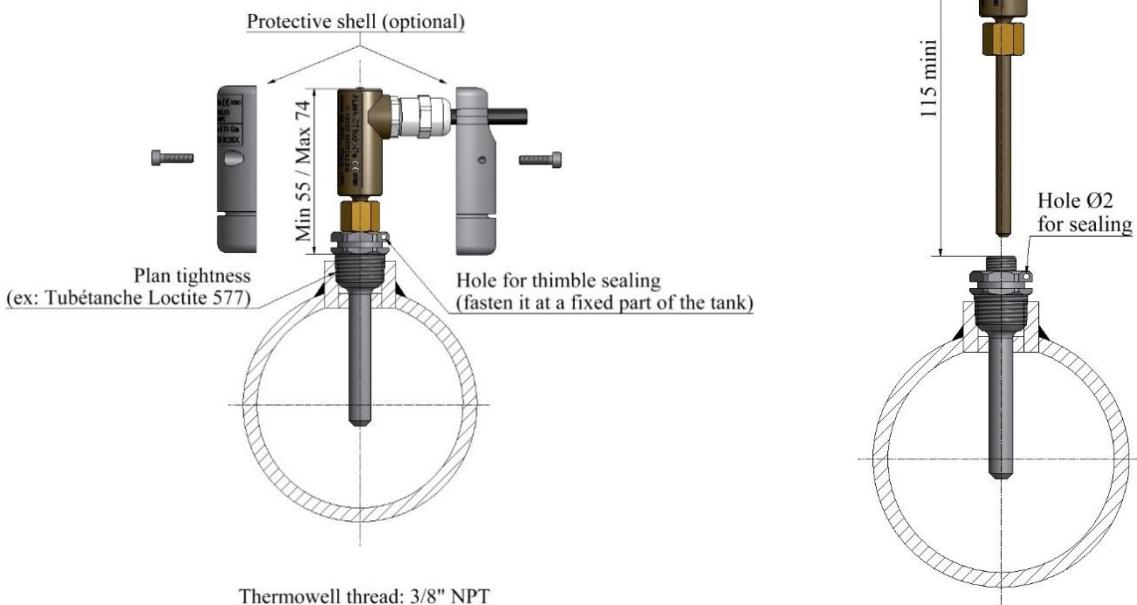

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

INSTALLATION OF THE TEMPERATURE SENSOR ON THE ALMA TURBINE METER:



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 020 EN D TURBOTRONIQUE TYPE MTS-xx ET MTP-xx



This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 45/46

13. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

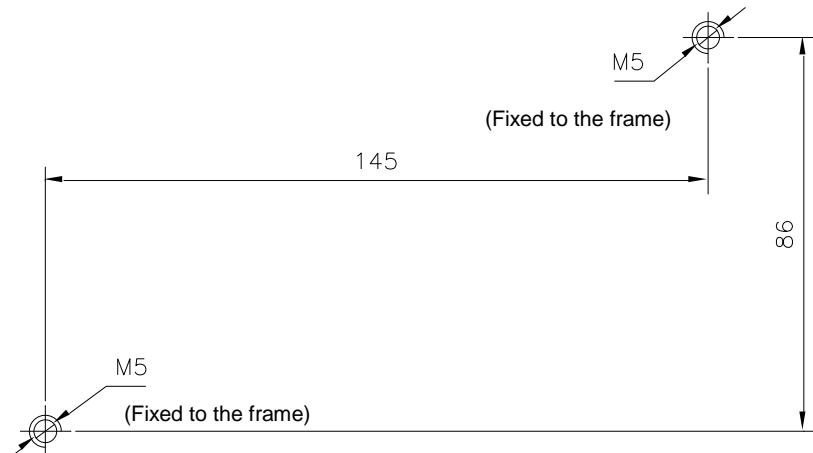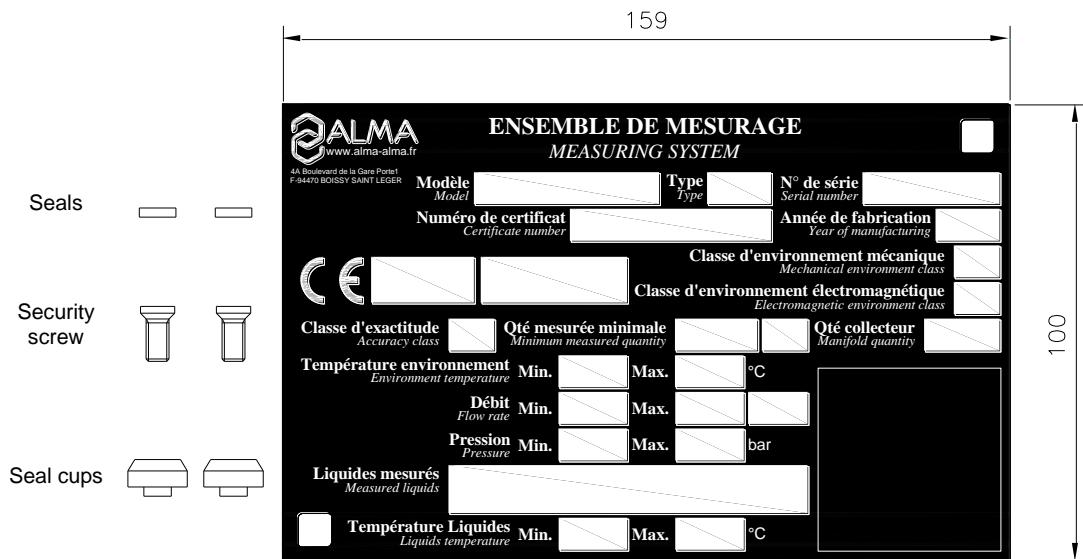

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 020 EN D
TURBOTRONIQUE TYPE MTS-xx ET MTP-xx

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 46/46