

INSTALLATION GUIDE

DI 015 EN B

GRAVITRONIQUE

Described in EC-type examination certificate N°: LNE-27785



B	2015/09/15	Non-return valve 0.03 bar, 4-relais electronic board	DSM	AH
A	2015/05/04	Creation	DSM	AH
Issue	Date	Nature of modifications	Written by	Approved by

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE			Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr			Page 1 / 42

CONTENTS

1. GENERAL RECOMMENDATIONS	4
MECHANICAL RECOMMENDATIONS	4
ELECTRICAL RECOMMENDATIONS	5
PNEUMATIC RECOMMENDATIONS.....	7
2. GENERAL PRESENTATION	8
MEASURING SYSTEM INSTALLED ACCORDING TO MID CERTIFICATE.....	8
SPECIAL CONDITIONS FOR INSTALLATION IN ANY CASES	8
3. PART LIST.....	8
4. MICROCOMPT+ GRAVITRONIQUE	11
5. INSTALLATION RECOMMENDATIONS MICROCOMPT+	12
6. ELECTRICAL WIRING MICROCOMPT+.....	13
7. CONTROL BOX GRAVITRONIQUE	19
8. ELECTRIQUE WIRING CONTROL BOX.....	20
9. PNEUMATIC WIRING CONTROL BOX.....	22
10. ADRIANE TURBINE METER DN100-80 243 TTMA	23
11. INSTALLATION RECOMMENDATIONS ADRIANE TURBINE METER	24
12. DIFFERENTIAL PRESSURE TRANSMITTER CP3000	25
13. INSTALLATION RECOMMENDATIONS CP3000 (ATEX)	26
14. NC/NO SOLENOID VALVES KIT (ATEX)	27
15. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75-CO	28
16. INSTALLATION RECOMMENDATIONS DG3001/75	29
17. PRINTER.....	30
18. INSTALLATION RECOMMENDATIONS PRINTER	31
19. CONVERTER 24VDC/24VDC 2.1A 50W	32
20. PNEUMATIC CONTROL VENT VALVE KIT	33
21. INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VALVE.....	34
22. VACUUM BREAKER.....	35
23. INSTALLATION RECOMMENDATIONS VACCUM BREAKER	36
24. DN80 NON-RETURN VALVE KITS.....	37
25. PT100 TEMPERATURE PROBE – CT1001	38
26. INSTALLATION RECOMMENDATIONS TEMPERATURE SENSOR.....	39
27. ADRIANE TURBINE METER DN80-80 243 110X110.....	40

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

 ALMA	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	

28. SIGHTGLASS FOR ADRIANE TURBINE METER DN80 110X110	41
29. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE	42

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 42

1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.


BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.

MECHANICAL RECOMMENDATIONS

- Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipments (instruction manual supplied with the equipments).
- Take care to place the equipments in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- Take care to position properly the equipment; the display must be readable without any difficulty.
- Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903).
- Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- Respect cables and corrugated conduit radii of curvature.
- Leave enough flexibility to wires in order to avoid any risk of stripping.
- Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
 ALMA	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 42

ELECTRICAL RECOMMENDATIONS

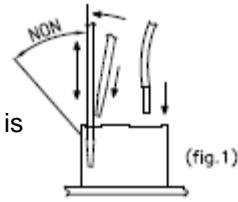- Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipments (instruction manual supplied with the equipments).
 - Connect the supply of the equipments downstream cut-out, on the power supply reserved to the measured distribution.
 - Put a delayed protection of 5A upstream the 24VDC supply to protect equipments in case of reverse polarity or overcurrent.
 - Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903).
 - Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- 
- Pass the power supply cores (24Vdc truck) through the ferrites by carrying out a loop (ALMA supply).
 - Do not use wires of section higher than 1.5mm².
 - Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
 - Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
 - Whenever possible, perform a wired test, after wiring and before powering.
 - Whenever possible, respect the locations of the cables specified in the installation guide.
 - Equipments must be connected to the frame ground (external ground connection).
 - Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipments). Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).
 - Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
 - Respect a homogeneous wire colour code.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 5 / 42

- Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No 3 on "ON" and the 7 others on "OFF".
- Current of the MICROCOMPT+ and printer:

ALMA equipment	Supply voltage	Current mini.	Current maxi.
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
IMPRIMANTE	24VDC +/-10%	0.1 A	5.5 A (switch-on)

- Colour code according to DIN 47100.
- Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE		
	This document is available at www.alma-alma.fr		

PNEUMATIC RECOMMENDATIONS

- Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- The air supply pressure to the inlet of the equipments must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- Use colored pneumatic pipes to ease maintenance operation.
- In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area ($L = 100 \text{ mm min.}$).
- Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Unités	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0,069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)

1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 7 / 42

2. GENERAL PRESENTATION

Measuring system installed according to MID certificate

The GRAVITRONIQUE measuring system is covered by the EC type examination certificate N° LNE-27785. Refer to this certificate for any precision about its installation.

For the sealing plan, see Annex to EC type examination certificate N° LNE-27785.

Special conditions for installation in any cases

Connection pipework between the compartments and the manifold, as between the manifold and the selection valves must have a minimum gradient of 3%.

Pumped mode: Connection pipework between the selection valve for pumped mode and the pump entry should not include reverse slopes.

If the measuring system is fitted with several delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.


Gravity mode: If appropriate, the connection pipework between the selection valve for gravity mode and decanting valve must have a minimum gradient of 3%. The vehicle on which the measuring system is installed should have a device to check its horizontality.

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ GRAVITRONIQUE (Provided with a magnetic supervisor key)	1	
2		CONTROL BOX GRAVITRONIQUE	1	
3		ADRIANE TURBINE METER DN100-80 243 TTMA with sightglass	1	
4		DIFFERENTIAL PRESSURE TRANSMITTER – CP3000 (Supplied with hydraulic shock absorber)	1	


Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 8 / 42

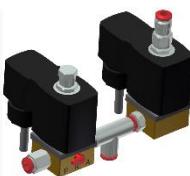EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
5		NC/NO ATEX SOLENOID VALVES KIT	1	
6		END-OF-METERING PROBE – DG3001/75 (Supplied if not mounted on the manifold)	1	
		VACUITY SENSOR – DG3001/75 (Supplied if not mounted on the manifold)	1	
7		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
8		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC)	1	
9		PNEUMATIC CONTROL VENT VALVE	1	
10		VACUUM BREAKER	1	
11		DN80 NON-RETURN VALVE KIT 0.03 bar	1	
12		DN80 NON-RETURN VALVE KIT 0.3 bar (Supplied with an empty hose)	1	•

Non-contractual/pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE		Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
This document is available at www.alma-alma.fr			Page 9 / 42	

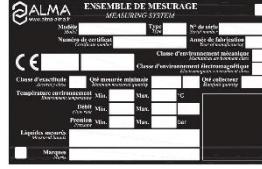EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Matériel	Désignation	Qté	Option*
13		PT100 TEMPERATURE SENSOR – CT1001 (Supplied with thermowell)	1	●
14		ADRIANE TURBINE METER DN80-80 243 110x110	1	●
15		SIGHTGLASS KIT FOR ADRIANE TURBINE METER DN80 110x110 (Supplied with pre-drilled screws for sealing)	1	●
16		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	●
Option*: equipment sold as an option by ALMA. Must be installed on the measuring system if required by the certificate.				


Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 10 / 42

4. MICROCOMPT+ GRAVITRONIQUE

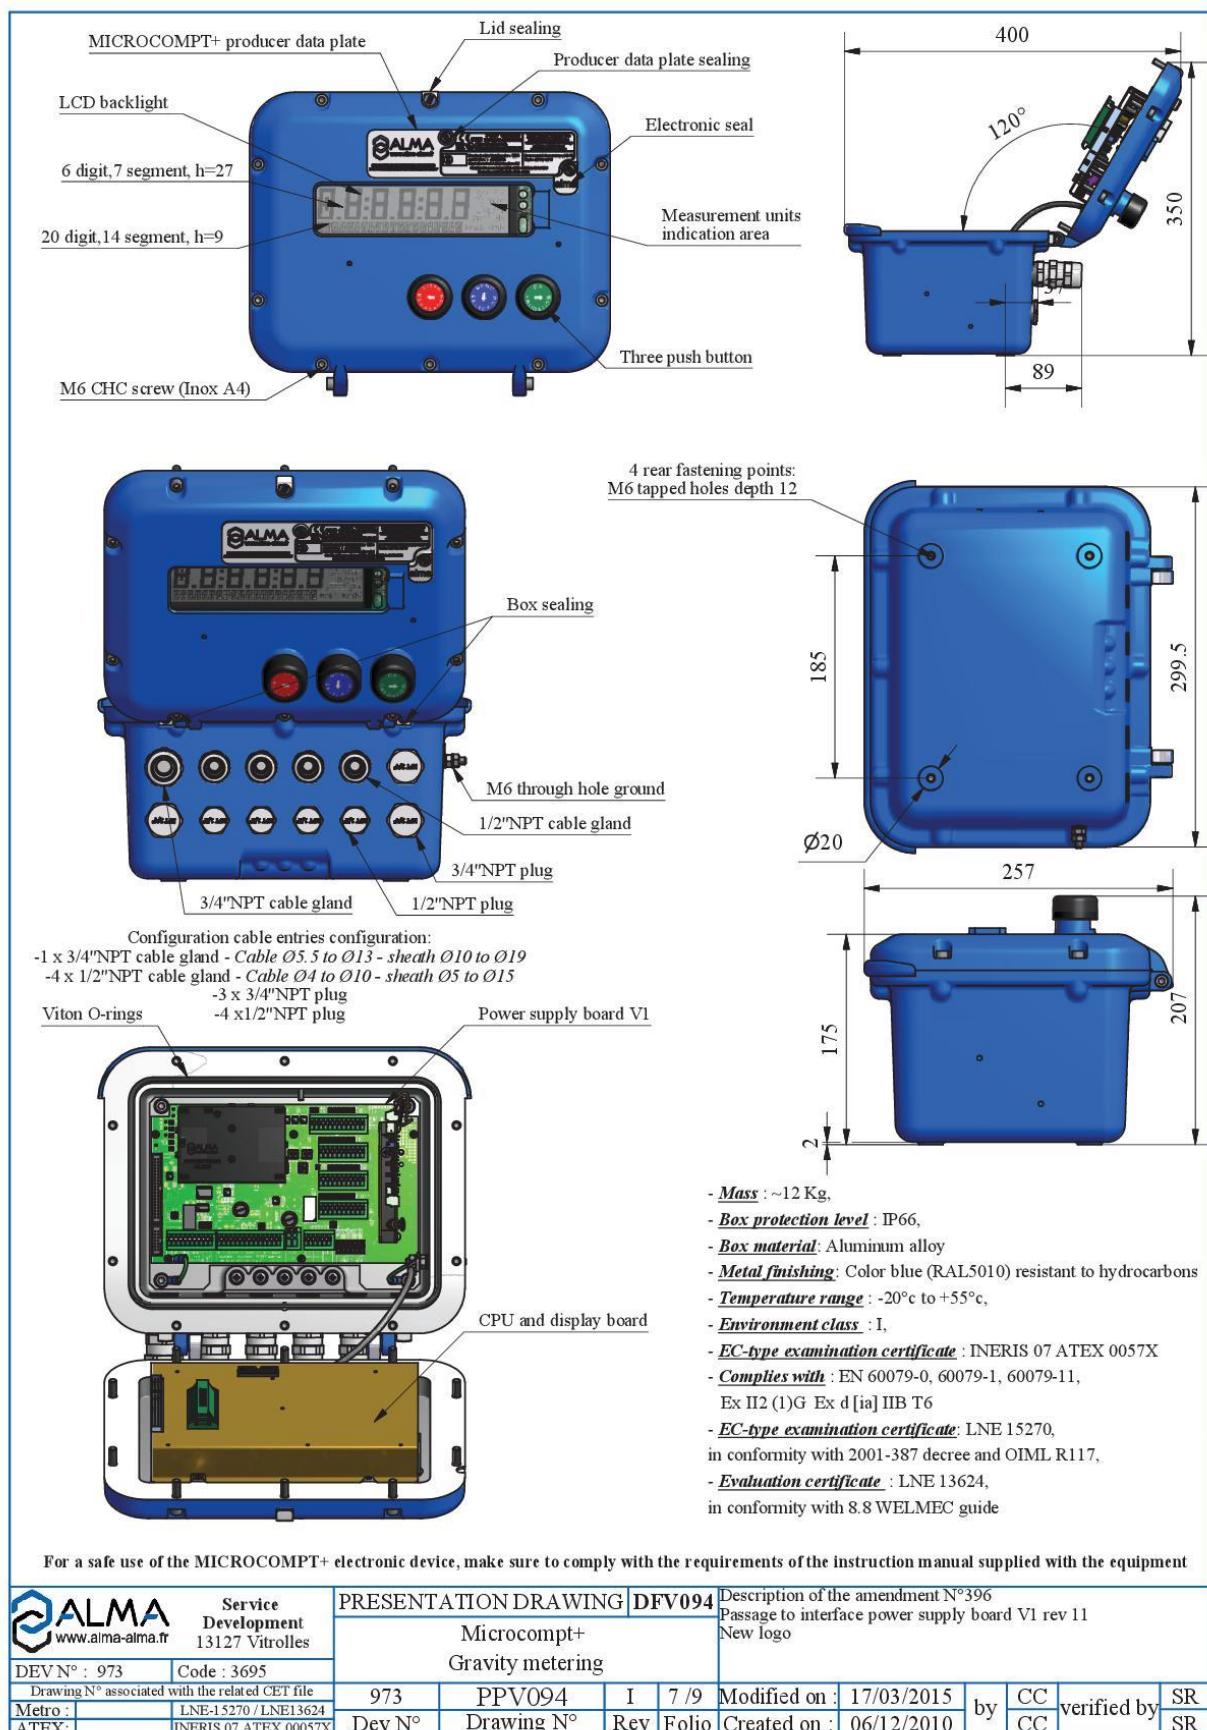


For a safe use of the MICROCOMPT+ electronic device, make sure to comply with the requirements of the instruction manual supplied with the equipment

ALMA www.alma-alma.fr		Service Development		PRESENTATION DRAWING DFV094		Description of the amendment N°396				Passage to interface power supply board V1 rev 11 New logo			
		13127 Vitrrolles		Microcompt+ Gravity metering									
DEV N° :	973	Code :	3695	973	PPV094	I	7 / 9	Modified on :	17/03/2015	by	CC	verified by	SR
Drawing N° associated with the related CET file		Dev N°	Drawing N°	Rev	Folio	Created on :	06/12/2010						
Metro :	LNE-15270 / LNE13624												
ATEX:	INERIS 07 ATEX 0057X												


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY													
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION													
ALMA		INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE										Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
		This document is available at www.alma-alma.fr										Page 11 / 42	

5. INSTALLATION RECOMMENDATIONS MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: A > 100mm and B > 60mm

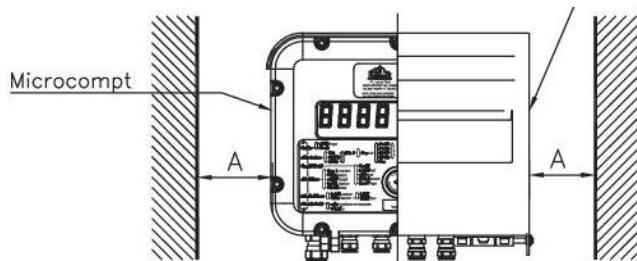

- SOLUTION 1: straight box if it's a breast height.

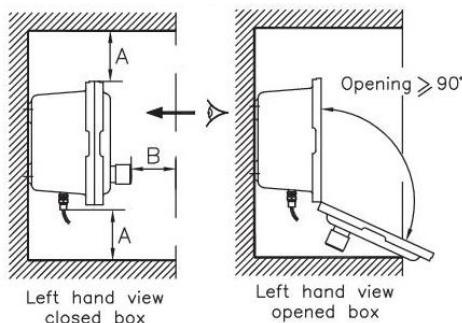


- SOLUTION 2: 20° angle if it's not a breast height.

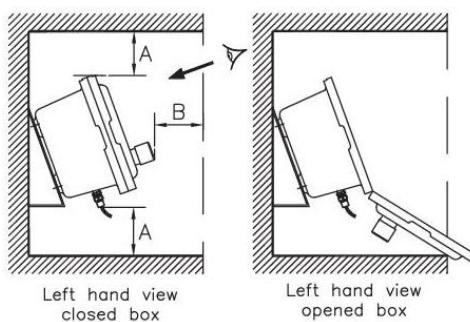

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 12 / 42

6. ELECTRICAL WIRING MICROCOMPT+

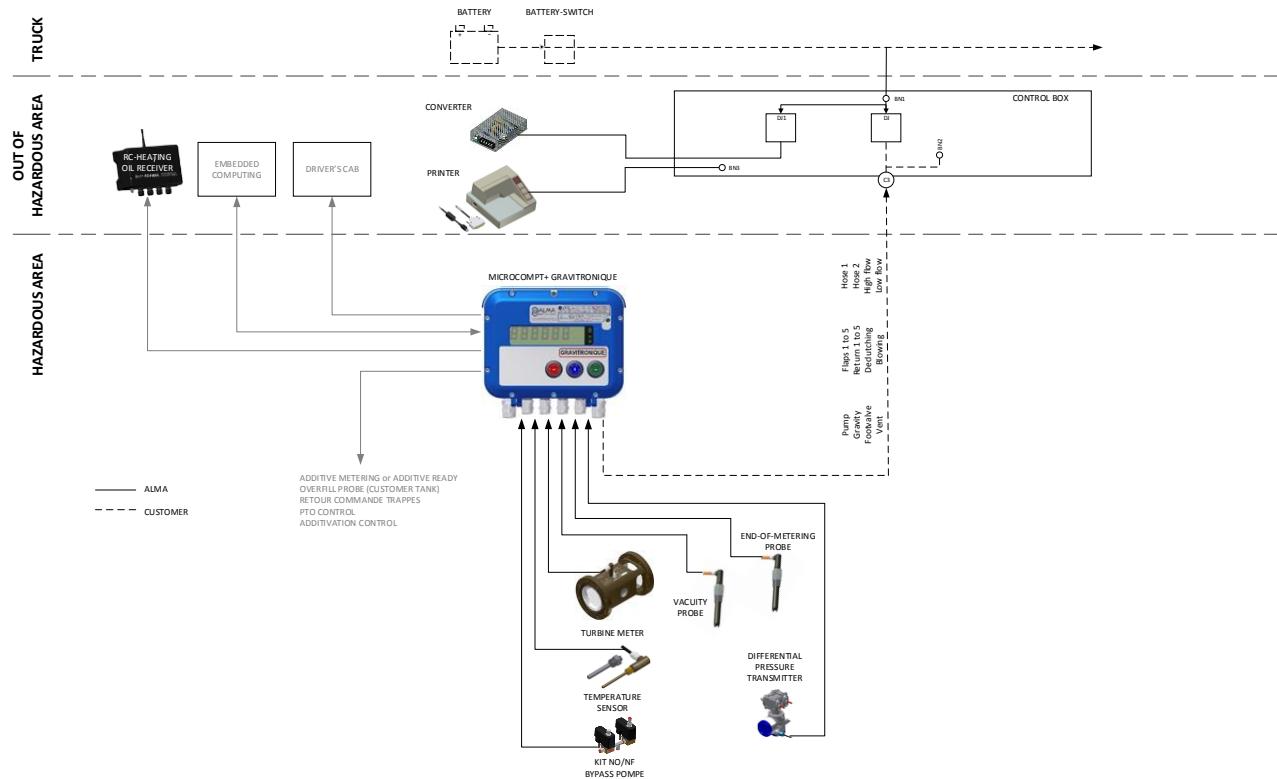

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY


THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 13 / 42

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNEMENT OF MICROCOMPT+ BOARDS

INTERFACE POWER SUPPLY BOARD

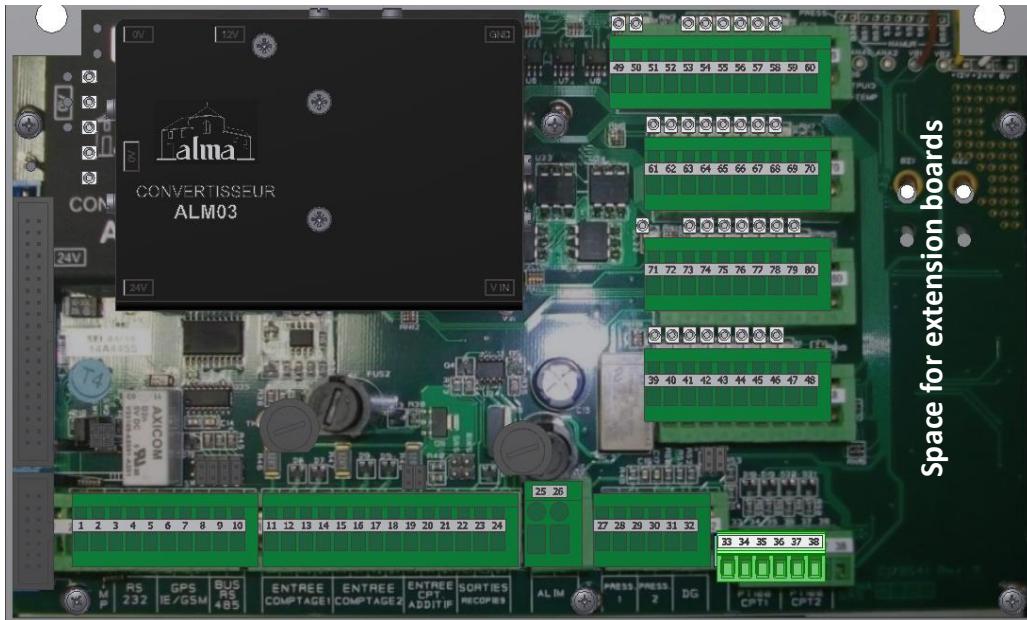

EQUIPMENTS CONNECTED TO THE MICROCOMPT+

Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	INTERFACE POWER SUPPLY BOARD		Observation
		No.	CG*	Alma	Type				Function	Terminal	
	GRAVITRONIQUE CONTROL BOX	C2	1/2"NPT	●	2x1 sh.	Rx Printer		1	Tx	RS232 PRINTER	RS232 serial link
●	EMBEDDED COMPUTING			3x0.34 sh.	3x0.34 sh.	Tx Printer		2	Rx	RS232	Connect the shielding
						0V		3	0V		
						Rx E.C.		4	Tx		
●	EMBEDDED COMPUTING					Tx E.C.		5	Rx	BUS RS485	
						Rx		9	+		
						Tx		10	-		
●	TURBINE TRANSMITTER	C1	1/2"NPT	●	ADR 4x0.34 sh.	12V	Jn	11	12V	METERING INPUT 1	Connect the shielding
						V1	Mr	12	V1		
						V2	Vt	13	V2		
						0V	Bc	14	0V		
						12V		19	12V		
●	ADDITIVE METERING INPUT or ADDITIVE READY					V1		20	V1	METERING INPUT 2	Connect the shielding
						0V		21	0V		
						+	Jn	33	+		
●	PT100 TEMPERATURE PROBE			●	ADR 3x0.6 sh.	-	Bc	34	-	PT100	Connect the shielding
						-	Vt	35	-		

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 ENB GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
		This document is available at www.alma-alma.fr

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							INTERFACE POWER SUPPLY BOARD			
Option	Equipement	Cable (forr information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
GRAVITRONIQUE CONTROL BOX	C3	3/4"NPT	20x1			Pump	1	73	FET=Field Effect Transistor Outputs 24VDC (outputs FET 24V 5W max.)	Selection valve pumped distribution
						Gravi	2	79		Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)
						Footvalve	3	44		Footvalve
						Vent	4	45		Vent
						Flap 1	5	39		Manifold vent control
						Flap 2	6	40		Opening-control flap 1
						Flap 3	7	41		Opening-control flap 2
						Flap 4	8	42		Opening-control flap 3
						Flap 5	9	43		Opening-control flap 4
						Return 1	10	63		Opening-control flap 5
						Return 2	11	64		Opening-control return 1
						Return 3	12	65		Opening-control return 2
						Return 4	13	66		Opening-control return 3
						Return 5	14	67		Opening-control return 4
						Declutching	15	62		Opening-control return 5
						Blowing	16	68		Declutching
						Hose 1	17	76		Pump declutching or Motor acceleration (if automatic transmission)
						Hose 2	18	77		Blowing
						HF	19	78	API	Product return blowing
						LF	20	79		Selection valve hose 1(pumped)
• RC-HEATING OIL RECEIVER			2x1			Start/Stop	1	49	Start/Stop	RC-Oil_1
						LF/HF	2	50	LF/HF	RC-Oil_2
• OVERFILL PROTECTION (customer tank)								53		Overfill protection probe (customer tank)
FLAP-CONTROL FEEDBACK								54		Flaps manual control
PTO CONTROL				1x1	PTO Ctrl			58		Flap-control feedback (if manual control of flaps)
DRIVER'S CAB CONTROL				3x1	PTO	4	61	24VDC=PTO	PTO	Power-take-off engaged
ADDITIVATION CONTROL				2x1	Supply	1	71	NC free contact	Additivation control	(Output FET 24V 5W max.)
KIT SOLENOID VALVES NC/NO (ATEX) - PUMP BYPASS	C4			3xG0.75	Control	2	72			FET=Field Effect Transistor
					NC valve	1 / Mr	74	24VDC	NO or LF	Closed contact=additivation (Output: NO free potential relay)
					Pump bypass	2 / Bl	80	0V		24VDC = opening NC solenoid valve or HF control
					NO valve	1 / Mr	75	24VDC	NC or HF	24VDC = closing NO solenoid valve or LF control
					Exhaust	2 / Bl	80	0V		

**Refer to the Cable Glands Installation Instruction*

Factory pre-wiring

								INTERFACE POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	EXTENSION BOARD 4-RELAIS					Motor control		22	Start Mot.	To extention board 4-relais	(Open collector output)
								23	Stop Mot.		(Open collector output)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENB
GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$ $'$ $''$)
Temperature: $^{\circ}\text{C}$


Page 15 / 42

EXTENSION BOARD 4DG (SI)

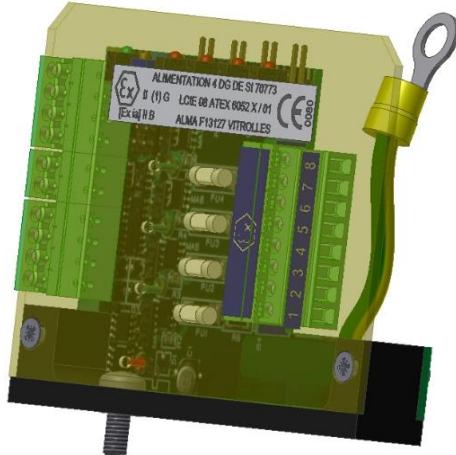

EQUIPMENTS CONNECTED TO THE MICROCOMPT+							CARTE EXTENSION 4DG (SI)			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	END-OF-METERING PROBE				3x0.34	EMP	Mr	1	+	Connect the shielding
							Bl	2	-	
	VACUUM SENSOR				3x0.34	VACUITY	Mr	3	+	Connect the shielding
							Bl	4	-	
	DIFFERENTIAL PRESSURE TRANSMITTER				ADR 2x0.34 sh.	PRESSURE	Bc	5	+	Connect the shielding
							Mr	6	-	

*Refer to the Cable Glands Installation Instruction

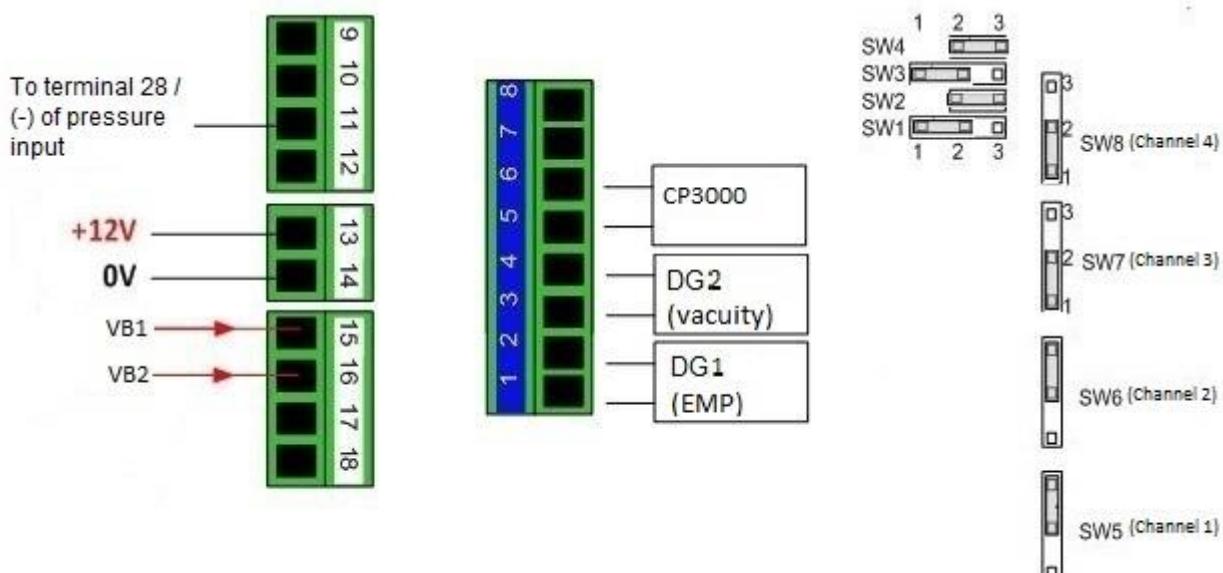
Jumper configuration on the extension board 4DG:


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 16 / 42

EXTENSION BOARD SI SONDE AD

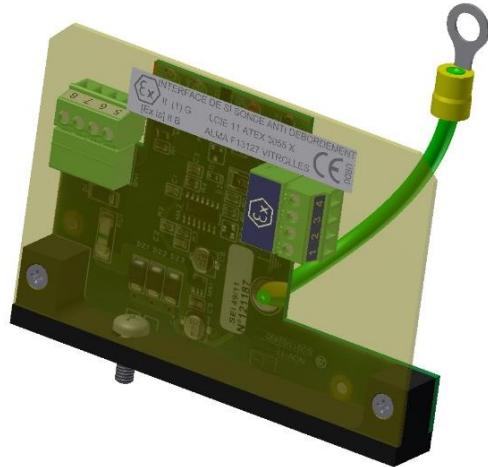


EQUIPEMENTS CONNECTED TO THE MICROCOMPT+							EXTENSION BOARD SI SONDE AD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function	Observation
		No.	CG*	Alma	Type					
	OVERFILL PROTECTION PROBE PLUG		[6x1]			Common	[Nr]	1	-	OVERFILL PROTECTIO N PROBES <i>[if supplying by ALMA]</i>
						Supply	[Rg]	2	+	
						From probe	[Or]	3	From probe	
						To probe	[Jn]	4	To probe	

*Refer to the Cable Glands Installation Instruction

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 17 / 42

EXTENSION BOARD 4-RELAIS

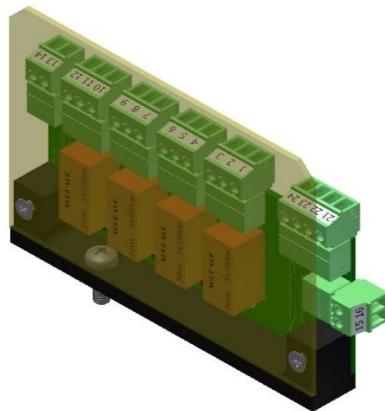

EQUIPEMENTS CONNECTED							EXTENSION BOARD 4-RELAIS				
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
•	DRIVER'S CAB CONTROL		3X1			Start motor		1	NC	Start motor	Dry contact
								2	Common		
								3	NO		
			3X1			Stop motor		4	NC	Stop motor	Dry contact
								5	Common		
								6	NO		

*Refer to the Cable Glands Installation Instruction

Factory pre-wiring

INTERFACE POWER SUPPLY BOARD							EXTENSION BOARD 4-RELAIS				
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	POWER SUPPLY					Supply		13	24VDC	Supply	
	MOTOR CONTROL					Motor control	22	21		Motor control	
							23	22			



On the extension board 4-relais, cut the diodes D3 and D4 off.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
		This document is available at www.alma-alma.fr

7. CONTROL BOX GRAVITRONIQUE



Technical data

- Lemfördern line**

 - Enclosure : black polyester 250x400x120 (Non ATEX).
 - Protection class : IP66
 - Temperature range : -5°C to +60°C
 - Mass: 5.9 kg
 - Electrical part :
 - Operating voltage : 24VDC (track).
 - 4 thermal-magnetic circuit breakers 3A
 - (24VDC output power supply. Microcompt+ connection).
 - 1 thermal-magnetic circuit breaker 1A
 - (24VDC output power supply, printer connection by converter 50W).
 - 1 serial link RS232 (printer connection).
 - Terminals : 2.5mm² max.
 - Distributor operating voltage : 24VDC $\pm 10\%$
(current per coil : pull 1.12W(47mA) - holding 0.37W(15.5mA)).
 - Pneumatic part :
 - Fluid : compressed air preferably non-lubricated
 - (Operate your system with non-lubricated compressed air if possible.
 - Operation with lubricated compressed air will cause a "washing" of lifetime lubrication of pneumatic valves.
 - If the compressed air is lubricated, it must be permanent and properly in order to avoid any malfunction of pneumatic valves).
 - Filtration 40µm
 - Operating pressure : 1.5 to 10 bar.
 - Pilot pressure : 1.5 to 8 bar (pressure regulator calibrated to 6 bar).
 - Flow rate : 1.50 l/mm.
 - Pneumatic fitting : for pipe 6/4.
 - Seal unused outlets with plugs.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY



INSTALLATION GUIDE DI 015 ENB GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$)
Temperature: $^{\circ}\text{C}$

Page 19 / 42

Document available on website alma.fr

8. ELECTRIQUE WIRING CONTROL BOX

TERMINAL ASSIGNMENT OF CONTROL BOX											
EQUIPMENTS CONNECTED TO THE CONTROL BOX							CONTROL BOX TERMINAL BLOCKS				
Option	Equipement	Cable (for information)				Fnction	Colour or No.	Block	Terminal	Function	Observation
		No.	CG*	Alma	Type						
MICROCOMPT+	SUPPLY	A1			2x1	24VDC	1	BN1	1	24VDC	Supply
						0V	2		2	0V	
		C3	3/4"NPT	20x1	24VDC	2	BN2	1	Gravity	Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)	
					24VDC	4		3	Vent		
					24VDC	10		5	Return 1		
					24VDC	11		7	Return 2	Product return	Product return 1 to 5
					24VDC	12		9	Return 3		
					24VDC	13		11	Return 4		
					24VDC	14		13	Return 5		
					24VDC	16		15	Blowing		
					24VDC	18		17	Hose 2		
					24VDC	19		19	HF / Hose 3 / Flap 6 / Special return		High flow of an API adaptor or Selection valve hose 3 (pumped) or flap control compartment 6 or Special return
					24VDC	1		2	Pump		
					24VDC	3		4	Footvalve		
					24VDC	5		6	Trappe 1	Flap opening	Flap control compartments 1 to 5
					24VDC	6		8	Trappe 2		
					24VDC	7		10	Trappe 3		
					24VDC	8		12	Trappe 4		
					24VDC	9		14	Trappe 5		
					24VDC	15		16	Declutch.		
					24VDC	17		18	Hose 1		
					24VDC	20		20	Low flow	LF	Lox flow of an API adaptor (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
ALMA	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE		Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr		
		Page 20 / 42	

EQUIPMENTS CONNECTED TO THE CONTROL BOX							CONTROL BOX TERMINAL BLOCKS					
Option	Equipment	Cable (for information)				Function	Colour or No.	Block	Terminal	Function		Observation
		No.	CG*	Alma	Type							
	MICROCOMPT+	C2				Rx		BN3	8			RS232 Printer
						Tx			7			
	PRINTER		1/2"NPT		4x1 sh.	24VDC	Bc	BN4	8	24VDC	Microcompt supply	
						0V	Mr		7	0V		
						Rx	Vt		1	Rx	RS232	
						Tx	Jn		2	Tx	Printer	

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 21 / 42

9. PNEUMATIC WIRING CONTROL BOX

PNEUMATIC INPUT/OUTPUT ASSIGNMENT OF THE CONTROL BOX



Label	Input	Output	Function	Observation
AIR	X		Air supply of the box	Air if: all footvalves opened and valve bar locked
Exhaust		X	Exhaust	Put a tube L=100mm min. (no muffler)
Pump	X		Pumped way selection	
Gravity	X		Gravity way selection	
Footvalve	X		Opening footvalve	
Vent	X		Opening manifold vent	Connection to the vent valve
Product return Cpt 1	X			
Product return Cpt 2	X			
Product return Cpt 3	X			
Product return Cpt 4	X			
Product return Cpt 5	X			
Manifold flap Cpt 1	X			
Manifold flap Cpt 2	X			
Manifold flap Cpt 3	X			
Manifold flap Cpt 4	X			
Manifold flap Cpt 5	X			
Declutching	X		Declutching pneumatic cylinder	If pneumatic declutching
Blowing	X		Product return blowing	Use "&" cells to connect with each return product control
Hose 1	X		Hose 1 valve control	
Hose 2	X		Hose 2 valve control	
GD – High Flow/ Flex. – Hose 3/ Ret. Spec./ Cpt 6		X	API adaptor open in high flow	Connection to the API adaptor (HF – LF)
Low Flow		X	API adaptor open in low flow	

Unused ports must be plugged.



CONDITIONS FOR AIR SUPPLY OF THE CONTROL BOX:


- The pneumatic "&" cells of all footvalves are open.
- The bar is in its locked position (compartment API adapters are locked).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 22 / 42

10. ADRIANE TURBINE METER DN100-80 243 TTMA

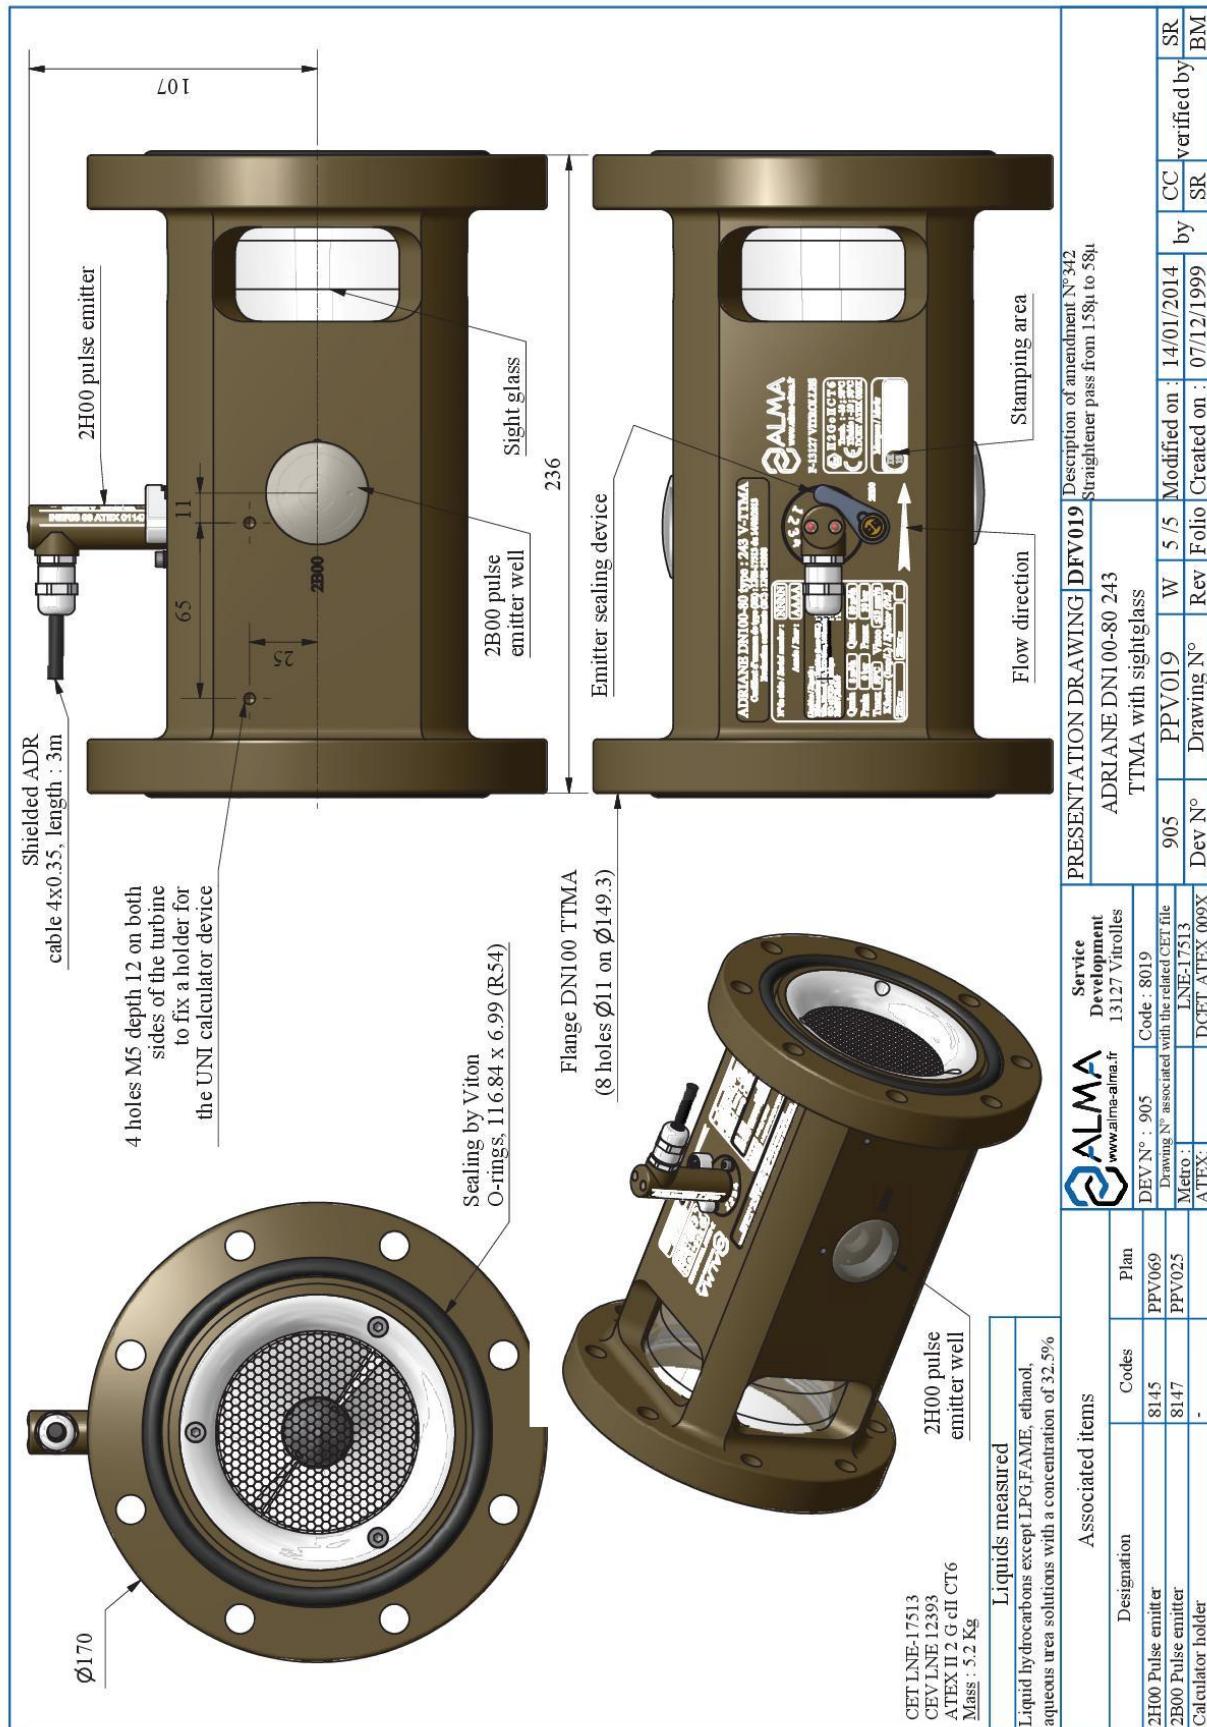


Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY					
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION					
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE This document is available at www.alma-alma.fr				
					Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
					Page 23 / 42

11. INSTALLATION RECOMMENDATIONS ADRIANE TURBINE METER

- The identification plate and the led of the pulse emitter(s) shall be visible and accessible.

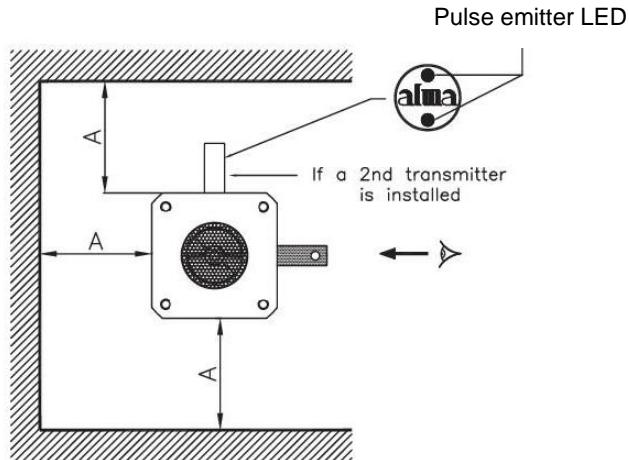

- The turbine must be installed with respect to the flow direction.
- Put sealing rings each other sides between the turbine and the backflanges.
- Leave an open space all around the turbine in order to ease maintenance.
- Install a 400 μ filter (mini) on the pipe upstream from the turbine meter.
- After installation or during the commissioning period, if the new or modified pipes have not been perfectly cleaned or pickled and passivated, the turbine should be protected by a honeycomb sieve – max. 1mm mesh. It must be placed between two flanges upstream from the turbine.
- Dimensions: A > 100mm.



The meter may be installed:

- Between two straight pipe sections that have the same nominal diameter as the meter and which lengths is at least equal to 10 times this diameter upstream and 5 time downstream.
- Between two pipes that have the same nominal diameter as the meter, with shorter or no straight sections, provided that no flowrate adjustment device (eg. a variable-opening valve) is located upstream at a distance less than 10 times the nominal diameter.


Provision contained in EC Type Examination or Evaluation Certificate.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 24 / 42





12. DIFFERENTIAL PRESSURE TRANSMITTER CP3000

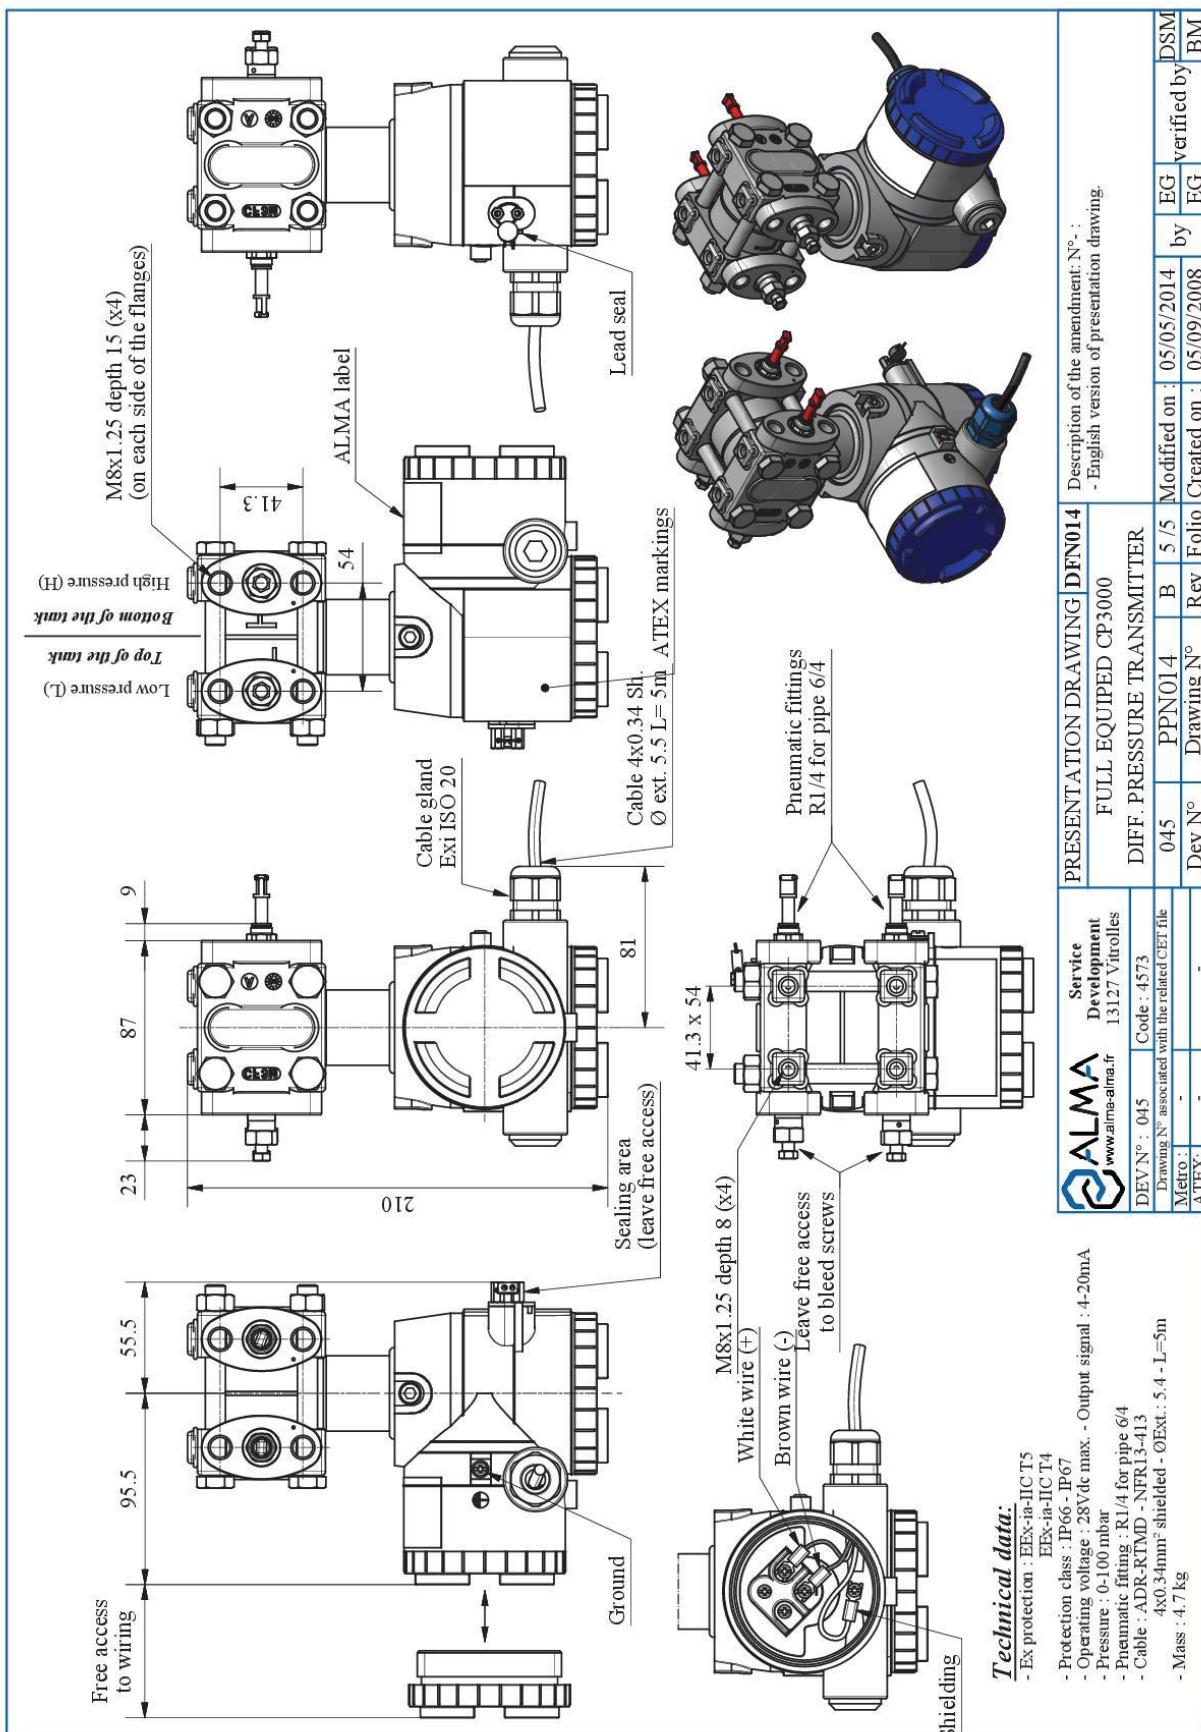

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
ALMA	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
This document is available at www.alma-alma.fr			Page 25 / 42

13. INSTALLATION RECOMMENDATIONS CP3000 (ATEX)

THE PRESSURE TRANSMITTER MUST BE INSTALLED IN UPRIGHT POSITION

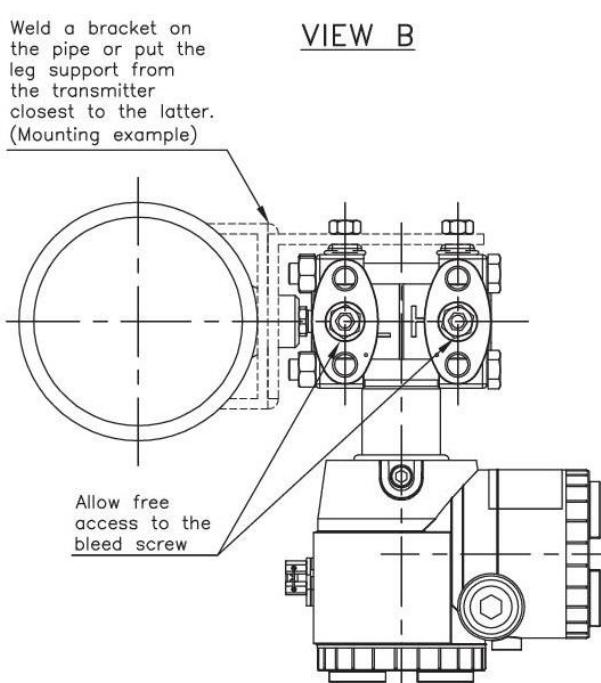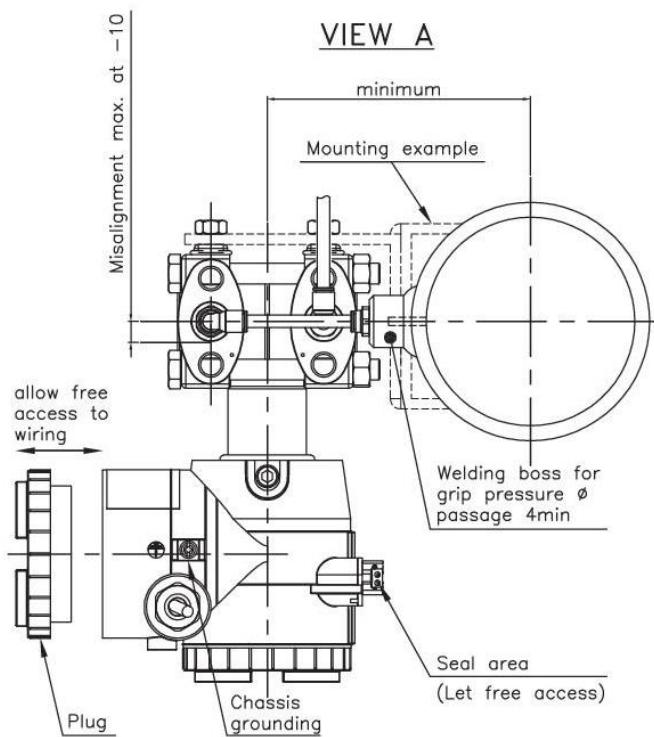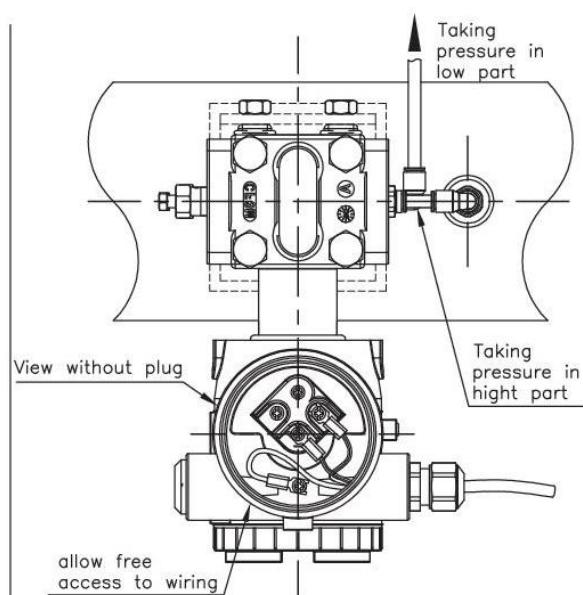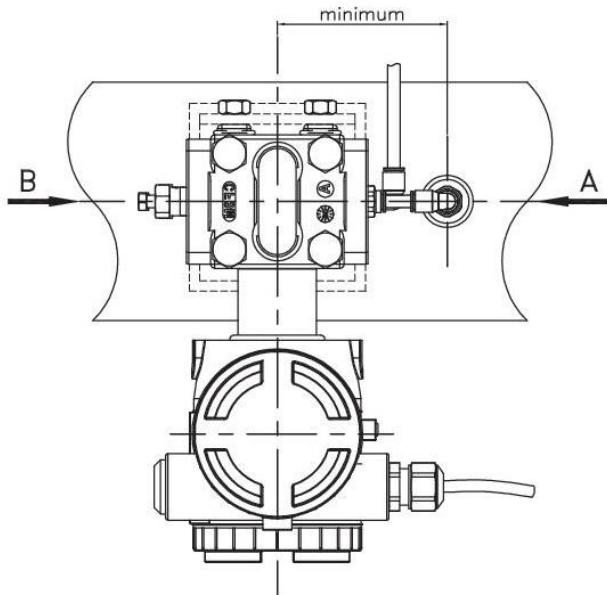

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 26 / 42

14. NC/NO SOLENOID VALVES KIT (ATEX)

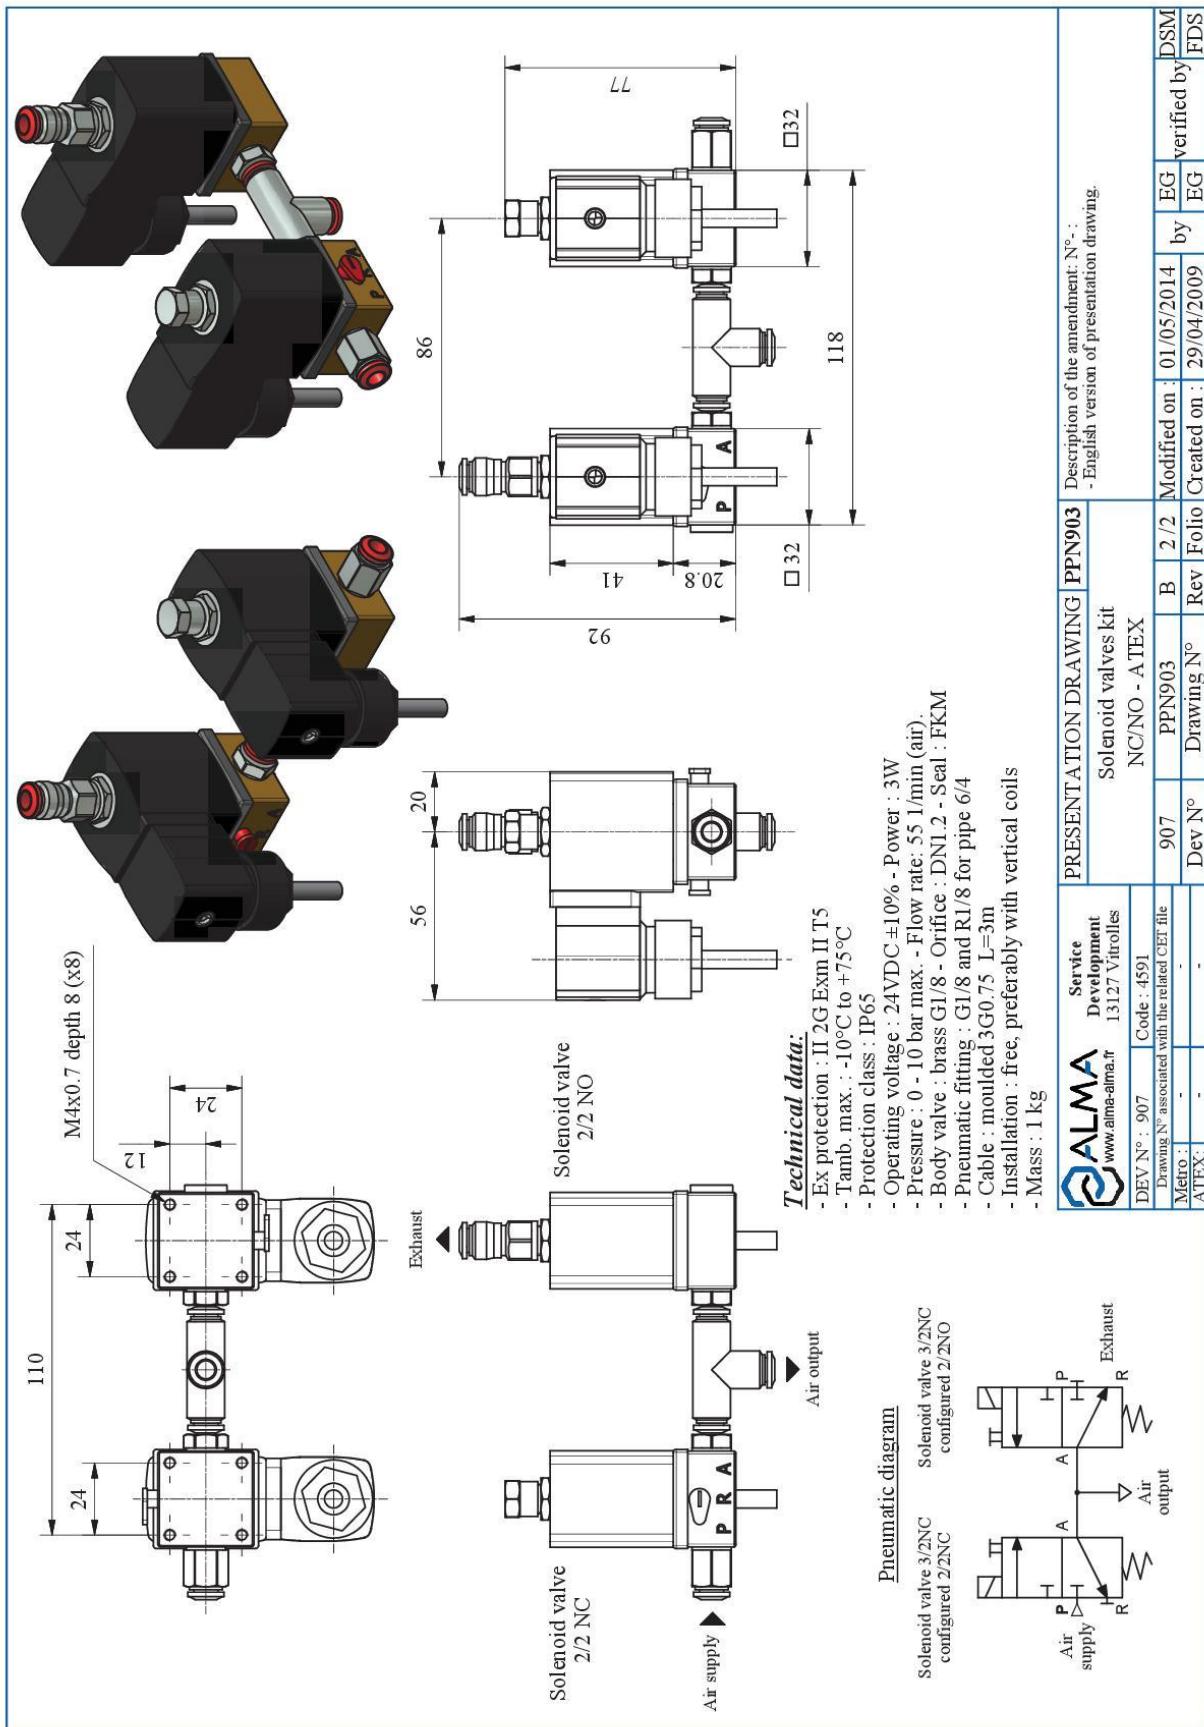

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE		Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr		
		Page 27 / 42	

15. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75-Co

<i>Codification of marking :</i>		<i>Dimensions</i>			
<i>Codes</i>	<i>Types</i>	<i>Lengths under connector (mm)</i>		<i>Materials</i>	
		<i>L min</i>	<i>L max</i>		
0513	DG 3001/30-Co	0	26	Aluminium	
8133	DG 3001/75-Co	30	71	Aluminium	
8134	DG 3001/205-Co	75	201	Aluminium	
8713	DG 3001/75-Co Inox	30	71	Inox 316 L	
0102	DG 3001/205-Co Inox	75	201	Inox 316 L	

<i>Operation</i>		
<i>Conditions</i>	<i>Gas</i>	<i>Liquid</i>
Output (mA)	35±2	15±1
Open collector output	Saturated	Blocked
I _{max} on output Co (mA)	30	
V _{ce} (V) for I _s =10mA	<0.4	
State of the red led	On	Off
State of the green led	On	On

<i>Supply</i>			
<i>Voltage VDC</i>	<i>NSI</i>	<i>SI II B</i>	<i>SI II C</i>
On power supply +	7 to 27	7 to 18*	7 to 15*
On output Co	< 27		< 13.2*

<i>Connection of the connector</i>		
<i>Function</i>	<i>Pin</i>	<i>Wire Color</i>
Power supply +	1	Brown
Power supply -	3	Blue
Output Co	4	Black

Technical drawing of the DG3001/75-Co probe showing dimensions and components. The probe has a double ring turning coupling (1/2" NPT 316L), an optical detector, and a base plate with red and green LEDs. Dimensions include height L (see table), diameter D, and width 91. ATEX marking and serial number are also indicated.

NOTE:

- The detector body is made of anodized aluminum alloy of bronze color, or Inox 316L.
- The optical sensor in contact with the liquid or gas is of polysulfone.
- The O-ring between the body and the detector is made of Viton.
- The sensor is supplied with any cable, 3 lengths are available: 5m cables (8138), 10m (8139) and 25m (8140).

*Refer to § 2 ATEX descriptive notice


 www.alma-alma.fr	Service Development 13127 Vitrolles	PRESENTATION DRAWING DFV014			Description of amendment MDV333 Adding tolerance on the inside diameter of the body		
DEV N° : 981	Code : Voir plan de présentation	Gas detector output connector DG3001, DG3001/75, DG3001/205					
Drawing N° associated with the related CET file		981	PPV014	T	5 / 6	Modified on : 14/01/2014	by CC
Metro :		Dev N°	Drawing N°	Rev	Folio	Created on : 01/04/1999	verified by SR BM
ATEX:	INERIS 03 ATEX 0097X						

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY							
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION							
		INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE					
		This document is available at www.alma-alma.fr					

16. INSTALLATION RECOMMENDATIONS DG3001/75


POSITION OF THE END-OF-METERING PROBE:

The DG3001/75 should be positioned above the top of the turbine, as close as possible to the turbine

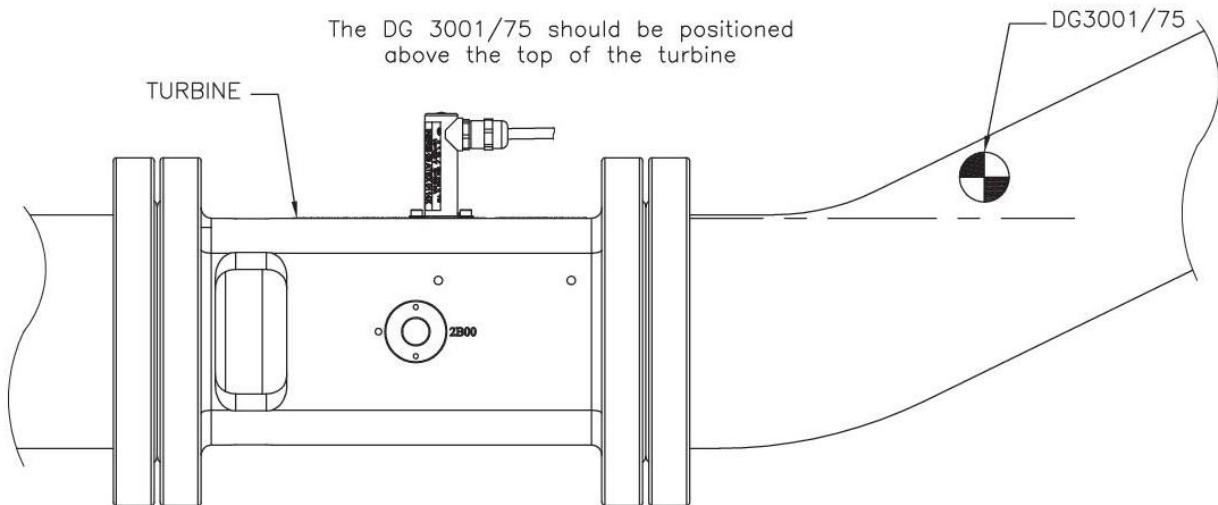


Position of the welding boss for DG3001

- horizontal position or until 30°

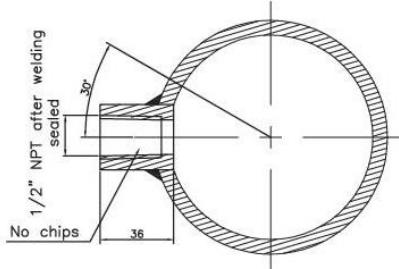

Mounting DG3001

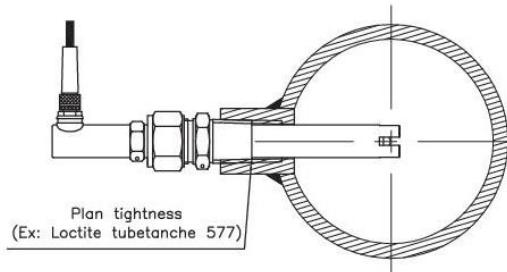

POSITION OF THE END-OF-THE VACUITY SENSOR:

The vacuity sensor must be placed as close as possible to the entry of the selection valve for pumped mode (VP)

REFER TO INSTRUCTION MANUAL

(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 29 / 42

17. PRINTER


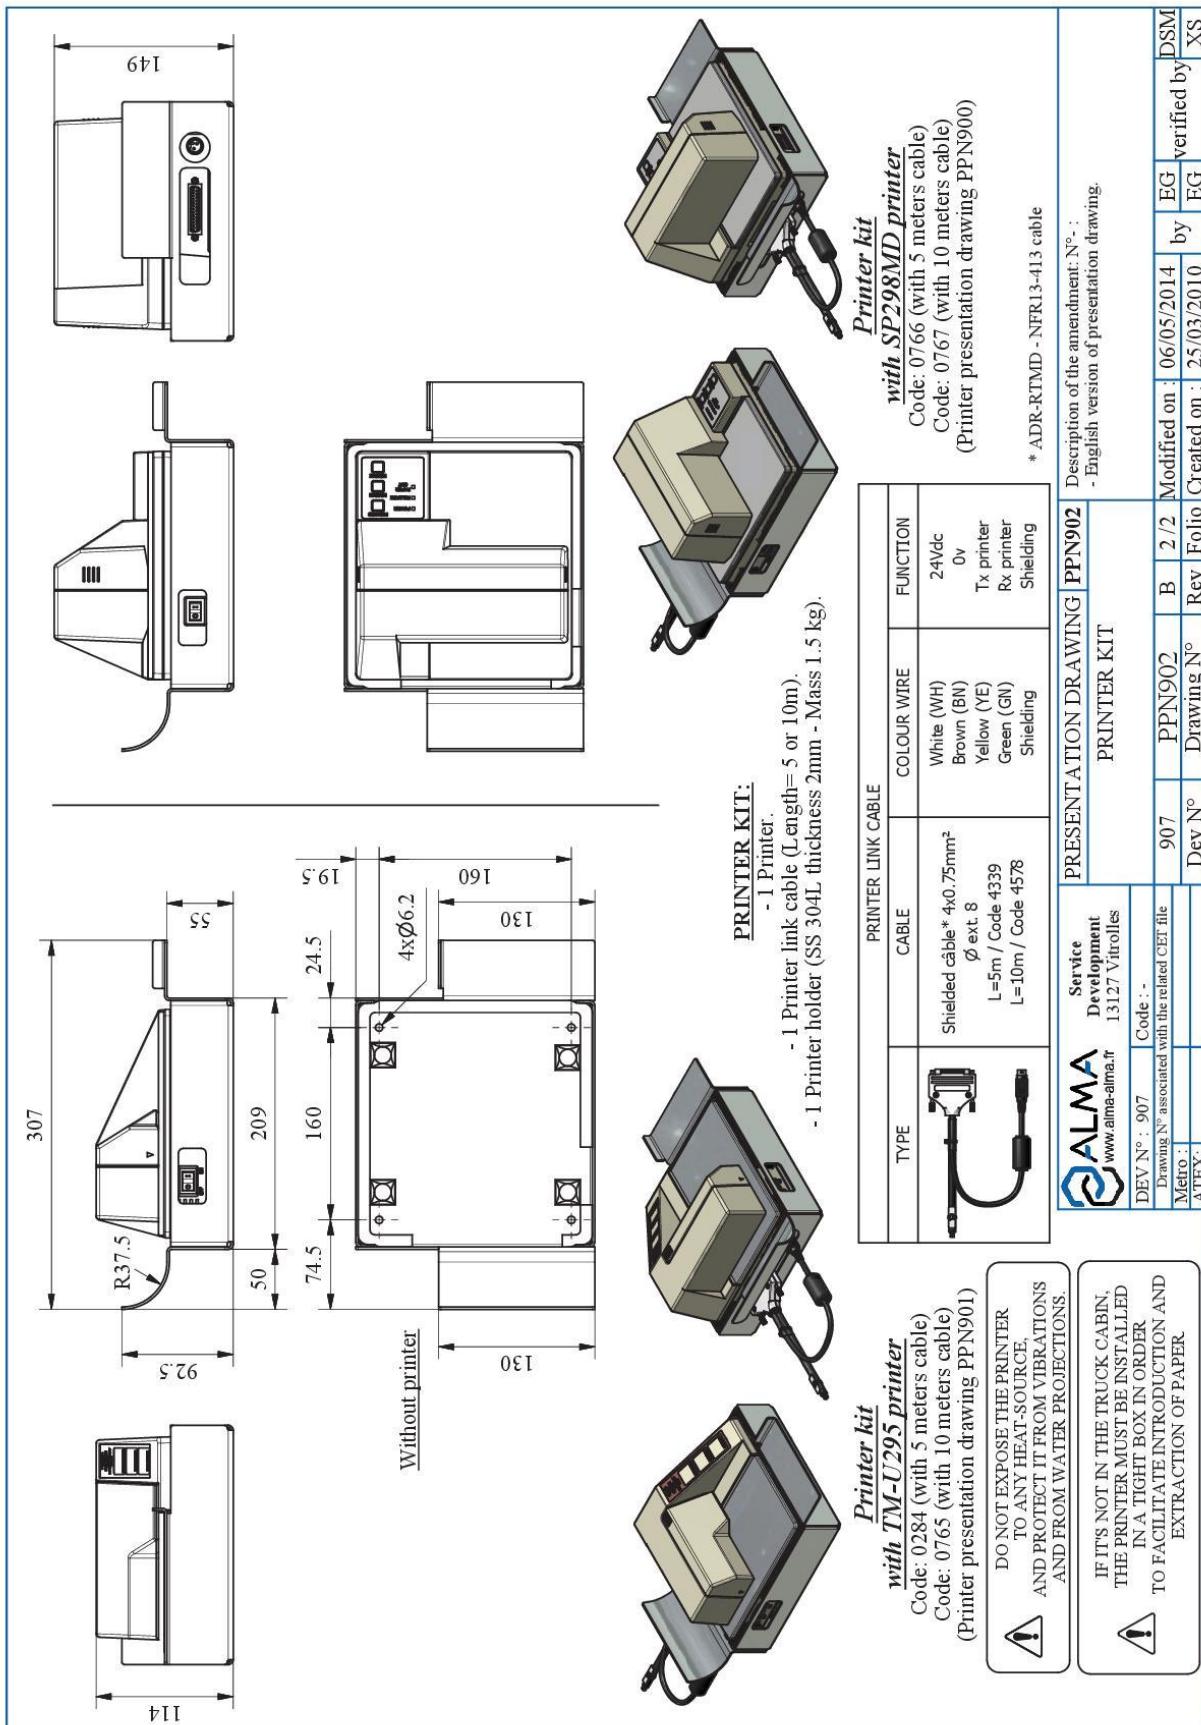


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
ALMA	INSTALLATION GUIDE DI 015 EN B	Units of measure:	
	GRAVITRONIQUE	Length: mm	
	This document is available at www.alma-alma.fr	Angle: degree (° ° °)	
		Temperature: °C	
			Page 30 / 42

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

18. INSTALLATION RECOMMENDATIONS PRINTER

- Do not store anything above the printer.
- Leave an open space all around the printer to ease maintenance.
- Dimensions: A ≥ 50mm and B ≥ 100mm.

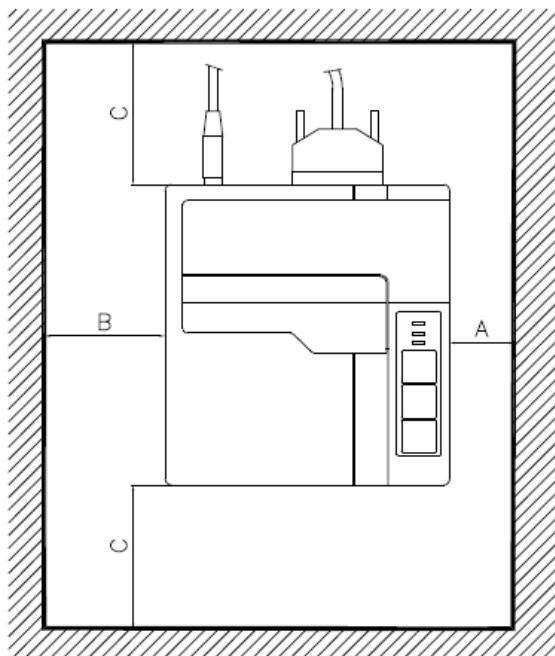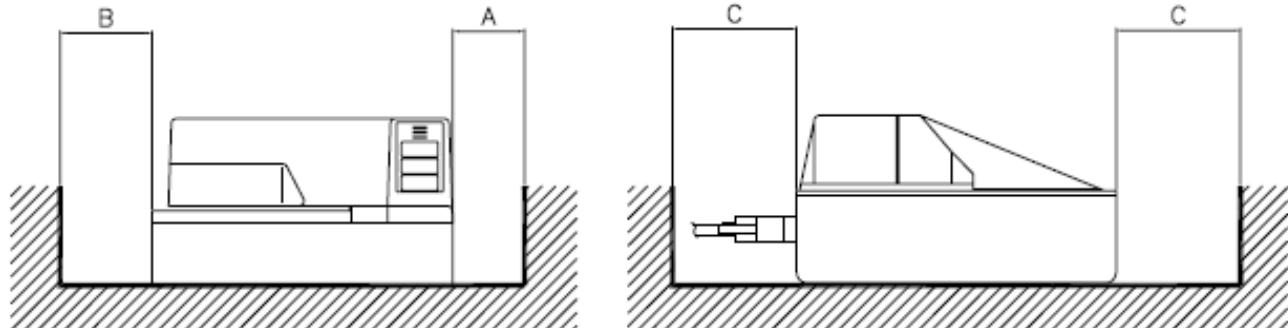

The printer must be installed in a tight box and be laid out so as not to obstruct the introduction and the extraction of paper.


BOTTOM VIEW



**DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE.
PROTECT IT FROM VIBRATIONS AND WATER PROJECTIONS.**


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
ALMA		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 31 / 42

19. CONVERTER 24VDC/24VDC 2.1A 50W

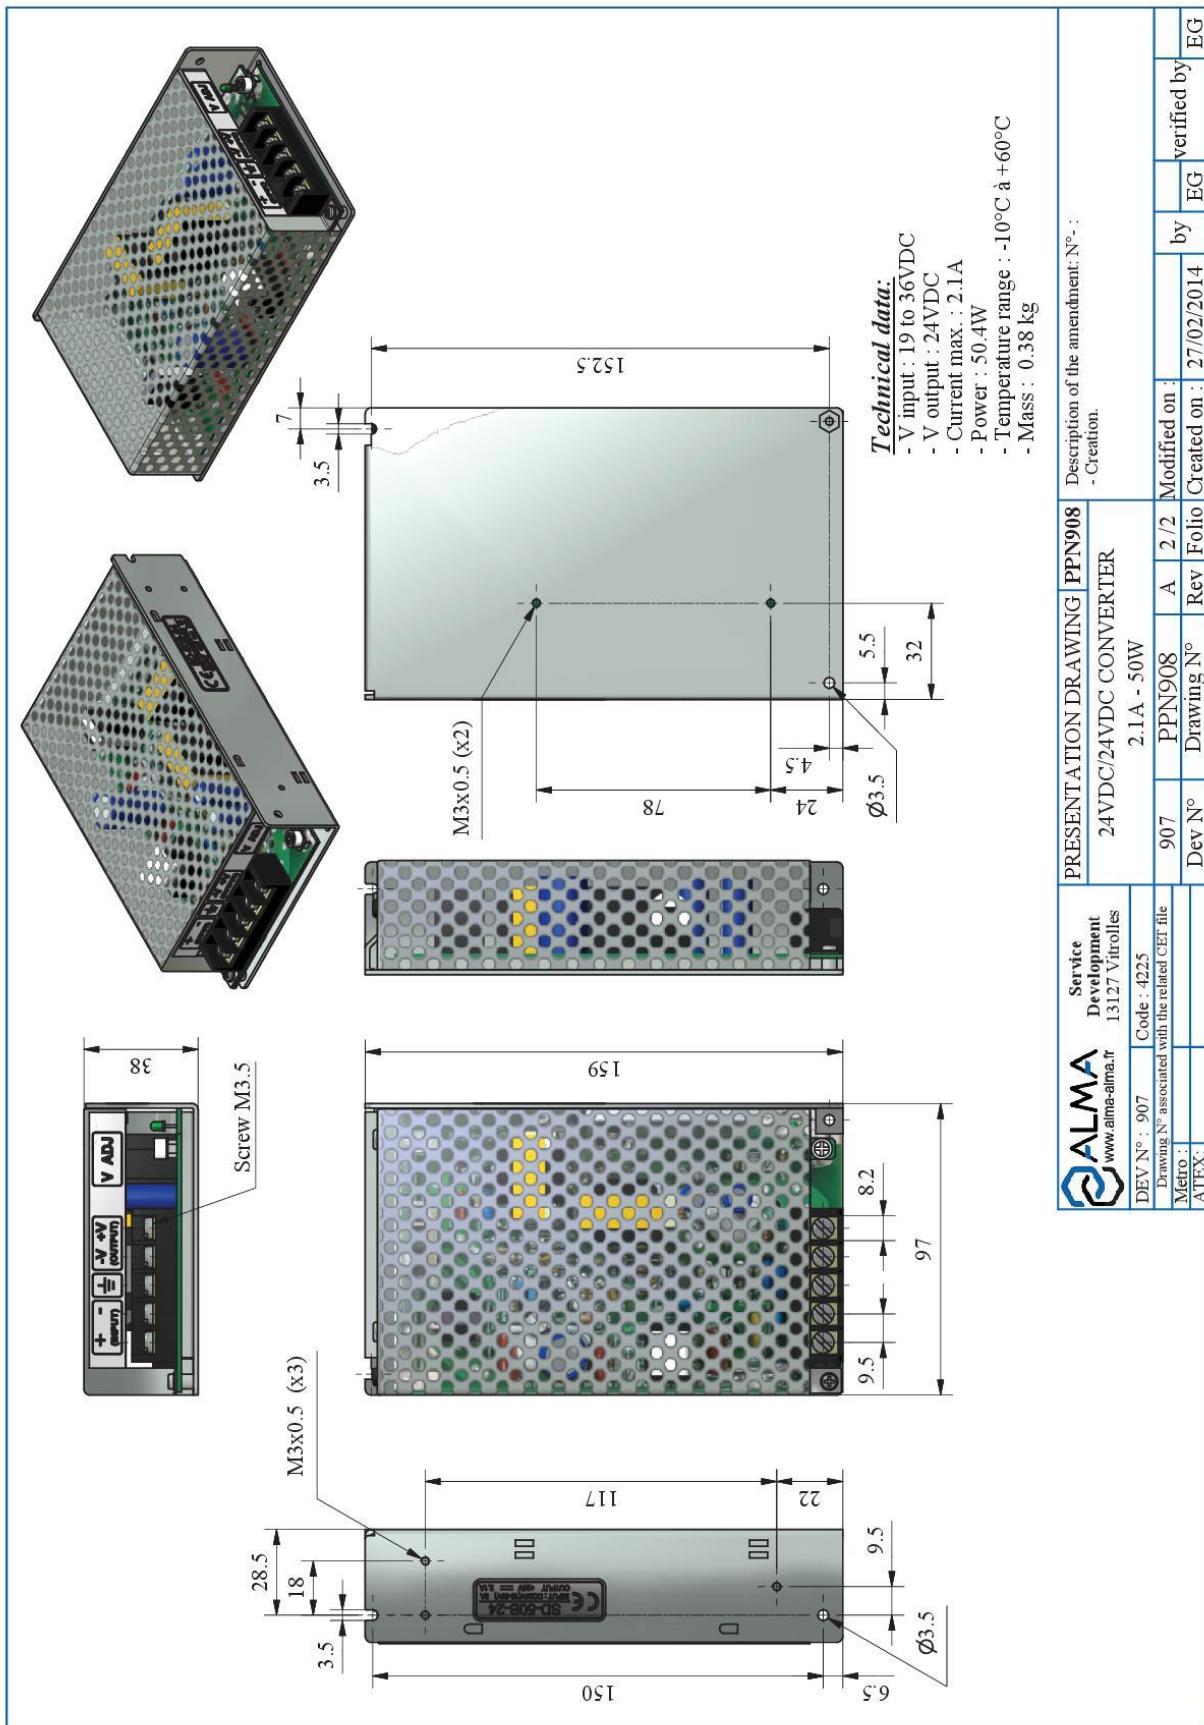


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
ALMA	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
	This document is available at www.alma-alma.fr	Page 32 / 42

20. PNEUMATIC CONTROL VENT VALVE KIT

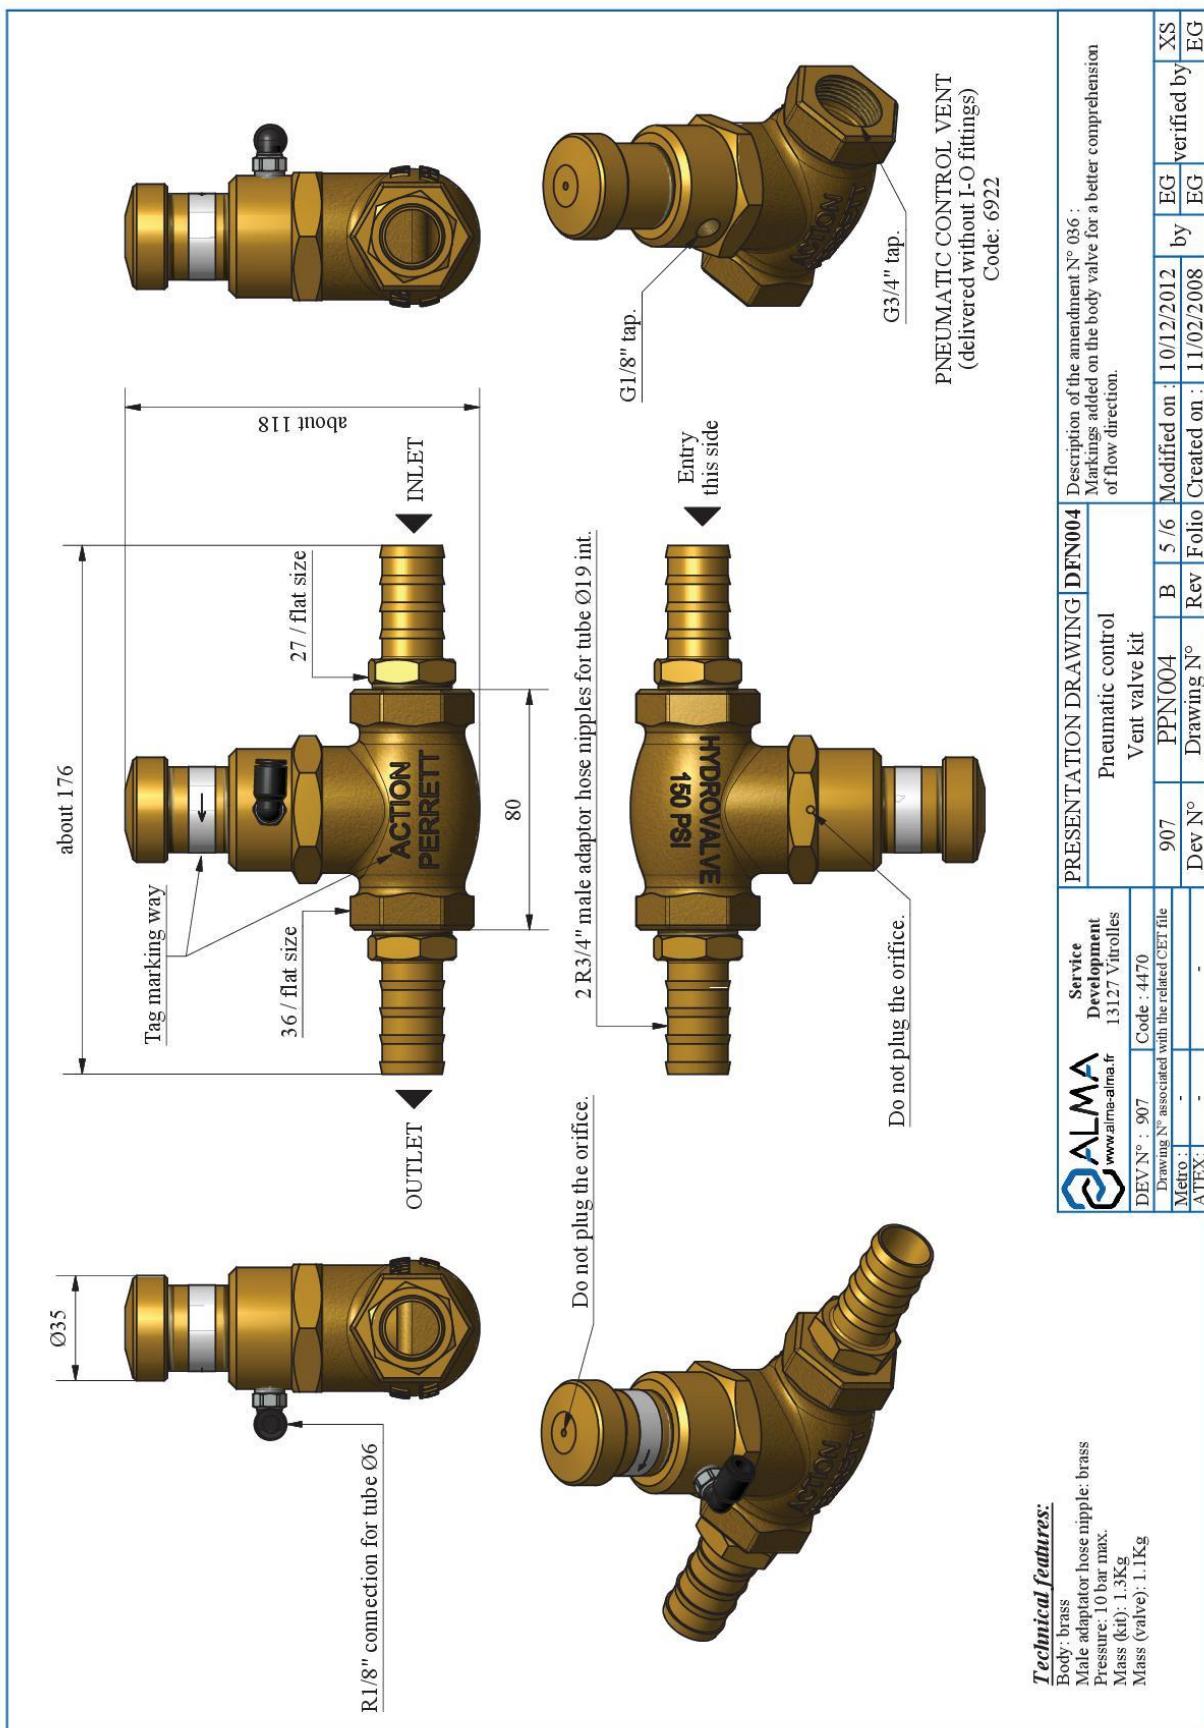


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY			
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION			
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
This document is available at www.alma-alma.fr			Page 33 / 42

21. INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VALVE

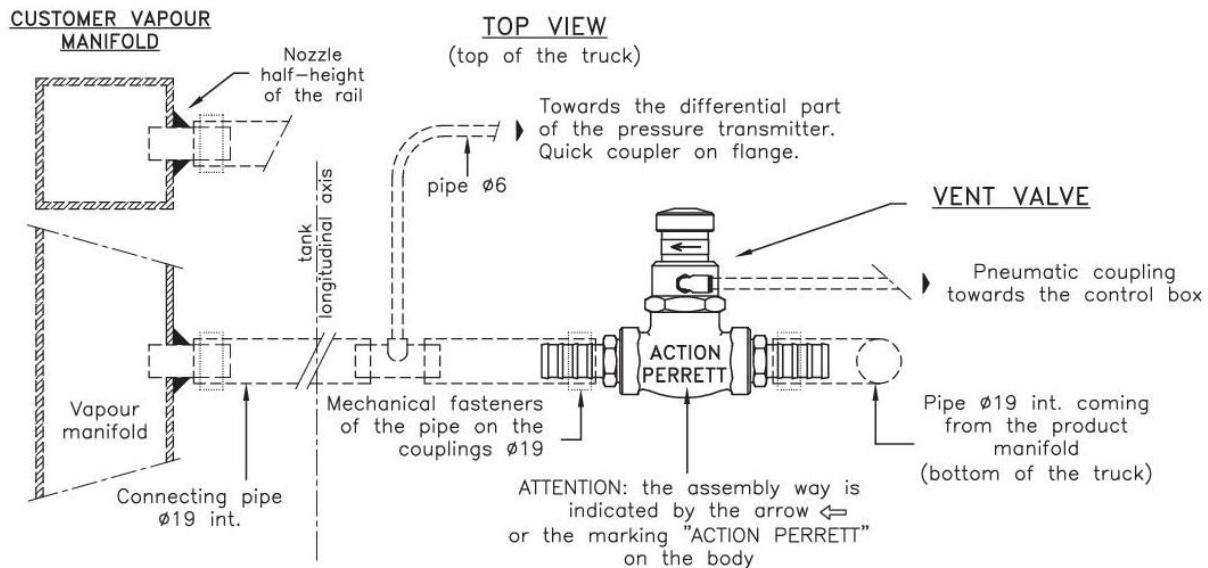

ASSEMBLY OF THE VENT PIPE (not supplied by Alma)

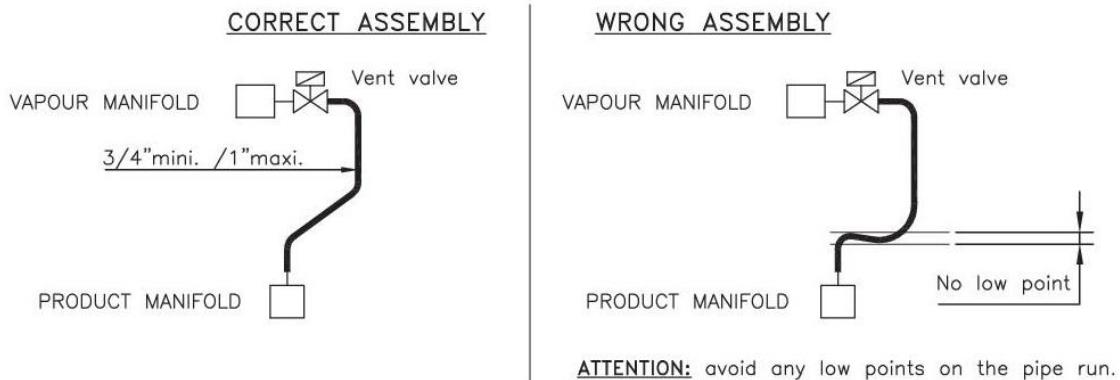

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

22. VACUUM BREAKER

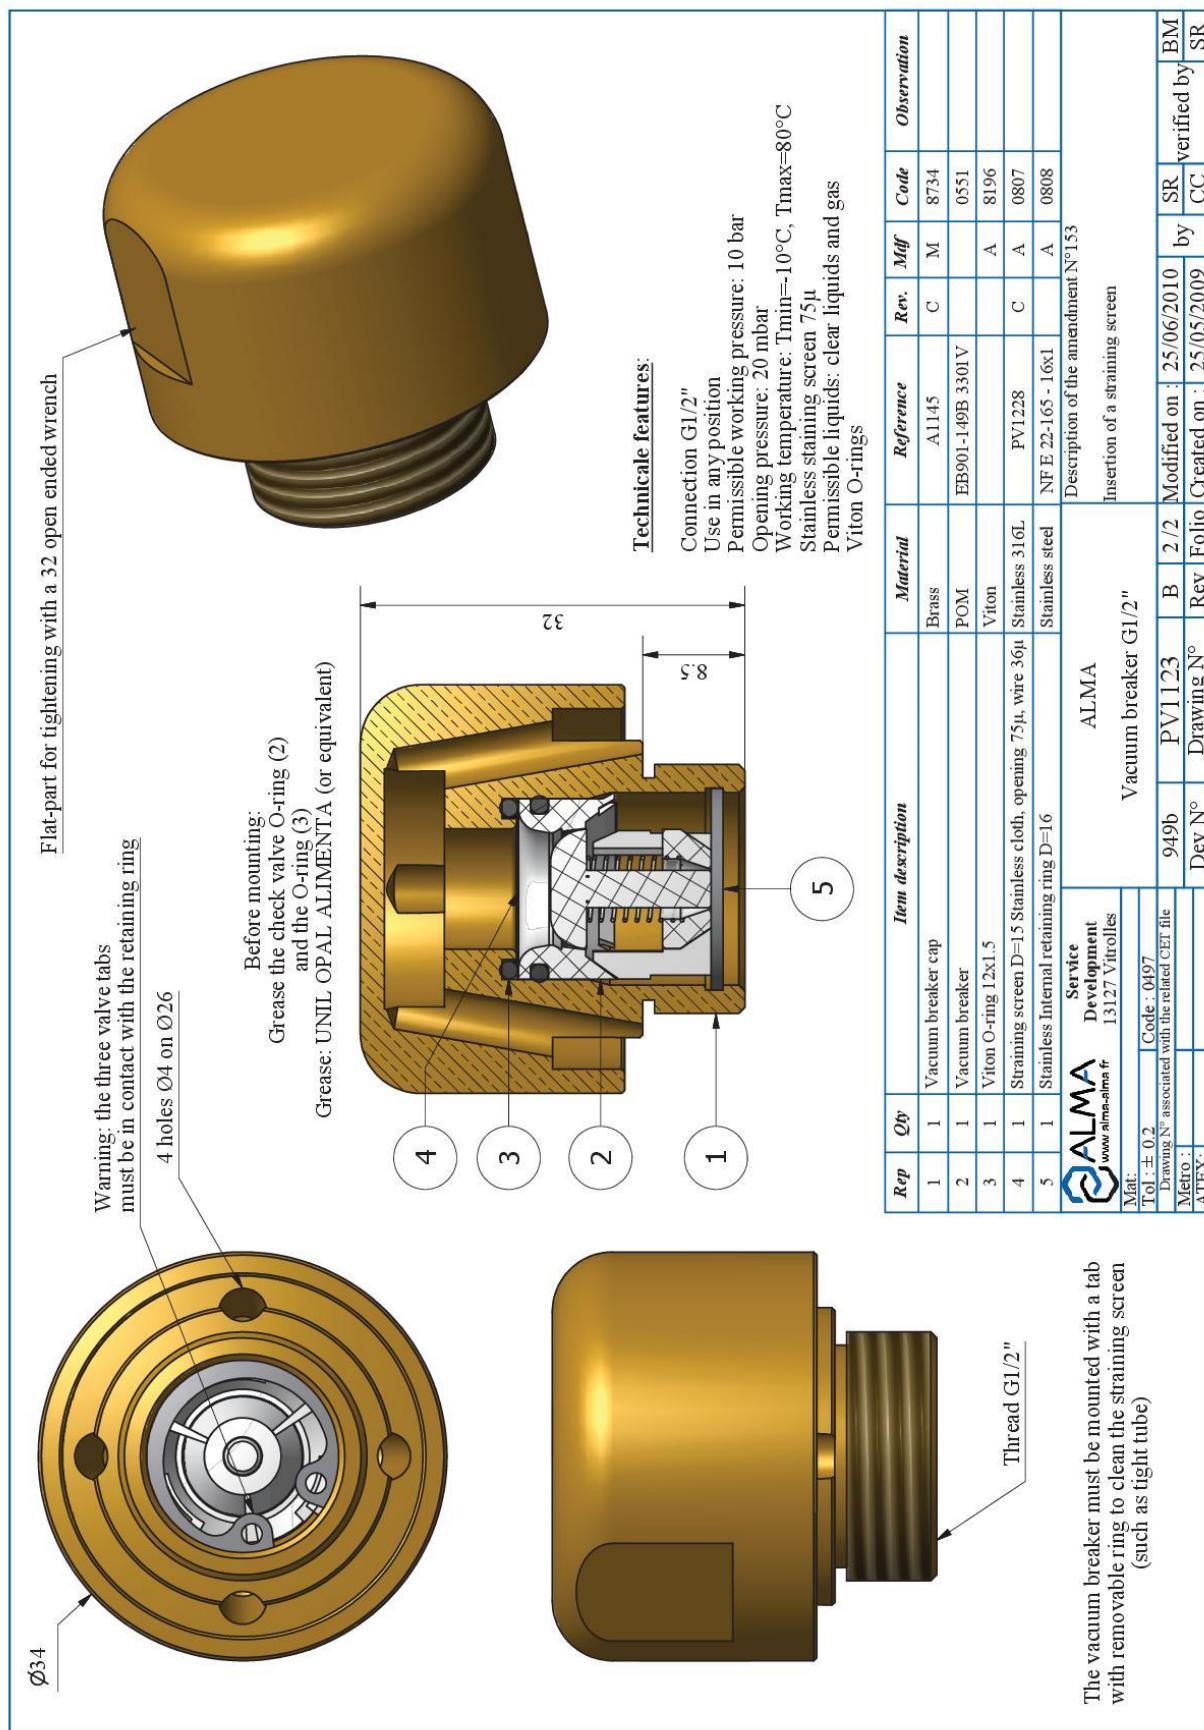

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 35 / 42

23. INSTALLATION RECOMMENDATIONS VACCUM BREAKER

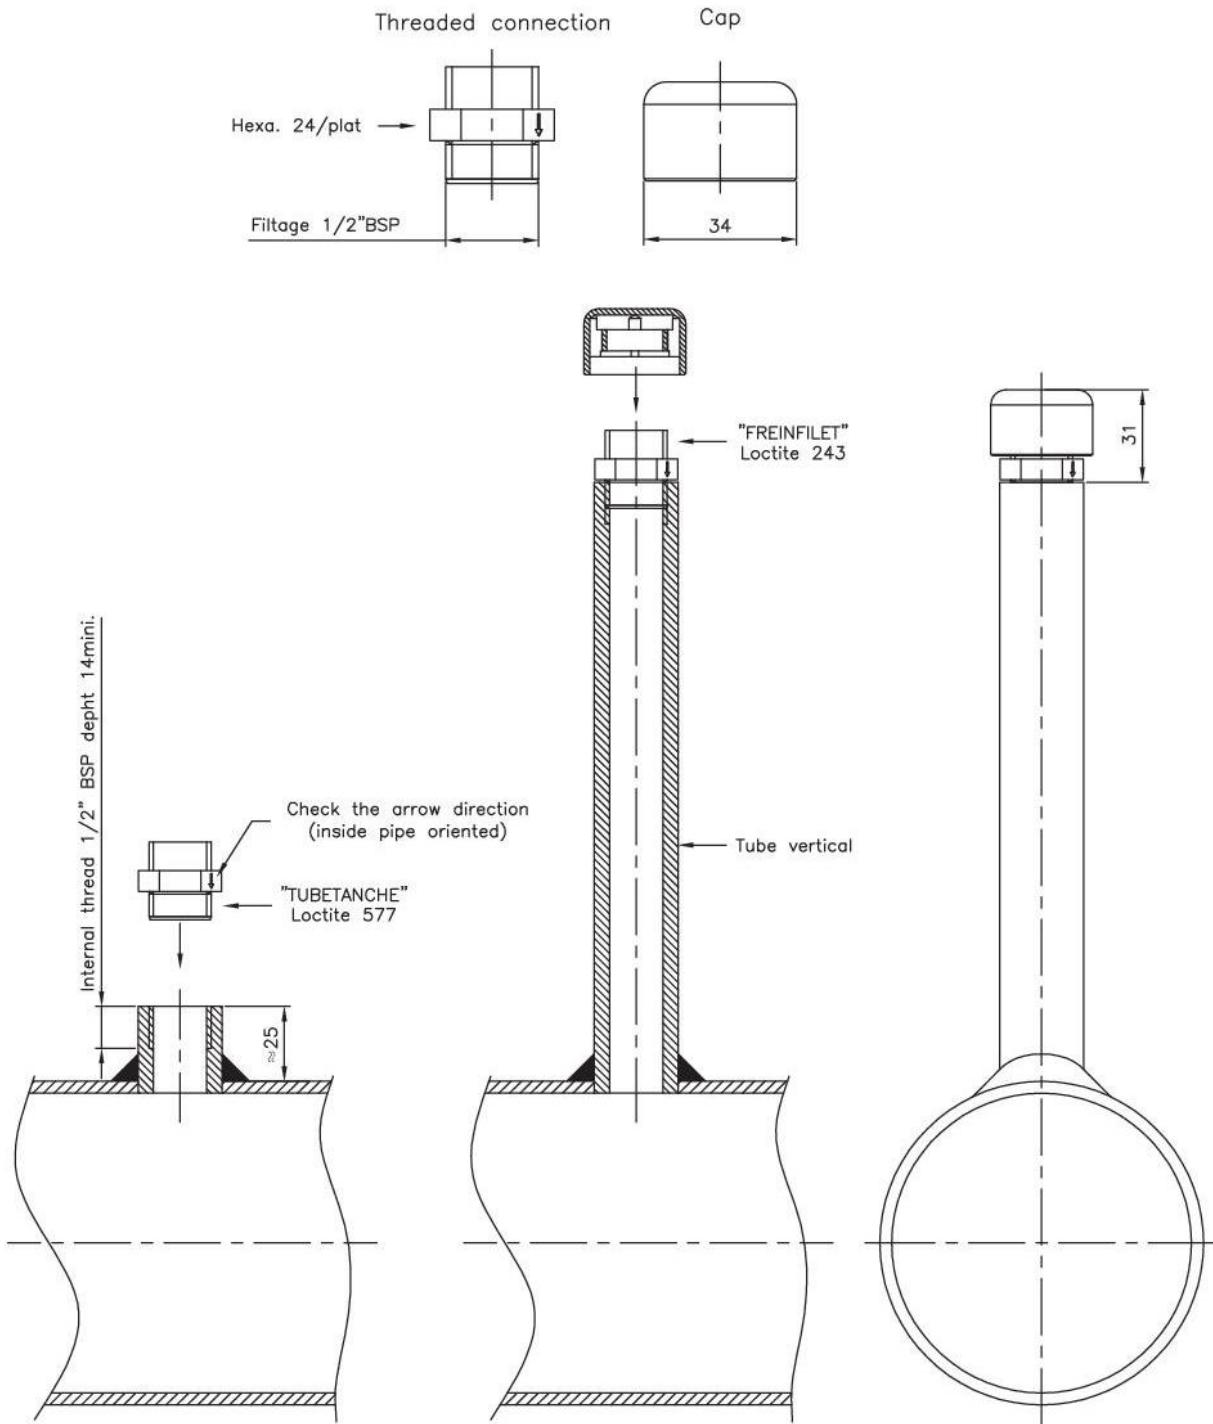

1) Screw the threaded connection of the vacuum breaker (with loctite 577) on the welded boss with respect to the arrow direction

2) Screw manually (tighten strongly with loctite 243) the vacuum breaker cap on the connection.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN B
GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C


Page 36 / 42

24. DN80 NON-RETURN VALVE KITS

DIMENSIONS DN80 NON-RETURN VALVE KIT – 0.03 bar calibrated:

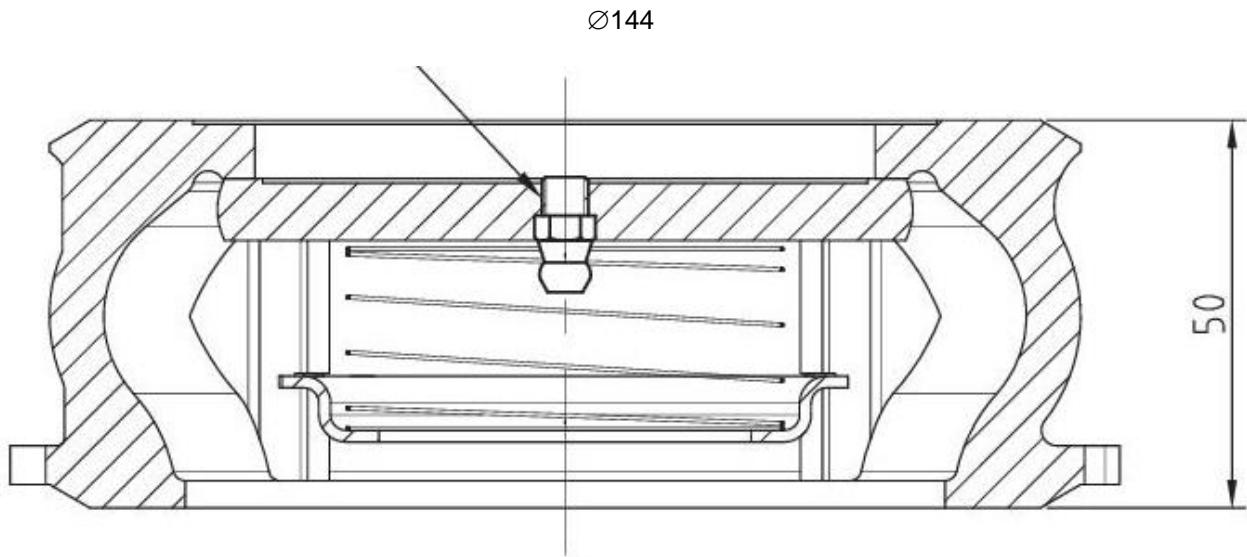

DIMENSIONS DN80 NON-RETURN VALVE KIT – 0.3 bar calibrated (OPTION empty hose):

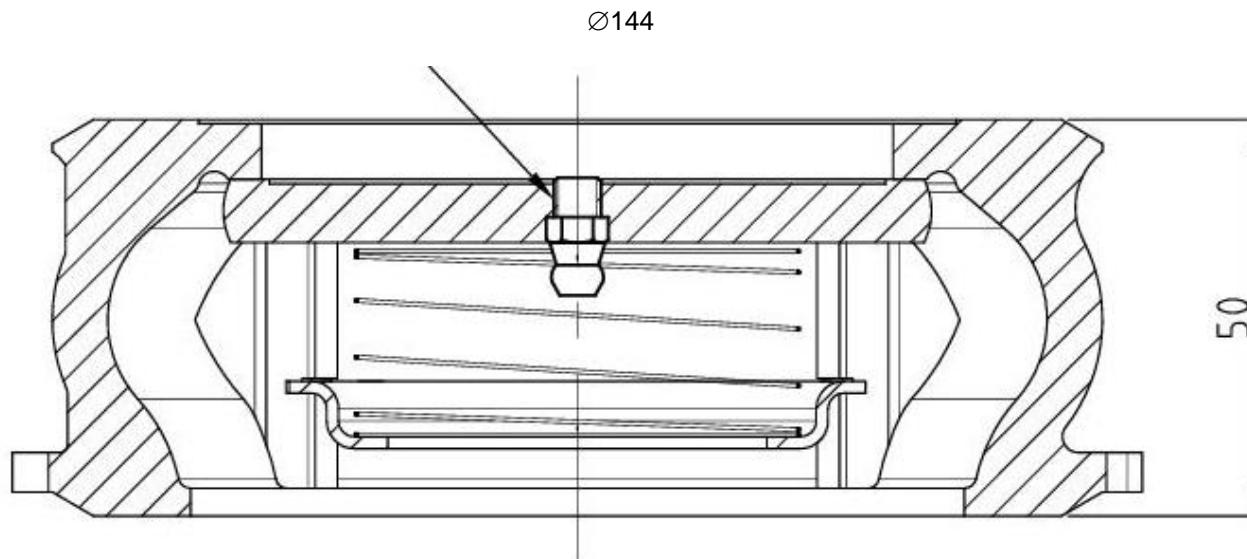

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B
GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 37 / 42

25. PT100 TEMPERATURE PROBE – CT1001

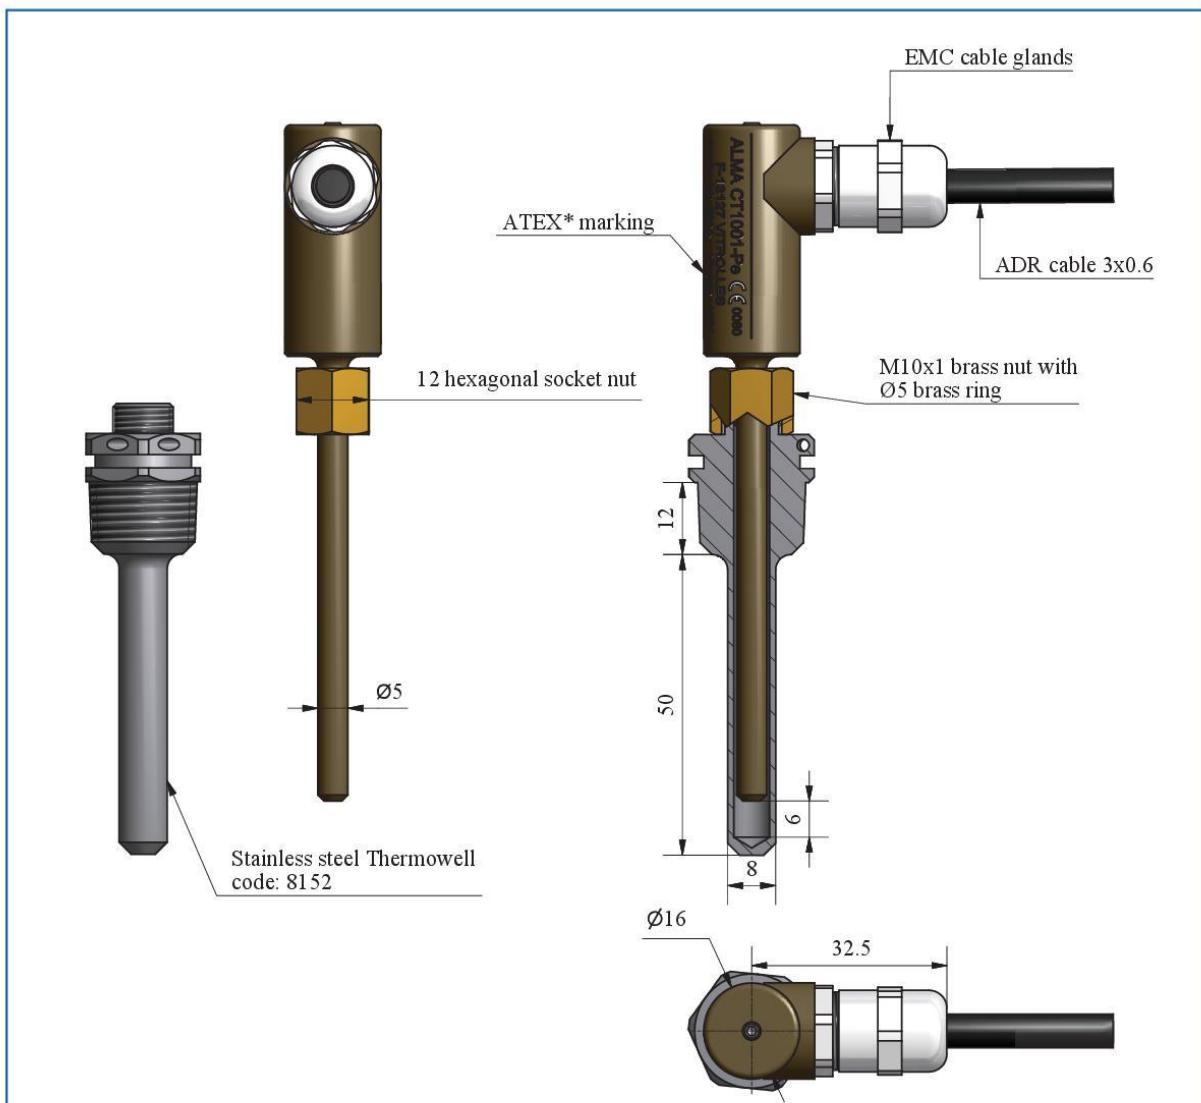

The sensor body is made of bronze color anodized aluminum alloy;
The ring and the nut are made of brass.
The probe can be mounted either on a ALMA thermowell or on a
thimble connection 1/4 "BSP (M10x1 n5).
Before installation, lubricate the parts in contact with the thermowell or
the boss, to prevent corrosion.

PT100 features:

- 3 wires
- 1/3 DIN

*ATEX "ia" and "ma" certification.

For installation and use in hazardous areas see Instruction manual


Also available with output connector according to IEC 60947-5-2

Connecting the cable		
Function	Marking on the wire	Color wire
PT100/1	1	Yellow
PT100/2	2	White
PT100/3	3	Green

ALMA www.alma-alma.fr Service Development 13127 Vitrrolles DEV N° : 949c Code : 8151 Drawing N° associated with the related CET file Metro : ATEX: 	PRESENTATION DRAWING DFV042				Description of the amendment N°312: Adding a strengthening part				
	Temperature probe CT1001-Pe								
949c	PPV042	I	5 /7	Modified on :	13/06/2013	by	CC	verified by	SR
Dev N°	Drawing N°	Rev	Folio	Created on :	13/09/2003	by	BM	verified by	BM

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY									
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION									
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE							Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C	
	This document is available at www.alma-alma.fr							Page 38 / 42	

26. INSTALLATION RECOMMENDATIONS TEMPERATURE SENSOR

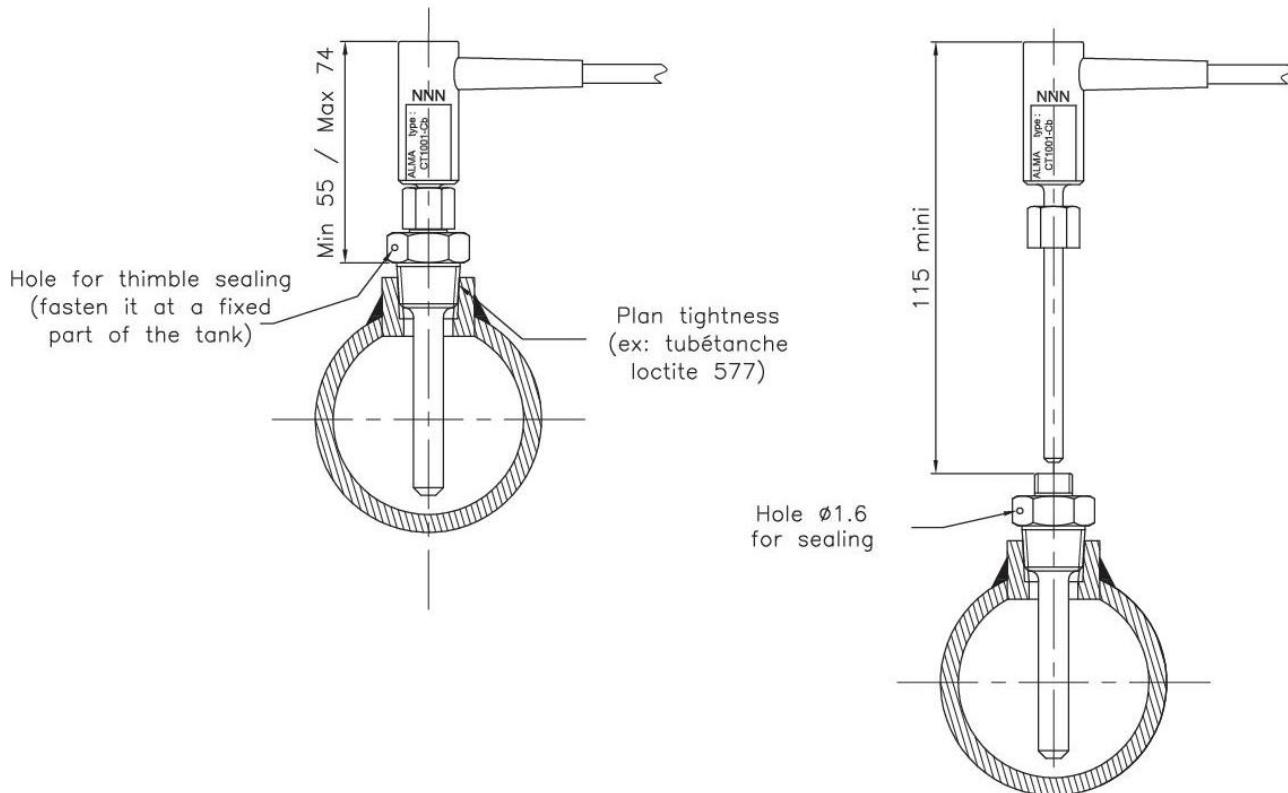

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

INSTALLATION OF THE TEMPERATURE SENSOR ON THE ALMA TURBINE METER:



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 39 / 42

27. ADRIANE TURBINE METER DN80-80 243 110x110

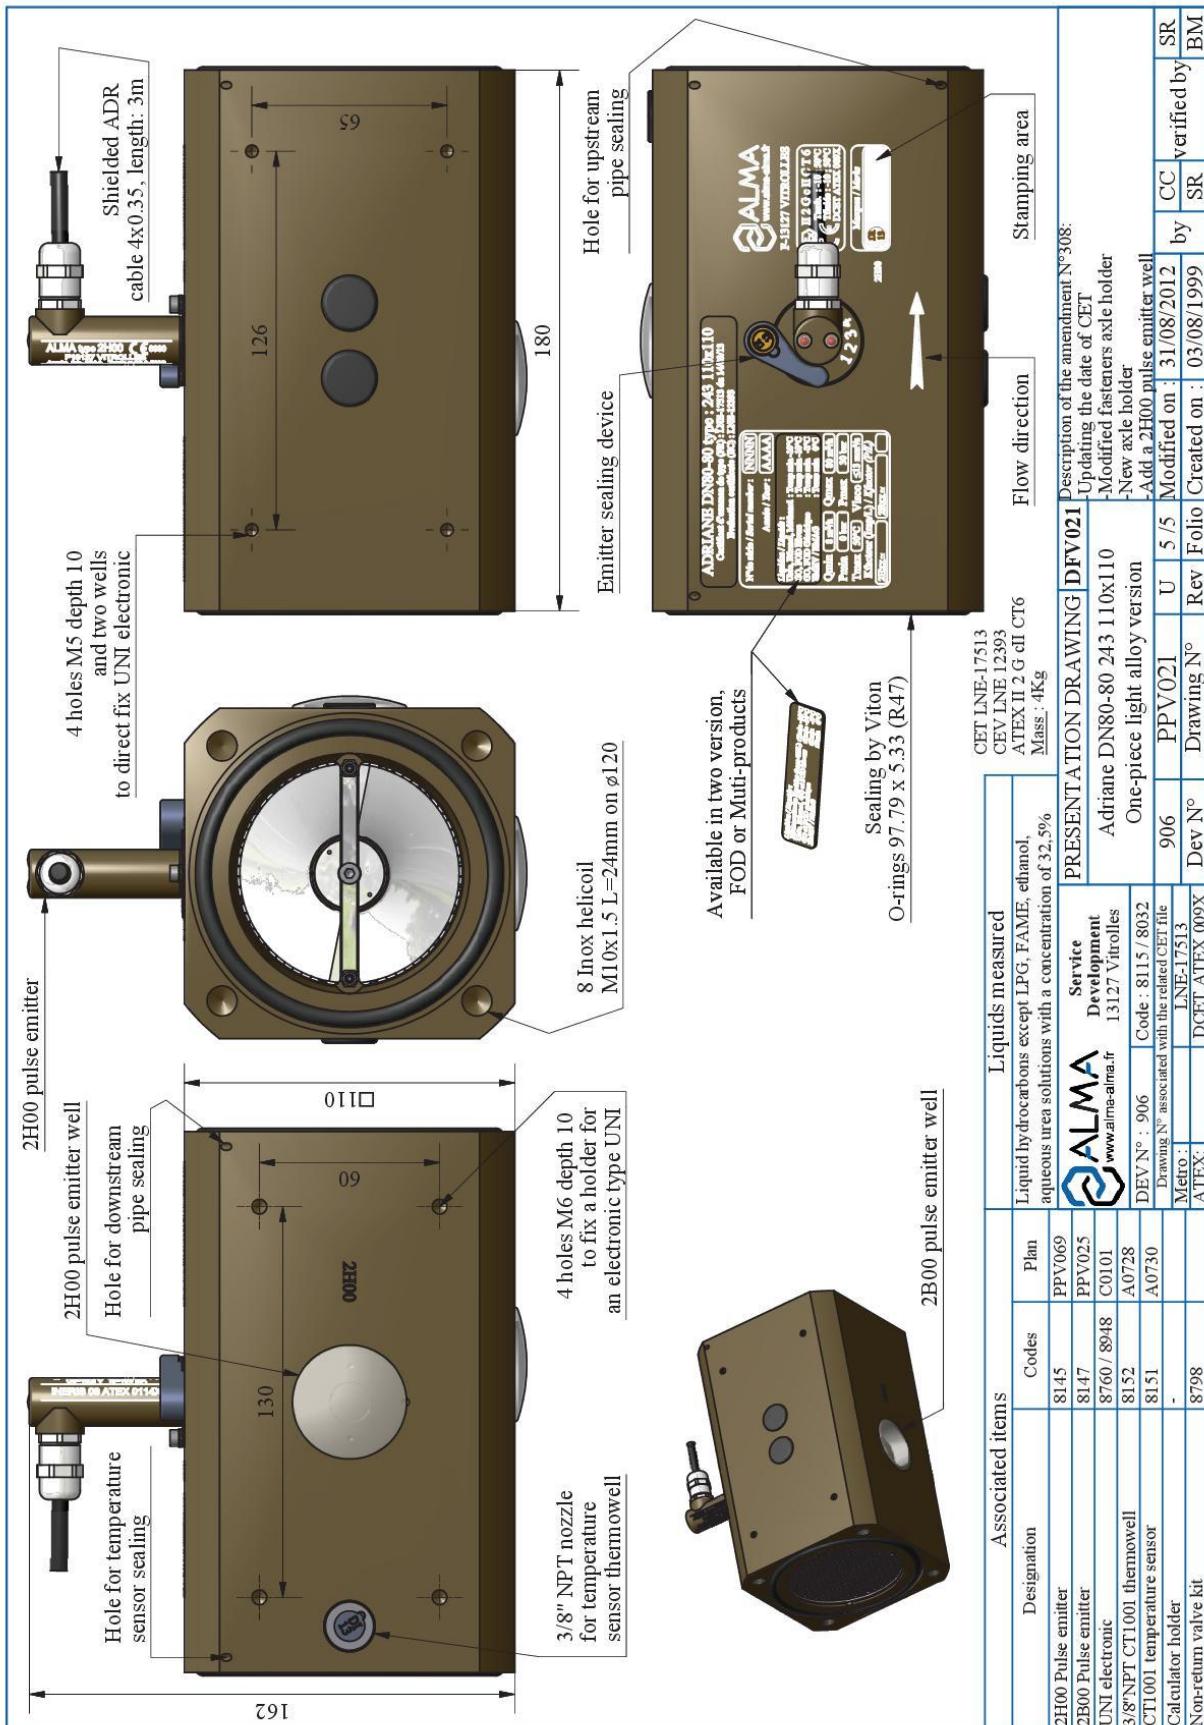

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ° °)
Temperature: °C

Page 40 / 42

28. SIGHTGLASS FOR ADRIANE TURBINE METER DN80 110x110

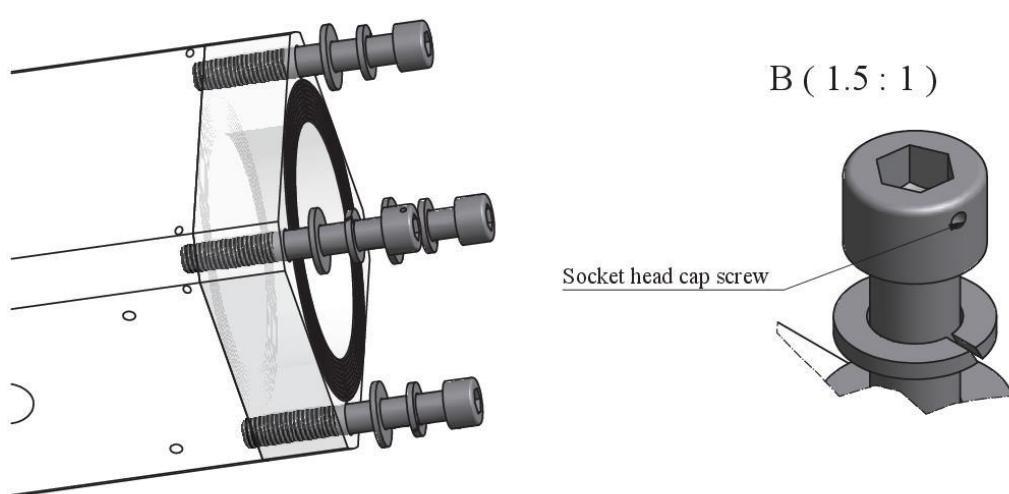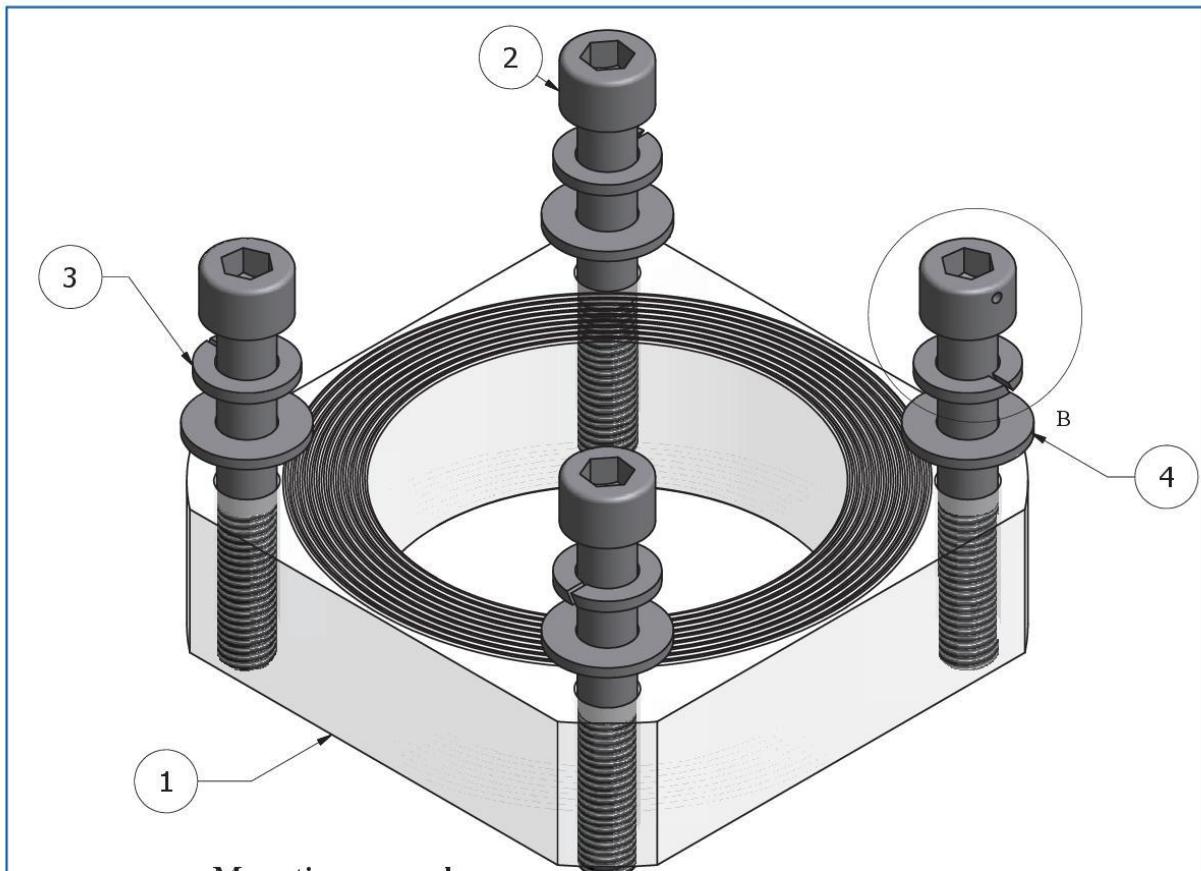



Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Sightglass DN80 110X110	Moulded PMMA	A0533	B		0908	
2	1	CHC screw M10 x 70 (ISO 4762)	Stainless A4-70				8595	1 socket head cap screw
3	1	Washer W M10 (DIN 127)	Stainless A4-70				8474	
4	1	Washer M M10 (NFE 25-514)	Stainless A4-70				8430	

 ALMA www.alma-alma.fr Service Development 13127 Vitrolles	Sight kit 110 x 110			Description of amendment N°				
	Adriane turbine meter DN80 24X							
Mat:	Tol : ± 0.2	Code : 1091	Drawing N° associated with the related CET file	905	PV1674	A	2 / 2	Modified on : by CC verified by SR
Metro :				Dev N°	Drawing N°	Rev	Folio	Created on : 23/01/2014
ATEX:								

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY								
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION								
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE							Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr							Page 41 / 42	

29. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

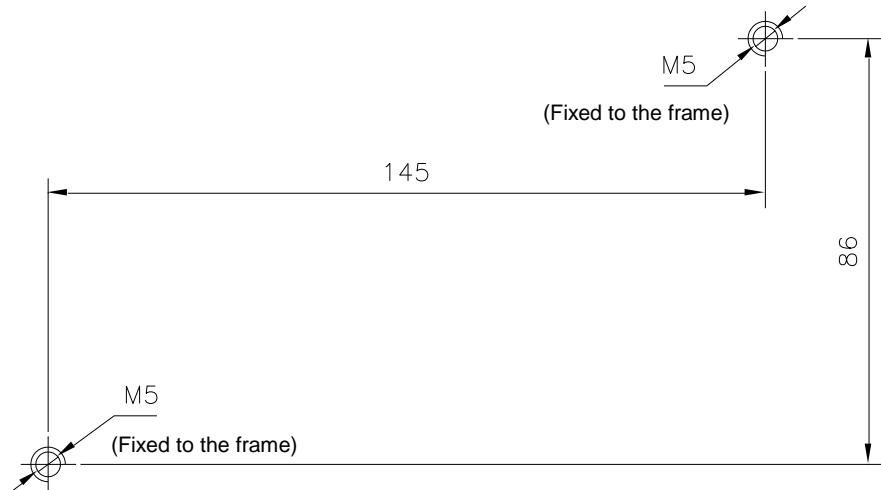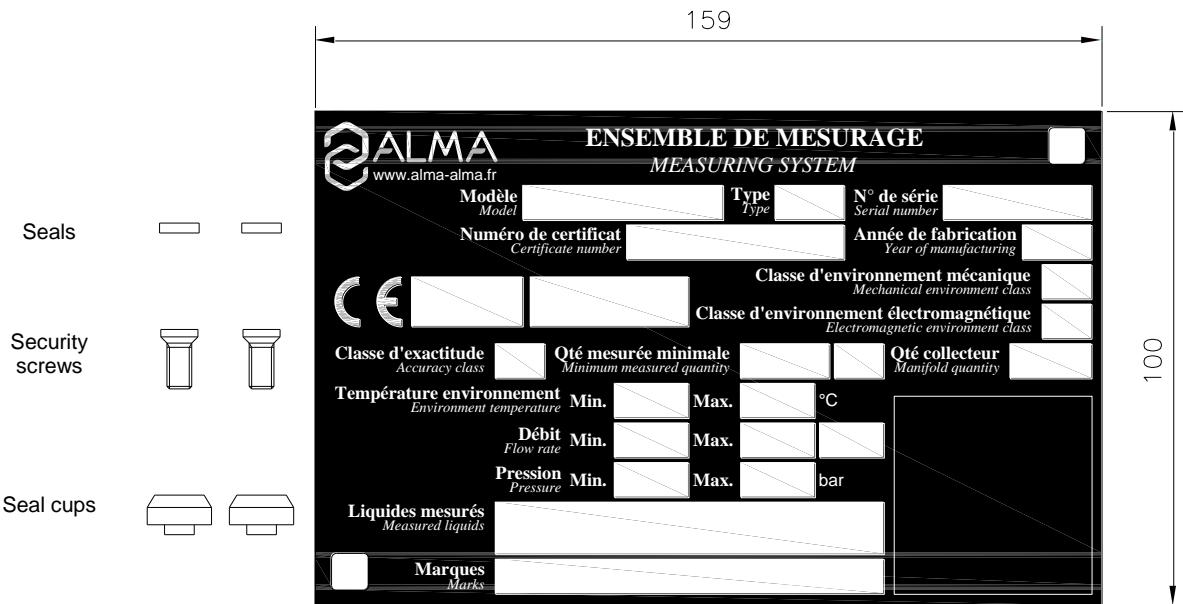

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN B GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ° °) Temperature: °C
This document is available at www.alma-alma.fr		Page 42 / 42