


INSTALLATION GUIDE

DI 015 EN C
GRAVITRONIQUE

Described in EC-type examination certificate N°: LNE-27785




C	2016/11/15	Updating of drawings and electrical wiring	DSM	FB
B	2015/09/15	Non-return valve 0.03 bar, 4-relais electronic board	DSM	AH
A	2015/05/04	Creation	DSM	AH
Issue	Date	Nature of modifications	Written by	Approved by


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE			Units of measure: Length: mm Angle: degree (° ' '')
	This document is available at www.alma-alma.fr			Page 1 / 44

CONTENTS

1. GENERAL RECOMMENDATIONS	4
MECANICAL RECOMMENDATIONS.....	4
ELECTRICAL RECOMMENDATIONS.....	5
PNEUMATIC RECOMMENDATIONS.....	7
2. GENERAL PRESENTATION	8
USE ACCORDING TO MID CERTIFICATE	8
SPECIAL CONDITIONS FOR INSTALLATION IN ANY CASES.....	8
3. PART LIST	8
4. MICROCOMPT+ GRAVITRONIQUE	11
INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+	12
ELECTRICAL WIRING CALCULATOR-INDICATOR	13
5. CONTROL BOX GRAVITRONIQUE	19
ELECTRICAL WIRING CONTROL BOX	20
RACCORDEMENT PNEUMATIQUE COFFRET DE PILOTAGE	22
6. ADRIANE TURBINE METER	23
ADRIANE TURBINE METER DN100-80 243 TTMA	23
ADRIANE TURBINE METER DN80-80 243 110x110	24
INSTALLATION RECOMMENDATIONS ADRIANE TURBINE METER	25
7. DIFFERENTIAL PRESSURE TRANSMITTER CP3000	26
INSTALLATION RECOMMENDATIONS CP3000 (ATEX)	27
8. NC/NO SOLENOID VALVES KIT (ATEX)	28
9. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75-CO	29
INSTALLATION RECOMMENDATIONS DG3001/75	30
10. PRINTER	31
INSTALLATION RECOMMENDATIONS PRINTER	32
11. CONVERTER 24VDC/24VDC 2.1A 50W	33
12. PNEUMATIC CONTROL VENT VALVE KIT	34
INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VALVE	35
13. VACUUM BREAKER	36
INSTALLATION RECOMMENDATIONS VACUUM BREAKER	37
14. DN80 NON-RETURN VALVE KITS	38
DN80 NON RETURN VALVE KIT, 0.03 BAR CALIBRATED	38
DN80 NON RETURN VALVE KIT, 0.3 BAR CALIBRATED (EMPTY HOSE OPTION).....	39
INSTALLATION RECOMMENDATIONS DN80 NON-RETURN VALVE KITS.....	40
15. PT100 TEMPERATURE PROBE – CT1001	41
INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE	42

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2 / 44

16. SIGHTGLASS FOR ADRIANE TURBINE METER DN80 110X110	43
17. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE.....	44

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 44


1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


MECHANICAL RECOMMENDATIONS


- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment; the display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 44

ELECTRICAL RECOMMENDATIONS

- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).
- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
- ⇒ Respect a homogeneous wire color code.

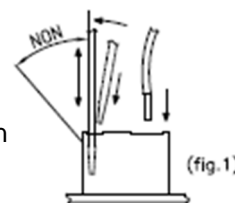

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 5 / 44

⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.

⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)

⇒ Color code according to DIN 47100.

⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C


Page 6 / 44

PNEUMATIC RECOMMENDATIONS

- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area (L = 100 mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Unités	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0.069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)
 1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7 / 44

2. GENERAL PRESENTATION

USE ACCORDING TO MID CERTIFICATE

The GRAVITRONIQUE measuring system is covered by the EC type examination certificate N° LNE-27785. Refer to this certificate for any precision about its installation.

For the sealing plan, see Annex to EC type examination certificate N° LNE-27785.


SPECIAL CONDITIONS FOR INSTALLATION IN ANY CASES

- ⇒ Connection pipework between the compartments and the manifold, as between the manifold and the selection valves must have a minimum gradient of 3%.
- ⇒ Pumped mode: Connection pipework between the selection valve for pumped mode and the pump entry should not include reverse slopes.
- ⇒ If the measuring system is fitted with several delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.
- ⇒ Gravity mode: If appropriate, the connection pipework between the selection valve for gravity mode and decanting valve must have a minimum gradient of 3%. The vehicle on which the measuring system is installed should have a device to check its horizontality.

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ GRAVITRONIQUE (Provided with a magnetic or RFID supervisor key)	1	
2		CONTROL BOX GRAVITRONIQUE	1	
3		ADRIANE TURBINE METER DN100-80 243 TTMA with sightglass or ADRIANE TURBINE METER DN80-80 243 110x110 (Depending on the configuration)	1	

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 8 / 44

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

Item	Equipment	Designation	Qty	Option*
4		DIFFERENTIAL PRESSURE TRANSMITTER – CP3000	1	
5		NC/NO ATEX SOLENOID VALVES KIT	1	
6		END-OF-METERING PROBE – DG3001/75 (Supplied if not mounted on the manifold)	1	
		VACUITY SENSOR – DG3001/75 (Supplied if not mounted on the manifold)	1	
7		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
8		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC)	1	
9		PNEUMATIC CONTROL VENT VALVE	1	
10		VACUUM BREAKER	1	

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION








INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 9 / 44

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

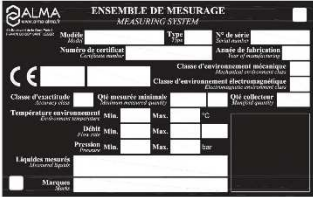Item	Equipment	Designation	Qty	Option*
11		DN80 NON-RETURN VALVE KIT 0.03 bar	1	
12		DN80 NON-RETURN VALVE KIT 0.3 bar (Supplied with an empty hose)	1	●
13		PT100 TEMPERATURE SENSOR – CT1001 (Supplied with thermowell)	1	●
14		SIGHTGLASS KIT FOR ADRIANE TURBINE METER DN80 110x110 (Supplied with pre-drilled screws for sealing)	1	●
15		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	●

Option*: equipment sold as an option by ALMA must be installed on the measuring system if required by the certificate.

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 10 / 44

4. MICROCOMPT+ GRAVITRONIQUE

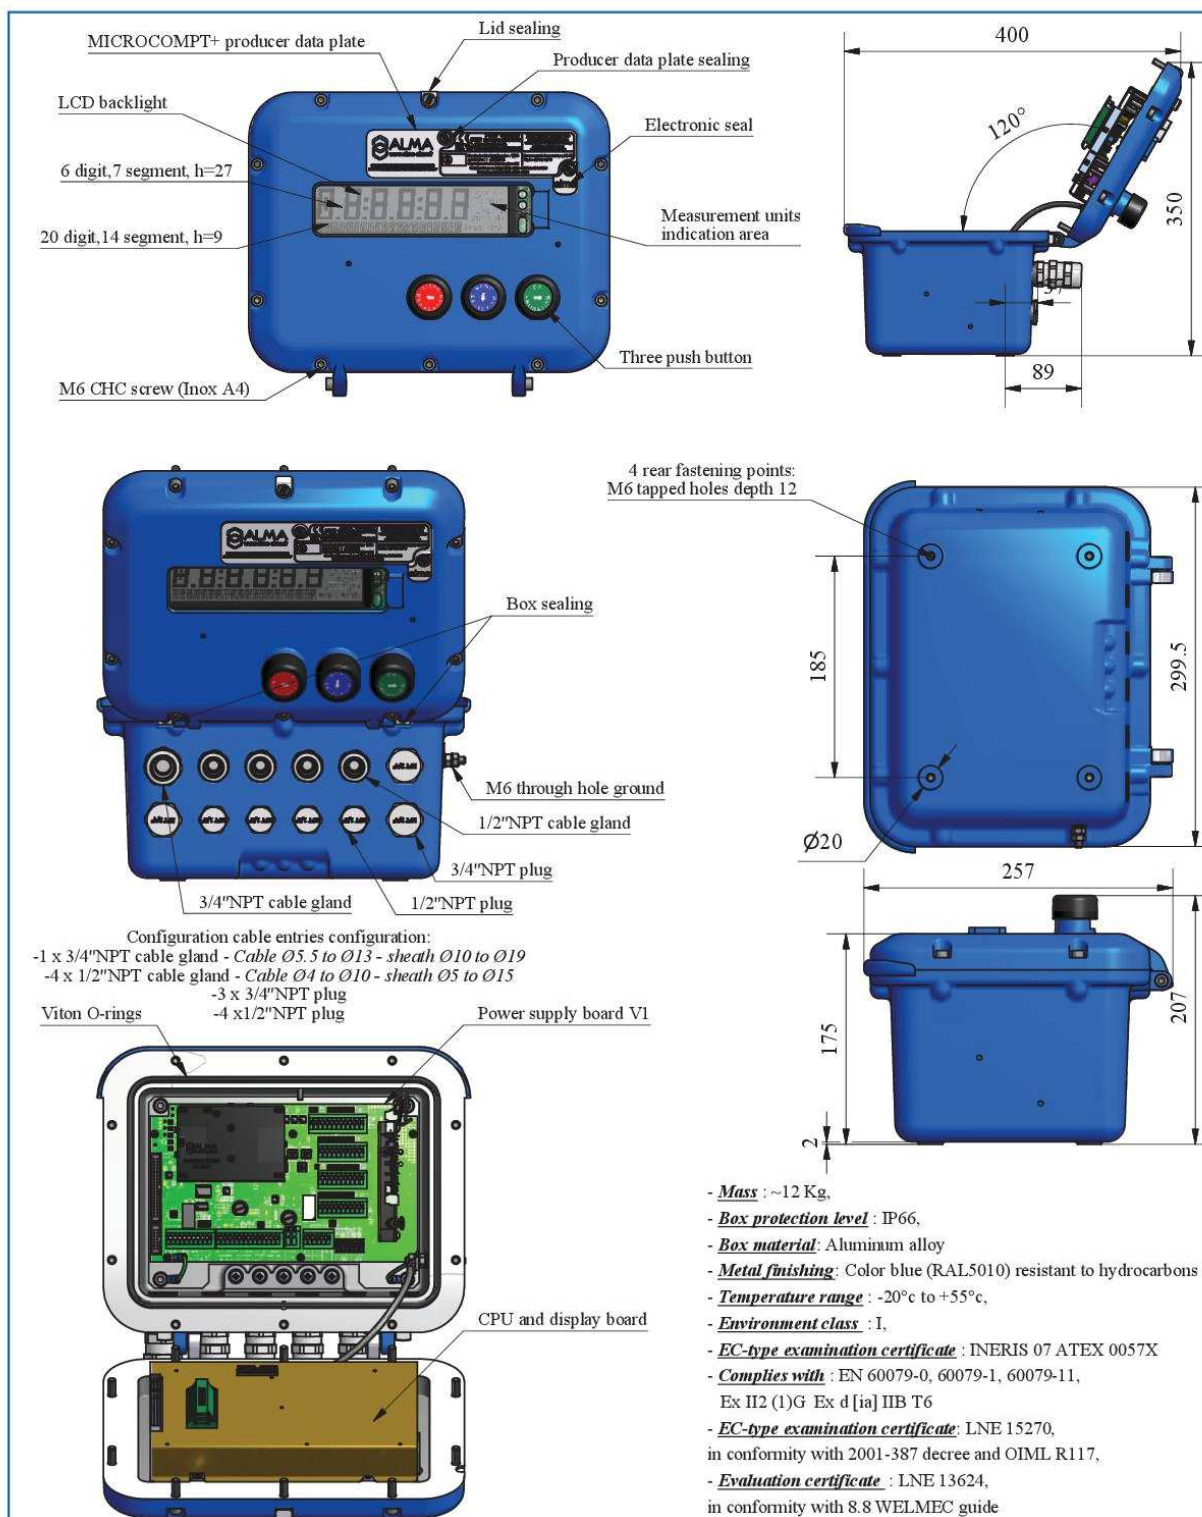

For a safe use of the MICROCOMPT+ electronic device, make sure to comply with the requirements of the instruction manual supplied with the equipment

 www.alma-alma.fr	Service Development 13127 Vitrolles	PRESENTATION DRAWING		DFV094	Description of the amendment N°396 Passage to interface power supply board V1 rev 11 New logo					
		Microcompt+ Gravity metering								
DEVN° : 973	Code : 3695	973	PPV094	I	7 / 9	Modified on :	17/03/2015	by CC	verified by	SR
Drawing N° associated with the related CET file		Dev N°	Drawing N°	Rev	Folio	Created on :	06/12/2010			
Metro :	LNE-15270 / LNE13624									
ATEX :	INERIS 07 ATEX 00057X									

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C


Page 11 / 44

INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: $A > 100\text{mm}$ and $B > 60\text{mm}$

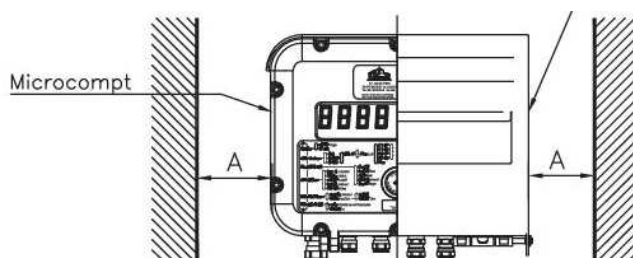

- SOLUTION 1: straight box if it's a breast height.

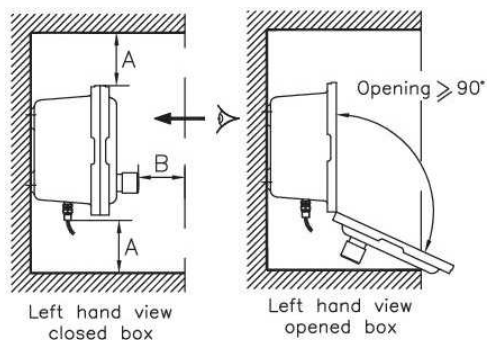

- SOLUTION 2: 20° angle if it's not a breast height.

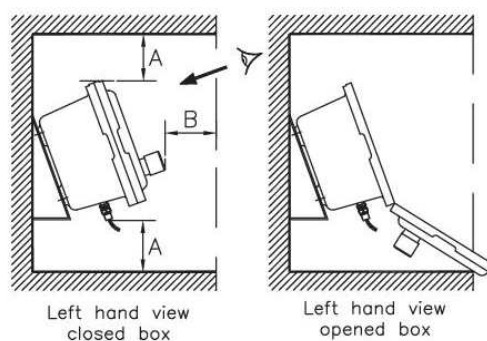

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC
GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 12 / 44

ELECTRICAL WIRING CALCULATOR-INDICATOR

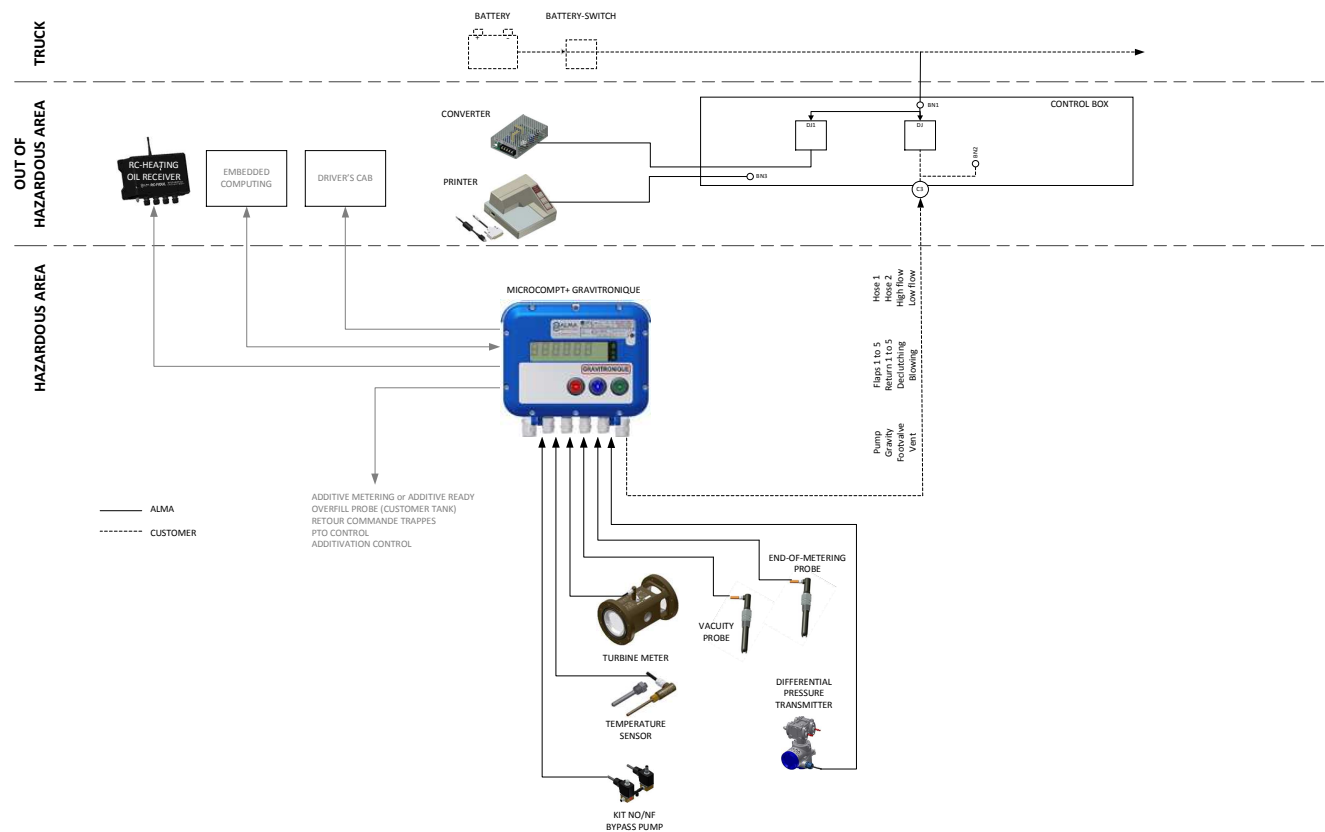


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 13 / 44

Any mass braids and shielding must be connected to the MICROCOMPT+ ground bar

TERMINAL ASSIGNMENT OF MICROCOMPT+ BOARDS

INTERFACE POWER SUPPLY BOARD

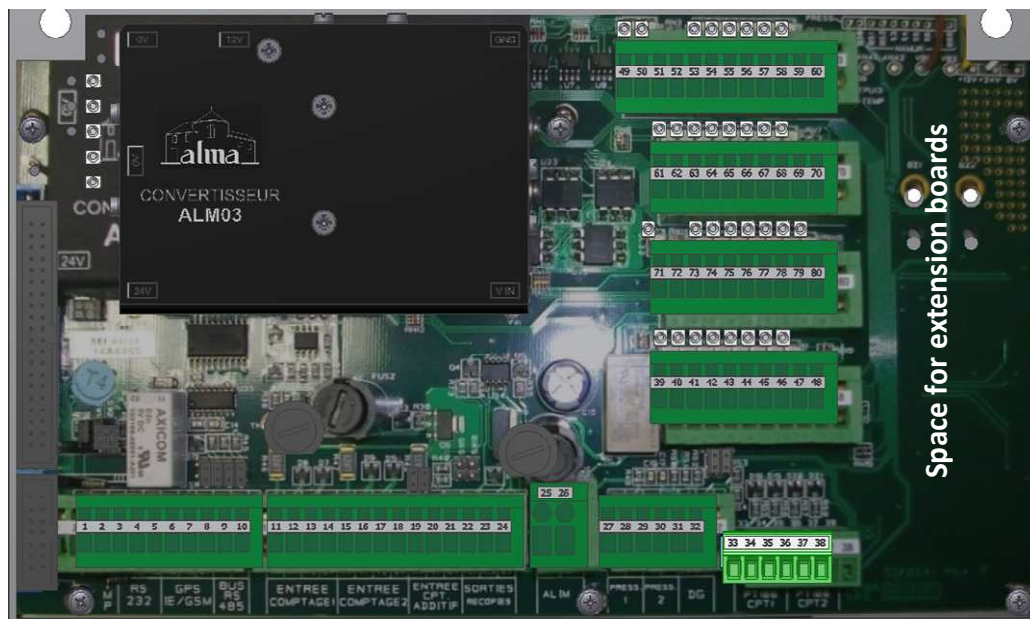

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								INTERFACE POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	GRAVITRONIQUE CONTROL BOX	C2	1/2"NPT	●	2x1 sh.	Rx Printer		1	Tx	RS232 PRINTER	RS232 serial link
						Tx Printer		2	Rx		
•	EMBEDDED COMPUTING				3x0.34 sh.	0V		3	0V	RS232	Connect the shielding
						Rx E.C.		4	Tx		
						Tx E.C.		5	Rx	BUS RS485	
•	EMBEDDED COMPUTING					Rx		9	+		
						Tx		10	-		
	TURBINE TRANSMITTER EMA	C1	1/2"NPT	●	ADR 4x0.34 sh.	12V	Jn	11	12V	METERING INPUT 1	Connect the shielding
						V1	Mr	12	V1		
						V2	Vt	13	V2	METERING INPUT 2	Connect the shielding
						0V	Bc	14	0V		
•	ADDITIVE METERING INPUT OR ADDITIVE READY					12V		19	12V	METERING INPUT 2	Connect the shielding
						V1		20	V1		
						0V		21	0V	PT100	Connect the shielding
•	PT100 TEMPERATURE PROBE			●	ADR 3x0.6 sh.	+	Jn	33	+		
						-	Bc	34	-	PT100	Connect the shielding
						-	Vt	35	-		

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								INTERFACE POWER SUPPLY BOARD			
Option	Equipement	Cable (forn information)				Function	Colour or No.	Terminal	Function	Observation	
		No.	CG*	Alma	Type						
	GRAVITRONIQUE CONTROL BOX	C3	3/4"NPT		20x1	Pump	1	73	FET=Field Effect Transistor Outputs 24VDC (outputs FET 24V 5W max.)		Selection valve pumped distribution
						Gravi	2	79			Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)
						Footvalve	3	44		Footvalve	
						Vent	4	45		Vent	Manifold vent control
						Flap 1	5	39		EV manifold flaps 1to 5	Opening- control flap 1
						Flap 2	6	40			Opening- control flap 2
						Flap 3	7	41			Opening- control flap 3
						Flap 4	8	42			Opening- control flap 4
						Flap 5	9	43			Opening- control flap 5
						Return 1	10	63		Product Return 1to 5	Opening- control return 1
						Return 2	11	64			Opening- control return 2
						Return 3	12	65			Opening- control return 3
						Return 4	13	66			Opening- control return 4
						Return 5	14	67			Opening- control return 5
						Declutching	15	62		Declutching	Pump declutching or Motor acceleration (if automatic transmission)
						Blowing	16	68		Blowing	Product return blowing
						Hose 1	17	76		Valve hose 1	Selection valve hose 1 (pumped)
						Hose 2	18	77		Valve hose 2	Selection valve hose 2 (pumped)
						HF	19	78		API	High flow of an API adaptor or Selection valve hose 3 (pumped) or Opening- control flap 6 or Special return
						LF	20	79			Low flow of an API adaptor
•	RC-HEATING OIL RECEIVER				2x1	Start/Stop	1	49	Start/Stop	RC- Oil_1	
						LF/HF	2	50	LF/HF	RC- Oil_2	
•	OVERFILL PROTECTION (customer tank)							53			Overfill protection probe (customer tank)
	FLAP-CONTROL FEEDBACK							54		Flaps manual control	Flap- control feedback (if manual control of flaps)
•	PTO CONTROL				1x1	PTO Ctrl		58		PTO control	Power-take-off engaged
•	DRIVER'S CAB CONTROL				3x1	PTO	4	61	24VDC= PTO	PTO	(Output FET 24V 5W max.) FET=Field Effect Transistor
•	ADDITIONATION CONTROL				2x1	Supply	1	71	NC free contact	Addition control	Closed contact=addition (Output: NO free potential relay)
						Control	2	72			
	KIT SOLENOID VALVES NC/NO (ATEX) - PUMP BYPASS	C4			3xG0.75	NC valve Pump bypass	1 / Mr	74	24VDC	NC or HF	24VDC = opening NC solenoid valve or HF control
							2 / Bl	80	0V		
						NO valve Exhaust	1 / Mr	75	24VDC	NO or LF	24VDC = closing NO solenoid valve or LF control
							2 / Bl	80	0V		
SOME EXTENSION BOARDS MAY BE SET ON TO THE INTERFACE POWER SUPPLY BOARD											
*Refer to the Cable Glands Installation Instruction											

*Refer to the Cable Glands Installation Instruction

Factory pre-wiring

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								INTERFACE POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	EXTENSION BOARD 4-RELAIS					Motor control		22	Start Mot.	To extension board 4- relais	(Open collector output)
								23	Stop Mot.		(Open collector output)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 15 / 44

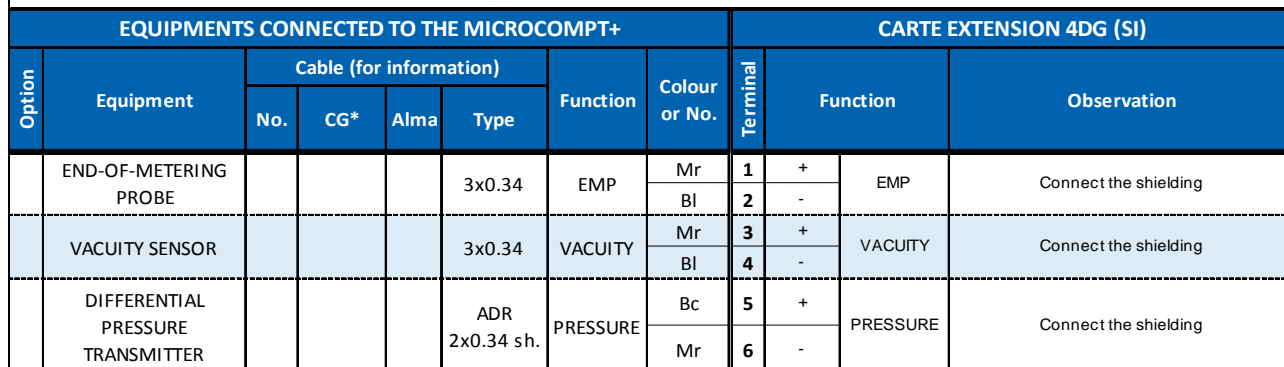


Jumper configuration on the extension board 4DG:

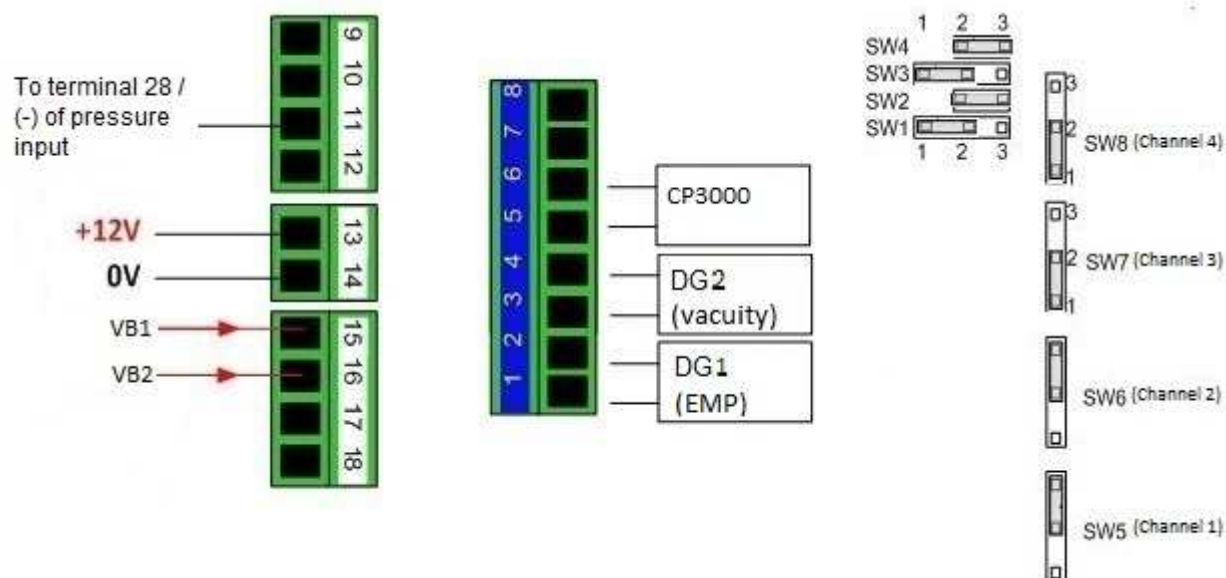

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



EXTENSION BOARD SI SONDE AD

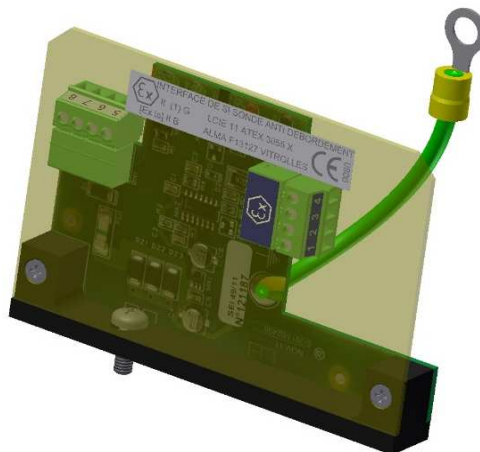

EQUIPEMENTS CONNECTED TO THE MICROCOMPT+								EXTENSION BOARD SI SONDE AD				
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminale	Function		Observation	
		No.	CG*	Alma	Type							
	OVERFILL PROTECTION PROBE PLUG				[6x1]	Common	[Nr]	1	-	OVERFILL PROTECTION PROBES	[if supplying by ALMA]	
						Supply	[Rg]	2	+			
						From probe	[Or]	3	From probe			
						To probe	[In]	4	To probe			

*Refer to the Cable Glands Installation Instruction

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

RELAY EXTENSION BOARD (used to control a minimum 5W spool valve)

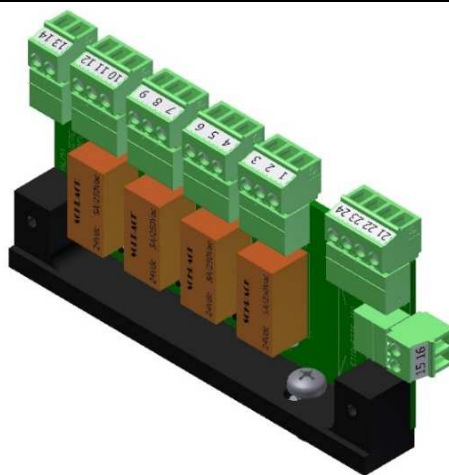

EQUIPEMENT CONNECTED TO THE MICROCOMPT+								RELAY EXTENSION BOARD			
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
●	DRIVER' CAB CONTROL		3x1			Start engine		1	NC	Start engine	Dry contact
								2	Common		
								3	NO		
			3x1			Stop engine		4	NC	Stop engine	Dry contact
								5	Common		
								6	NO		

*Refer to the Cable Glands Installation Instructions

Factory pre-wiring

INTERFACE POWER SUPPLY BOARD								EXTENSION BOARD 4-RELAIS			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	POWER SUPPLY					Supply	Bl	15	24VDC	Supply	
						Mass	N	16	0V		
	MOTOR CONTROL					Engine control	22	21		Engine control	
							23	22			



On the extension board 4-relais, cut the diodes D3 and D4 off.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 18 / 44


5. CONTROL BOX GRAVITRONIQUE

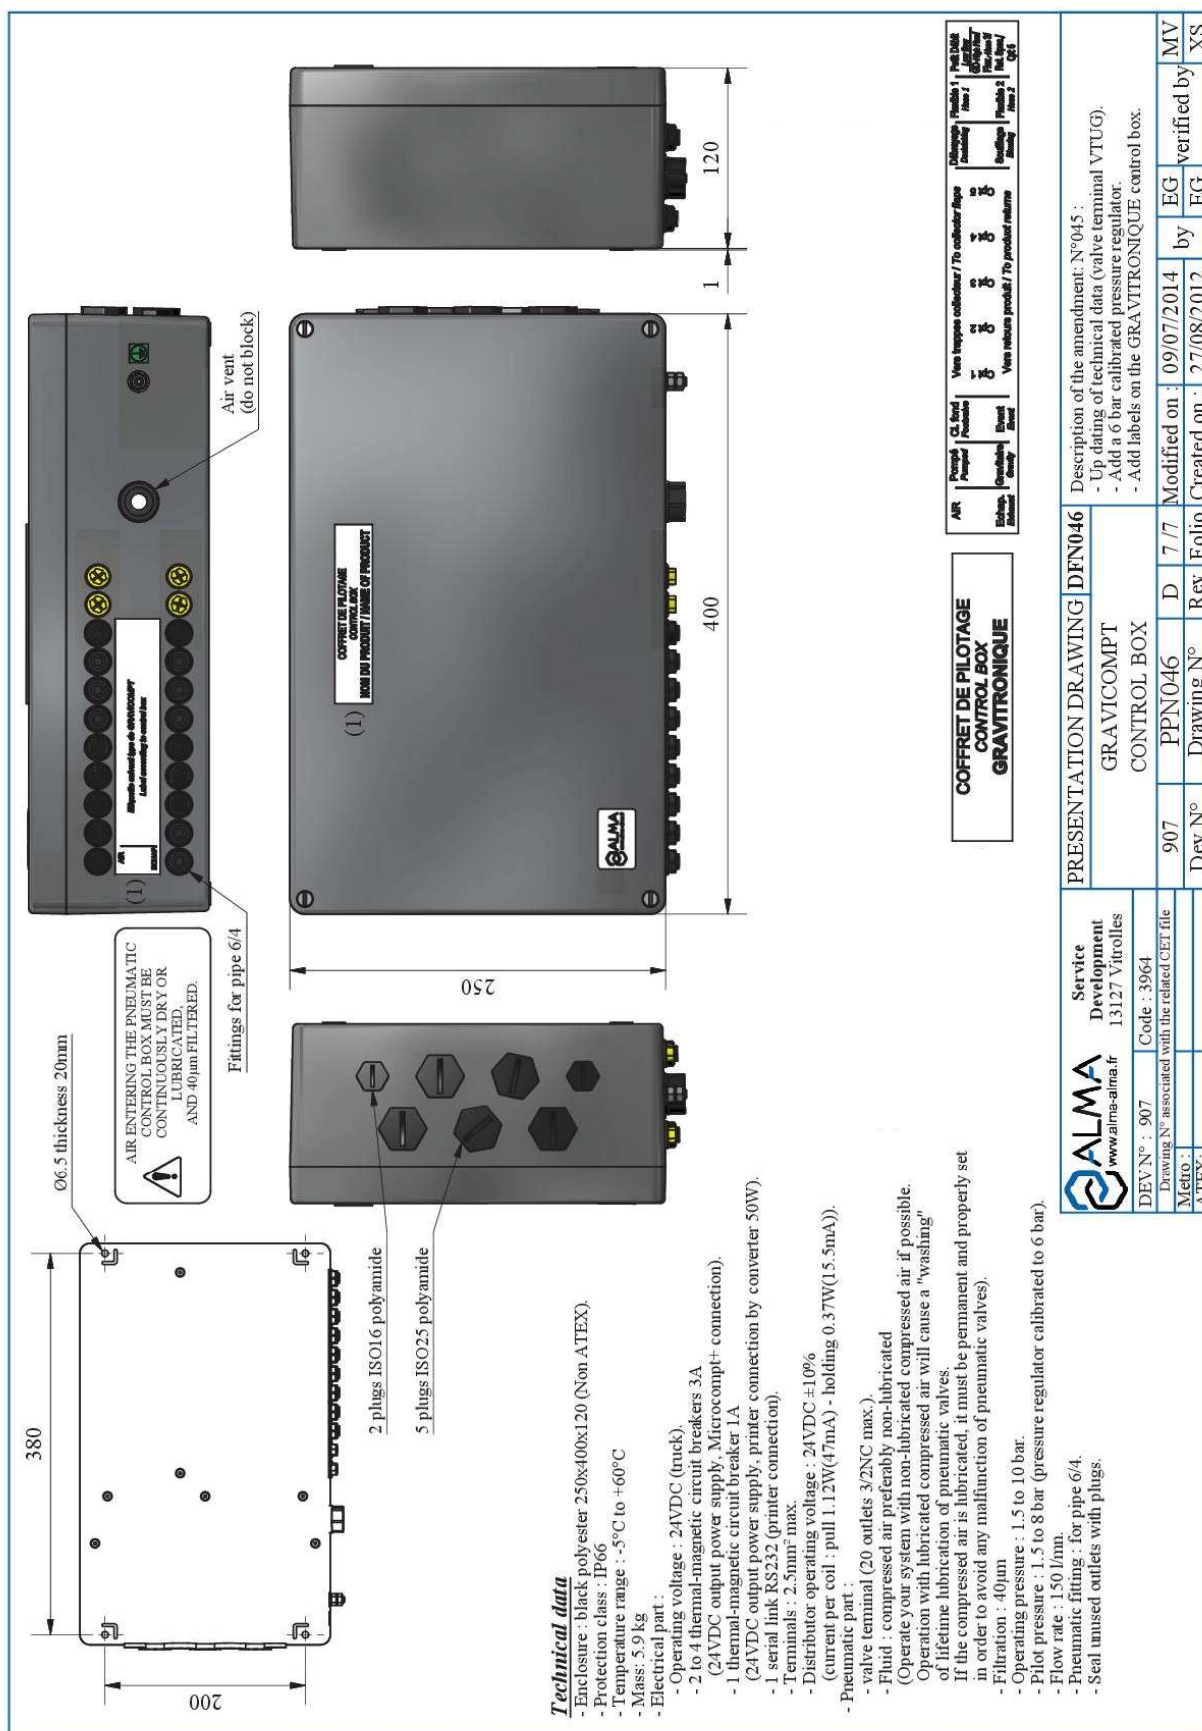Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 19 / 44

ELECTRICAL WIRING CONTROL BOX

TERMINAL ASSIGNMENT OF CONTROL BOX

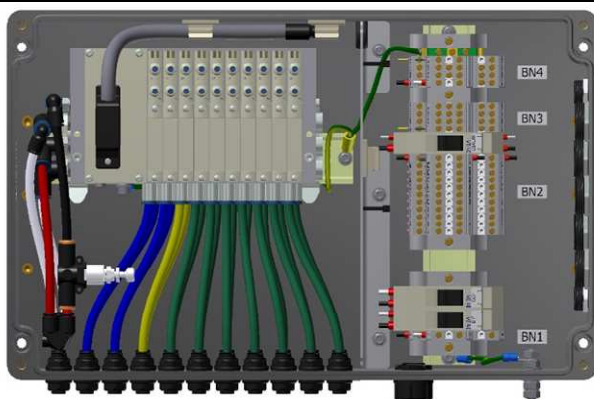

EQUIPMENTS CONNECTED TO THE CONTROL BOX								CONTROL BOX TERMINAL BLOCKS				
Option	Equipement	Cable (for information)				Fnction	Colour or No.	Block	Terminal	Function		Observation
		No.	CG*	Alma	Type							
	SUPPLY	A1			2x1	24VDC	1	BN1	1	24VDC	Supply	24VDC truck battery (after battery switch and protected by a fuse)
						0V	2		2	0V		
	MICROCOMPT+	C3	3/4"NPT		20x1	24VDC	2	BN2	1	Gravity		Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)
24VDC						4	3		Vent		Vent valve control	
24VDC						10	5		Return 1	Product return	Product return 1to 5	
24VDC						11	7		Return 2			
24VDC						12	9		Return 3			
24VDC						13	11		Return 4			
24VDC						14	13		Return 5			
24VDC						16	15		Blowing		Product return blowing	
24VDC						18	17		Hose 2		Selection valve hose 2 (pumped)	
24VDC						19	19		HF / Hose 3 / Flap 6 / Special return		High flow of an API adaptor or Selection valve hose 3 (pumped) or flap control compartment 6 or Special return	
24VDC						1	2		Pump		Selection valve pumped distribution	
24VDC						3	4		Footvalve		Footvalve control	
24VDC						5	6		Trappe 1	Flap opening	Flap control compartments 1to 5	
24VDC						6	8		Trappe 2			
24VDC						7	10		Trappe 3			
24VDC						8	12		Trappe 4			
24VDC						9	14		Trappe 5			
24VDC						15	16		Declutch.		Pump declutching or Motor acceleration	
24VDC						17	18		Hose 1		Selection valve hose 1 (pumped)	
											24VDC	20

**Refer to the Cable Glands Installation Instructions*

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 20 / 44

EQUIPMENTS CONNECTED TO THE CONTROL BOX								CONTROL BOX TERMINAL BLOCKS					
Option	Equipment	Cable (for information)				Function	Colour or No.	Block	Terminal	Function		Observation	
		No.	CG*	Alma	Type								
	MICROCOMPT+	C2				+	Bl	DJ1			Microcompt supply		
						-	N						
	PRINTER					Rx		BN3	8		Printer		
						Tx			7				
	PRINTER		1/2"NPT		4x1 sh.	+	Bl	BN4	1	Input	Converter		
						-	N		2				
						+	Bc		3	Output			
						-	N		4				
						24VDC	Bc		5	24VDC	RS232 Printer		
						0V	Mr		6	0V			
						Rx	Vt		7	Rx			
						Tx	Jn		8	Tx			

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 21 / 44

RACCORDEMENT PNEUMATIQUE COFFRET DE PILOTAGE

PNEUMATIC INPUT/OUTPUT ASSIGNMENT OF THE CONTROL BOX				
Label	Input	Output	Function	Observation
AIR	X		Air supply of the box	Air if: all footvalves opened and valve bar locked
Exhaust		X	Exhaust	Put a tube L=100mm min. (no muffler)
Pump		X	Pumped way selection	
Gravity		X	Gravity way selection	
Footvalve		X	Opening footvalve	
Vent		X	Opening manifold vent	Connection to the vent valve
Product return Cpt 1		X	Product returns	Connection to the product returns
Product return Cpt 2		X		
Product return Cpt 3		X		
Product return Cpt 4		X		
Product return Cpt 5		X		
Manifold flap Cpt 1		X	Opening flaps	Connection to the manifold flaps
Manifold flap Cpt 2		X		
Manifold flap Cpt 3		X		
Manifold flap Cpt 4		X		
Manifold flap Cpt 5		X		
Declutching		X	Declutching pneumatic cylinder	If pneumatic declutching
Blowing		X	Product return blowing	Use "&" cells to connect with each return product control
Hose 1		X	Hose 1 valve control	
Hose 2		X	Hose 2 valve control	
GD – High Flow/ Flex. – Hose 3/ Ret. Spec./ Cpt 6		X	API adaptor open in high flow	Connection to the API adaptor (HF – LF)
Low Flow		X	API adaptor open in low flow	

Unused ports must be plugged.



CONDITIONS FOR AIR SUPPLY OF THE CONTROL BOX:

- The pneumatic "&" cells of all footvalves are open.
- The bar is in its locked position (compartment API adaptors are locked).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 22 / 44



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 23 / 44

ADRIANE TURBINE METER DN80-80 243 110x110

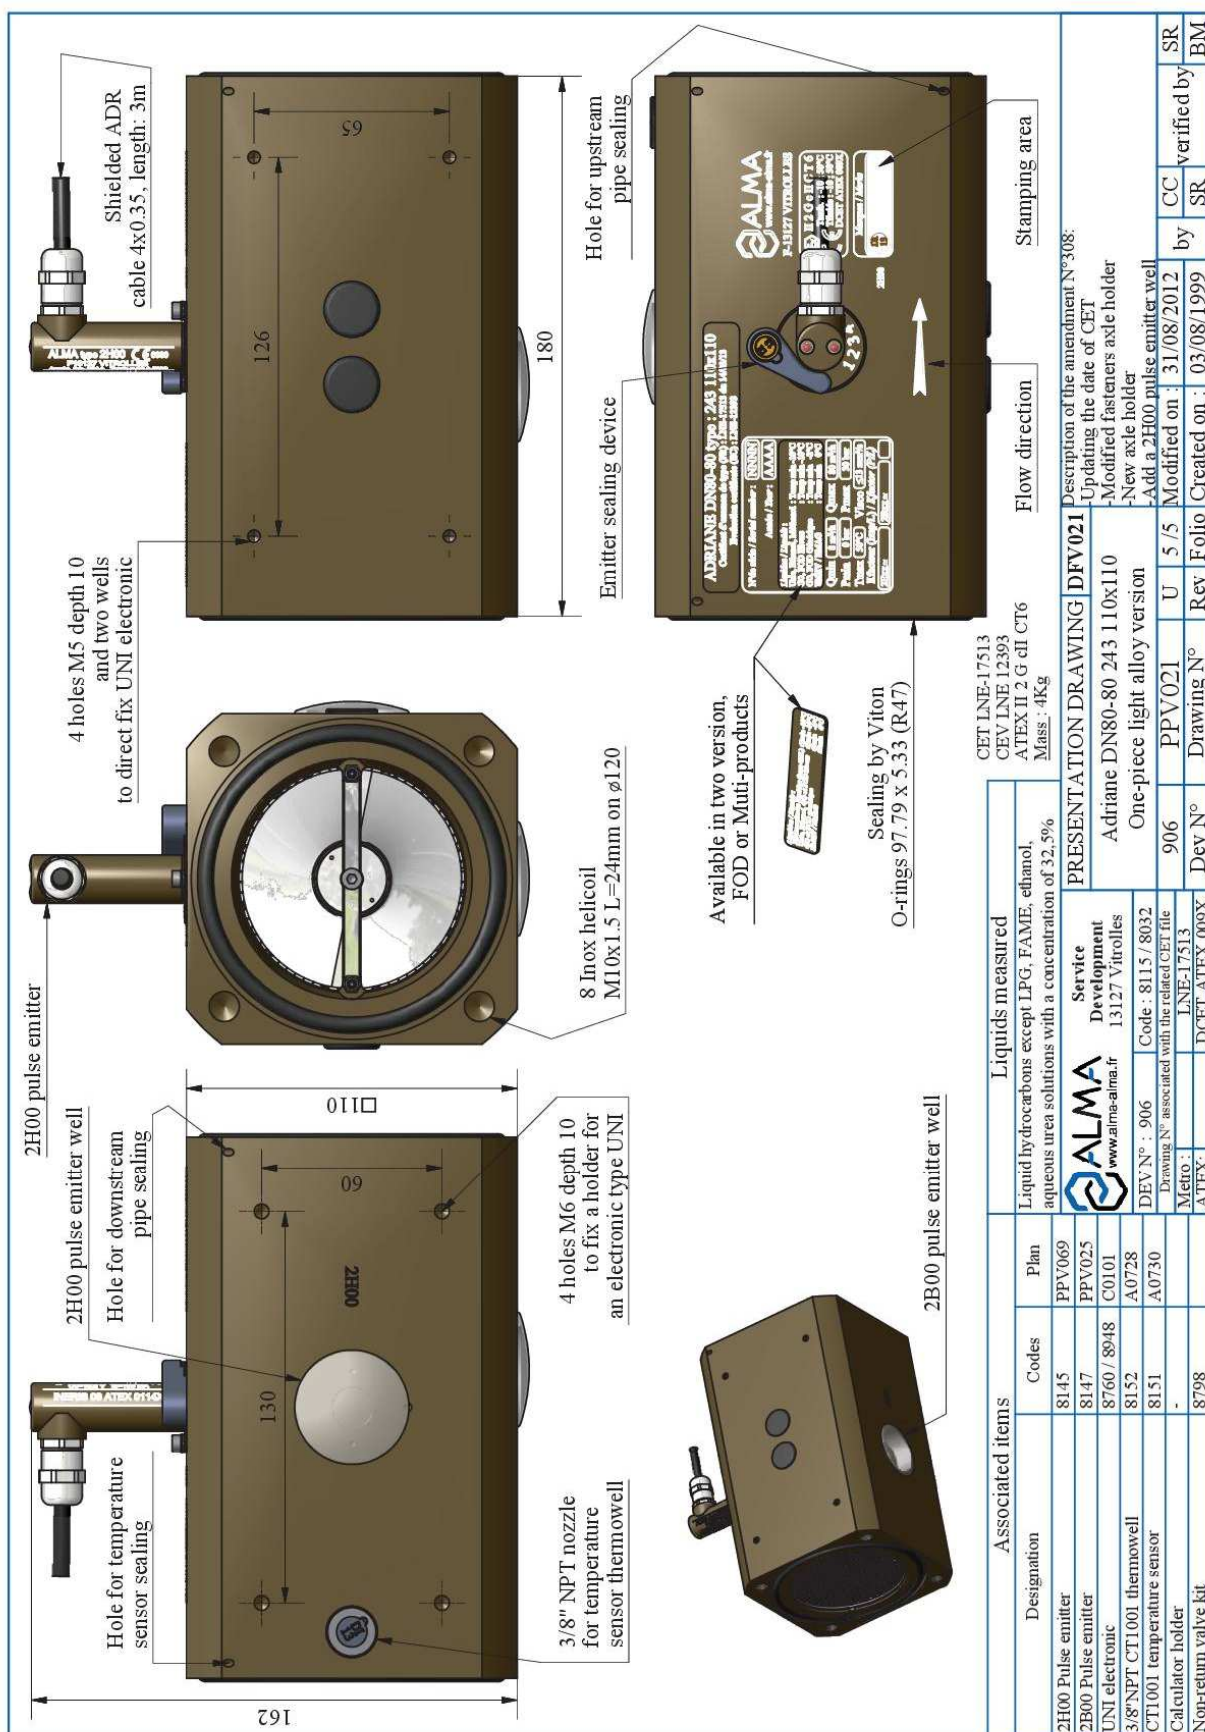Document consultable sur le site alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

INSTALLATION RECOMMENDATIONS ADRIANE TURBINE METER

- The identification plate and the led of the pulse emitter(s) shall be visible and accessible.

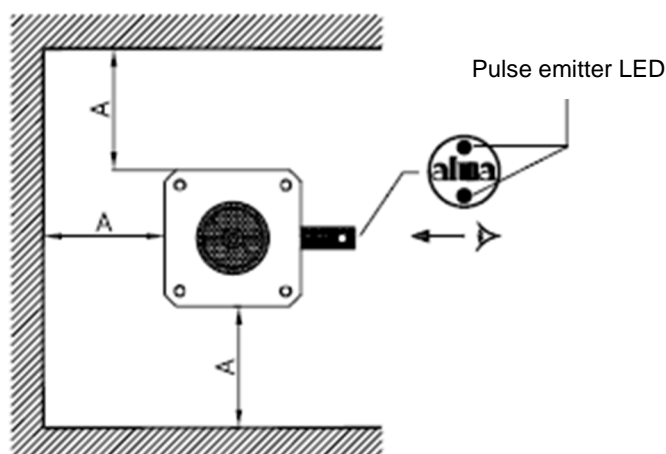

- The turbine must be installed with respect to the flow direction.
- Put sealing rings each other sides between the turbine and the backflanges.
- Leave an open space all around the turbine in order to ease maintenance.
- Install a 400µ filter (mini) on the pipe upstream from the turbine meter.
- After installation or during the commissioning period, if the new or modified pipes have not been perfectly cleaned or pickled and passivated, the turbine should be protected by a honeycomb sieve – max. 1mm mesh. It must be placed between two flanges upstream from the turbine.
- Dimensions: $A > 100\text{mm}$.



The meter may be installed:

- Between two straight pipe sections that have the same nominal diameter as the meter and which lengths is at least equal to 10 times this diameter upstream and 5 time downstream.
- Between two pipes that have the same nominal diameter as the meter, with shorter or no straight sections, provided that no flowrate adjustment device (eg. a variable-opening valve) is located upstream at a distance less than 10 times the nominal diameter.

Provision contained in EC Type Examination or Evaluation Certificate.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 25 / 44

7. DIFFERENTIAL PRESSURE TRANSMITTER CP3000

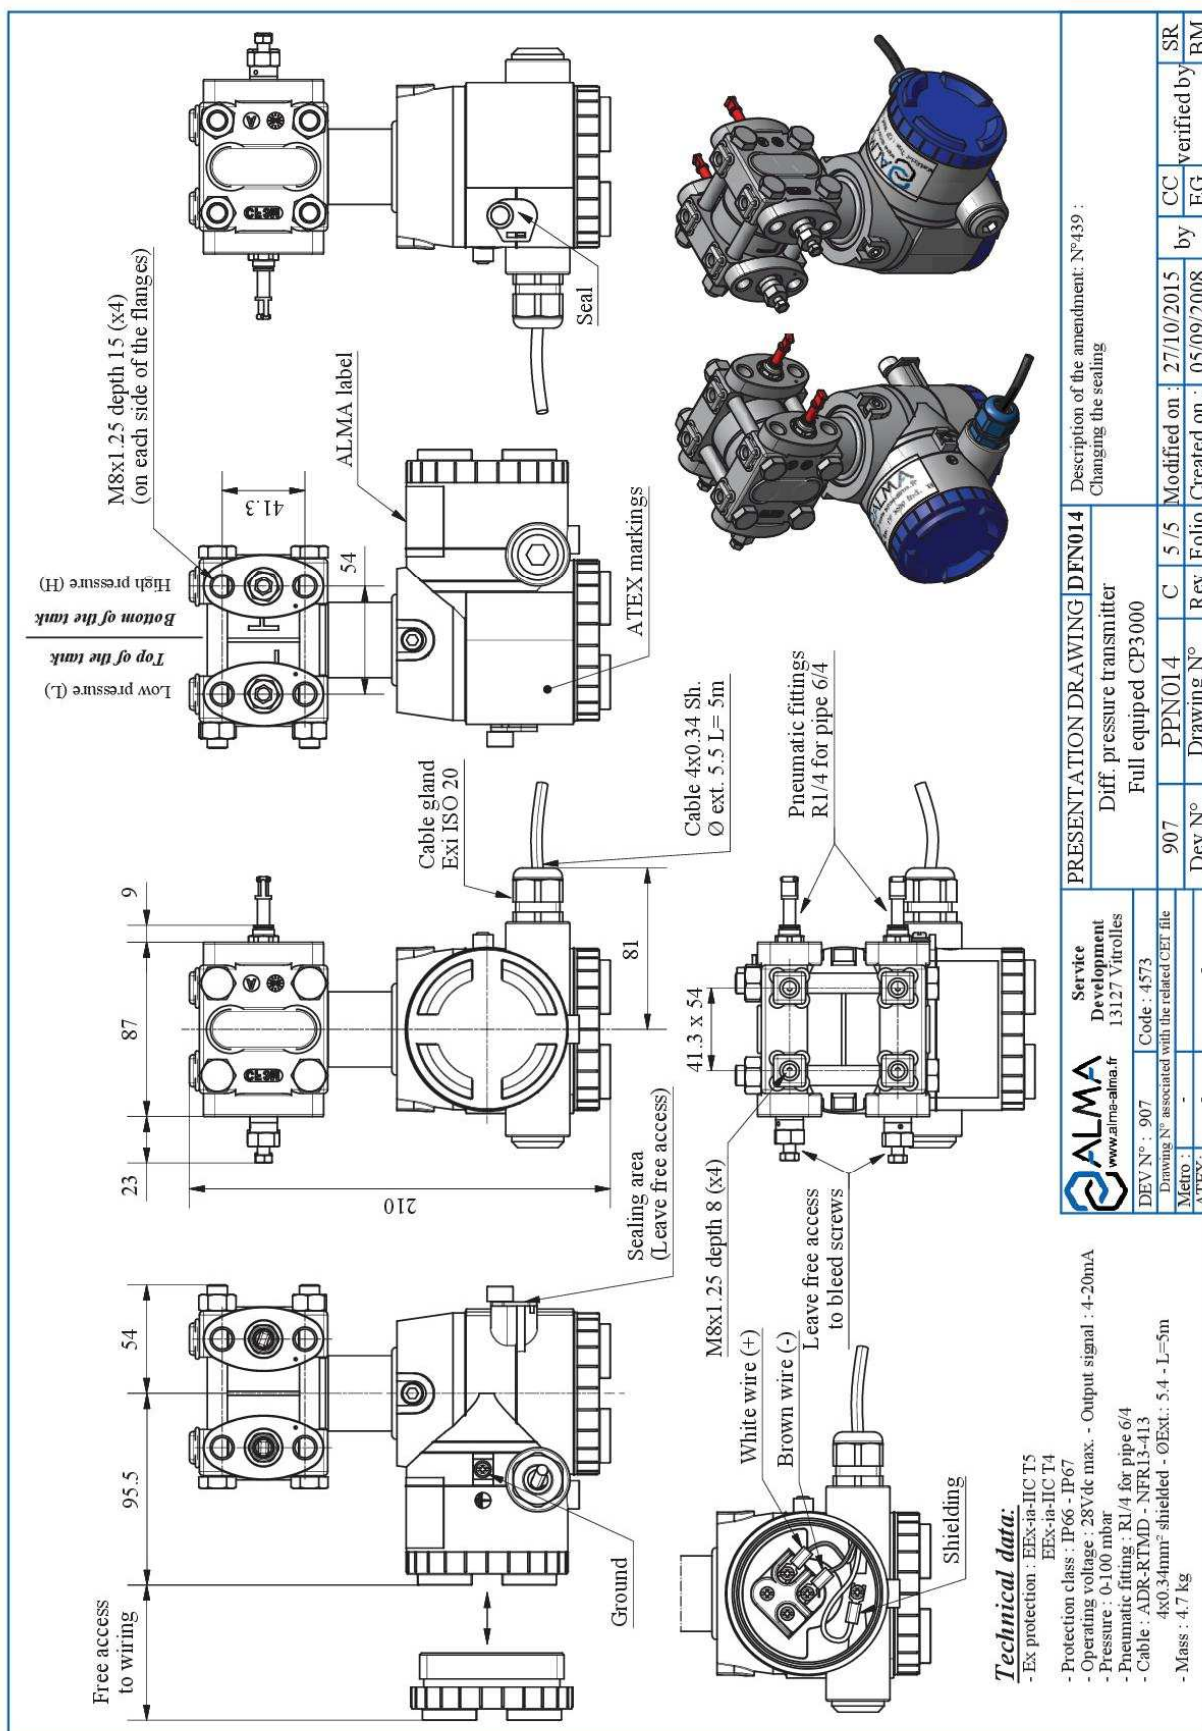

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

INSTALLATION RECOMMENDATIONS CP3000 (ATEX)

THE PRESSURE TRANSMITTER MUST BE INSTALLED IN UPRIGHT POSITION

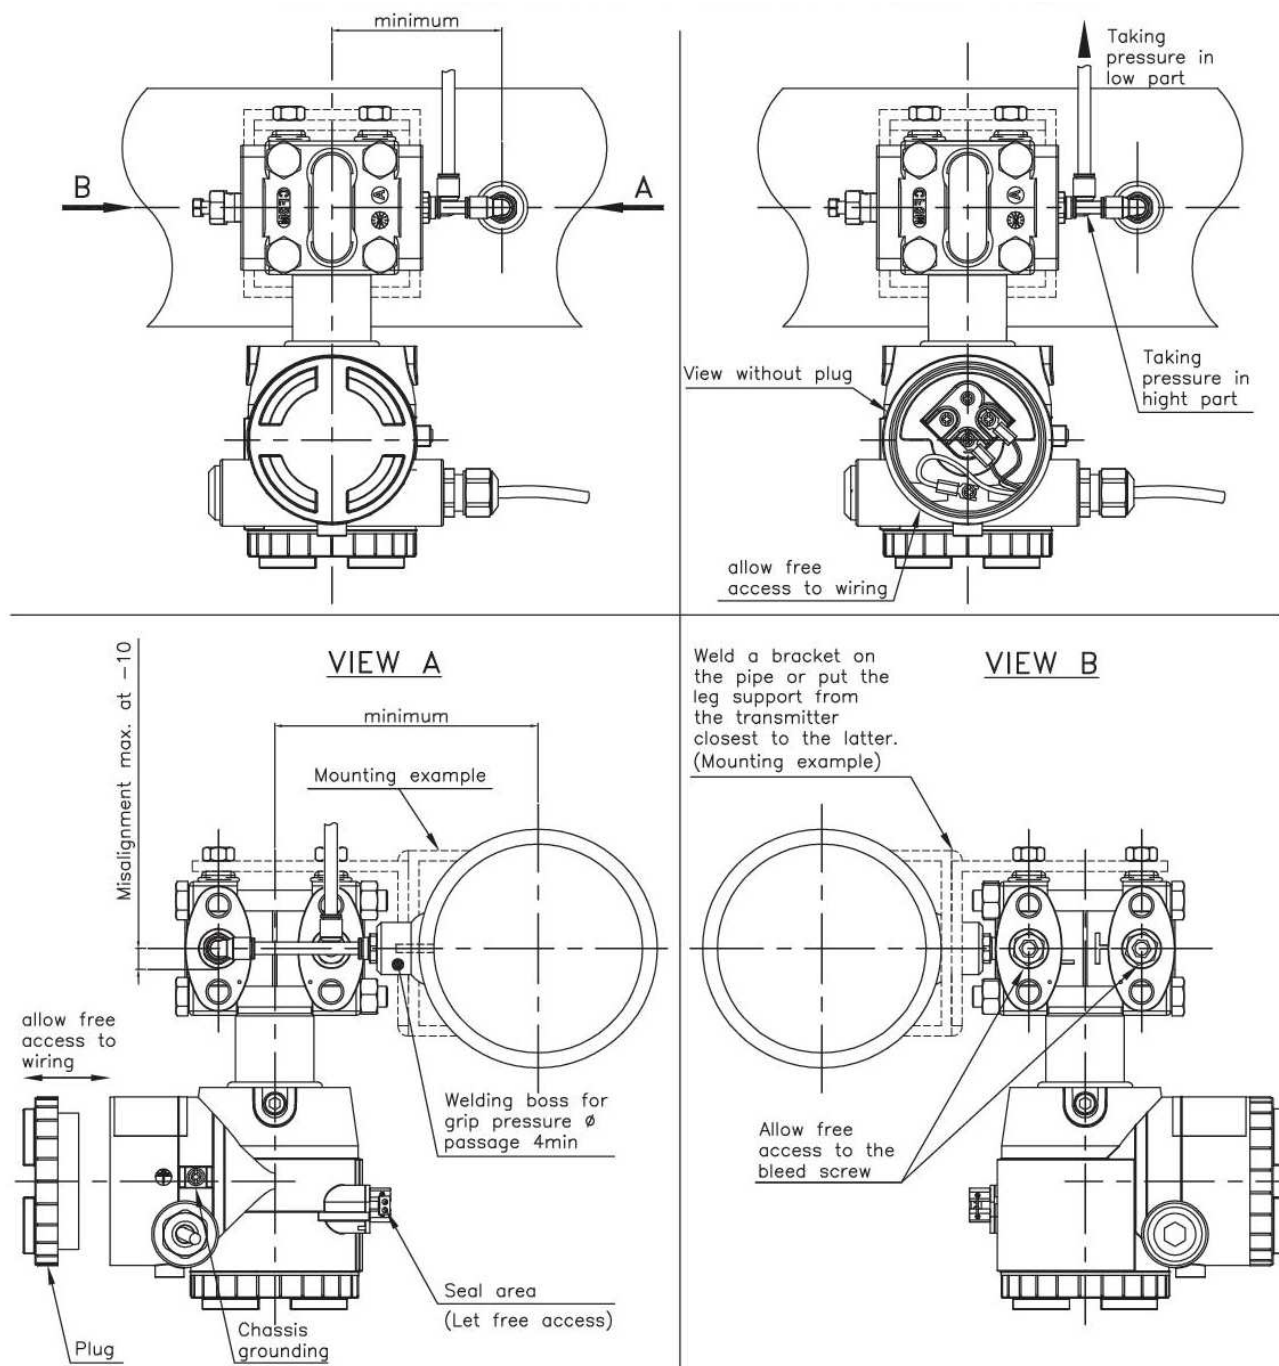

REFER TO INSTRUCTION MANUAL

(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

Page 27 / 44

8. NC/NO SOLENOID VALVES KIT (ATEX)

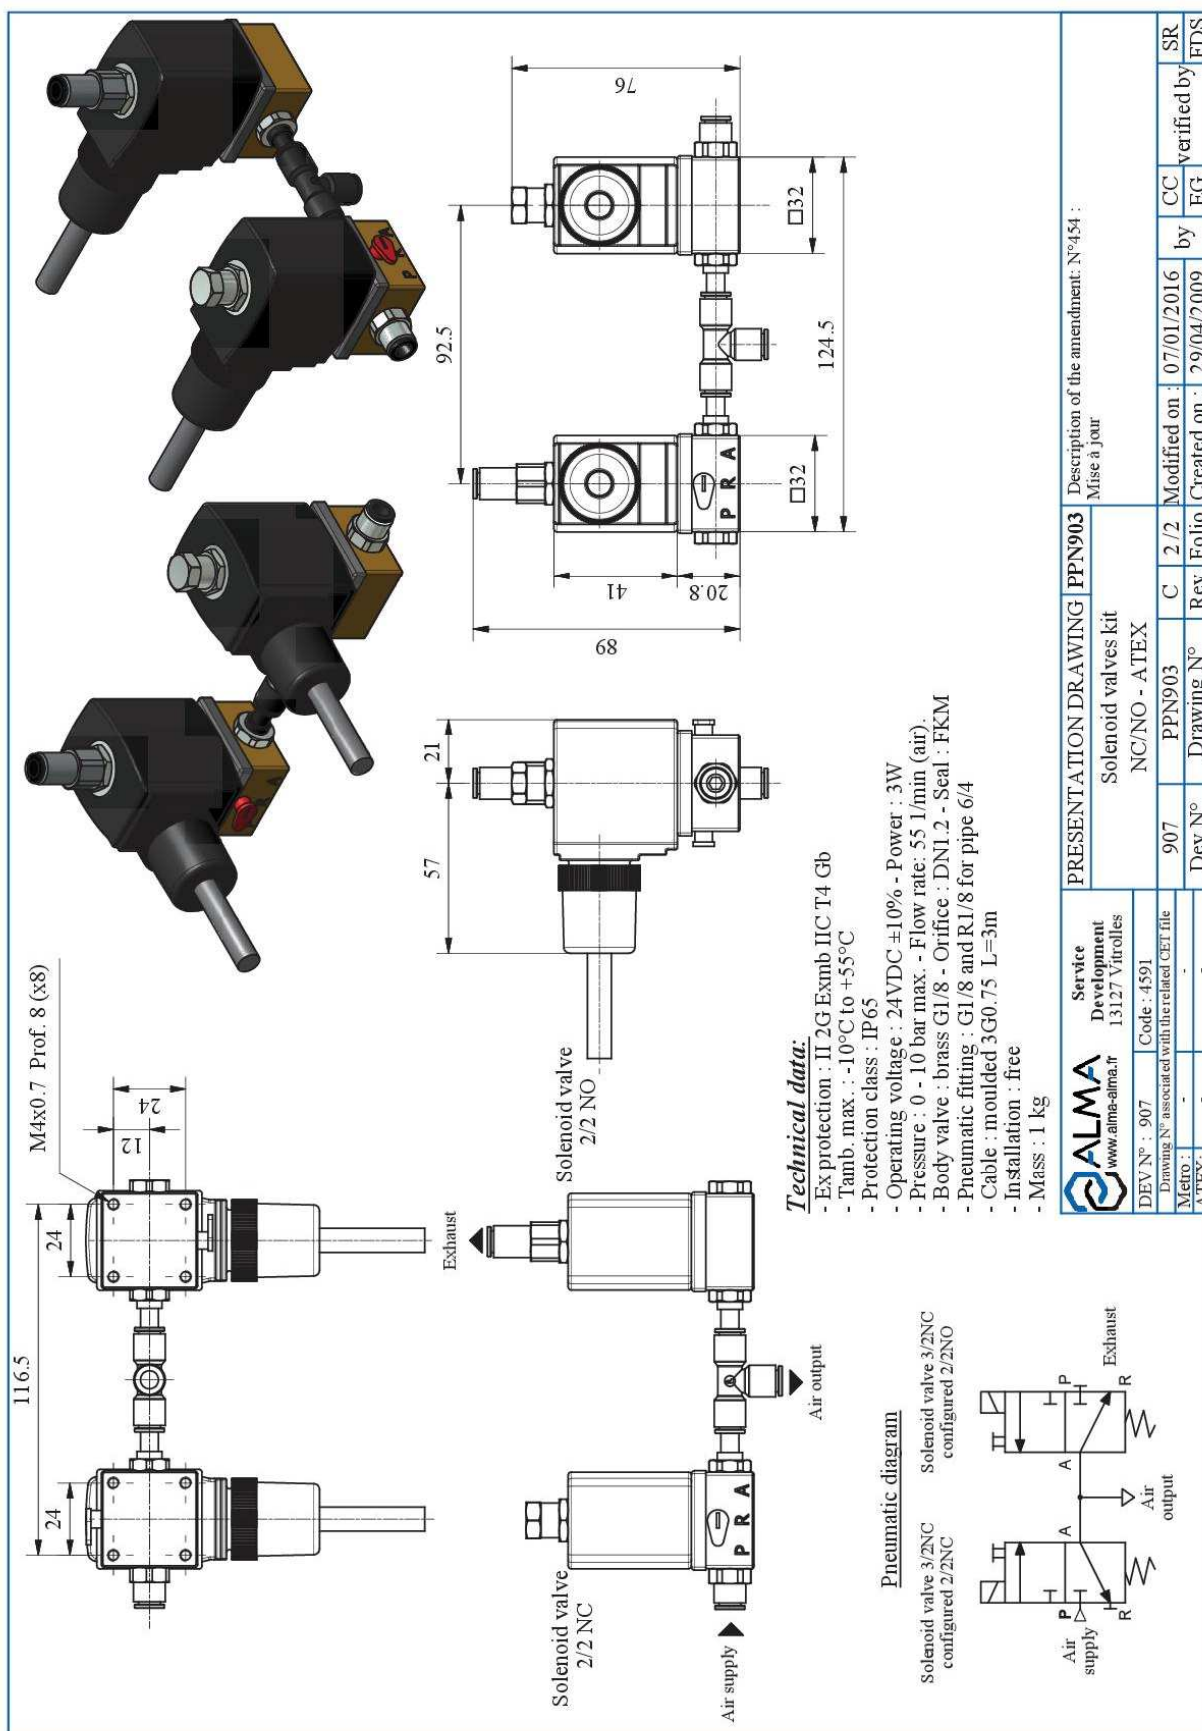Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

9. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75-Co


Codification of marking :

DG3001/LLL-Co

LLL = Maximum Length under connection
Co = Connector

Dimensions

Codes	Types	Lengths under connector (mm)		Materials
		L _{min}	L _{max}	
0513	DG 3001-Co	0	26	Aluminium 6082
8133	DG 3001/75-Co	30	71	Aluminium 6082
8134	DG 3001/205-Co	75	201	Aluminium 6082

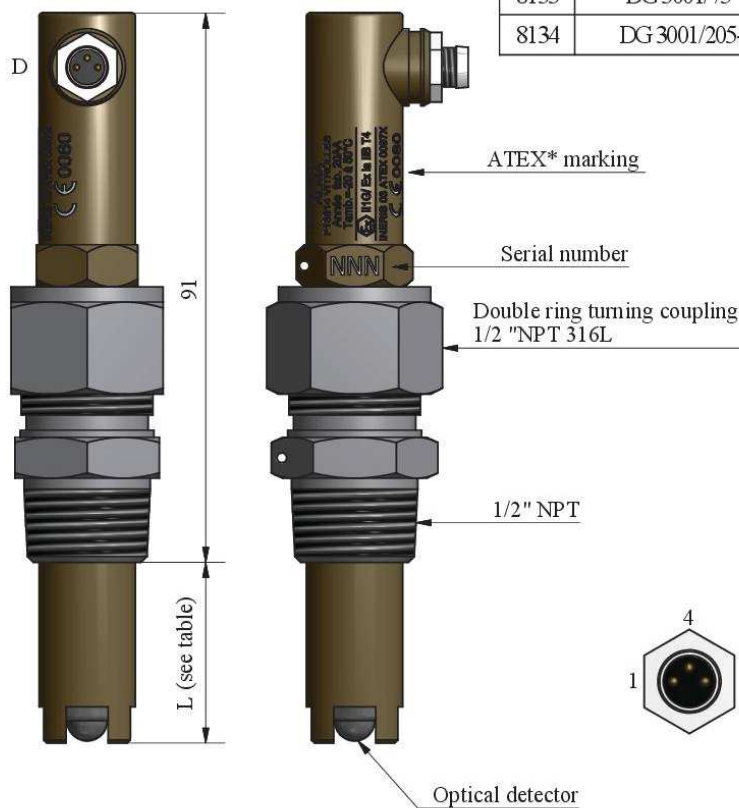


Operation		
Conditions	Gas	Liquid
Output (mA)	35±2	15±1
Open collector output	Saturated	Blocked
Imax on output Co (mA)	30	
Vce (V) for Is=10mA	< 0.4	
State of the red led	On	Off
State of the green led	On	On

Supply			
Voltage VDC	NSI	SI II B	SI II C
On power supply +	7 to 27	7 to 18*	7 to 15*
On output Co	< 27	< 13.2*	

Connection of the connector


Function	Pin	Wire Color
Power supply +	1	Brown
Power supply -	3	Blue
Output Co	4	Black

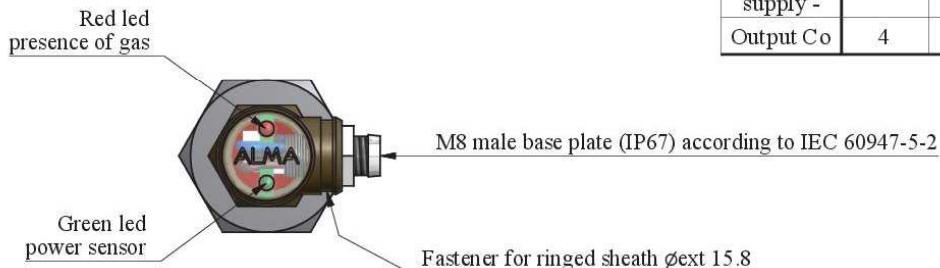

NOTE:

- The detector body is made of anodized aluminum alloy of bronze color.
- The optical sensor in contact with the liquid or gas is of polysulfone.
- The O-ring between the body and the detector is made of Viton.
- The sensor is supplied with any cable, 3 lengths are available: 5m cables (8138), 10m (8139) and 25m (8140).

*Refer to § 2 ATEX descriptive notice

 Service Development 13127 Vitrolles	PRESENTATION DRAWING DFV014		Description of amendment MDV492 Adding DG 3001-Co Inox			
	Gas detector output connector DG3001, DG3001/75, DG3001/205					
DEV N° : 981	Code : 0513	981	PPV014	U	6/8	Modified on : 08/09/2016
Drawing N° associated with the related CET file		Dev N°	Drawing N°	Rev	Folio	Created on : 01/04/1999
Metro :						by CHR
ATEX :	INERIS 03 ATEX 0097X					verified by SR
						BM

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

This document is available at www.alma-alma.fr

Page 29 / 44


INSTALLATION RECOMMENDATIONS DG3001/75**POSITION OF THE END-OF-METERING PROBE:**

The DG3001/75 should be positioned above the top of the turbine, as close as possible to the turbine

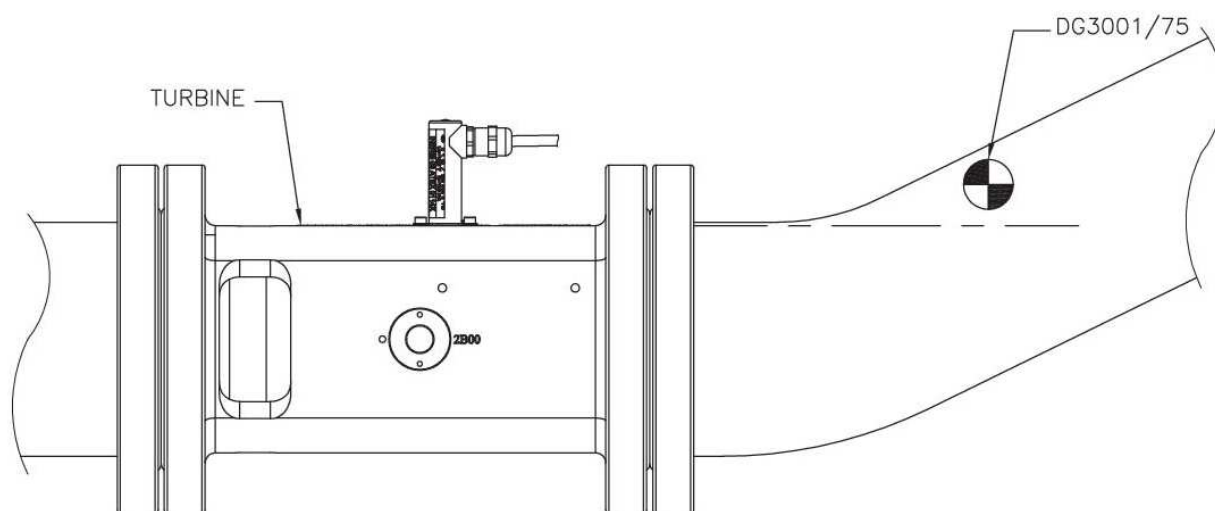


Position of the welding boss
for DG3001

– horizontal position or
until 30°

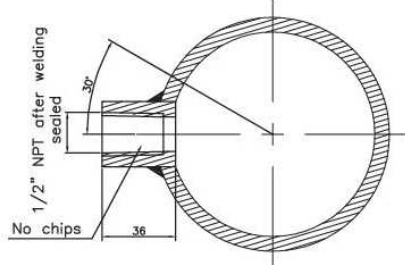

Mounting DG3001

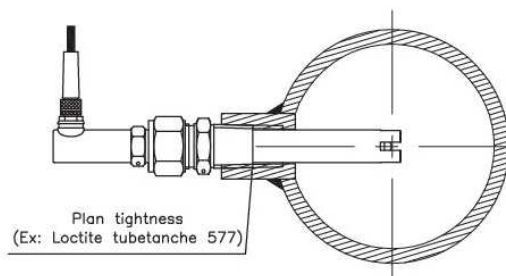**REFER TO INSTRUCTION MANUAL**

(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



**INSTALLATION GUIDE DI 015 ENC
GRAVITRONIQUE**

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 30 / 44

10. PRINTER

Without printer

Printer kit
with **TM-U295 printer**
Code: 0284 (with 5 meters cable)
Code: 0765 (with 10 meters cable)
(Printer presentation drawing PPN901)

DO NOT EXPOSE THE PRINTER
TO ANY HEAT-SOURCE,
AND PROTECT IT FROM VIBRATIONS
AND FROM WATER PROJECTIONS.

IF IT'S NOT IN THE TRUCK CABIN,
THE PRINTER MUST BE INSTALLED
IN A TIGHT BOX IN ORDER
TO FACILITATE INTRODUCTION AND
EXTRACTION OF PAPER.

Printer kit
with **SP298MD printer**
Code: 0766 (with 5 meters cable)
Code: 0767 (with 10 meters cable)
(Printer presentation drawing PPN900)

* ADR-RTMD - NFR13-413 cable

PRINTER KIT:
- 1 Printer.
- 1 Printer link cable (Length= 5 or 10m).
- 1 Printer holder (SS 304L thickness 2mm - Mass 1.5 kg).

PRINTER LINK CABLE		COLOUR WIRE	FUNCTION
TYPE	Shielded cable * 4x0.75mm ² ø ext. 8 L=5m / Code 4339 L=10m / Code 4578	White (WH) Brown (BN) Yellow (YE) Green (GN) Shielding	24Vdc 0v Tx printer Rx printer Shielding

ALMA
www.alma-alma.fr

Service Development
13127 Vitrolles

DEV N° : 907
Drawing N° associated with the related CIEI file
Metro :
ATEX:

PRESENTATION DRAWING PPN902

PRINTER KIT

Description of the amendment: N° :
- English version of presentation drawing.

907	PPN902	B	2 / 2	Modified on : 06/05/2014	by EG	verified by DSM
Dev N°	Drawing N°	Rev	Folio	Created on : 25/03/2010		XS

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE



This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' '')

Temperature: °C

INSTALLATION RECOMMENDATIONS PRINTER

- Do not store anything above the printer.
- Leave an open space all around the printer to ease maintenance.
- Dimensions: $A \geq 50\text{mm}$ and $B \geq 100\text{mm}$.

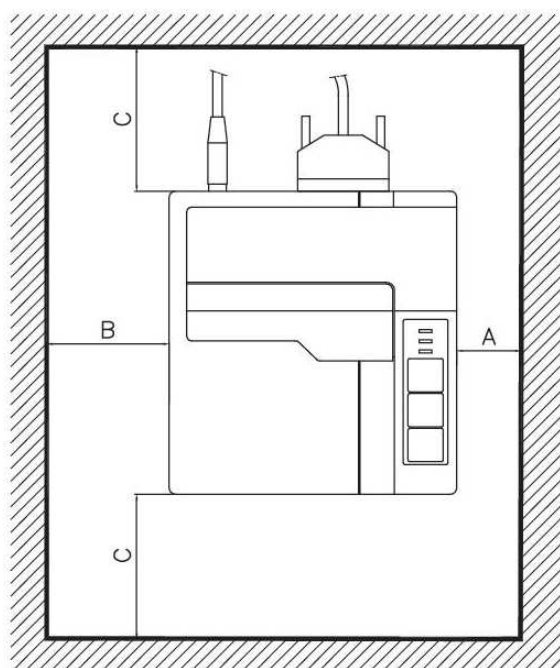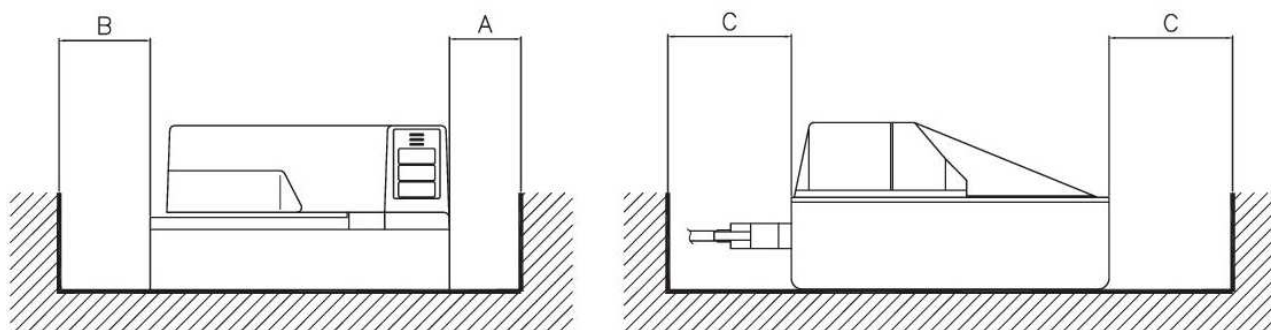

BOTTOM VIEW



DO NOT EXPOSE THE PRINTER TO ANY HEAT-SOURCE.
PROTECT IT FROM VIBRATIONS AND WATER PROJECTIONS.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 32 / 44

11. CONVERTER 24VDC/24VDC 2.1A 50W

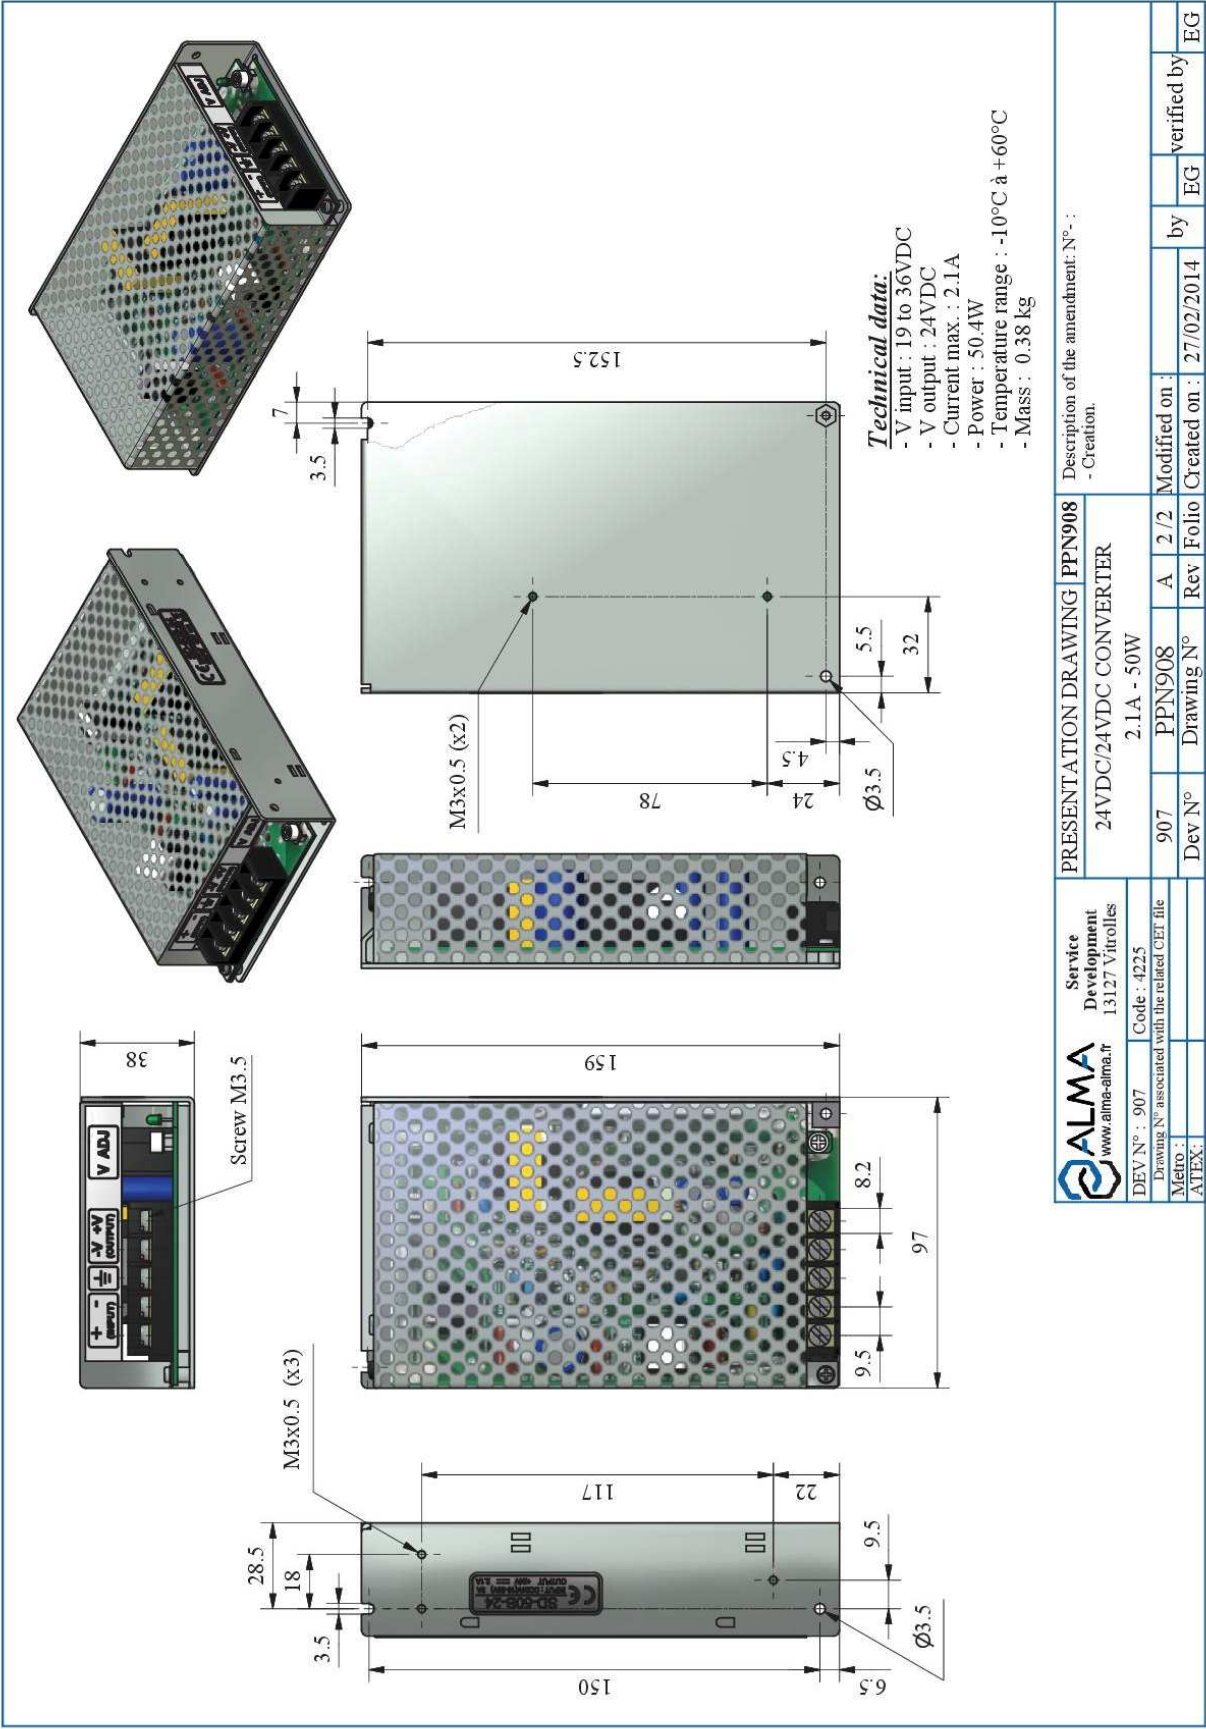

Document available on website [alma-alma.fr](http://www.alma-alma.fr)


12. PNEUMATIC CONTROL VENT VALVE KIT

Technical features:
Body: brass
Male adaptor hose nipple: brass
Pressure: 10 bar max.
Mass (kit): 1.3Kg
Mass (valve): 1.1Kg



PRESENTATION DRAWING		DFN004		Description of the amendment N° 036 : Markings added on the body valve for a better comprehension of flow direction.				
Pneumatic control		Vent valve kit						
907	PPN004	B	5 / 6	Rev	Folio	Modified on : 10/12/2012	by EG	verified by XS
Dev N°	Drawing N°					Created on : 11/02/2008	EG	EG

Document available on website [alma-alma.fr](http://www.alma-alma.fr)

INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VALVE

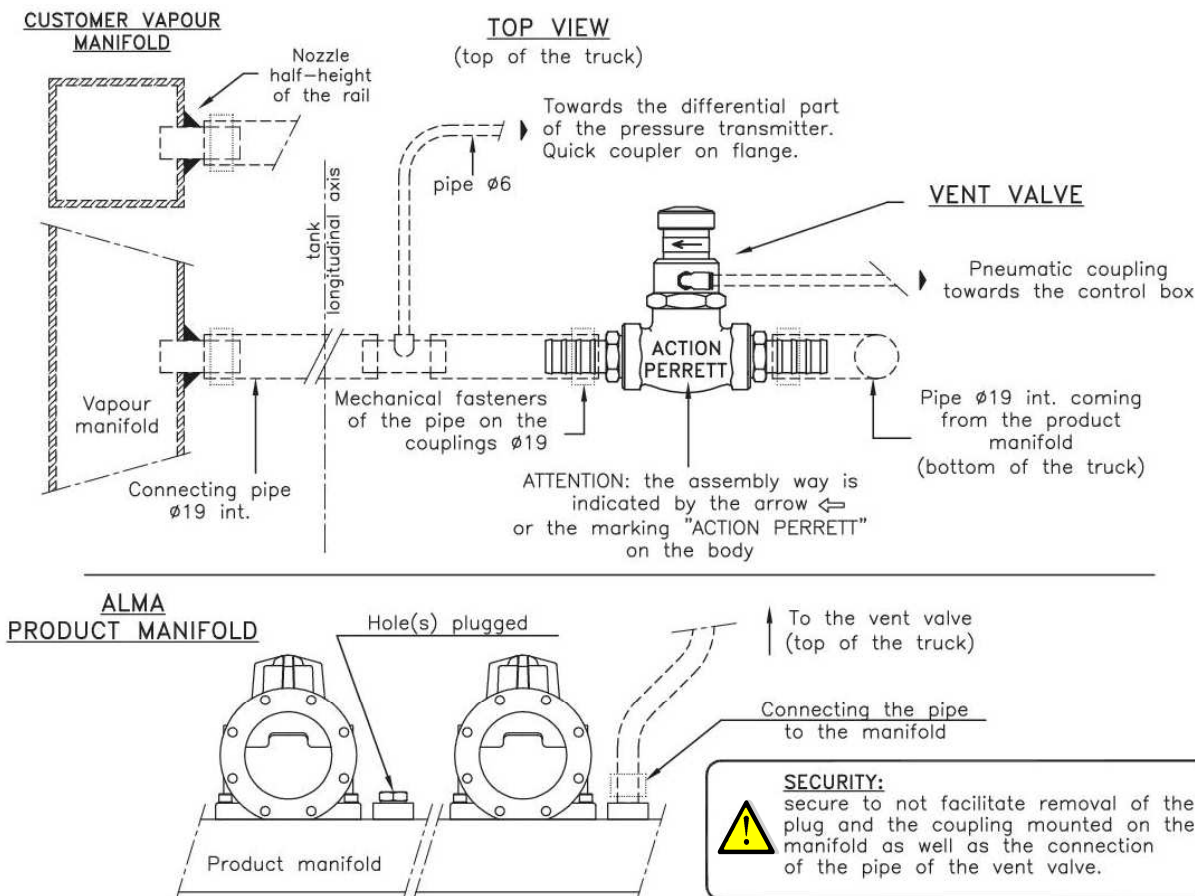

ASSEMBLY OF THE VENT PIPE (not supplied by Alma)

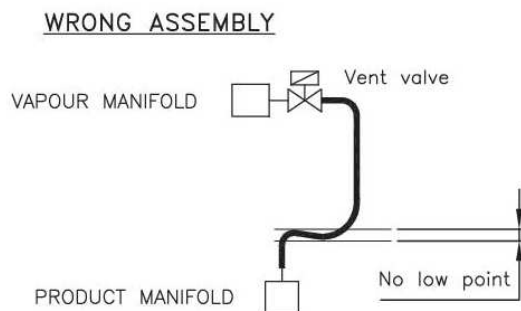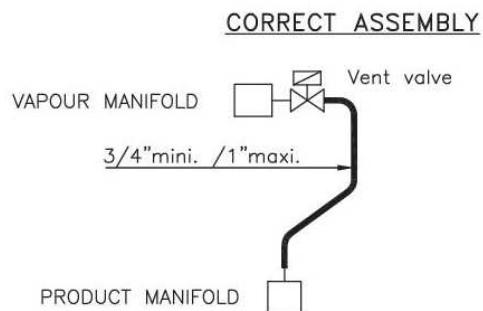

ATTENTION: avoid any low points on the pipe run.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$, $'$, $"$)
Temperature: $^{\circ}\text{C}$

13. VACUUM BREAKER

Warning: the three valve tabs must be in contact with the retaining ring

4 holes Ø4 on Ø26

Ø34

Thread G1/2"

1 2 3 4 5

32

8.5

Flat-part for tightening with a 32 open ended wrench

Before mounting:
Grease the check valve O-ring (2) and the O-ring (3)
Grease: UNIL OPAL ALIMENTA (or equivalent)

Technical features:

Connection G1/2"

Use in any position

Permissible working pressure: 10 bar

Opening pressure: 20 mbar

Working temperature: T_{min}=-10°C, T_{max}=80°C

Stainless staining screen 75µ

Permissible liquids: clear liquids and gas

Viton O-rings

The vacuum breaker must be mounted with a tab with removable ring to clean the straining screen (such as tight tube)

Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Vacuum breaker cap	Brass	A1145	C	M	8734	
2	1	Vacuum breaker	POM	EB901-149B 3301V			0551	
3	1	Viton O-ring 1.2x1.5	Viton			A	8196	
4	1	Straining screen D=15 Stainless cloth, opening 75µ, wire 36µ	Stainless steel	PV1228	C	A	0807	
5	1	Stainless Internal retaining ring D=16	Stainless steel	NF E 22-165 - 16x1		A	0808	

Service Development
13127 Vitrolles

Métro : Code : 0497
Drawing N° associated with the related CIE file
ATEX:

ALMA

Vacuum breaker G1/2"

BM
SR

verified by
CC

by
SR

Created on : 25/05/2009

Modified on : 25/06/2010

Rev 2/2

Folio 2

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')

Temperature: °C

INSTALLATION RECOMMENDATIONS VACUUM BREAKER

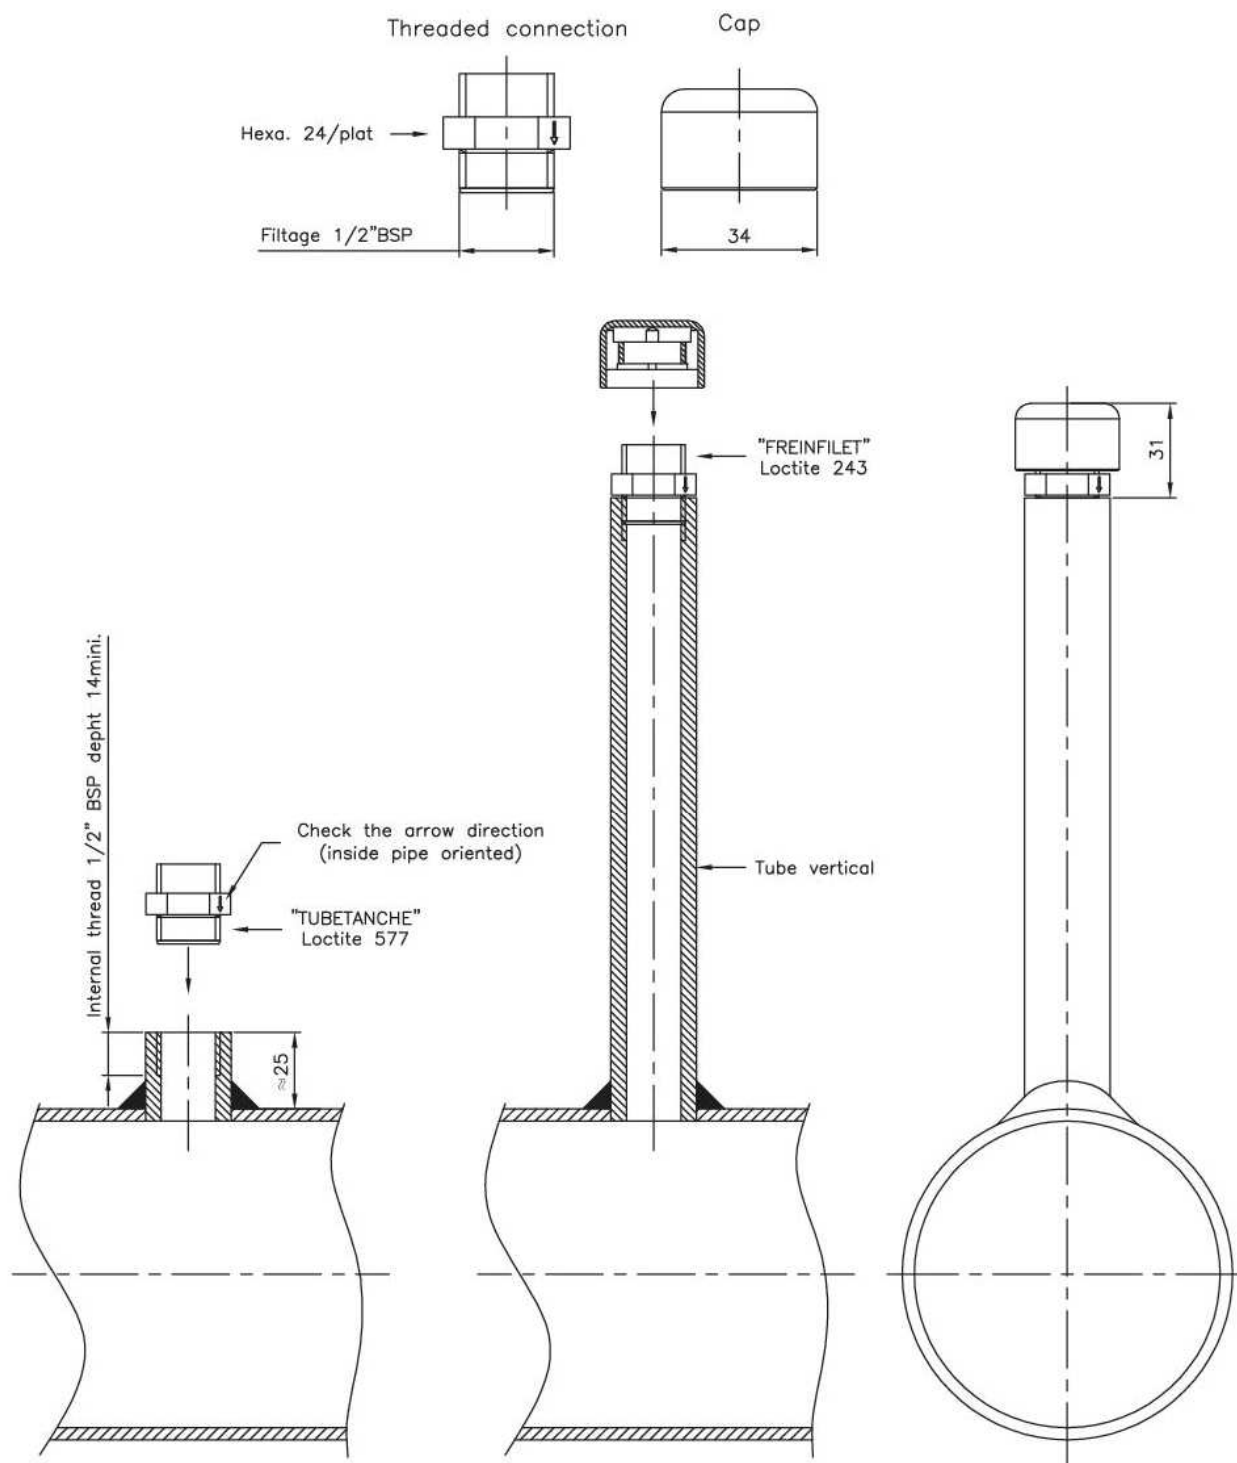

1) Screw the threaded connection of the vacuum breaker (with loctite 577) on the welded boss with respect to the arrow direction

2) Screw manually (tighten strongly with loctite 243) the vaccum breaker cap on the connection.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C


14. DN80 NON-RETURN VALVE KITS
DN80 NON RETURN VALVE KIT, 0.03 BAR CALIBRATED

DIMENSIONS FOR DN80 NON-RETURN VALVE KIT – 0.03 bar calibrated:

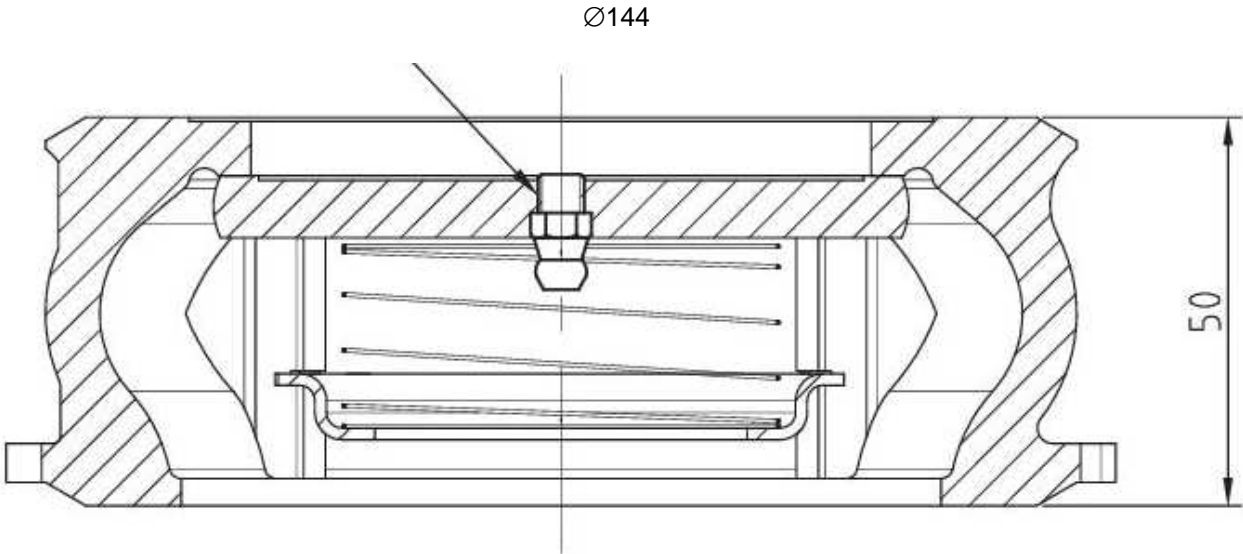


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 38 / 44

DN80 NON RETURN VALVE KIT, 0.3 BAR CALIBRATED (EMPTY HOSE OPTION)

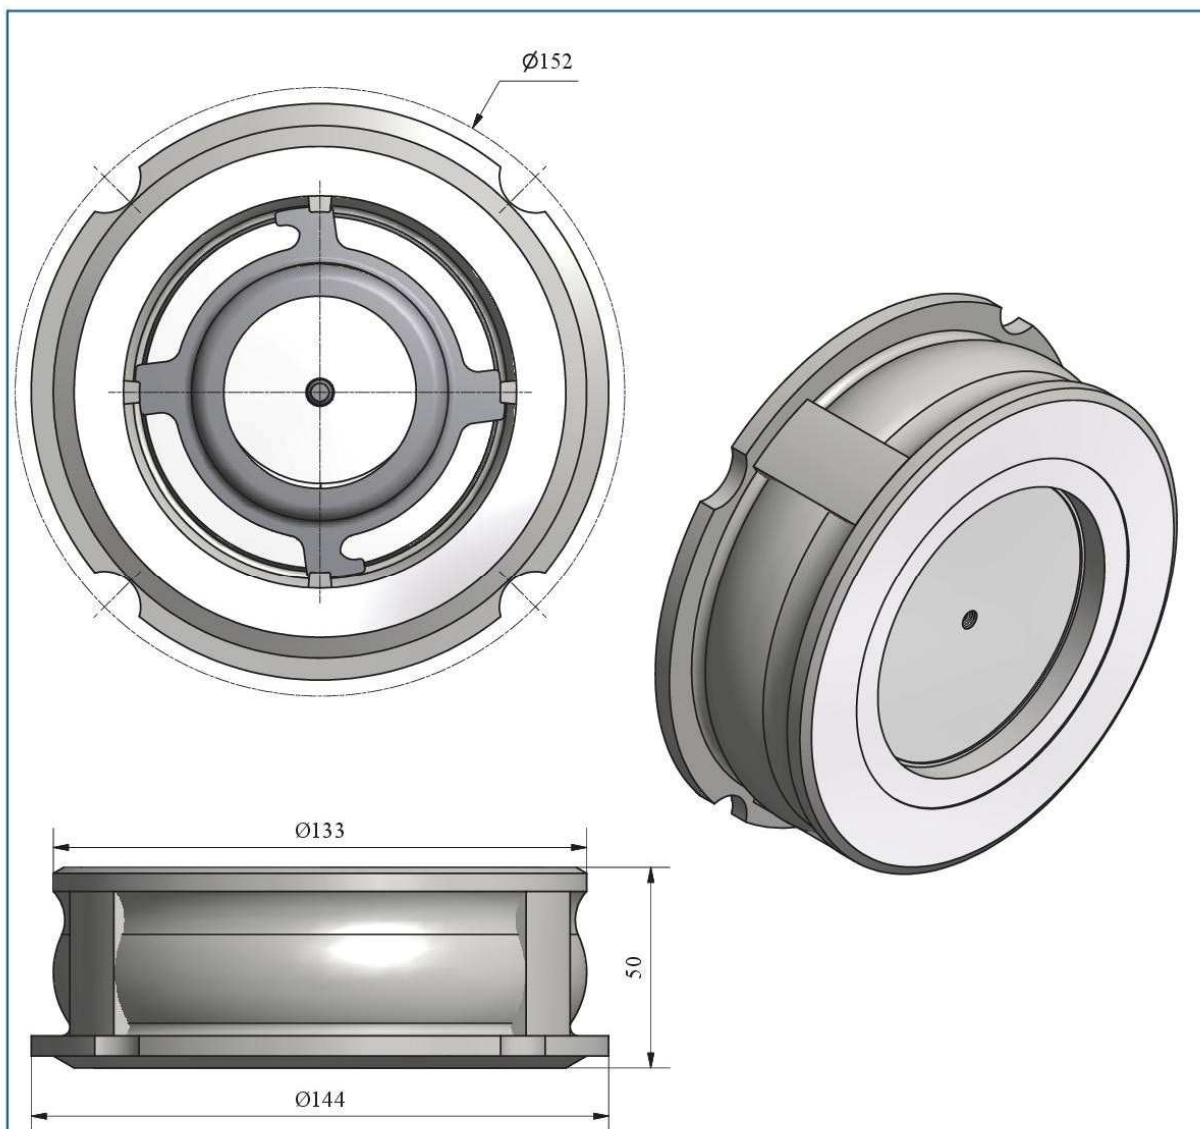

- **Mass** : ~ 2.5Kg
- **Material** : Inox 316L
- **Operating temperature** : -10°C to +350°C
- **Permissible operating pressure** : 40 bar
- **Maximum permissible pressure** :
 - Liquid 1: 25 bar
 - Liquid 2: 40 bar
 - Gas 1: 12 bar
 - Gas 2: 40 bar
- **Pressure drop** : 0.2 bar at 50 m3/h
- **Mounting** : Between downstream flange of the turbine
- **Tightness** : Flat gasket
- **Standards** :
 - CE conformity directive 97/23/CE
 - CE ATEX conformity directive 94/9/CE

 <div>www.alma-alma.fr</div>		Service Development 13127 Vitrolles		Kit non return valve, calibrated at 0.3 bar Adriane DN80 24X		Description of amendment N°																	
Mat:																							
Tol : ± 0.2		Code : 8798				Drawing N° associated with the related CET file																	
Metro :				905a		PV1908		A		2 / 2		Modified on :				by		CC		verified by			
ATEX :				Dev N°		Drawing N°		Rev		Folio		Created on :		29/03/2016								SR	

Document consultable sur le site alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE

Units of measure:
 Length: mm
 Angle: degree (° '' ''')
 Temperature: °C


This document is available at www.alma-alma.fr

Page 39 / 44

INSTALLATION RECOMMENDATIONS DN80 NON-RETURN VALVE KITS

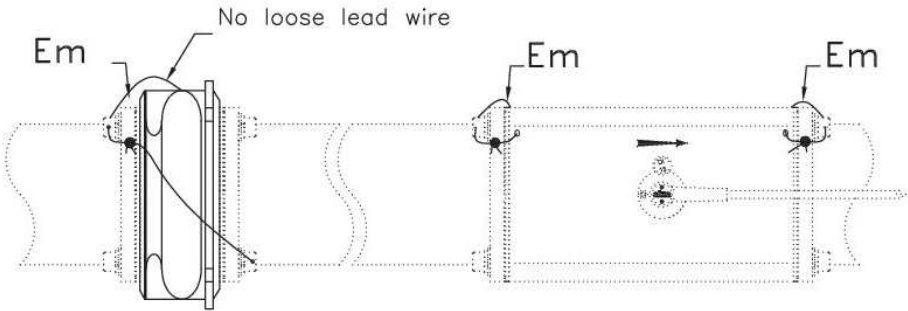


KIT SIGHTGLASS

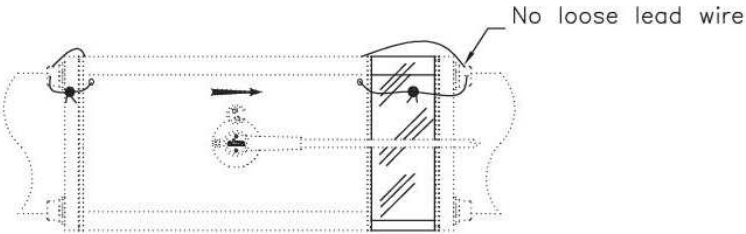



Refer to the certificate to suit the sealing requirements,
(certificate number written on the identification plate.)

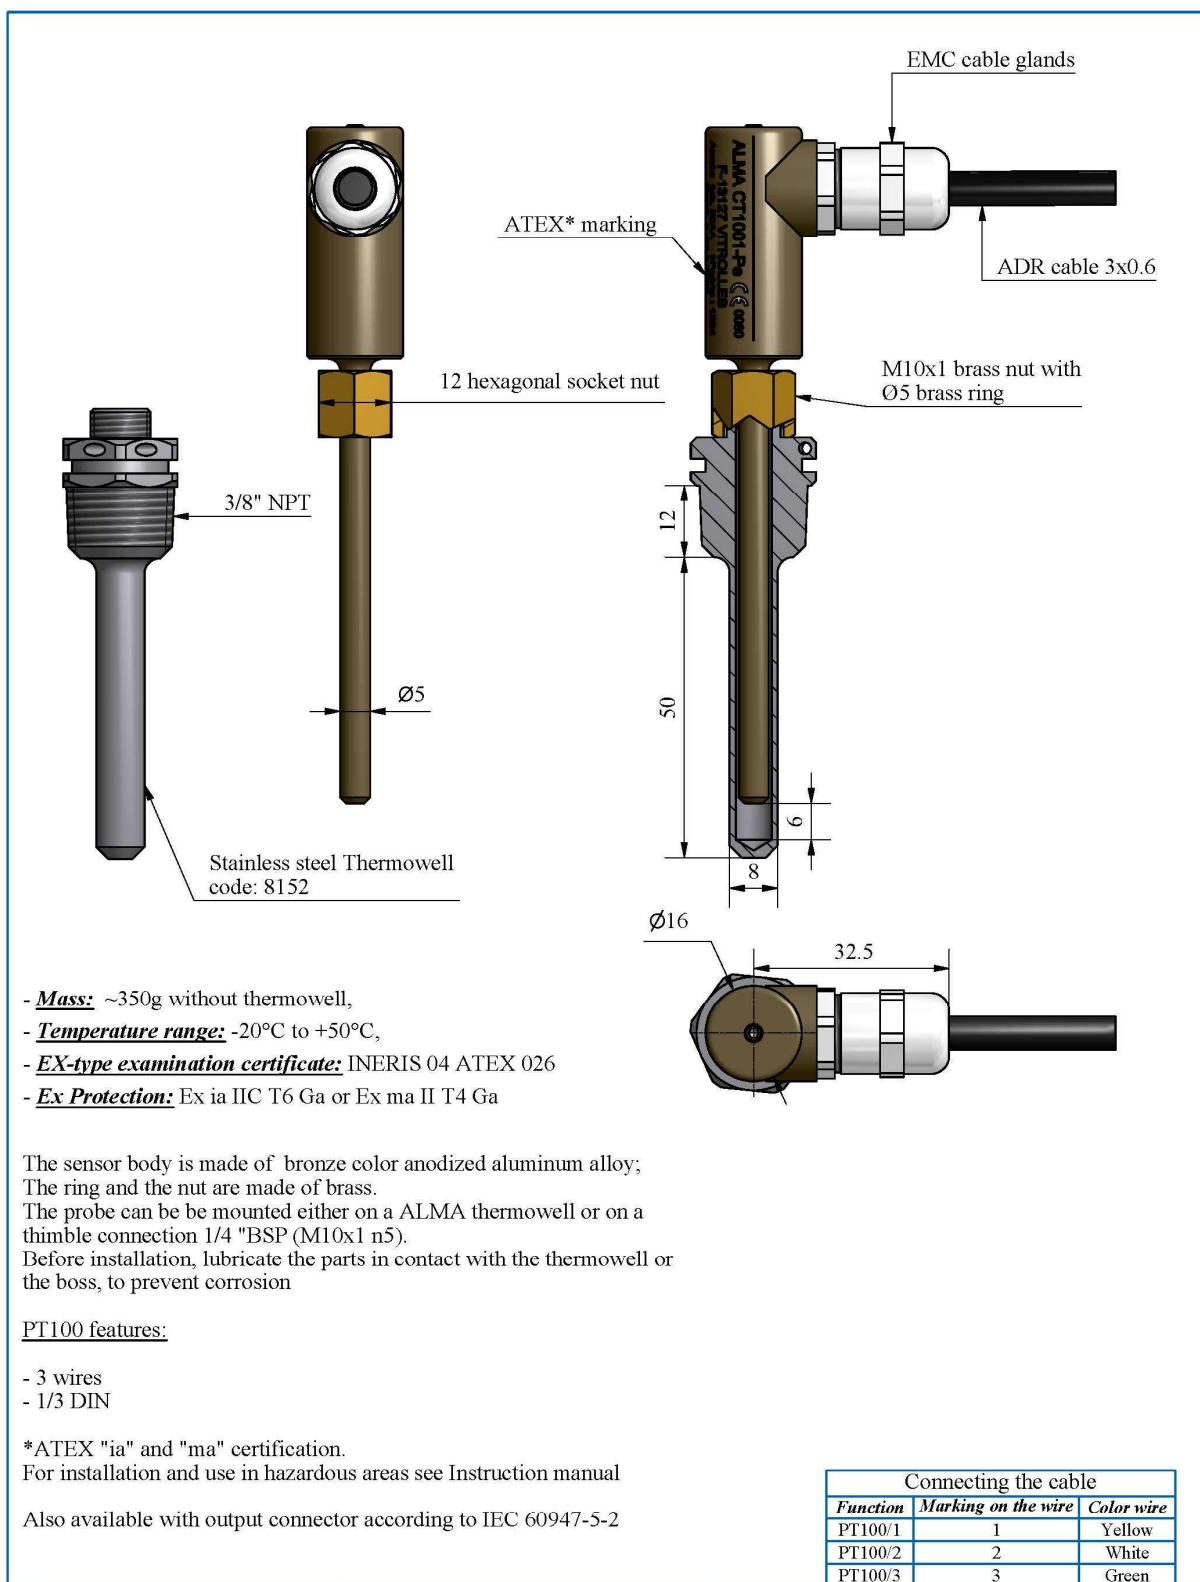15. PT100 TEMPERATURE PROBE – CT1001




Document available on website alma-alma.fr

 ALMA www.alma-alma.fr	Service Development 13127 Vitrolles		PRESENTATION DRAWING		DFV042		Description of the amendment MDV489 Circuit optimized for more efficient assembly	
	DEV N° : 949d		Code : 8151		Temperature probe CT1001-Pe			
	Drawing N° associated with the related CET file							
Metro : ATEX :	INERIS 04 ATEX 0026		949d	PPV042	J	5 / 7	Modified on : 04/10/2016	by CHR
			Dev N°	Drawing N°	Rev	Folio	Created on : 13/09/2003	BM verified by
								SR
								BM

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 41 / 44

INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE

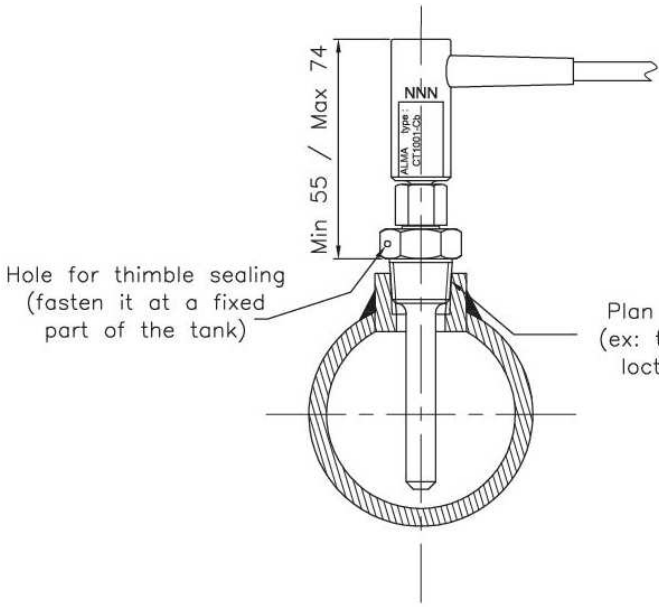


Min 55 / Max 74

NNN
ALMA type
CT1000-52b

Hole for thimble sealing
(fasten it at a fixed
part of the tank)

Plan tightness
(ex: tubétanche
loctite 577)

Thermowell thread: 3/8" NPT

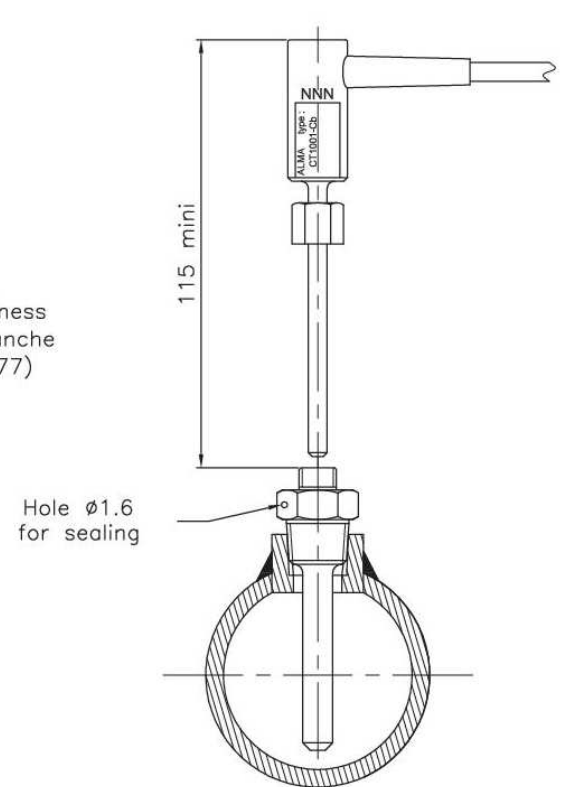

115 mini


NNN
ALMA type
CT1000-52b



Hole Ø1.6
for sealing

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

INSTALLATION OF THE TEMPERATURE SENSOR
ON THE ALMA TURBINE METER:




ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' '') Temperature: °C
	This document is available at www.alma-alma.fr	Page 42 / 44

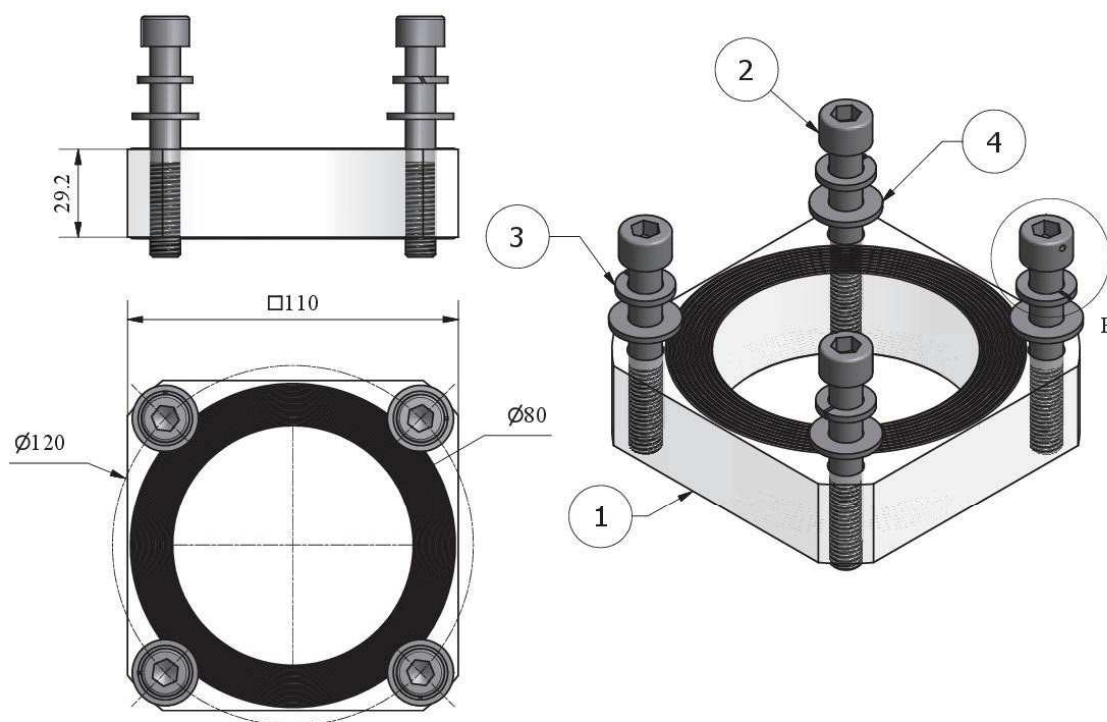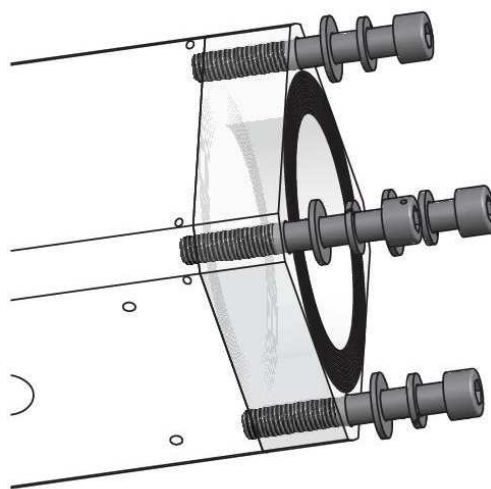16. SIGHTGLASS FOR ADRIANE TURBINE METER DN80 110x110**Mounting example**

B (1.5 : 1)

Socket head cap screw
(drill Ø2)
For sealing

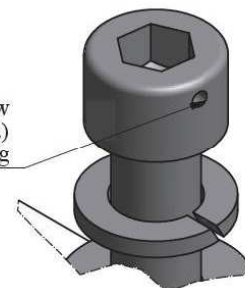

Put parts in a bag

Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Sightglass DN80 110X110	Moulded PMMA	A0533	B		0908	
2	1	CHC screw M10 x 70 (ISO 4762)	Stainless A4-70				8595	1 socket head cap screw
3	1	Washer W M10 (DIN 127)	Stainless A4-70				8474	
4	1	Washer M M10 (NFE 25-514)	Stainless A4-70				8430	

ALMA www.alma-alma.fr		Service Development 13127 Vitrolles	Sightglass kit 110 x 110 Adriane turbine meter DN80 24X		Description of amendment N°			
Mat:								
Tol : ± 0.2		Code : 1091						
Drawing N° associated with the related CET file								
Metro :			905	PV1674	A	2 / 2	Modified on :	
ATEX:			Dev N°	Drawing N°	Rev	Folio	Created on :	30/03/2016
							by	CC
							verified by	SR

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 43 / 44

17. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

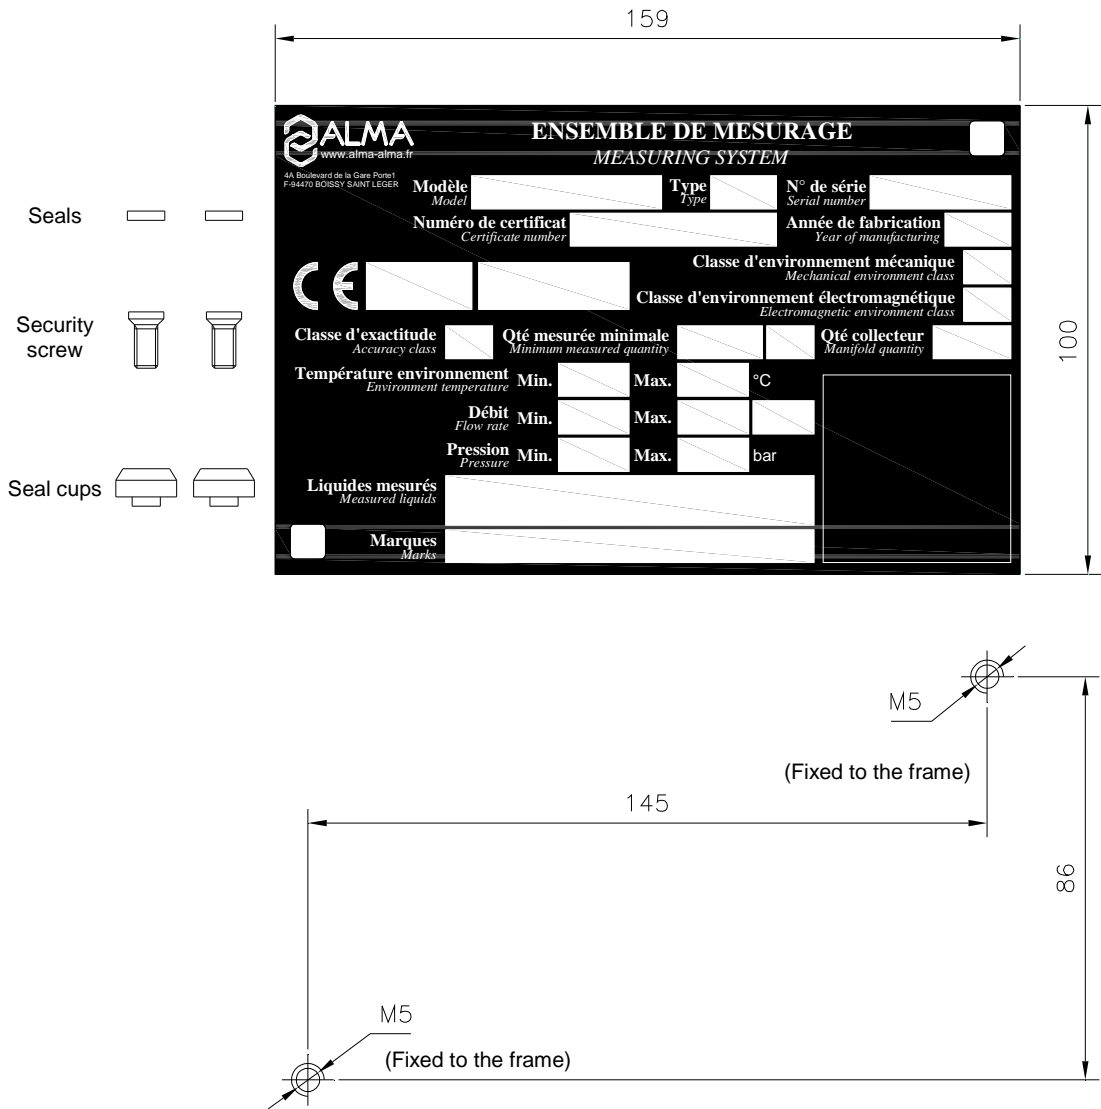

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENC
GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' '')
Temperature: °C