


INSTALLATION GUIDE

DI 015 EN F
GRAVITRONIQUE

Described in EC-type examination certificate N°: LNE-27785




F	2018/10/15	New FORM DOC for connectivity [PJA074], Drawings update	DSM	MV
E	2018/03/27	Printer wiring [MDV594], Opening control flap and product return cpt 6, Installation recommendations of probes, Updating of drawings	DSM	MV
D	2017/09/14	Installation and sealing drawing New FORM DOC – Updating of drawings	DSM	XS
A	2015/05/04	Creation	DSM	AH
Issue	Date	Nature of modifications	Written by	Approved by


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE			Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr			Page 1 / 52

CONTENTS

1. GENERAL RECOMMENDATIONS	4
1.1. MECHANICAL RECOMMENDATIONS	4
1.2. ELECTRICAL RECOMMENDATIONS	5
1.3. PNEUMATIC RECOMMENDATIONS	7
2. GENERAL PRESENTATION	8
2.1. USE ACCORDING TO MID CERTIFICATE	8
2.2. SPECIAL CONDITIONS FOR INSTALLATION IN ANY CASES	8
3. PART LIST	8
4. INSTALLATION AND SEALING DRAWING OF THE GRAVITRONIQUE	11
5. CALCULATOR-INDICATOR MICROCOMPT+ GRAVITRONIQUE	13
5.1. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+	14
5.2. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+	15
Terminal assignment of the power supply board	16
Connection of the network board – Ethernet, RS232/485, CANBus	18
Terminal assignment of the extension board 4DG (IS)	19
Terminal assignment of the extension board ‘sonde AD’ 5wires (IS)	20
Terminal assignment of the extension board “sonde AD” 2 wires (IS)	21
Terminal assignment of the relay extension board	22
5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX	23
Mounting and wiring of the GSM and GPS antennas	24
Mounting of the GSM/GPS cables into the cable glands	25
Wiring of the 2-antenna box to the MICROCOMPT+	25
6. CONTROL BOX GRAVITRONIQUE	26
Electrical wiring control box	27
Pneumatic wiring control box	29
7. ADRIANE TURBINE METER	30
7.1. TURBINE METER ADRIANE DN100-80 243 TTMA WITH SIGHTGLASS	30
7.2. TURBINE ADRIANE DN80-80 243 110x110	31
7.3. INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER	32
8. DIFFERENTIAL PRESSURE TRANSMITTER CP3000 ATEX	33
8.1. INSTALLATION RECOMMENDATIONS CP3000 ATEX	34
9. NC/NO SOLENOID VALVES KIT ATEX	35
10. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75	36
10.1. INSTALLATION RECOMMENDATIONS DG3001/75	37
11. PRINTER	38
11.1. INSTALLATION RECOMMENDATIONS PRINTER	39
12. CONVERTER 24VDC/24VDC 2.1A 50W	40
13. VACUUM BREAKER	41
13.1. INSTALLATION RECOMMENDATIONS VACUUM BREAKER	42
14. DN80 NON-RETURN VALVE KITS	43

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2 / 52

14.1.	DN80 NON RETURN VALVE KIT, 0.03 BAR CALIBRATED	43
14.2.	DN80 NON RETURN VALVE KIT, 0.3 BAR CALIBRATED (EMPTY HOSE OPTION)	44
14.3.	INSTALLATION RECOMMENDATIONS DN80 NON-RETURN VALVE KIT	45
15.	PNEUMATIC CONTROL VENT VALVE	46
15.1.	INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VENT VALVE	47
16.	TEMPERATURE PROBE PT100 – CT1001	48
16.1.	INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE.....	49
17.	SIGHTGLASS KIT 110X110 ADRIANE TURBINE METER DN80	50
17.1.	INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN80.....	51
18.	KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE.....	52


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 52


1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.

BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.


1.1. MECANICAL RECOMMENDATIONS


- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment; the display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables with the corrugated conduit if the cables are not ADR (corrugated conduit adapted to vehicles used for "carriage of dangerous goods of road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.
- ⇒ Allow the drainage of the water in the lower loop (siphon) of the corrugated conduit (not water retention inside the corrugated conduit).
- ⇒  See § INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 52

1.2. ELECTRICAL RECOMMENDATIONS

- ⇒ According to the ATEX directive or any other regulations in force in the country of destination, the safety protection level of the equipment must agree with the installation area (potentially explosive atmospheres).
- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.
- ⇒ Put a delayed protection of 5A upstream the 24VDC supply to protect equipment in case of reverse polarity or overcurrent.
- ⇒ Use ADR specific cable, if it is not the case, use at minimum a cable resisting to hydrocarbons. Mechanically protect this cable with a corrugated conduit (corrugated conduit adapted to vehicles used for "carriage of dangerous goods by road" - hydrocarbons, LPG ... - and meet the requirements of French standard NF R13-903. Refer to the regulations in force).
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.
- ⇒ Pass the power supply cores (24VDC truck) through the ferrites by carrying out a loop (ALMA supply).
- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).

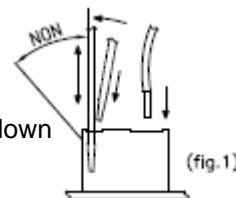

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 5 / 52

- ⇒ Whenever possible, label the cables and cores according to the installation guide to facilitate the later maintenance operations.
- ⇒ Respect a homogeneous wire color code.
- ⇒ Printer TMU295: before positioning the printer on its support, check that configuration switches of the data link protocol, located under the printer, are well positioned: No3 on 'ON' and the 7 others on 'OFF'.
- ⇒ Current of the electrical devices:

Electrical devices	Supply voltage	Minimum current	Maximum current
MICROCOMPT+	24VDC +/-10%	0.7 A	1.5 A
PRINTER	24VDC +/-10%	0.1 A	5.5 A (switch-on)

- ⇒ Color code according to DIN 47100.
- ⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 6 / 52


1.3. PNEUMATIC RECOMMENDATIONS

- ⇒ Air must be filtered – from 40 to 20µm. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The air lubrication must be permanent and correct to avoid any damage on the pneumatic components.
- ⇒ The air supply pressure to the inlet of the equipment must be at least 6 bar and max 8 bar. Specific recommendations may be added in the installation guides or on the presentation drawings.
- ⇒ The pneumatic supply pipes (6/4) must be cut straight (no slanting cut) and should not be crushed after cutting to prevent leakage on fittings.
- ⇒ Respect the radii of curvature of the pneumatic pipes indicated by the manufacturer.
- ⇒ Use colored pneumatic pipes to ease maintenance operation.
- ⇒ In no case the exhaust holes of the pneumatic organs should be plugged, obstructed, unless if that is clearly specified in the installation guides or on presentation drawings.
- ⇒ The use of muffler is not allowed under any circumstances (fouling, frost...). Put a pneumatic pipe of sufficient length, pointed downwards, so that its end is placed in a protected area (L = 100 mm min.).
- ⇒ Pressure unit conversion:

PRESSURE UNIT CONVERSION				
Unités	Bar	PSI	Pascal	kg/cm ²
1 Bar =	1	14,5	100 000 (1x10 ⁵)	1,0197
1 PSI =	0.069	1	6894,5	0,07031
1 Pascal =	1x10 ⁻⁵	14,5x10 ⁻⁵	1	1,0197x10 ⁻⁵
1 kg/cm ² =	0,98	14,22	98066,5	1

PSI = Pound per Square Inch (livre par pouce carré)

1 bar = 100 kPa = 0.1 MPa (1 MPa = 10 bar)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7 / 52

2. GENERAL PRESENTATION

2.1. USE ACCORDING TO MID CERTIFICATE

The GRAVITRONIQUE measuring system is covered by the EC type examination certificate N° LNE-27785. Refer to this certificate for any precision about its installation.

For the sealing plan, see Annex to EC type examination certificate N° LNE-27785.




2.2. SPECIAL CONDITIONS FOR INSTALLATION IN ANY CASES

- ⇒ Connection pipework between the compartments and the manifold, as between the manifold and the selection valves must have a minimum gradient of 3%.
- ⇒ Pumped mode: Connection pipework between the selection valve for pumped mode and the pump entry should not include reverse slopes.


If the measuring system is fitted with several delivery points, it needs to be equipped with a device allowing a liquid delivery by only one point at once.

- ⇒ Gravity mode: If appropriate, the connection pipework between the selection valve for gravity mode and decanting valve must have a minimum gradient of 3%. The vehicle on which the measuring system is installed should have a device to check its horizontality.

3. PART LIST

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+ GRAVITRONIQUE WITH Bluetooth CONNECTION	1	
		Wi-Fi CONNECTION (As an alternative to Bluetooth)		•
		RFID SUPERVISOR KEY		
2		CONTROL BOX GRAVITRONIQUE	1	

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 8 / 52

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA

Item	Equipment	Designation	Qty	Option*
3	3a 	ADRIANE TURBINE METER DN100-80 243 TTMA with sightglass (Depending on configuration)	1	
	3b 	ADRIANE TURBINE METER DN80-80 243 110x110 (Depending on configuration)		
4		DIFFERENTIAL PRESSURE TRANSMITTER – CP3000 ATEX	1	
5		NC/NO ATEX SOLENOID VALVES KIT	1	
6		END-OF-METERING PROBE – DG3001/75 (Supplied if not mounted on the manifold)	1	
		VACUITY SENSOR – DG3001/75 (Supplied if not mounted on the manifold)	1	
7		PRINTER TMU-295 (Printer – power supply cable – serial link cable 10m)	1	
8		CONVERTER 24VDC/24VDC 2.1A 50W (Printer power supply 24VDC)	1	

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr


Page 9 / 52

EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
9		VACUUM BREAKER	1	
10		DN80 NON-RETURN VALVE KIT 0.03 bar	1	
		DN80 NON-RETURN VALVE KIT 0.3 bar (Supplied with an empty hose)	1	•
11		PNEUMATIC CONTROL VENT VALVE	1	
12		Pt100 TEMPERATURE SENSOR – CT1001-Pe (Supplied with thermowell)	1	•
13		2-ANTENNA BOX GSM AND GPS	1	•
14		SIGHTGLASS KIT 110x110 ADRIANE TURBINE METER DN80 (Supplied with pre-drilled screws for sealing)	1	
15		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	•
Option*: equipment sold as an option by ALMA, it must be installed on the measuring system if required by the certificate.				

Non-contractual pictures


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 10 / 52

4. INSTALLATION AND SEALING DRAWING OF THE GRAVITRONIQUE

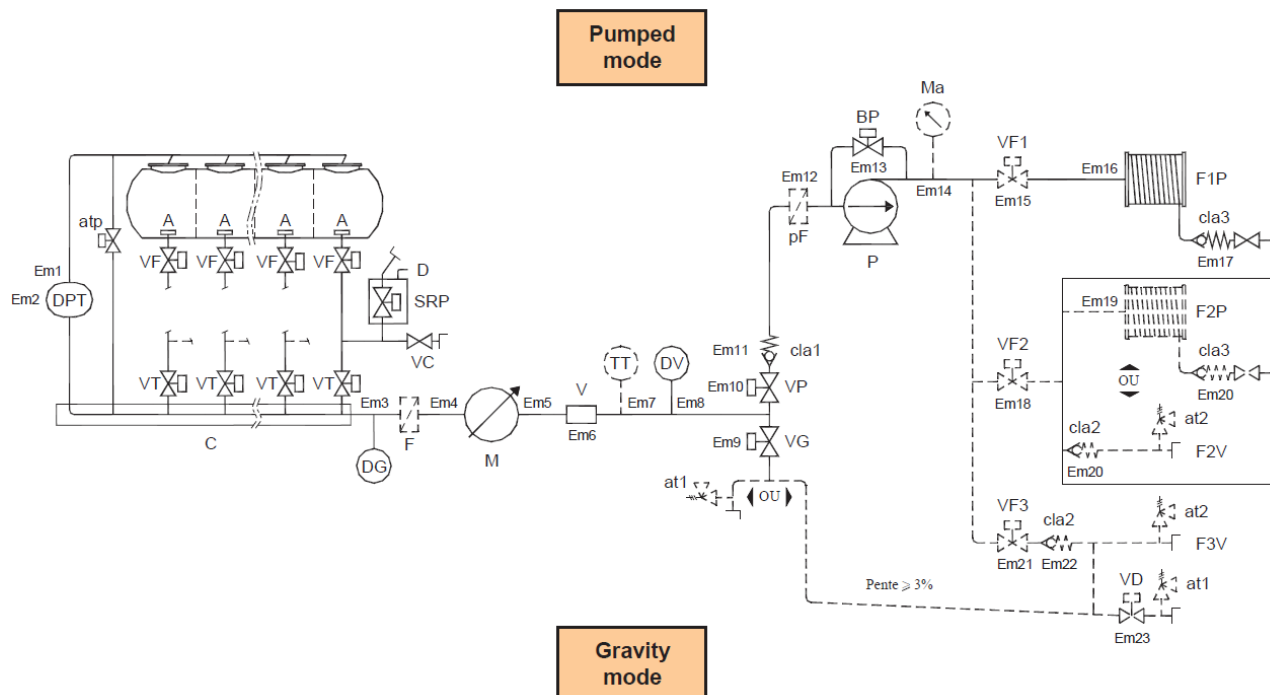


Legend:

- A: Anti-swirl device
DPT: Pressure sensor
atp: Guided release to the atmosphere
VF: Compartment bottom flap
VT: Selection valve installed on every compartment pipe and allowing transfer to the manifold
C: Manifold
D: Pressure relief control (secured)
SRP: Liquid Backup System on compartments
VC: Bottom loading valve installed on every compartment pipe (optional)
DG: gas sensor
F: Filter (optional if prefilter pF is installed)
M: Meter
V: sight glass (can be integrated to the meter)
TT: Temperature sensor PT100 (optional, and can be integrated to the meter)
DV: Optical vacuity sensor
VP: Selection valve pumped mode
VG: Selection valve gravity mode
at1, at2: Automatic release to the atmosphere
cla1: Non-return valve
pF: Pump prefilter (optional if filter F is installed)
P: Pump
BP: Pump by-pass
Ma: Manometer indicating the forcing back pressure of the pump (optional)
VF1, VF2, VF3: Device guided by the calculator, allowing, when the measuring system has several pumped delivery paths, to realize deliveries with one or another of these paths (optional). Changing the delivery path is impossible during the measurement.
F1P, F2P: Full hose(s) on hose reel (F2P optional)
cla3: Valve calibrated with minimum pressure and preventing the emptying of the full hose.
cla2: Valve calibrated with minimum pressure at the maximum flowrate of an empty hose (optional)
F2V, F3V: Connection for empty hose (optional)
VD: Decanting gravity valve (optional)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 11 / 52</p>

Seals:

- Em1: prevents the removal of pressure sensor DPT.
- Em2: seals the pressure sensor adjustment.
- Em3: prevents the removal of optical sensor DG-3001.
- Em4: seals the inlet pipe of the meter.
- Em5: prevents the removal of the meter.
- Em6: prevents the removal of the sight glass (when not integrated into the meter).
- Em7: prevents the removal of temperature sensor (TT).
- Em8: prevents the removal of vacuity sensor type DG-3001 (DV).
- Em9: prevents the removal of selection valve for gravity mode.
- Em10: prevents the removal of selection valve for pumped mode.
- Em11: prevents the removal of non-return valve for pumped mode.
- Em12: prevents the removal of the prefilter.
- Em13: prevents the removal of the pump and the bypass.
- Em14: prevents the removal of manometer.
- Em15, Em18, Em21: prevent the removal of valves allowing the delivery with empty or full hose(s).
- Em16, Em19: prevents the removal of full hose(s).
- Em17, Em20, Em22: prevents the removal of calibrated non-return valves (transfer point).
- Em23: prevents the removal of decanting valve (VD).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 12 / 52

5. CALCULATOR-INDICATOR MICROCOMPT+ GRAVITRONIQUE



Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° '' ''')
 Temperature: °C


Page 13 / 52

5.1. INSTALLATION RECOMMENDATIONS CALCULATOR-INDICATOR MICROCOMPT+


- Fasten the box with 4 M6 screws (holder suitable for vibrations and designed to support the MICROCOMPT). On the box: 4 M6 blind holes tapped length=12 over 185x132).
- Leave an open space around the box in order:
 - o To facilitate maintenance operation.
 - o To prevent any pressing on pushbuttons and on the glass.
- The space between the front face of the box and the cabinet door shall be sufficient.
- Dimensions: $A > 100\text{mm}$ and $B > 60\text{mm}$

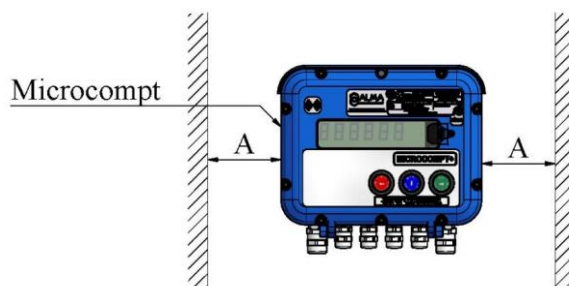

- SOLUTION 1: straight box if it's a breast height.

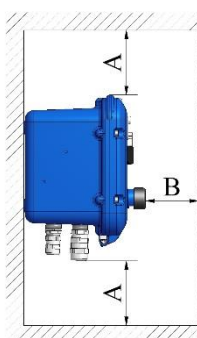


Left hand view
Closed box

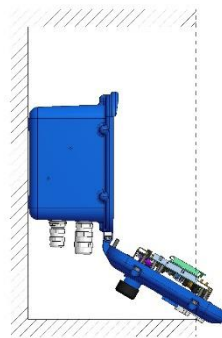


Left hand view
open box

- SOLUTION 2: 20° angle if it's not at breast height.

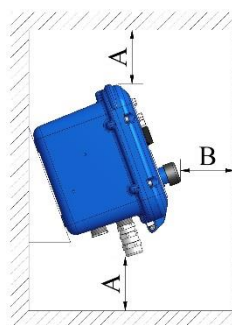

Left hand view
Closed box

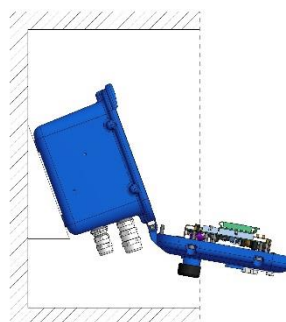

Left hand view
open box

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT OR AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

5.2. ELECTRICAL WIRING CALCULATOR-INDICATOR MICROCOMPT+

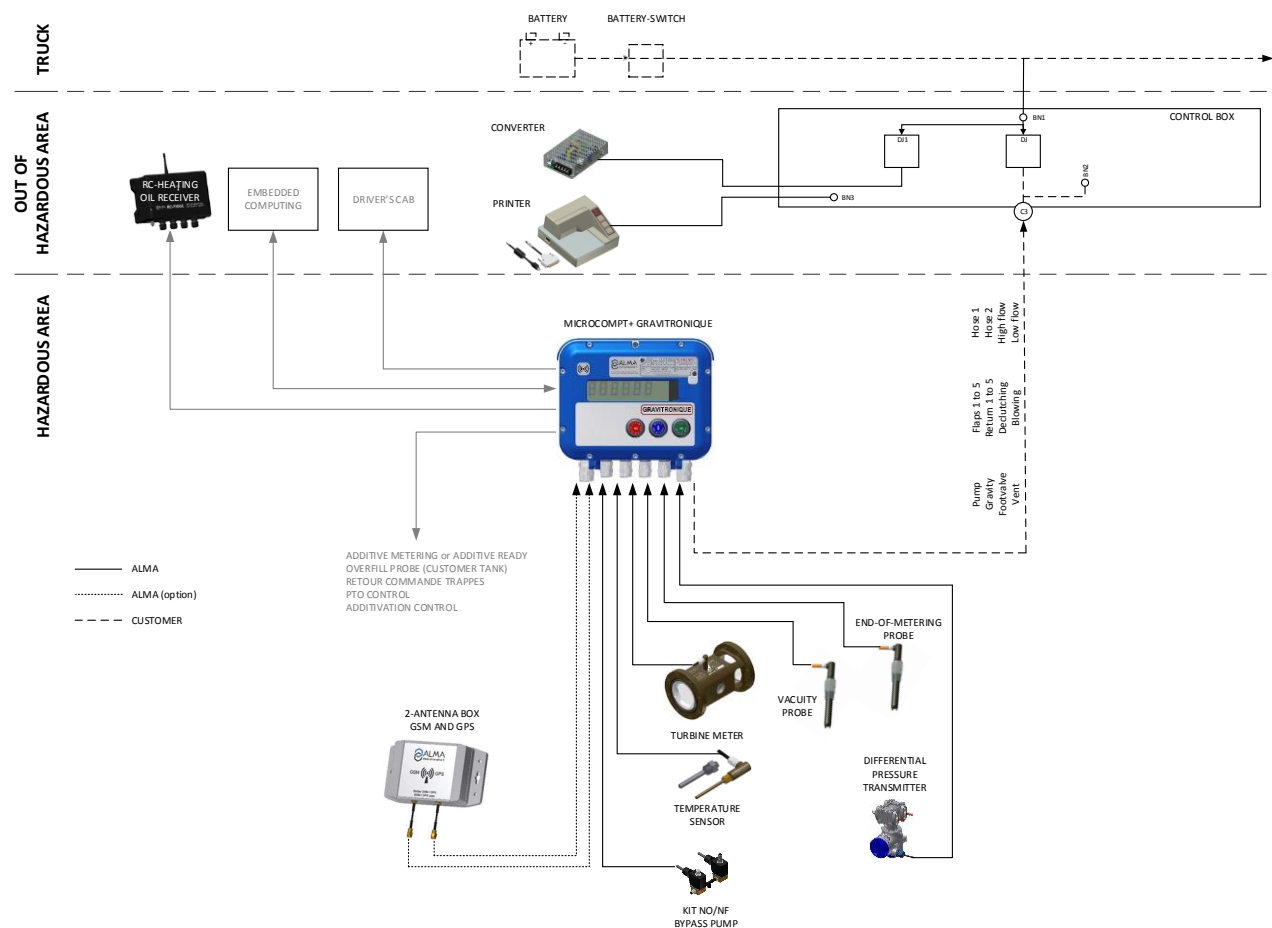


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 15 / 52</p>

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 16 / 52

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								POWER SUPPLY BOARD				
Option	Equipement	Cable (forr information)				Function	Colour or No.	Terminal	Function	Observation		
		No.	CG*	Alma	Type							
	GRAVITRONIQUE CONTROL BOX	C3	3/4"NPT		20x1	Pump	1	73	FET=Field Effect Transistor Outputs 24VDC (outputs FET 24V 5W max.)		Selection valve pumped distribution	
						Gravi	2	79			Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)	
						Footvalve	3	44		Footvalve		
						Vent	4	45		Vent		Manifold vent control
						Flap 1	5	39		EV manifold flaps 1to 5		Opening- control flap 1
						Flap 2	6	40				Opening- control flap 2
						Flap 3	7	41				Opening- control flap 3
						Flap 4	8	42				Opening- control flap 4
						Flap 5	9	43				Opening- control flap 5
						Return 1	10	63		Product Return 1to 5		Opening- control return 1
						Return 2	11	64				Opening- control return 2
						Return 3	12	65				Opening- control return 3
						Return 4	13	66				Opening- control return 4
						Return 5	14	67				Opening- control return 5
						Declutching	15	62		Declutching		Pump declutching or Motor acceleration (if automatic transmission)
						Blowing	16	68		Blowing		Product return blowing
						Hose 1	17	76		Valve hose 1/ EV manifold flap 6		Selection valve hose 1(pumped) or Opening- control flap 6
						Hose 2	18	77		Valve hose 2 / Product Return 6		Selection valve hose 2 (pumped) or Opening- control return 6
						HF	19	78		API		High flow of an API adaptor or Selection valve hose 3 (pumped) or Special return
						LF	20	79				Low flow of an API adaptor
•	RC-HEATING OIL RECEIVER				2x1	Start/Stop	1	49	Start/Stop	RC-Oil_1		
						LF/HF	2	50	LF/HF	RC-Oil_2		
•	OVERFILL PROTECTION (customer tank)							53			Overfill protection probe (customer tank)	
	FLAP-CONTROL FEEDBACK							54		Flaps manual control	Flap- control feedback (if manual control of flaps)	
•	PTO CONTROL				1x1	PTO Ctrl		58		PTO control	Power-take-off engaged	
•	DRIVER'S CAB CONTROL				3x1	PTO	4	61	24VDC= PTO	PTO	(Output FET 24V 5W max.) FET=Field Effect Transistor	
•	ADDITIVATION CONTROL				2x1	Supply	1	71	NC free contact	Additivation control	Closed contact=additivation (Output: NO free potential relay)	
						Control	2	72				
	KIT SOLENOID VALVES NC/NO (ATEX) - PUMP BYPASS	C4			3xG0.75	NC valve Pump bypass	1 / Mr	74	24VDC	NC or HF	24VDC = opening NC solenoid valve or HF control	
							2 / Bl	80				0V
						NO valve Exhaust	1 / Mr	75	24VDC	NO or LF	24VDC = closing NO solenoid valve or LF control	
							2 / Bl	80				0V
SOME EXTENSION BOARDS MAY BE SET ON TO THE POWER SUPPLY BOARD												

Factory pre-wiring:


								POWER SUPPLY BOARD			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	EXTENSION BOARD 4-RELAIS					Motor control		22	Start Mot.	To extention board	(Open collector output)
								23	Stop Mot	4- relais	(Open collector output)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 17 / 52</p>

Connection of the network board – Ethernet, RS232/485, CANBus

Connection to the Ethernet network:

- With the RJ45 connector according to the EIA/TIA-568 standard
- Or with the screw-terminal: see details in the table below.

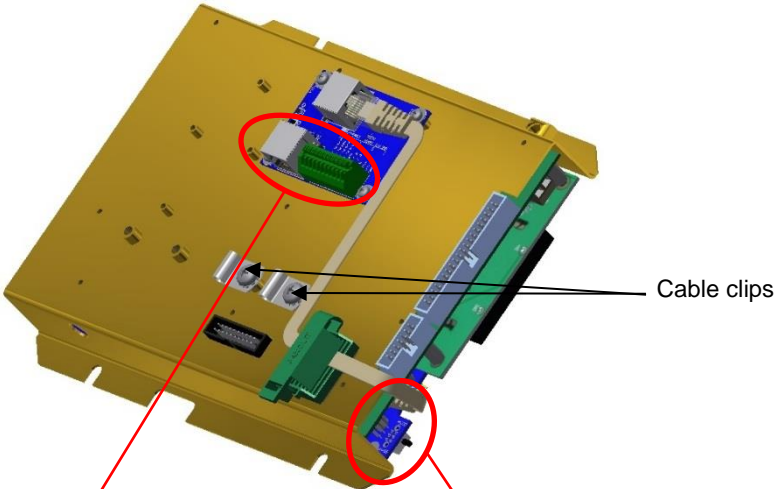

Cable clips

NETWORK BOARD

Ethernet RJ45

RS232 or RS485 Switch

NETWORK CONNECTION TYPE								NETWORK BOARD			
Option	Connection	Cable (for information)				Function	Couleur or No.	Couleur	Function		Observation
		No.	CG*	Alma	Type						
	ETHERNET NETWORK							Vt/Bc	Tx+	Ethernet	Or connection with RJ45 according to EIA/TIA- 568
								Vt	Tx-		
								Or/Bc	Rx+		
								Or	Rx-		
	RS232 or RS485								Tx / A	RS232 or RS485	Depending on the switch configuration See above
									Rx / B		
									GND		
	CANBus NETWORK								CAN+	CANBus	
									CAN-		
									GND		

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Terminal assignment of the extension board 4DG (IS)

EXTENSION BOARD 4DG (IS)

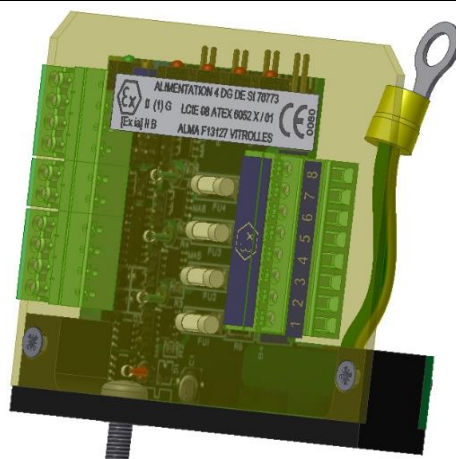


NT IN ATEX 506 C

EQUIPMENTS CONNECTED TO THE MICROCOMPT+								EXTENSION BOARD 4DG (IS)			
Option	Equipment	Cable (for information)				Function	Colour or No.	Terminal	Function		Observation
		No.	CG*	Alma	Type						
	END-OF-METERING PROBE				3x0.34	EMP	Mr	1	+	EMP	Connect the shielding
						Bl	2	-			
	VACUITY SENSOR				3x0.34	VACUITY	Mr	3	+	VACUITY	Connect the shielding
						Bl	4	-			
	DIFFERENTIAL PRESSURE TRANSMITTER				ADR 2x0.34 sh.	PRESSURE	Bc	5	+	PRESSURE	Connect the shielding
						Mr	6	-			

**Refer to the Cable Glands Installation Instruction*

Jumper configuration on the extension board 4DG:

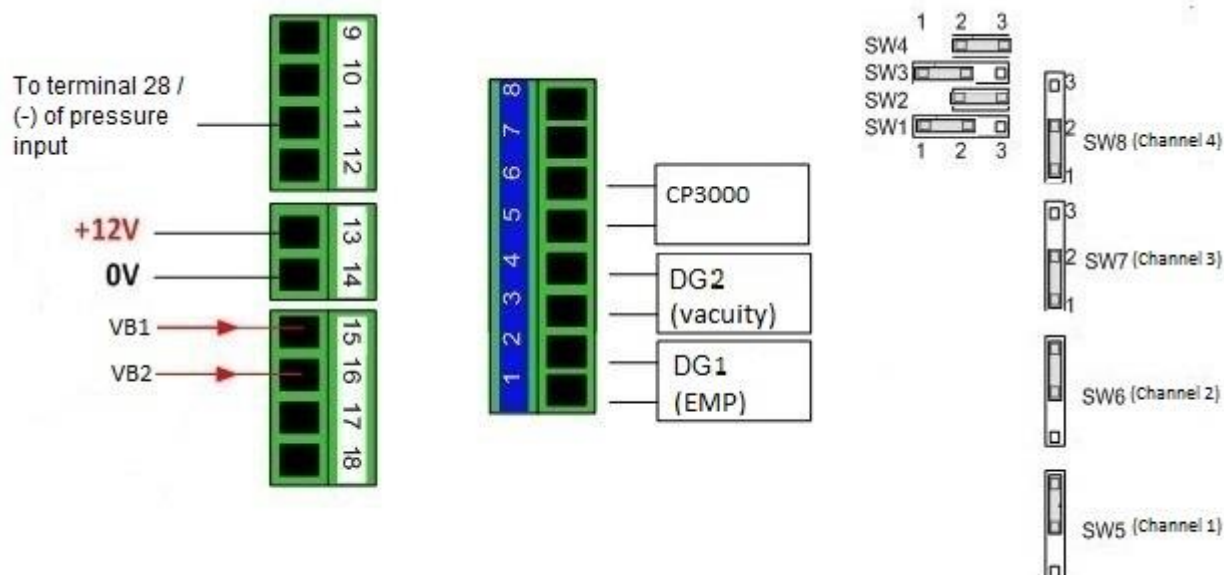

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENF

GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree ($^{\circ}$ ' ")
Temperature: $^{\circ}\text{C}$

Terminal assignment of the extension board 'sonde AD' 5wires (IS)

EXTENSION BOARD SONDE AD 5 wires (IS)



NT IN ATEX 510 C

EQUIPEMENTS CONNECTED TO THE MICROCOMPT+							EXTENSION BOARD SONDE AD (IS)				
Option	Equipement	Cable (for information)				Function	Colour or No.	Terminale			
		No.	CG*	Alma	Type				Function	Observation	
	OVERFILL PROTECTION PROBE PLUG				[6x1]	Common	[Nr]	1	-	OVERFILL PROTECTION PROBES	[if supplying by ALMA]
						Supply	[Rg]	2	+		
						From probe	[Or]	3	From probe		
						To probe	[Jn]	4	To probe		

*Refer to the Cable Glands Installation Instruction

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 20 / 52

Terminal assignment of the extension board “sonde AD” 2 wires (IS)

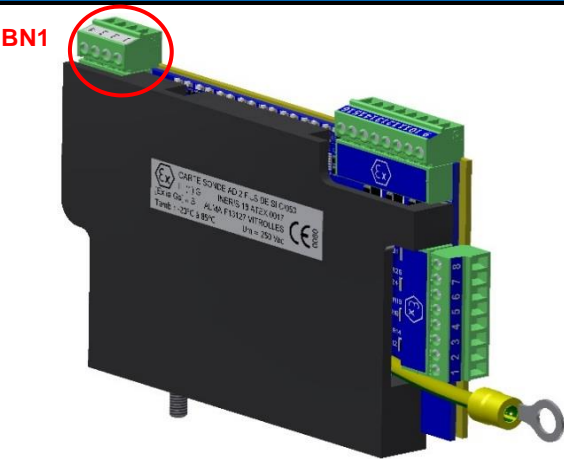
EXTENSION BOARD SONDE AD 2 wires (IS)											
											
EQUIPMENT CONNECTED TO THE MICROCOMPT+						EXTENSION BOARD SONDE AD (IS)					
Option	Equipment	Cable (for information)				Function	Terminal	Function		Colour	Observation
		No.	CG*	Alma	Type						
•	OVERFILL PREVENTION PROBE 1					Supply	1	Supply +	SIGNAL PROBE 1	Mr	
						Common	2	Common		Bc	
•	OVERFILL PREVENTION PROBE 2					Supply	3	Supply +	SIGNAL PROBE 2	Rg	
						Common	4	Common		Bc	
•	OVERFILL PREVENTION PROBE 3					Supply	5	Supply +	SIGNAL PROBE 3	Or	
						Common	6	Common		Bc	
•	OVERFILL PREVENTION PROBE 4					Supply	7	Supply +	SIGNAL PROBE 4	Jn	
						Common	8	Common		Bc	
•	OVERFILL PREVENTION PROBE 5					Supply	9	Supply +	SIGNAL PROBE 5	Vt	
						Common	10	Common		Bc	
•	OVERFILL PREVENTION PROBE 6					Supply	11	Supply +	SIGNAL PROBE 6	Bl	
						Common	12	Common		Bc	
•	OVERFILL PREVENTION PROBE 7					Supply	13	Supply +	SIGNAL PROBE 7	Vi	
						Common	14	Common		Bc	
•	OVERFILL PREVENTION PROBE 8					Supply	15	Supply +	SIGNAL PROBE 8	Gr	
						Common	16	Common		Bc	


*Refer to the Cable Glands Installation Instructions




- This extension board only works with two-wire optic overfill prevention probes.
- A Dummy device is a two-wire dry probe simulator. Channels that are not connected to overfill prevention probes must be connected to a Dummy device. None of the 8 channels must be open.
- Do not install the Dummy into the MICROCOMPT housing.
- If the MICROCOMPT is off, the probes and the Dummy device shall be electrically isolated.


Connection of the BN1-terminal to the MICROCOMPT+ power supply board (non-IS area):

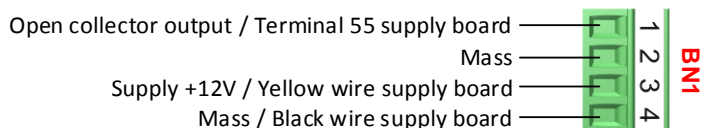



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 21 / 52

5.3. GSM/GPS MODULE EQUIPPED – 2-ANTENNA BOX

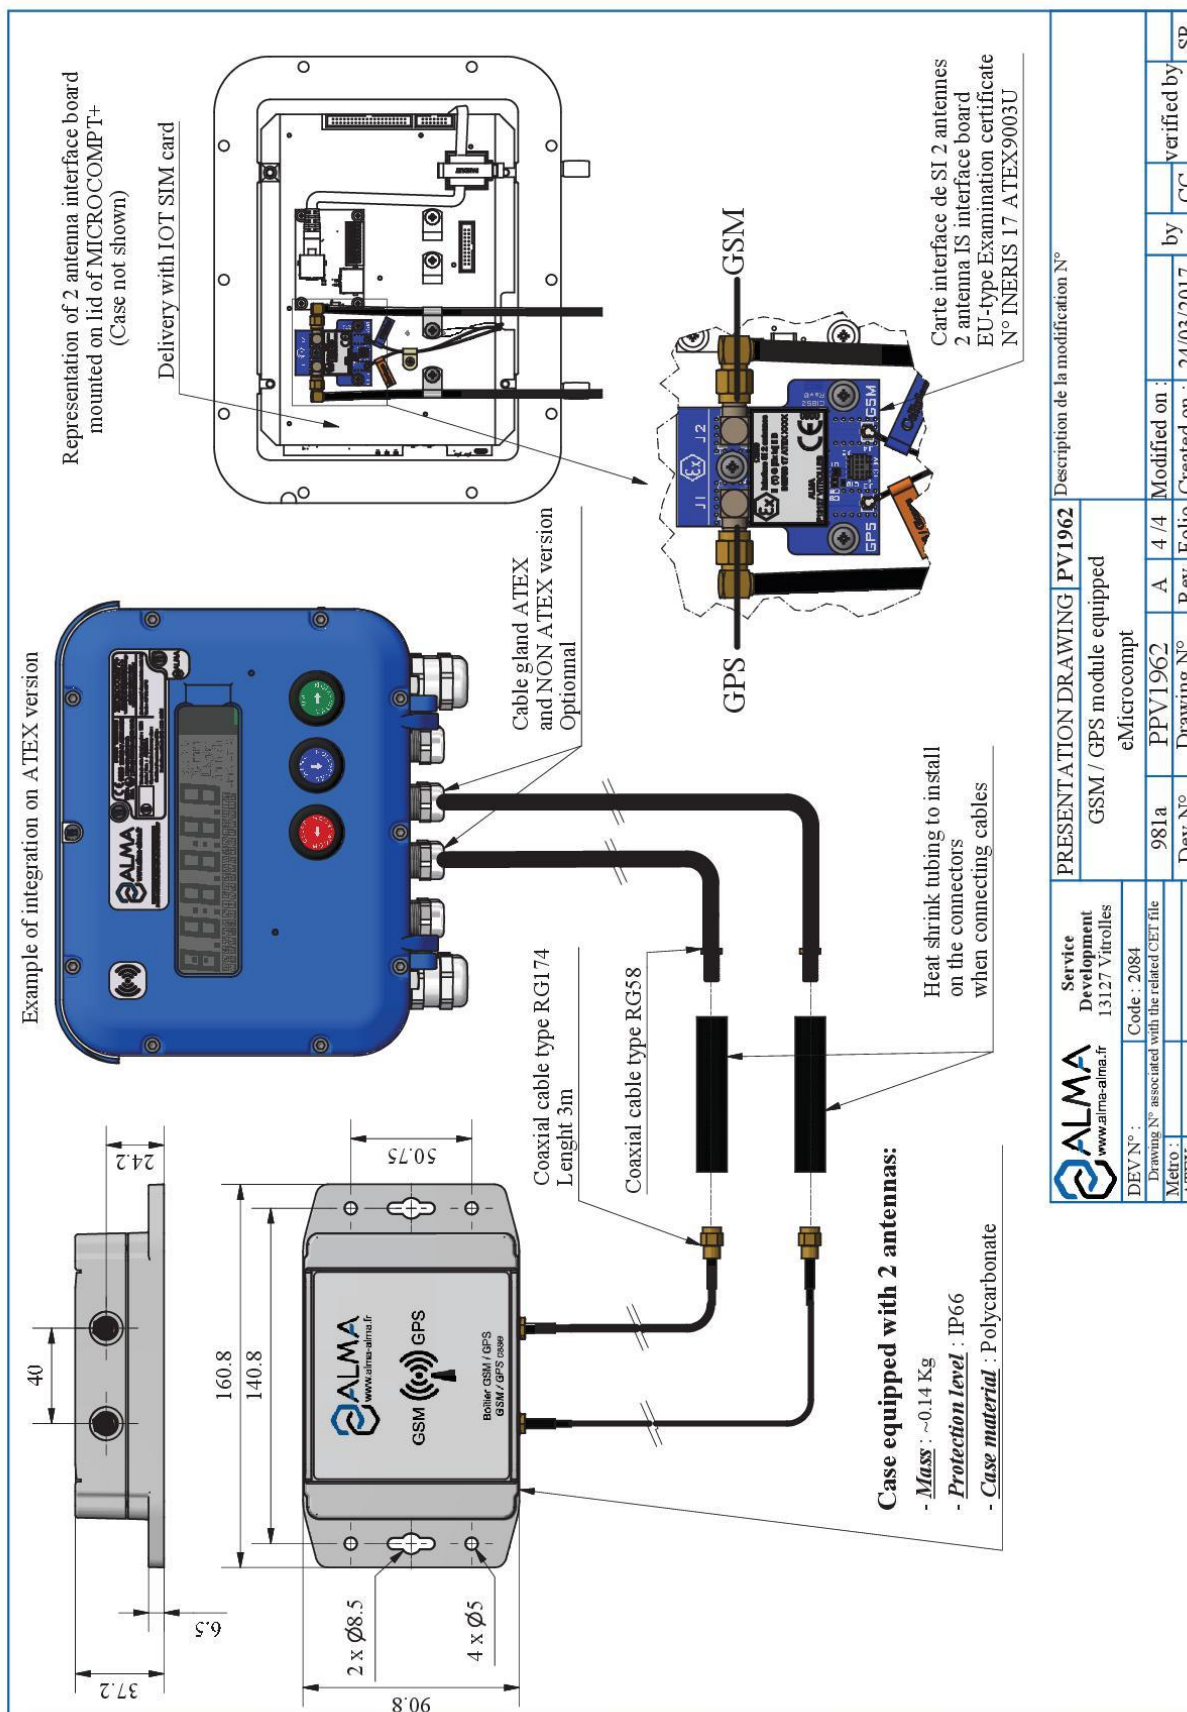

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 23 / 52</p>



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p>INSTALLATION GUIDE DI 015 EN F</p> <p>GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p>This document is available at www.alma-alma.fr</p>	<p>Page 24 / 52</p>

Mounting of the GSM/GPS cables into the cable glands

ALMA connects the GSM and GPS antenna to the MICROCOMPT+ (2-antenna board).



At the outlet of the MICROCOMPT+ box, you must pass both cables through cable glands. In case of an ATEX MICROCOMPT+, cable glands must be ATEX.



Into the MICROCOMPT+, adjust the cable length to easily open and close the cover. Make sure to prevent damage to the cable.

Tighten both cable glands.

Wiring of the 2-antenna box to the MICROCOMPT+

Fasten the box. You must install it in an area free of metallic cover to have a good reception and broadcasting of signal. You can install the box in a horizontal or vertical position.

Put each coaxial cable through the heat shrink sleeve.

Plug the RG58⁽¹⁾ cable from the MICROCOMPT+ with the RG174⁽²⁾ cable from the antenna box and tighten them. Isolate the male/female SMA connectors with the supplied heat shrink sleeve (both antennas in the box are the same, cables don't have to be labelled).

Position and heat up the sleeve on the connectors to prevent corrosion and humidity.



WARNING: The cables of this box can be **neither shortened nor extended**

⁽¹⁾ RG58: Semi-rigid coaxial cable, 5mm diameter

⁽²⁾ RG174: Flexible coaxial cable, 2.7mm diameter

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE

This document is available at www.alma-alma.fr


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 25 / 52

6. CONTROL BOX GRAVITRONIQUE

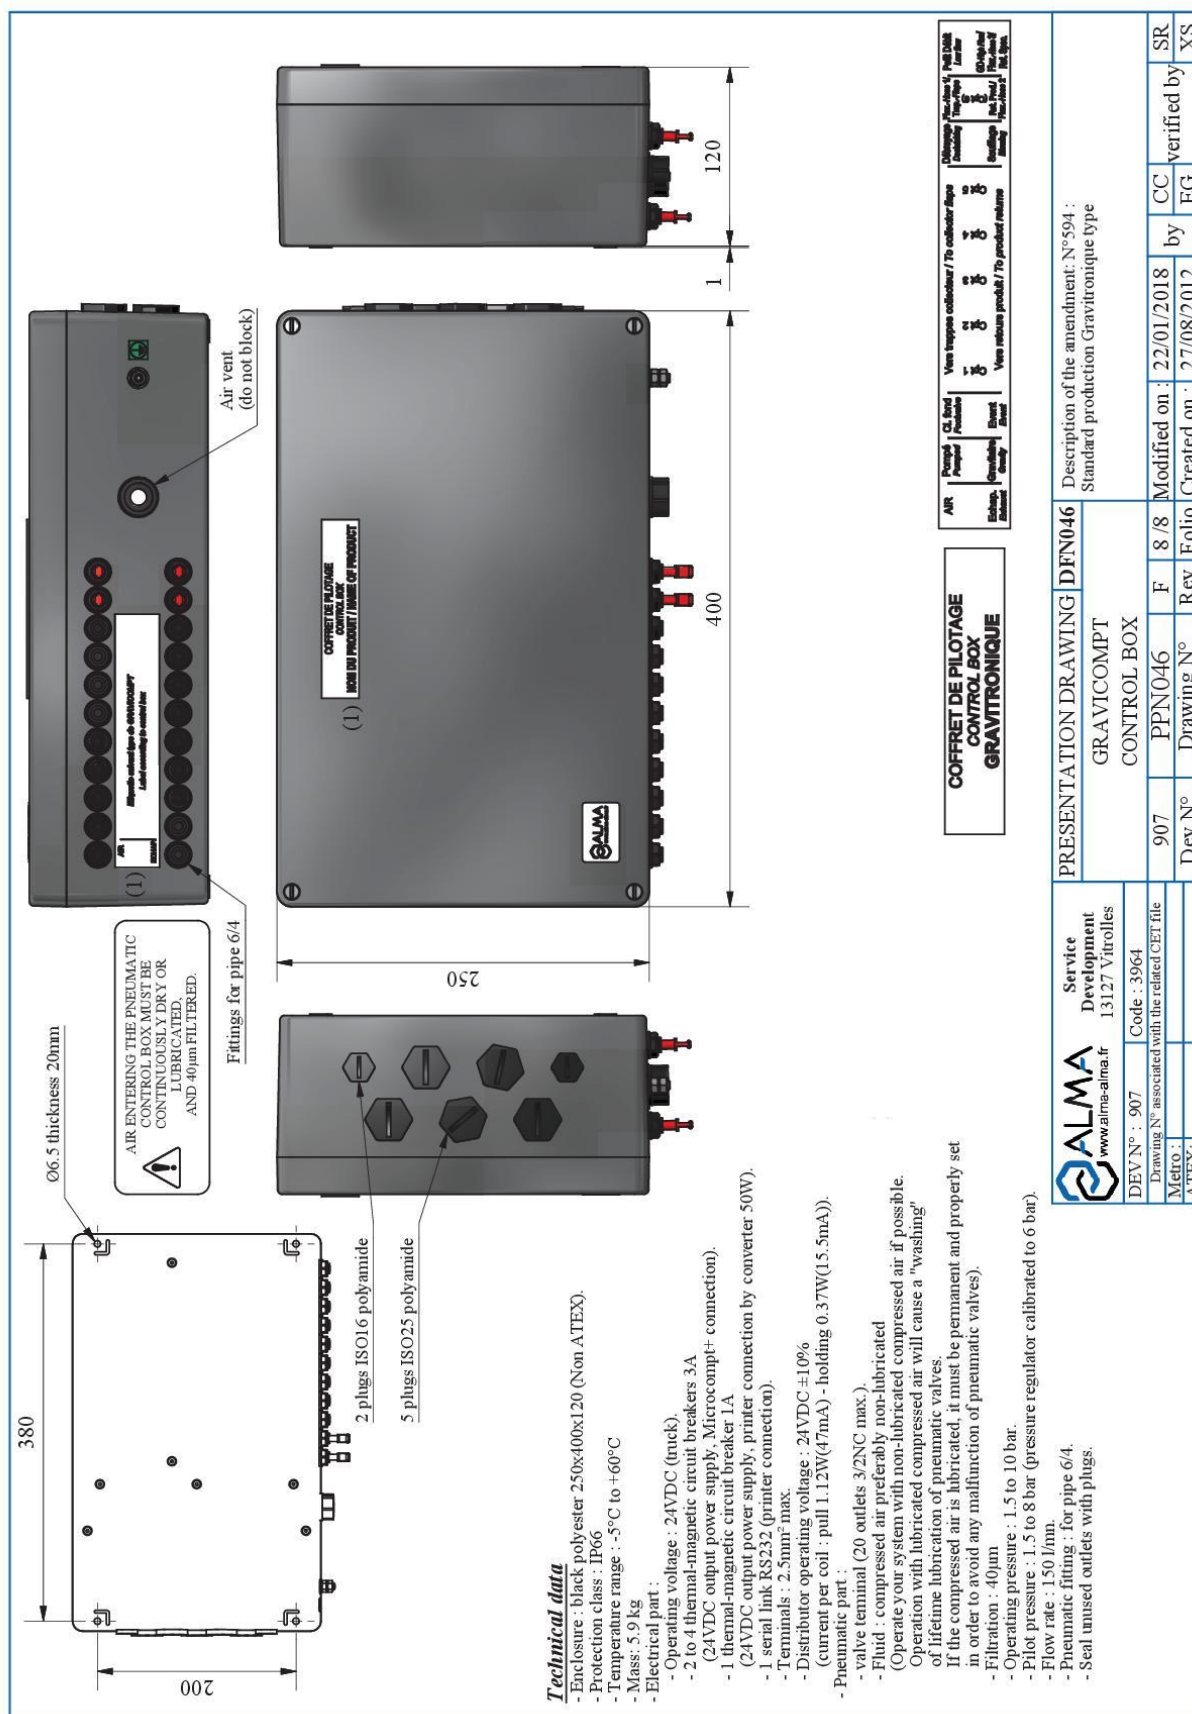


Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 26 / 52</p>

Electrical wiring control box

TERMINAL ASSIGNMENT OF CONTROL BOX

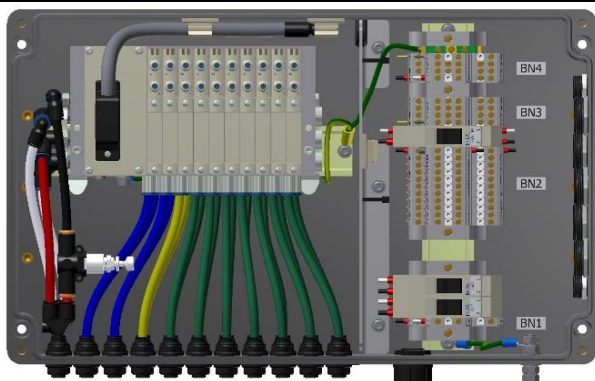

EQUIPMENTS CONNECTED TO THE CONTROL BOX								CONTROL BOX TERMINAL BLOCKS				
Option	Equipement	Cable (for information)				Fnction	Colour or No.	Block	Terminal	Function		Observation
		No.	CG*	Alma	Type							
	SUPPLY	A1			2x1	24VDC	1	BN1	1	24VDC	Supply	24VDC truck battery (after battery switch and protected by a fuse)
						0V	2		2	0V		
	MICROCOMPT+	C3	3/4"NPT		20x1	24VDC	2	BN2	1	Gravity		Selection valve gravity distribution (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)
						24VDC	4		3	Vent		Vent valve control
						24VDC	10		5	Return 1	Product return	Product return 1to 5
						24VDC	11		7	Return 2		
						24VDC	12		9	Return 3		
						24VDC	13		11	Return 4		
						24VDC	14		13	Return 5		
						24VDC	16		15	Blowing		Product return blowing
						24VDC	18		17	Hose 2 / Return 6		Selection valve hose 2 (pumped) or product return compartment 6
						24VDC	19		19	HF / Hose 3 / Special return		High flow of an API adaptor or Selection valve hose 3 (pumped) or Special return
						24VDC	1		2	Pump		Selection valve pumped distribution
						24VDC	3		4	Footvalve		Footvalve control
						24VDC	5		6	Flap 1	Flap opening	Flap control compartments 1to 5
						24VDC	6		8	Flap 2		
						24VDC	7		10	Flap 3		
						24VDC	8		12	Flap 4		
						24VDC	9		14	Flap 5		
						24VDC	15		16	Declutch.		Pump declutching or Motor acceleration
						24VDC	17		18	Hose 1/ Flap 6		Selection valve hose 1 (pumped) or Flap control compartment 6
						24VDC	20		20	Low flow	LF	Lox flow of an API adaptor (in case of a double- stage API adaptor, Low Flow is operated with the gravity output control)

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
 Length: mm
 Angle: degree (° ' ' ')
 Temperature: °C

Page 27 / 52

EQUIPMENTS CONNECTED TO THE CONTROL BOX								CONTROL BOX TERMINAL BLOCKS					
Option	Equipment	Cable (for information)				Function	Colour or No.	Block	Terminal	Function		Observation	
		No.	CG*	Alma	Type								
	MICROCOMPT+	C2				+	Bl	DJ1			Microcompt supply		
						-	N						
	MICROCOMPT+					Rx		BN3	8		Printer supply		
						Tx			7				
	PRINTER	1/2"NPT			4x1 sh.	+	Bl	BN4	1	Input	Converter		
						-	N		2				
						0V	Vt		6	0V	Printer RS232 serial link		
						Rx	Bc		7	Rx			
						Tx	Mr		8	Tx			

*Refer to the Cable Glands Installation Instructions

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE


Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 28 / 52

Pneumatic wiring control box

PNEUMATIC INPUT/OUTPUT ASSIGNMENT OF THE CONTROL BOX

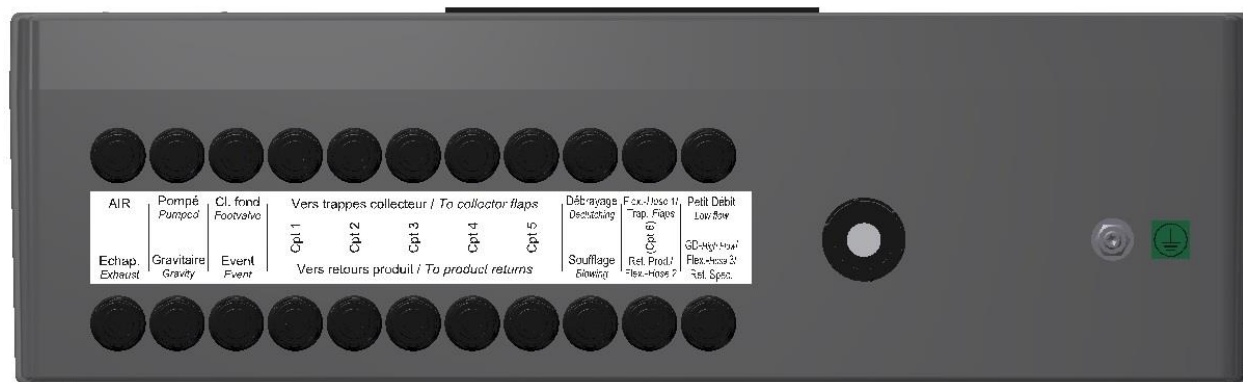

Label	Input	Output	Function	Observation
AIR	X		Air supply of the box	Air if: all footvalves opened and valve bar locked
Exhaust		X	Exhaust	Put a tube L=100mm min. (no muffler)
Pumped		X	Pumped way selection	
Gravity		X	Gravity way selection	
Footvalve		X	Opening footvalve	
Vent		X	Opening manifold vent	Connection to the vent valve
Collector flap Cpt 1		X	Opening flaps compartments 1 to 5	Connection to the manifold flaps compartments 1 to 5
Collector flap Cpt 2		X		
Collector flap Cpt 3		X		
Collector flap Cpt 4		X		
Collector flap Cpt 5		X		
Product return Cpt 1		X	Product returns compartments 1 to 5	Connection to the product returns compartments 1 to 5
Product return Cpt 2		X		
Product return Cpt 3		X		
Product return Cpt 4		X		
Product return Cpt 5		X		
Declutching		X	Declutching pneumatic cylinder	If pneumatic declutching
Blowing		X	Product return blowing	Use "&" cells to connect with each return product control
Hose 1/ Collector flap Cpt 6		X	Hose 1 valve control or Opening flap compartment 6	Connection to the product return compartment6
Hose 2/ Product return Cpt 6		X	Hose 2 valve control or Product return compartment 6	Connection to the manifold flap compartment 6
Low Flow		X	API adaptor open in low flow	Connection to the API adaptor (HF – LF)
High Flow/ Hose 3/ Ret. Spec.		X	API adaptor open in high flow	

Unused ports must be plugged.



CONDITIONS FOR AIR SUPPLY OF THE CONTROL BOX:

- The pneumatic "&" cells of all footvalves are open.
- The bar is in its locked position (compartment API adaptors are locked).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 29 / 52



7.2. TURBINE ADRIANE DN80-80 243 110x110

It is advisable to install upstream of the turbine a filter minimum 400µ

Liquids measured

Designation	Codes	Plan
2H00 Pulse emitter	8145	PPV069
2B00 Pulse emitter	8147	PPV025
UNI electronic	8760 / 8948	C0101
3/8\" NPT CT1001 thermowell	8152	A0728
CT1001 temperature sensor	8151	A0730
Calculator holder	-	-
Non-return valve kit	8798	-

Associated items

Liquid by drocarbons except LPG, FAME, ethanol, aqueous urea solutions with a concentration of 32,5%

ALMA Service Development
www.alma-alma.fr
13127 Vitrolles

DEV N° : 906 Code : 8115 / 8032
Drawing N° associated with the related CET file
Metro : LNE-17513
ATEX: DCET ATEX 009X

PRESENTATION DRAWING DFV021
Adriane DN80-80 243 110x110
One-piece light alloy version

906 PPV021 V 5 / 6 Modified on : 07/12/2016
Drawing N° Rev Folio Created on : 03/08/1999

SR
CC verified by
SR
BM

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

7.3. INSTALLATION AND SEALING RECOMMENDATIONS ADRIANE TURBINE METER

- The identification plate and the led of the pulse emitter(s) shall be visible and accessible.
- The turbine must be installed with respect to the flow direction.
- Put sealing rings each other sides between the turbine and the backflanges.
- Leave an open space all around the turbine in order to ease maintenance.
- Install a 400 μ filter (mini) on the pipe upstream from the turbine meter.
- After installation or during the commissioning period, if the new or modified pipes have not been perfectly cleaned or pickled and passivated, the turbine should be protected by a honeycomb sieve – max. 1mm mesh. It must be placed between two flanges upstream from the turbine.
- Dimensions: A > 100mm.

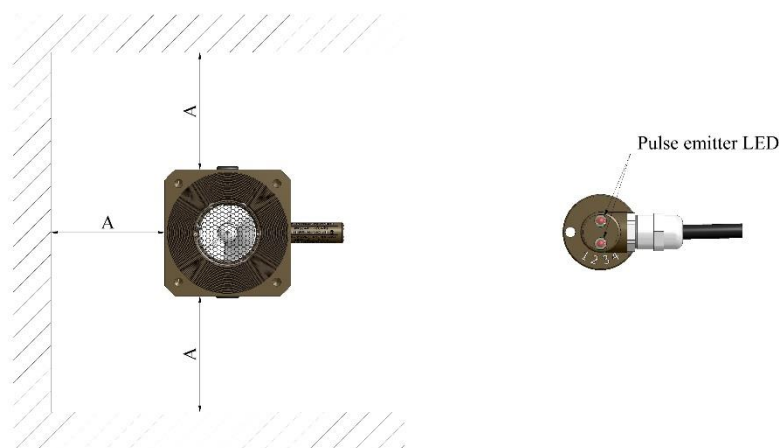

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



For accuracy class 0.5 and 1.0 measuring systems, the pipes and equipment upstream or downstream the turbine meter must have the same nominal diameter as the meter on a length at least equal to 10 times this diameter upstream and 5 times this diameter downstream.

These lengths can be straight or bent.

It is mandatory that no flowrate adjustment device (e.g. a variable-opening valve) is located upstream at a distance less than 10 times the nominal diameter of the meter. Do not create derivation circuits with sample or bypass, specially make sure that no nozzle is present on this pipe.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE

This document is available at www.alma-alma.fr




Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 32 / 52

8. DIFFERENTIAL PRESSURE TRANSMITTER CP3000 ATEX

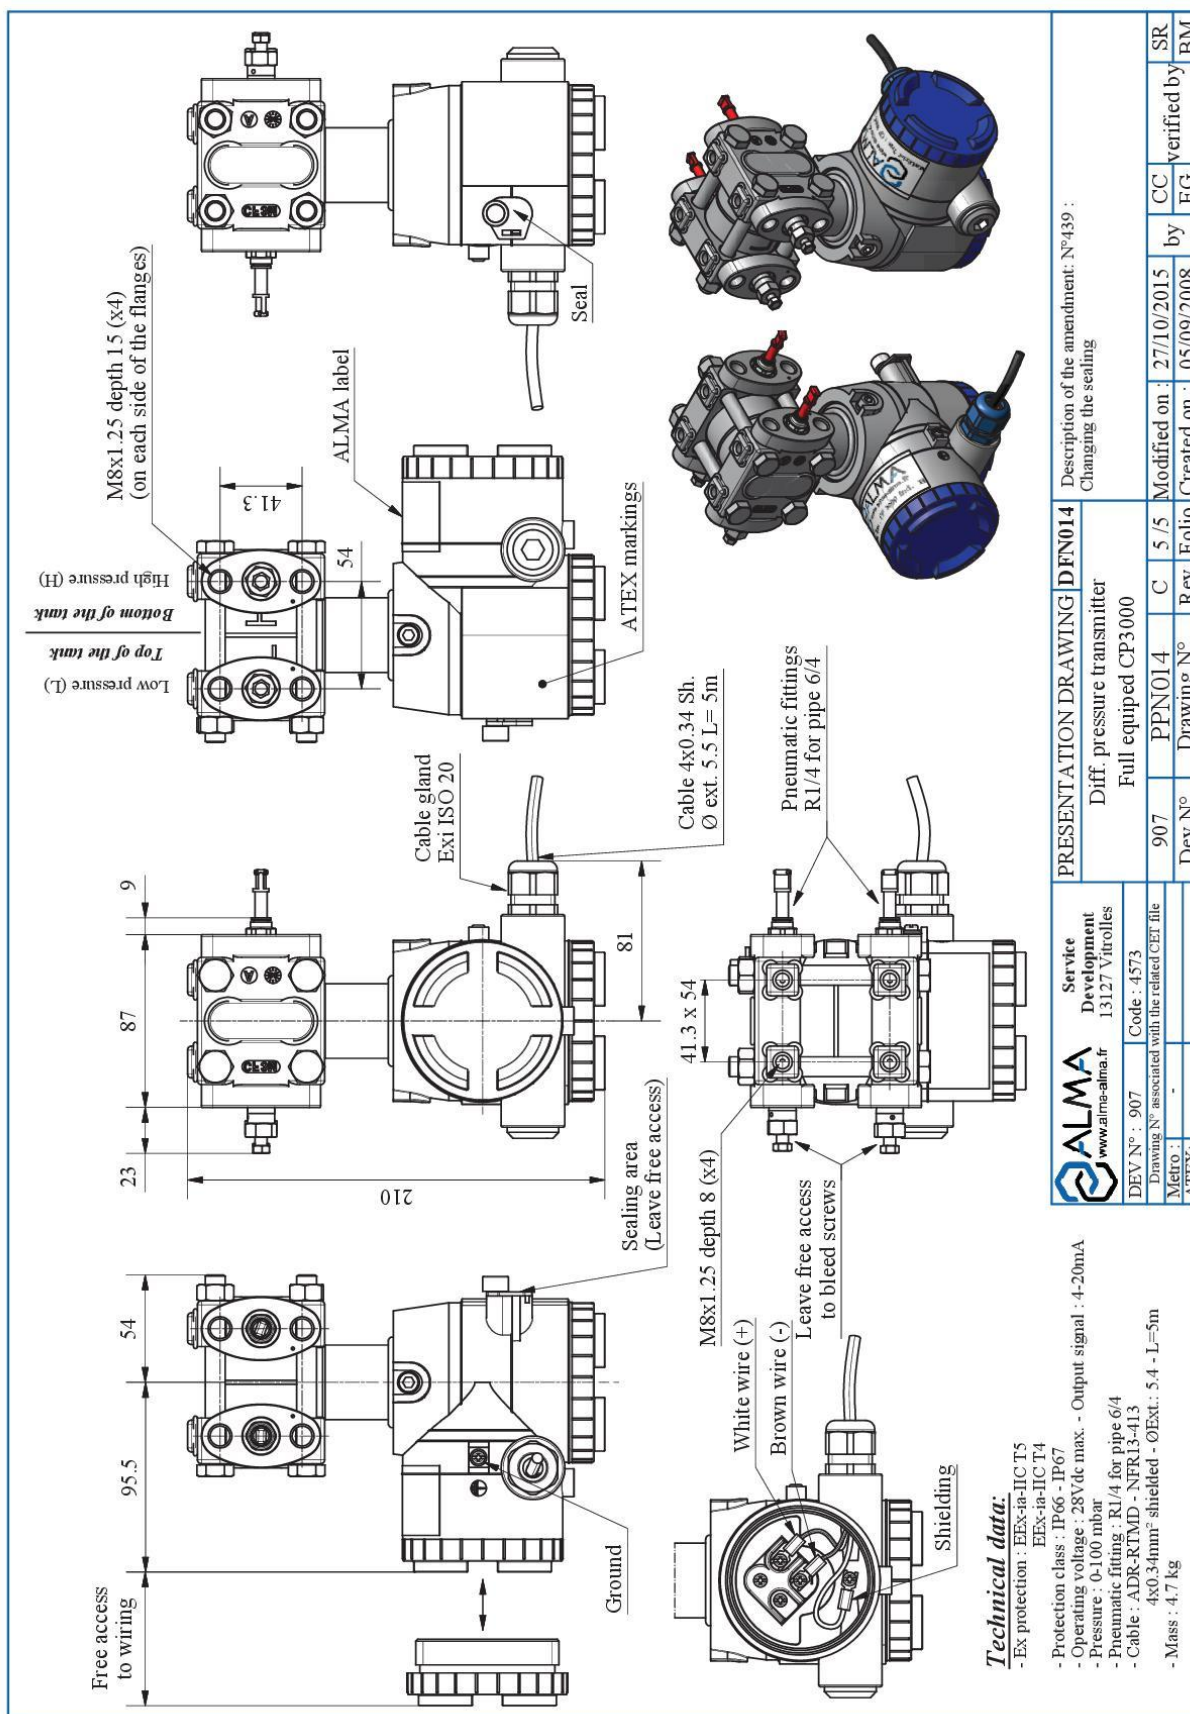

Document available on website alma-alma.fr

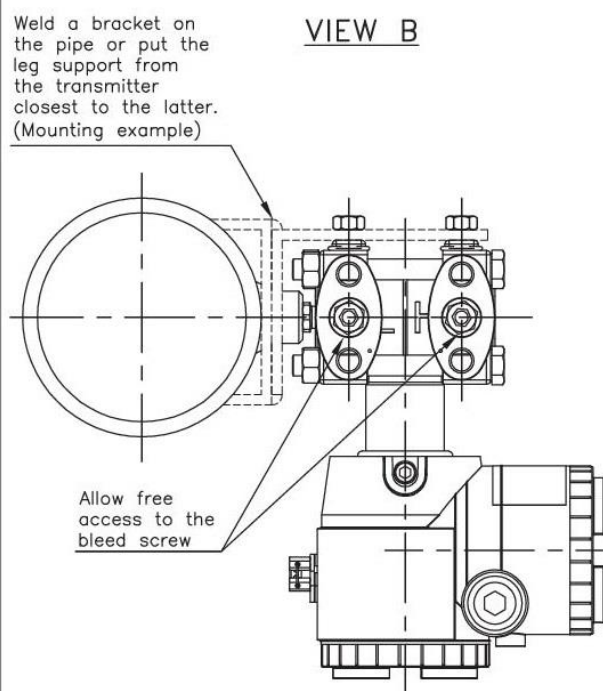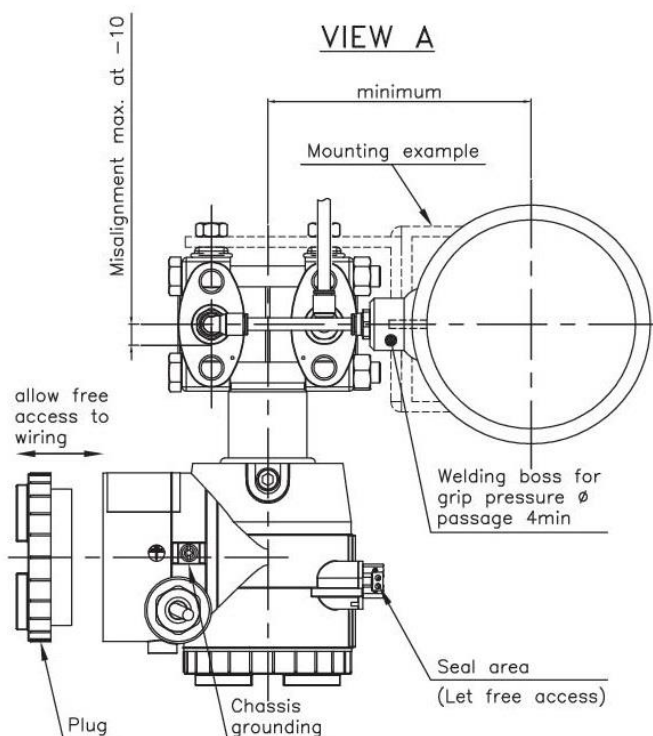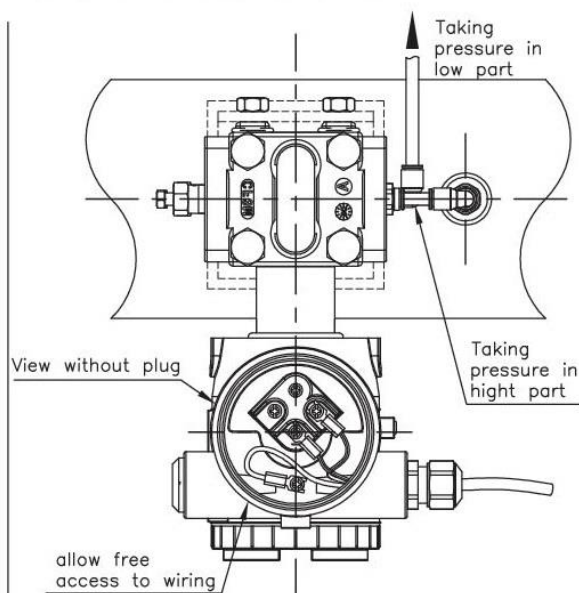

9. NC/NO SOLENOID VALVES KIT ATEX

Technical data:

- Ex protection : II 2G-Exmb IIC T4 Gb
- Tamb. max. : -10°C to +55°C
- Protection class : IP65
- Operating voltage : 24VDC $\pm 10\%$ - Power : 3W
- Pressure : 0 - 10 bar max. - Flow rate : 55 l/min (air).
- Body valve : brass G1/8 - Orifice : DN1.2 - Seal : FKM
- Pneumatic fitting : G1/8 and R1/8 for pipe 6/4
- Cable : moulded 3G0.75 L=3m
- Installation : free
- Mass : 1 kg

Pneumatic diagram

Solenoid valve 2/2NC configured 2/2NC

Solenoid valve 2/2NO configured 2/2NO

Table 1: Presentation Drawing

Service Development		PPN903		Description of the amendment: N°454 : Mise à jour	
DEV N°	Code	C	Rev	Modified on	CC verified by
907	4591	2/2	2/2	07/01/2016	CC verified by
Drawing N°		Drawing N°		29/04/2009	CC verified by
Drawing N°		Drawing N°		29/04/2009	CC verified by

Table 2: Service Development

Service Development	Code	13127 Vitrolles
DEV N°	907	Code : 4591
Drawing N° associated with the related CET file		
Metro		
ATV		

10. END-OF-METERING PROBE / VACUITY SENSOR – DG3001/75

Codification of marking :

DG3001/LL- C_0

LLL = Maximum Length under connection
Co = Connector

Dimensions

<i>Codes</i>	<i>Types</i>	<i>Lengths under connector (mm)</i>		<i>Materials</i>
		<i>L_{min}</i>	<i>L_{max}</i>	
0513	DG 3001-Co	0	26	Aluminium 6082
8133	DG 3001/75-Co	30	71	Aluminium 6082
8134	DG 3001/205-Co	75	201	Aluminium 6082

Operation


Conditions	Gas	Liquid
Output (mA)	35±2	15±1
Open collector output	Saturated	Blocked
I _{max} on output Co (mA)	30	
V _{ce} (V) for I _s =10mA	< 0.4	
State of the red led	On	Off
State of the green led	On	On

Supply

Voltage VDC	NSI	SI II B	SI II C
On power supply +	7 to 27	7 to 18*	7 to 15*
On output Co	< 27	< 13.2*	

Connection of the connector


<i>Function</i>	<i>Pin</i>	<i>Wire Color</i>
Power supply +	1	Brown
Power supply -	3	Blue
Output Co	4	Black

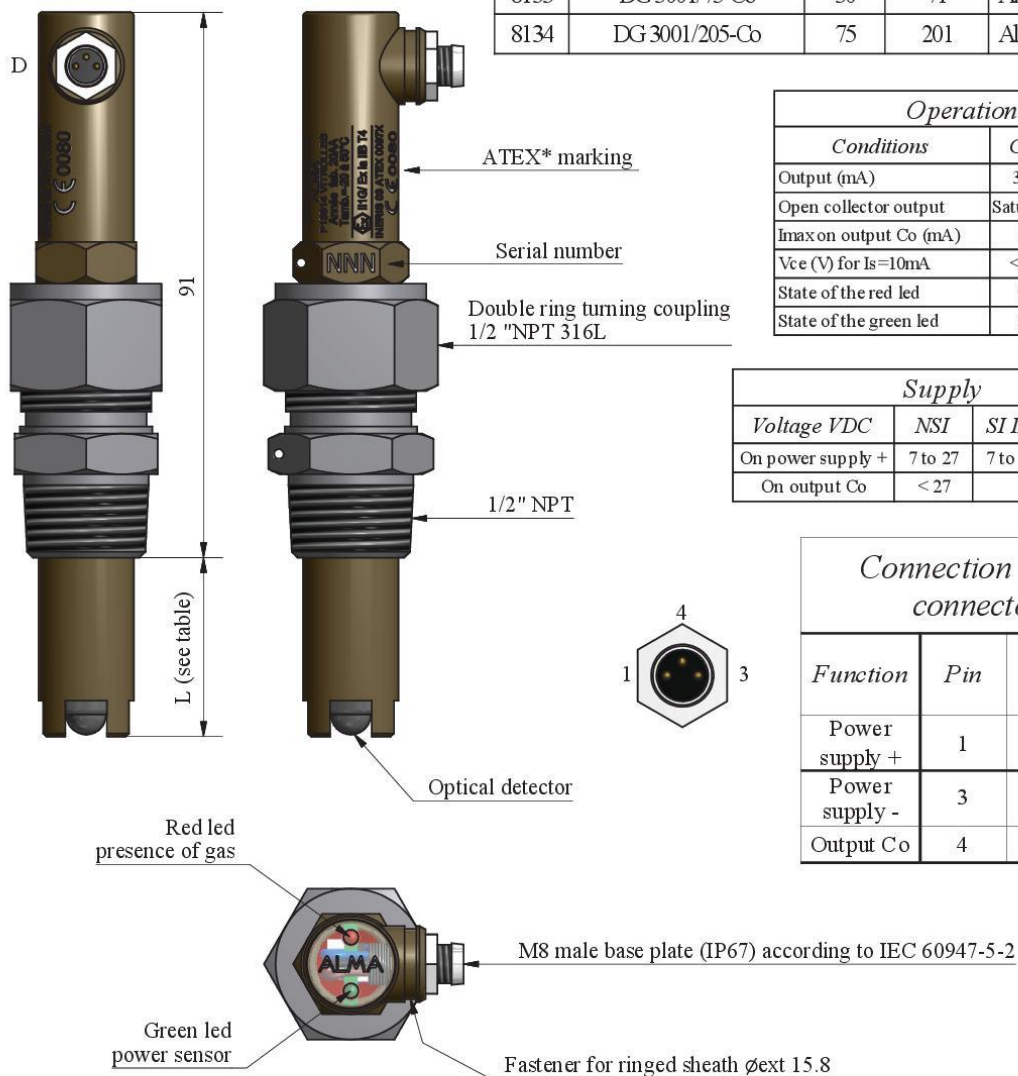

NOTE:

- The detector body is made of anodized aluminum alloy of bronze color.
- The optical sensor in contact with the liquid or gas is of polysulfone.
- The O-ring between the body and the detector is made of Viton.
- The sensor is supplied with any cable, 3 lengths are available: 5m cables (8138), 10m (8139) and 25m (8140).

*Refer to § 2 ATEX descriptive notice

 ALMA www.alma-alma.fr	Service Development 13127 Vitrolles	PRESENTATION DRAWING				DFV014		Description of amendment N°522 Adding CI008 version 2 for DLA01										
		Gas detector output connector																
		DG3001, DG3001/75, DG3001/205																
DEV N° : 981		Code : 0513		981		PPV014		V		6 / 8		Modified on : 22/12/2016		by	CHR	verified by	SR	
Drawing N° associated with the related CET file				Dev N°		Drawing N°		Rev		Folio		Created on : 01/04/1999						B
Metro :		ATEX :		INERIS 03 ATEX 0007X														

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENF

GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 36 / 52

Location of the end-of-metering probe (DG3001/75)

High point of the turbine

Turbine meter


Location of the vacuity probe (DG3001/75)

1/2" NPT after tight welding
depth 14mm minimum
(mind metal chips)

30° MAX

Plan tightness
(ex: Tubetanche Loctite 577)

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p>INSTALLATION GUIDE DI 015 EN F</p> <p>GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p>This document is available at www.alma-alma.fr</p>	<p>Page 37 / 52</p>

11. PRINTER

Technical data:



- Power supply : 24Vdc $\pm 10\%$
- Current consumption (at 24V) :
 - Mean : approx. 600mA
 - Peak : approx. 5.5A
 - Standby : approx. 100mA
- Temperature : $+5^{\circ}\text{C}$ to $+40^{\circ}\text{C}$
- Mass: 1.6 kg


Printer Link Cable

TYPE	CABLE	COLOUR WIRES	FUNCTION
	Cable 2x0.9mm ² ϕ ext. 5	Black (BK) or White sheathed (WH) White (WH) or Red sheathed (RD) Braid	24V 0V Shielding
	Shielded cable* 4x0.34mm ² ϕ ext. 5.4 L=10m / Code: 3370 L=25m / Code: 3436	White (WH) Brown (BN) Green (GN) Yellow (YE) Braid	Rx printer Tx printer 0V Not used Shielding


* ADR-RTMD - NFR L3-413 cable

-

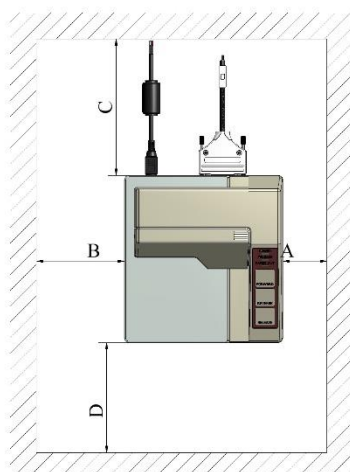

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	<p style="text-align: center;">INSTALLATION GUIDE DI 015 EN F</p> <p style="text-align: center;">GRAVITRONIQUE</p>	<p><u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C</p>
	<p style="text-align: center;">This document is available at www.alma-alma.fr</p>	<p style="text-align: right;">Page 39 / 52</p>

12. CONVERTER 24VDC/24VDC 2.1A 50W

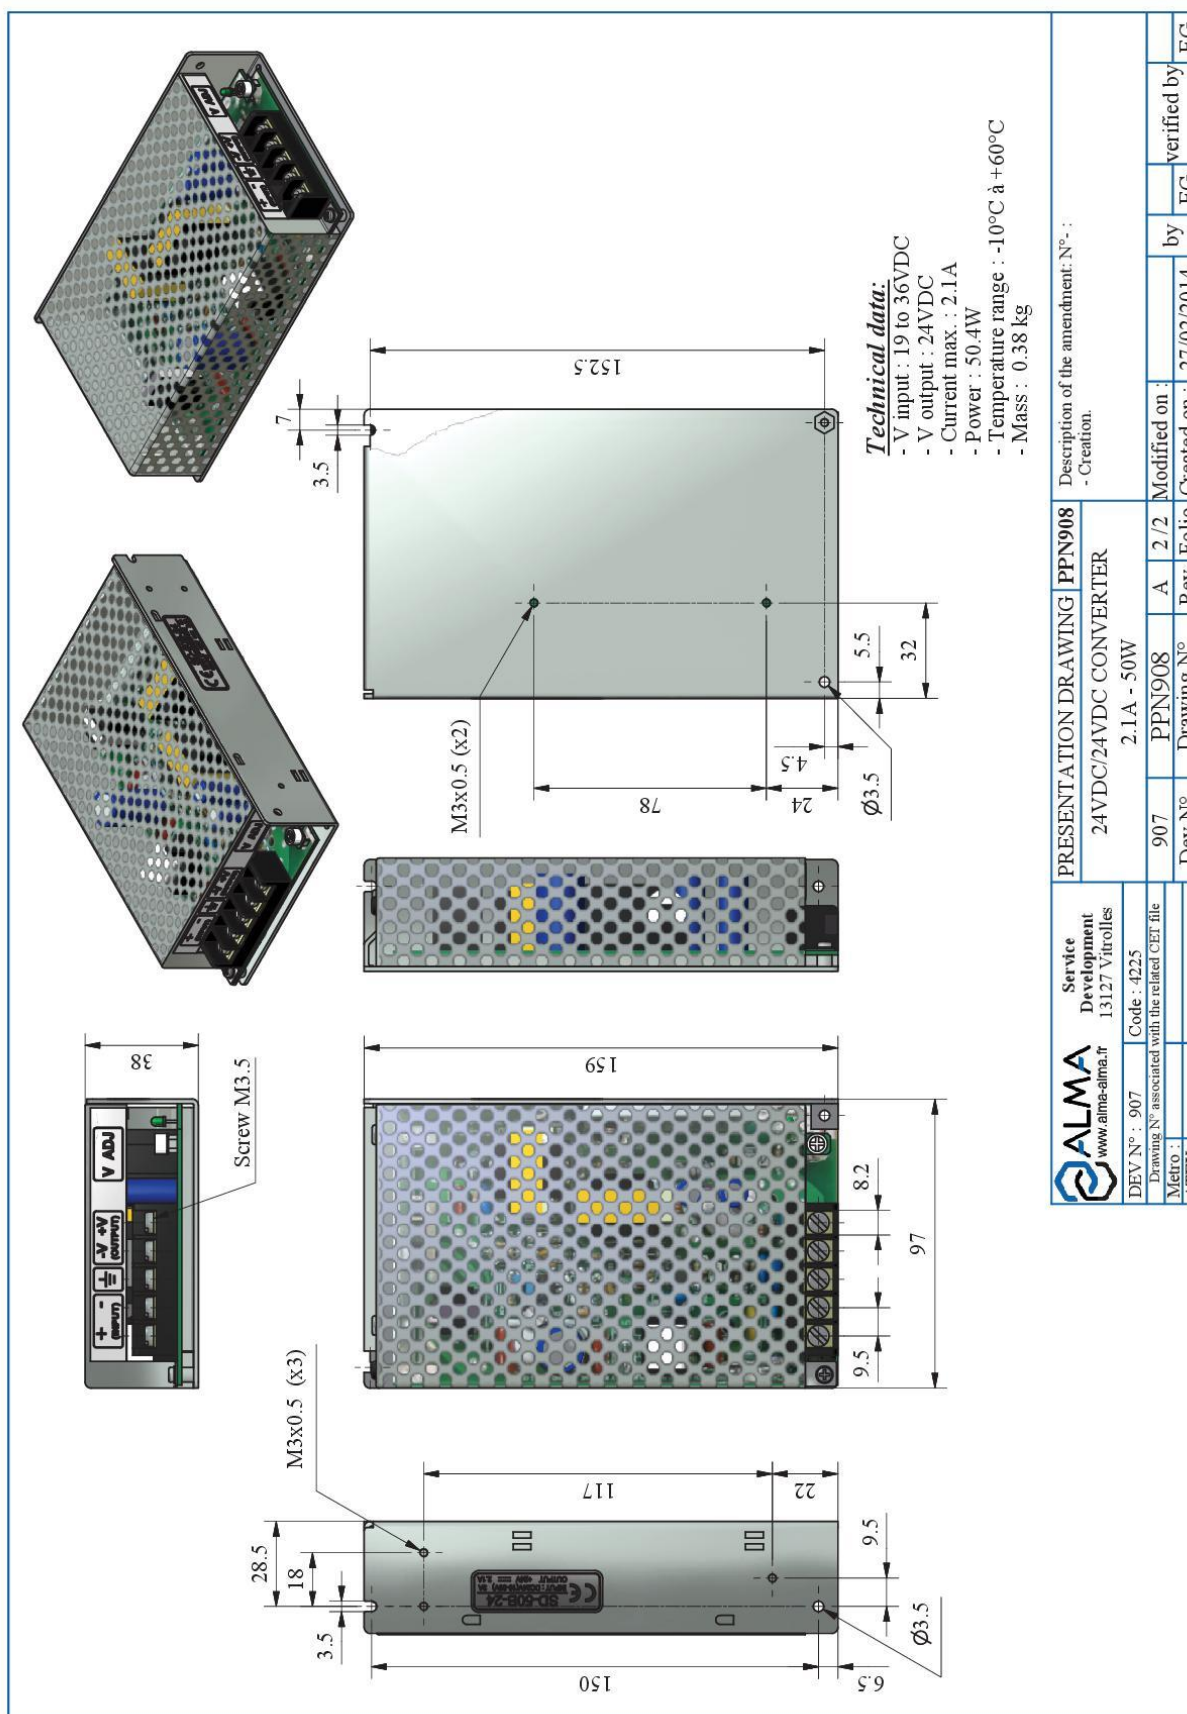

Document available on website alma-alma.fr

13. VACUUM BREAKER

Warning: the three valve tabs must be in contact with the retaining ring

4 holes Ø4 on Ø26

Flat-part for tightening with a 32 open ended wrench

Before mounting:
Grease the check valve O-ring (2) and the O-ring (3)
Grease: UNIL OPAL ALIMENTA (or equivalent)

Technical features:

- Connection G1/2"
- Use in any position
- Permissible working pressure: 10 bar
- Opening pressure: 20 mbar
- Working temperature: Tmin=-10°C, Tmax=80°C
- Stainless staining screen 75µ
- Permissible liquids: clear liquids and gas
- Viton O-rings

The vacuum breaker must be mounted with a tab with removable ring to clean the straining screen (such as tight tube)

Thread G1/2"

Rep	Qty	Item description	Material	Reference	Rev.	Mod	Code	Observation
1	1	Vacuum breaker cap	Brass	A1145	C	M	8734	
2	1	Vacuum breaker	POM	EB901-149B 3301V			0551	
3	1	Viton O-ring 12x1.5	Viton			A	8196	
4	1	Straining screen D=15 Stainless cloth, opening 75µ, wire 36µ	Stainless 316L	PV1228	C	A	0807	
5	1	Stainless Internal retaining ring D=16	Stainless steel	NF E 22-165 - 16x1		A	0808	

ALMA
www.alma-alma.fr

Service Development
13127 Vitrolles

Mat: 0497
Tol: ± 0.2
Drawing N° associated with the related CEF file
Metro: ATEX:

ALMA

Vacuum breaker G1/2"

Description of the amendment N°153
Insertion of a straining screen

Rev	Folio	Rev	Modif	Code	Observation
2/2	B	2/2	Modified on : 25/06/2010	SR	verified by BM
			Created on : 25/05/2009	CC	by SR

 Document available on website [alma-alma.fr](http://www.alma-alma.fr)

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION





INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE

 This document is available at www.alma-alma.fr
Units of measure:
 Length: mm
 Angle: degree (° ' ")
 Temperature: °C


14. DN80 NON-RETURN VALVE KITS
14.1. **DN80 NON RETURN VALVE KIT, 0.03 BAR CALIBRATED**

DIMENSIONS FOR DN80 NON-RETURN VALVE KIT – 0.03 bar calibrated:

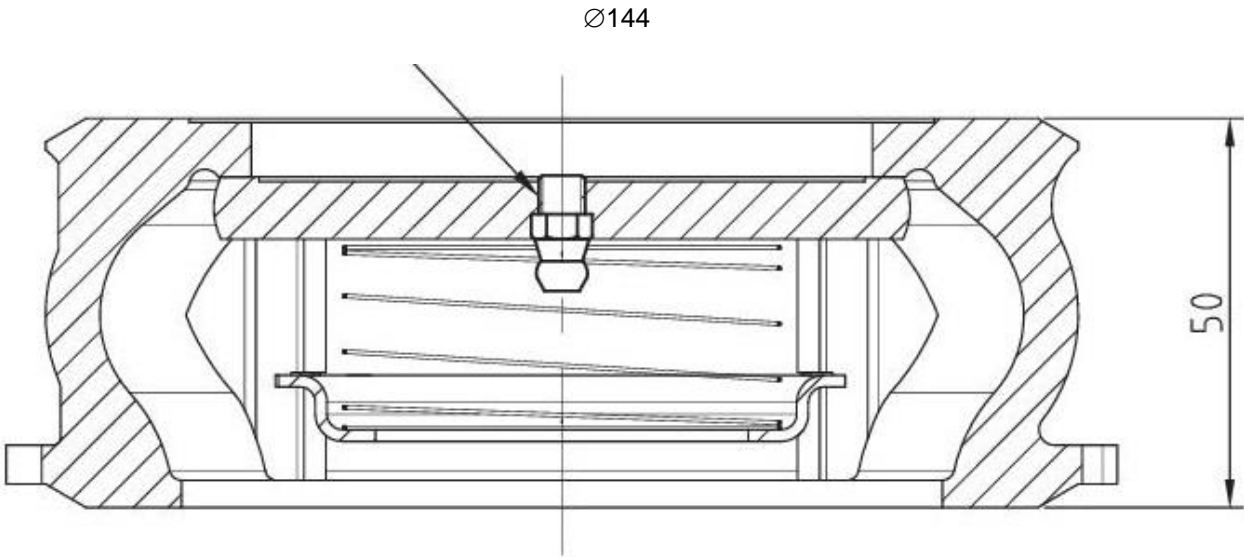


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 43 / 52


14.2. DN80 NON RETURN VALVE KIT, 0.3 BAR CALIBRATED (EMPTY HOSE OPTION)

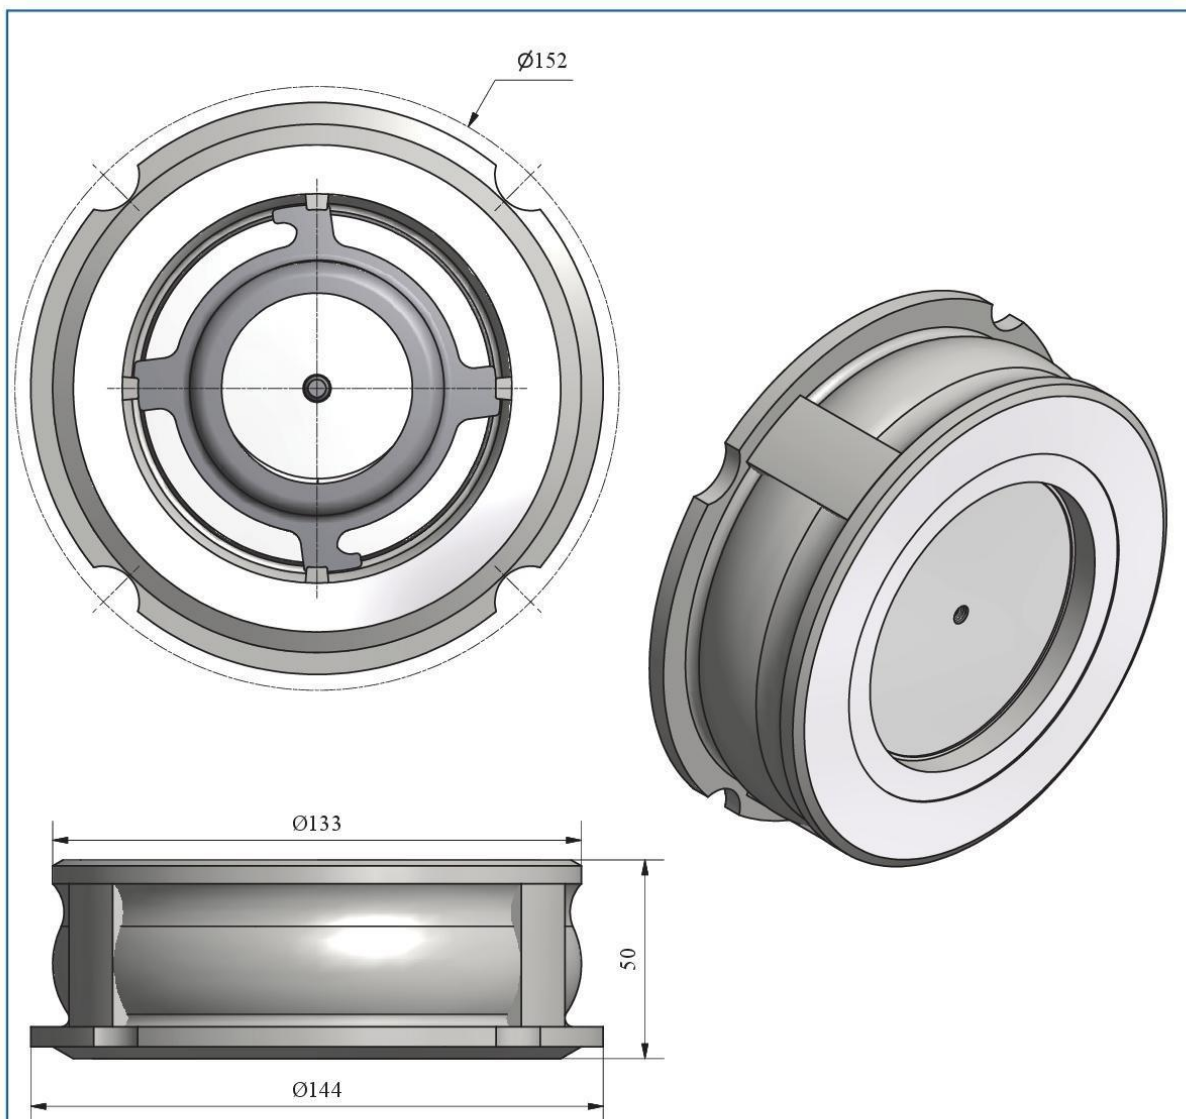

- **Mass** : ~ 2.5Kg
- **Material** : Inox 316L
- **Operating temperature** : -10°C to +350°C
- **Permissible operating pressure** : 40 bar
- **Maximum permissible pressure** :
 - Liquid 1: 25 bar
 - Gas 1: 12 bar
 - Liquid 2: 40 bar
 - Gas 2: 40 bar
- **Pressure drop** : 0.2 bar at 50 m³/h
- **Mounting** : Between downstream flange of the turbine
- **Tightness** : Flat gasket
- **Standards** :
 - CE conformity directive 97/23/CE
 - CE ATEX conformity directive 94/9/CE


 www.alma-alma.fr		Service Development 13127 Vitrolles		Kit non return valve, calibrated at 0.3 bar Adriane DN80 24X				Description of amendment N°							
Mat:															
Tol : ± 0.2		Code : 8798													
Drawing N° associated with the related CET file															
Metro :				905a		PV1908		A		2 / 2		Modified on :			
ATEX :				Dev N°		Drawing N°		Rev		Folio		Created on :		29/03/2016	
												by		CC	
												verified by		SR	

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE	
	This document is available at www.alma-alma.fr	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C Page 44 / 52

14.3. INSTALLATION RECOMMENDATIONS DN80 NON-RETURN VALVE KIT

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices

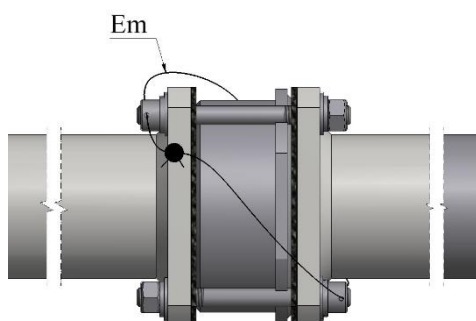

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 45 / 52

15. PNEUMATIC CONTROL VENT VALVE



Technical features:
Body: brass
Male adaptor hose nipple: brass
Pressure: 10 bar max.
Mass (kit): 1.3Kg
Mass (valve): 1.1Kg

PNEUMATIC CONTROL VENT
(delivered without I-O fittings)
Code: 6922



PRESENTATION DRAWING		DEF004	Pneumatic control Vent valve kit		Description of the amendment N° 036 : Markings added on the body valve for a better comprehension of flow direction.	
907	PPN004	B	5 / 6	Rev	Folio	
Dev N°	Drawing N°				Modified on : 10/12/2012	by EG
					Created on : 11/02/2008	EG
						XS
						EG

Document available on website www.alma-alma.fr

15.1. INSTALLATION RECOMMENDATIONS PNEUMATIC CONTROL VENT VALVE

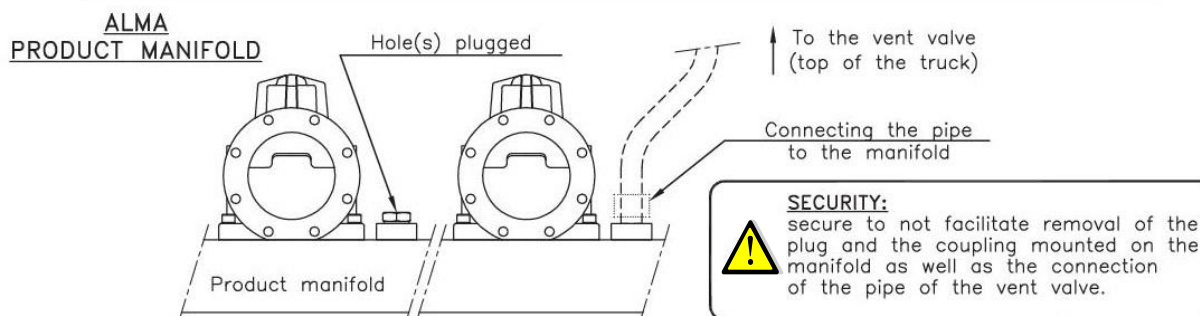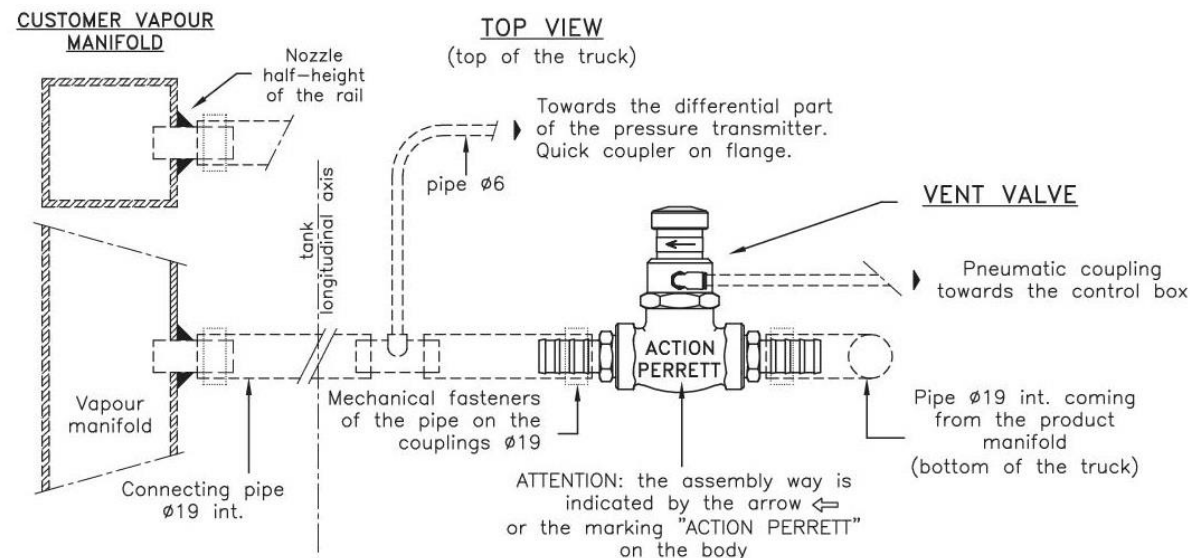


ASSEMBLY OF THE VENT PIPE (not supplied by Alma)

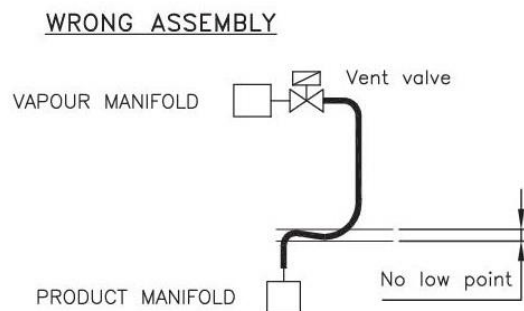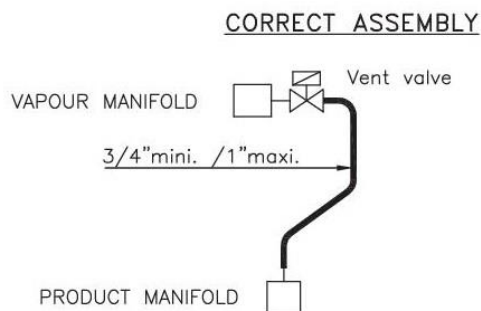

ATTENTION: avoid any low points on the pipe run.

16. TEMPERATURE PROBE Pt100 – CT1001

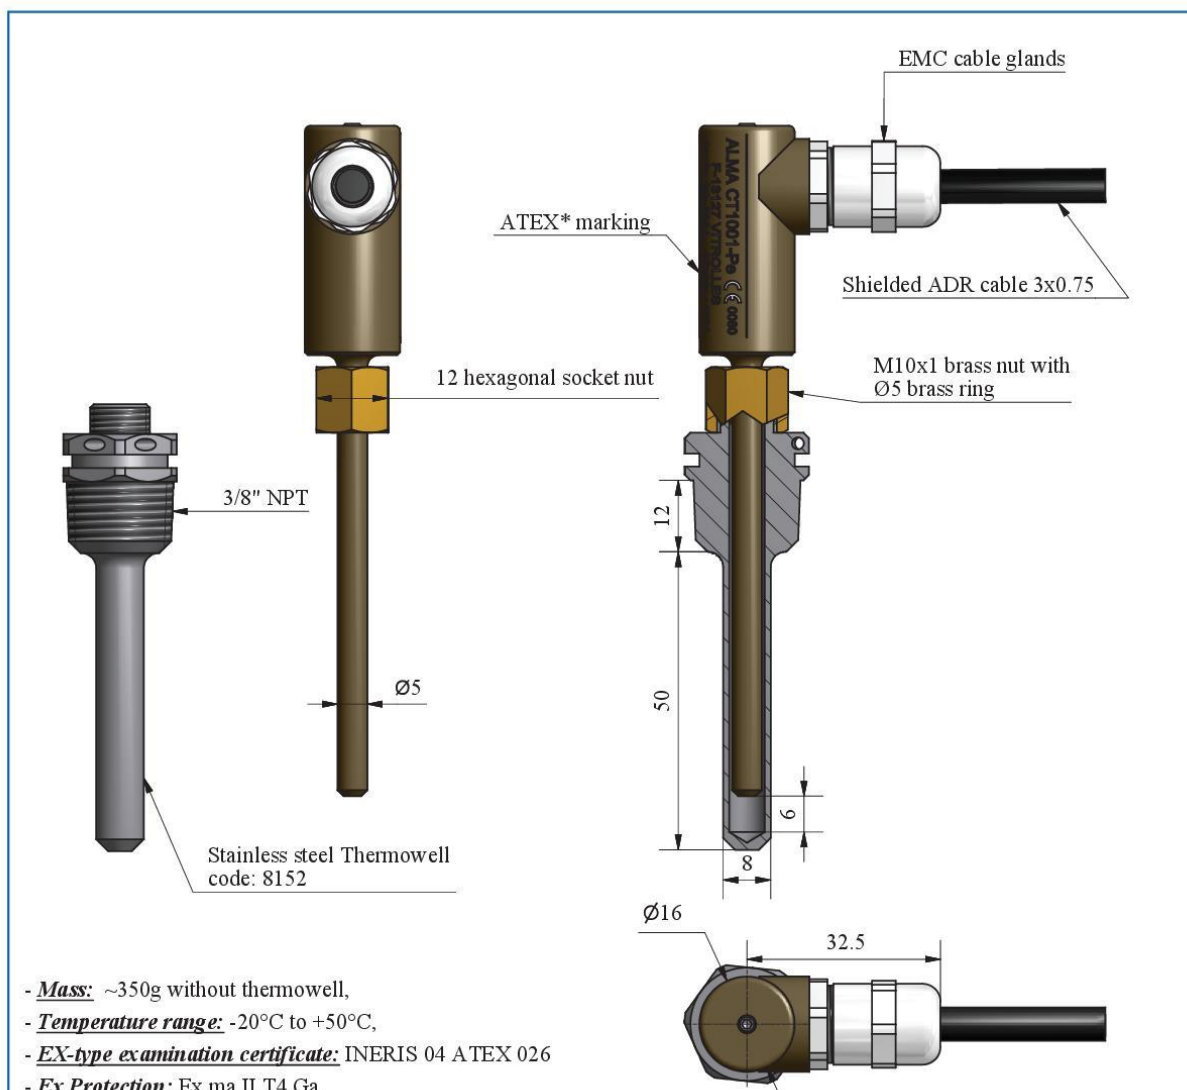

- **Mass:** ~350g without thermowell,
- **Temperature range:** -20°C to +50°C,
- **EX-type examination certificate:** INERIS 04 ATEX 026
- **Ex Protection:** Ex ma II T4 Ga

The sensor body is made of bronze color anodized aluminum alloy;
The ring and the nut are made of brass.
The probe can be mounted either on a ALMA thermowell or on a
thimble connection 1/4 "BSP (M10x1 n5).
Before installation, lubricate the parts in contact with the thermowell or
the boss, to prevent corrosion.

PT100 features:


- 3 wires
- 1/3 DIN

*ATEX "ma" certification.


For installation and use in hazardous areas see Instruction manual

Also available with output connector according to IEC 60947-5-2


Connecting the cable		
Function	Marking on the wire	Color wire
PT100/1	1	Yellow
PT100/2	2	White
PT100/3	3	Green

 Service Development 13127 Vitrolles		PRESENTATION DRAWING DFV042		Description of the amendment N° 596	
DEVN° : 949d Code : 8151		Temperature probe		- Compliance with ATEX marking	
Drawing N° associated with the related CET file		CT1001-Pe		- Replacement of the ADR cable	
Metro :		949d	PPV042	K	5 / 7
ATEX :		Dev N°	Drawing N°	Rev	Folio
INERIS 04 ATEX 0026		Created on : 13/09/2003		by	ROC
		Modified on : 21/02/2018		BM	verified by
					CC
					BM

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE	
	This document is available at www.alma-alma.fr	
		Units of measure: Length: mm Angle: degree (° ' ' ') Temperature: °C
		Page 48 / 52


16.1. INSTALLATION RECOMMENDATIONS TEMPERATURE PROBE

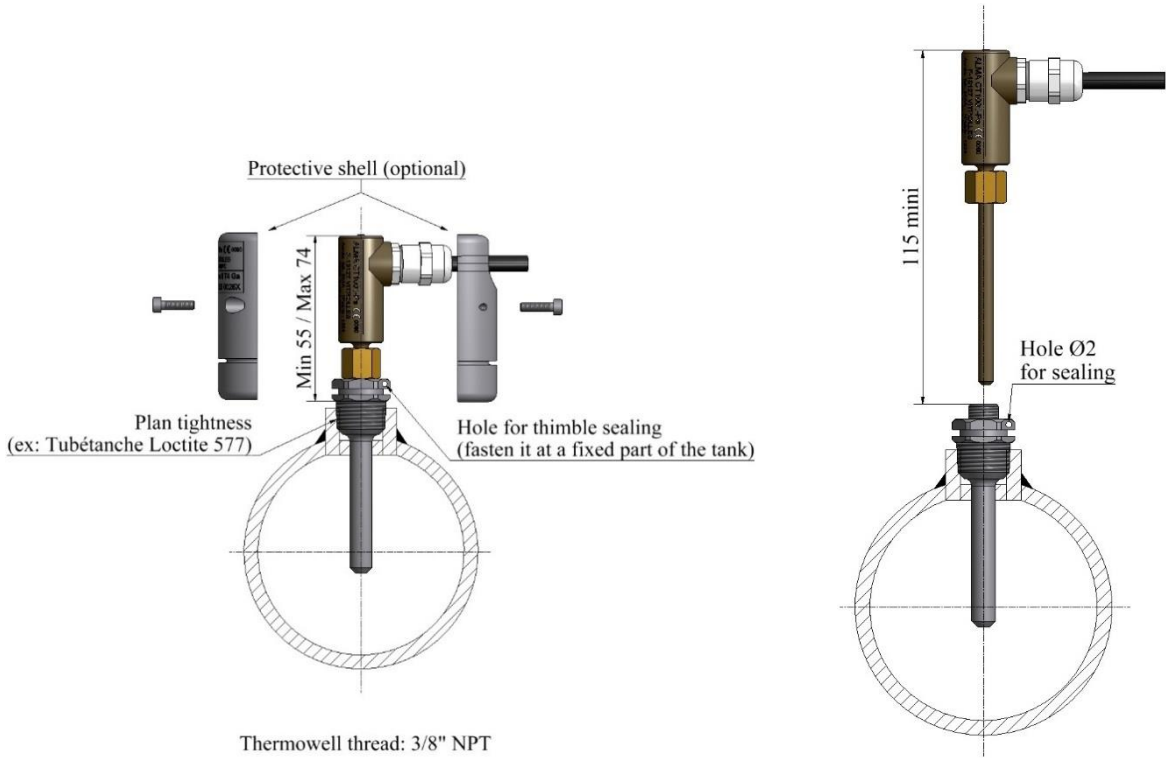

REFER TO INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT AND AVAILABLE ON ALMA WEBSITE)

INSTALLATION OF THE TEMPERATURE SENSOR
ON THE ALMA TURBINE METER:



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 49 / 52

17. SIGHTGLASS KIT 110x110 ADRIANE TURBINE METER DN80

Mounting example

B (1.5 : 1)

Socket head cap screw
For sealing

Put parts in a bag

Rep	Qty	Item description	Material	Reference	Rev.	Mdf	Code	Observation
1	1	Sightglass DN80 110X110	Moulded PMMA	A0533	B		0908	
2	3	CHC screw M10 x 70 (ISO 4762)	Stainless A4-70				8595	
3	1	Washer W M10 (DIN 127)	Stainless A4-70				8474	
4	1	Washer M M10 (NFE 25-514)	Stainless A4-70				8430	
5	1	CHC screw M10 x 70 (ISO 4762) with head pierced	Stainless A4-70	PN0030	B	A	3465	

Service Development
13127 Vitrolles
Mat: **Service Development**
13127 Vitrolles
Tol : ± 0.2 Code : 1091
Drawing N° associated with the related CET file
Metro :
ATEX:

Sightglass kit 110 x 110
Adriane turbine meter DN80 24X
905 PV1674 B 2 / 2 Modified on : 17/02/2017 by CC verified by SR
Dev N° Drawing N° Rev Folio Created on : 30/03/2016 CC SR

Description of amendment N°530
Integration of drill head screws

Document available on website alma-alma.fr

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 ENF GRAVITRONIQUE

This document is available at www.alma-alma.fr
Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 50 / 52

17.1. INSTALLATION RECOMMENDATIONS SIGHTGLASS KIT DN80

- Refer to the certificate written on the identification plate of the measuring system to suit the sealing requirements
- No loose lead wire on the sealing devices



ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F GRAVITRONIQUE


This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

Page 51 / 52

18. KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE

The identification plate shall be clearly installed, near the associated indicator device, and of easy access in order to be able to read features and to stamp the regulatory marks.

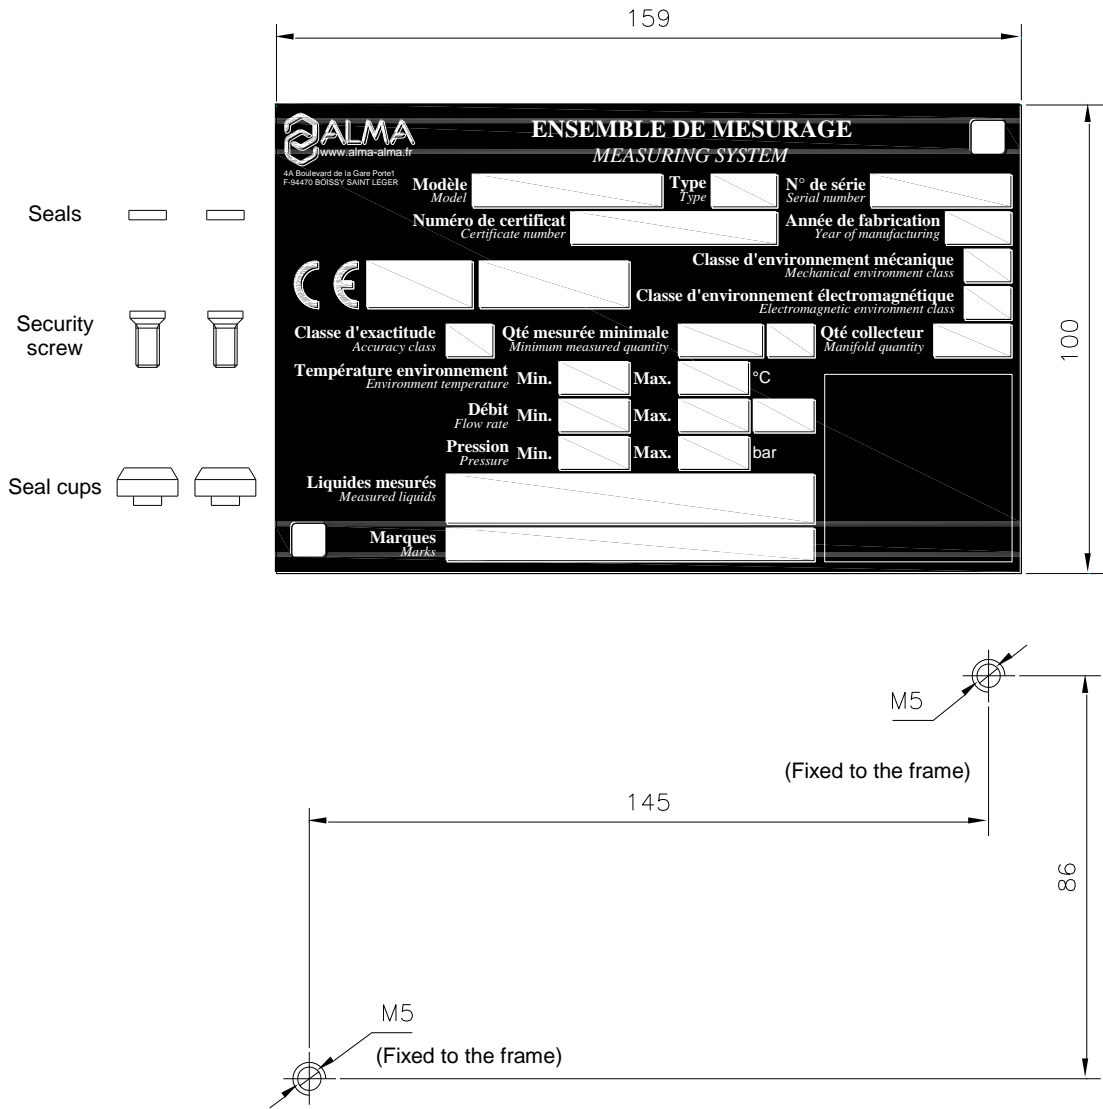

The security screws of the cups (provided by ALMA) must be screwed in the tap of the frame (do not use removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 015 EN F
GRAVITRONIQUE

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C