

INSTALLATION GUIDE

DI 101 EN D


TURBOCOMPT

Measuring system accuracy class 0.5, designed for loading road tankers and rail tank trucks

Described in EU-type examination certificate N°: LNE-22081




D	2018/01/18	Conformity with LNE-22081-3 [MDV497]	DSM	PJ
C	2016/09/20	Creation	DSM	SH
Issue	Date	Nature of modifications	Written by	Approved by


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY				
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION				
	INSTALLATION GUIDE DI 101 END TURBOCOMPT			Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr			Page 1 / 24

CONTENTS

1. GENERAL RECOMMENDATIONS	4
1.1. MECHANICAL RECOMMENDATIONS	4
1.2. ELECTRICAL RECOMMENDATIONS	4
2. GENERAL PRESENTATION.....	6
2.1. MEASURING SYSTEM USED ACCORDING TO MID CERTIFICATE	6
2.2. SPECIAL CONDITIONS OF INSTALLATION (outside Europe-wide regulation)	6
3. PART LIST	7
4. GENERAL PRESENTATION.....	8
4.1. HORIZONTAL PIPE LOADING SYSTEM	8
4.2. TOP LOADING SYSTEM.....	9
4.3. BOTTOM LOADING SYSTEM WITH RIGID ARM (CSE)	10
4.4. BOTTOM LOADING SYSTEM WITH FLEXIBLE ARM (CFA).....	11
5. ESSENTIAL FEATURES	12
5.1. GENERIC CHARACTERISTICS.....	12
5.2. DETERMINATION OF THE SCALE INTERVAL	13
5.3. DETERMINATION OF THE MINIMUM MEASURED QUANTITY (QMM).....	13
5.4. MEASURED LIQUID.....	13
5.5. MEASURED LIQUID TEMPERATURE RANGE	13
5.6. ENVIRONMENT CONDITIONS.....	14
5.6.1. Environment temperature	14
5.6.2. Environment mechanical class	14
5.6.3. Environment electromagnetic class	14
5.7. FLOWRATE RANGES	14
5.8. PRESSURE RANGES	14
5.8.1. Minimum pressure	14
5.8.2. Maximum operating pressure	16
5.9. NEED TO ESTABLISH A SUPPLY CONDITIONS FILE	16
5.10. PRODUCT CONTRACTION UPSTREAM OF THE METER. NEED TO INSTALL A GAS DETECTION AND PURGE SYSTEM.....	16
5.11. CONTRACTION OF THE PRODUCT BETWEEN THE METER AND TRANSFER POINT	17
6. GENERAL MECHANICAL RECOMMENDATIONS.....	17
6.1. MICROCOMPT+ ASSEMBLY GUIDELINES.....	17
6.1.1. Specificities of the RACK Version.....	18
6.2. METER ASSEMBLY GUIDELINES	18
6.2.1. ALMA ADRIANE Turbine	18
6.2.2. FAURE HERMAN TML 4-150 Turbine	18
6.3. GAS SEPARATOR	19
6.4. CONTROL VALVE.....	19
6.4.1. Compatible valve types.....	19
6.4.2. Installation.....	19
6.5. AUTOMATIC GAS DETECTION SYSTEM	20
6.6. ALMA GAS EXTRACTOR	20

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 2 / 24

6.7.	TEMPERATURE SENSOR.....	21
6.8.	TRANSFER POINT.....	21
7.	TURBOCOMPT ELECTRICAL CONNECTION.....	22
7.1.	GENERAL INTERCONNECTION OF EQUIPMENT	22
7.2.	ELECTRICAL CONNECTION OF THE MICROCOMPT+	23
7.3.	ELECTRICAL CONNECTION OF THE METER.....	23
7.3.1.	Specificity of the FAURE HERMAN TLM 4-150 turbine	23
8.	SEALING.....	23
9.	MEASURING SYSTEM PLATE KIT	24

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 3 / 24

The ALMA TURBOCOMPT is a 0.5-accuracy class measuring system for loading road tankers and rail tank trucks. It is fitted at least with the following components:

An ALMA MICROCOMPT+ electronic calculator-indicator

A turbine meter

An automatic stop valve

A loading arm or a rigid hose

A gas removal device

1. GENERAL RECOMMENDATIONS

IN ORDER TO AVOID ALL THE PROBLEMS CONCERNING THE INSTALLATION, THE OPERATION AND THE MAINTENANCE OF THE EQUIPMENTS, BEING ABLE TO CREATE INOPPORTUNE FAILURE, PLEASE RESPECT THE FOLLOWING RECOMMENDATIONS.


BEFORE ANY WORK, MAKE SURE THAT THE EQUIPMENTS ARE NOT POWERED.

1.1. MECHANICAL RECOMMENDATIONS


- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Take care to place the equipment in order to facilitate their installation, operation and maintenance by the technicians (working ergonomics).
- ⇒ Take care to position properly the equipment; the display must be readable without any difficulty.
- ⇒ Apply a tightening torque suitable with size and material of the fixation element except particular specifications mentioned on the presentation drawing or in the installation guides.
- ⇒ Mechanically protect the cables.
- ⇒ Ensure there are a good mechanical strength and a good sealing between cable glands and cables, and between cable glands and corrugated conduit.
- ⇒ Respect cables and corrugated conduit radii of curvature.
- ⇒ Leave enough flexibility to wires in order to avoid any risk of stripping.

1.2. ELECTRICAL RECOMMENDATIONS


- ⇒ Respect the recommendations of the instruction manual specifying the installation, operation and maintenance conditions of the ATEX equipment (instruction manual supplied with the equipment).
- ⇒ Connect the supply of the equipment downstream cut-out, on the power supply reserved to the measured distribution.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 4 / 24

- ⇒ Put a delayed protection of 3A upstream the 230VDC supply to protect equipment in case of overcurrent.
- ⇒ Use cable resisting to hydrocarbons and protect it mechanically.
- ⇒ Take care not to damage the terminals of the different electronic boards while wiring.
 - Screw terminals: do not damage the screw heads of the terminals.
 - Use insulated lugs and insulated wire ferrules adapted to the section of wires.
 - Spring terminals: do not block the springs (if a spring is blocked, the electronic board must be replaced).
 - Use flat screwdriver 0.4x2.5 (see fig.1).
 - Insert the screwdriver slightly tilted, then push it perpendicularly to the terminal.
 - Do not exceed the upright position when the screwdriver is down in order not to block the spring.
 - Insert or remove the wire and remove the screwdriver.

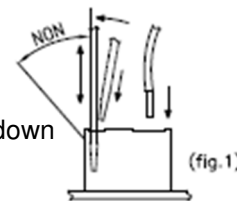

- ⇒ Do not use wires of section higher than 1.5mm².
- ⇒ Do not insert more than two wires in a terminal, if necessary use an insulated twin wire ferrule (unless otherwise indicated).
- ⇒ Strictly respect the polarities of the input/output when wiring, in accordance with serigraphy on the cards and/or with the installation guide indications.
- ⇒ Whenever possible, perform a wired test, after wiring and before powering.
- ⇒ Whenever possible, respect the locations of the cables specified in the installation guide.
- ⇒ Equipment must be connected to the frame ground (external ground connection).
- ⇒ Whenever possible, use shielded cables with a 360° connection through the metal cable glands (see the documentation delivered with the equipment).
Otherwise, connect the shields to devices inside the equipment (ground terminal, earth bar, earth boss...).
- ⇒ Respect a homogeneous wire color code.
- ⇒ Color code according to DIN 47100.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 5 / 24

⇒ Code for designation of colours according to IEC 60757 (except FR codes):

FR				EN	IT	ES	DE
Couleurs	Codes		Standard codes CEI 60757	Colours	Colori	Colores	Farbe
Blanc	Bc		WH	White	Bianco	Blanco	Weiß
Marron	Mr		BN	Brown	Marrone	Marrón	Braun
Vert	Vt		GN	Green	Verde	Verde	Grün
Jaune	Jn		YE	Yellow	Giallo	Amarillo	Gelb
Gris	Gr		GY	Grey	Grigio	Gris	Grau
Rose	Rs		PK	Pink	Rosa	Rosa	Lila
Bleu	Bl		BU	Blue	Blu	Azul	Blau
Rouge	Rg		RD	Red	Rosso	Rojo	Rot
Noir	Nr		BK	Black	Nero	Negro	Schwarz
Violet	Vi		VL	Violet	Viola	Violeta	Violett
Orange	Or		OG	Orange	Arancio	Naranja	Orange
Vert/Jaune	V/J		GNYE	Green/Yellow	Verde/Giallo	Verde/Amarillo	Grün/Gelb

2. GENERAL PRESENTATION

2.1. MEASURING SYSTEM USED ACCORDING TO MID CERTIFICATE

The TURBOCOMPT measuring system is covered by the EU type examination certificate N° LNE-22081. Refer to this certificate for any precision about its installation.

For the sealing plan, see Annex to EU type examination certificate N° LNE-22081.

2.2. SPECIAL CONDITIONS OF INSTALLATION (outside Europe-wide regulation)

The TURBOCOMPT measuring system must be installed in accordance with the recommendations provided in this document.


The TURBOCOMPT measuring system must be installed in such a way that during normal operation neither air entry nor gas release will occur in the liquid upstream of the meter.

When the liquid is pumped through the measuring system, the pressure at the pump inlet must always be higher than the atmospheric pressure and the saturation vapour pressure of the liquid. These conditions are not required when the measuring system is fitted with a gas separator


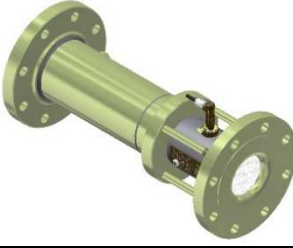

Operating characteristics of the automatic stop valve shall be compatible with the measuring system.

When the power supply to the measuring system is cut, flow shall be interrupted even if the pump is already operating.


In any case, you are required to comply with the regulations in force in the country where the measuring system is installed.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 6 / 24

3. PART LIST


EQUIPMENTS INCLUDED IN THE MEASURING SYSTEM DELIVERED BY ALMA				
Item	Equipment	Designation	Qty	Option*
1		CALCULATOR INDICATOR MICROCOMPT+	1	
2		TURBINE ALMA type ADRIANE DN 50-50, DN 80-80, DN 100-80 or DN100-150 FAURE HERMAN type TLM 4-150	1	
3	According to listed models in §6.4.1	AUTOMATIC STOP VALVE	1	
4		LOADING ARM OR RIGID HOSE	1	
5		ANCILLARY EQUIPMENT according to context: Pt100 Temperature sensor One or more automatic gas and vent valves Gas separator Gas extractor		•
6		KIT FOR MEASURING SYSTEM IDENTIFICATION PLATE (Plate and sealing device)	1	•
Option*: equipment sold as an option by ALMA must be installed on the measuring system if required by the certificate.				

Non-contractual pictures

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 7 / 24


4. GENERAL PRESENTATION

4.1. HORIZONTAL PIPE LOADING SYSTEM

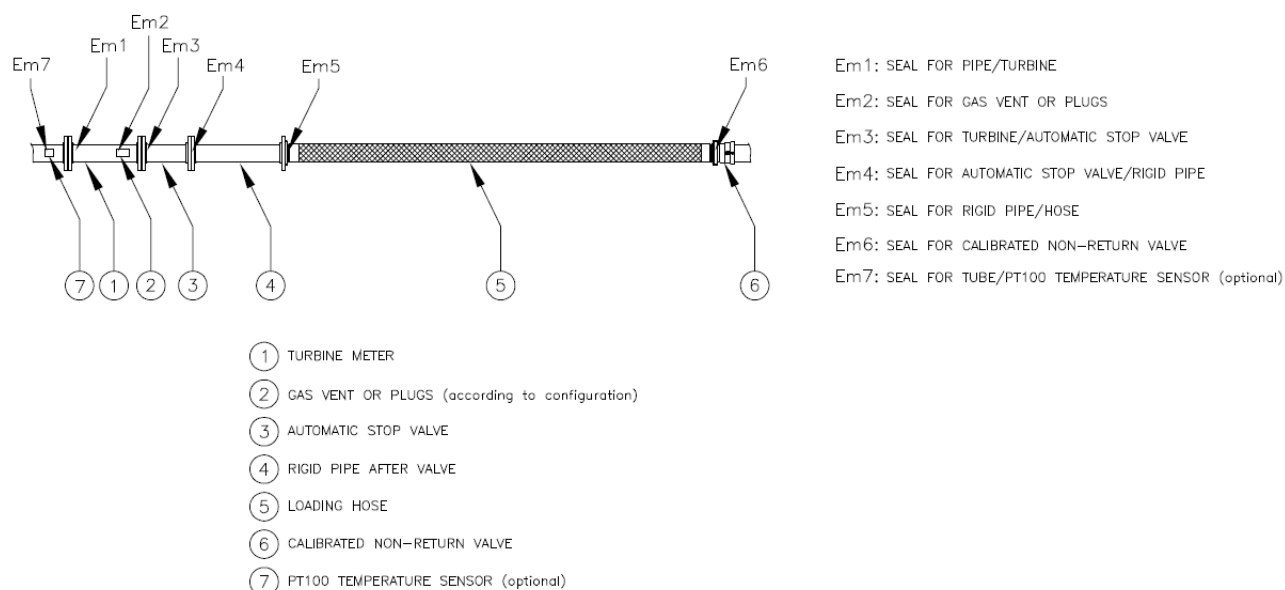

The sealing plans for turbine meters, for electronic calculator-indicator and if relevant for gas separator or gas extractor are described in conformity with respective evaluation certificates.

Bottom loading system with rigid arm (CSE)

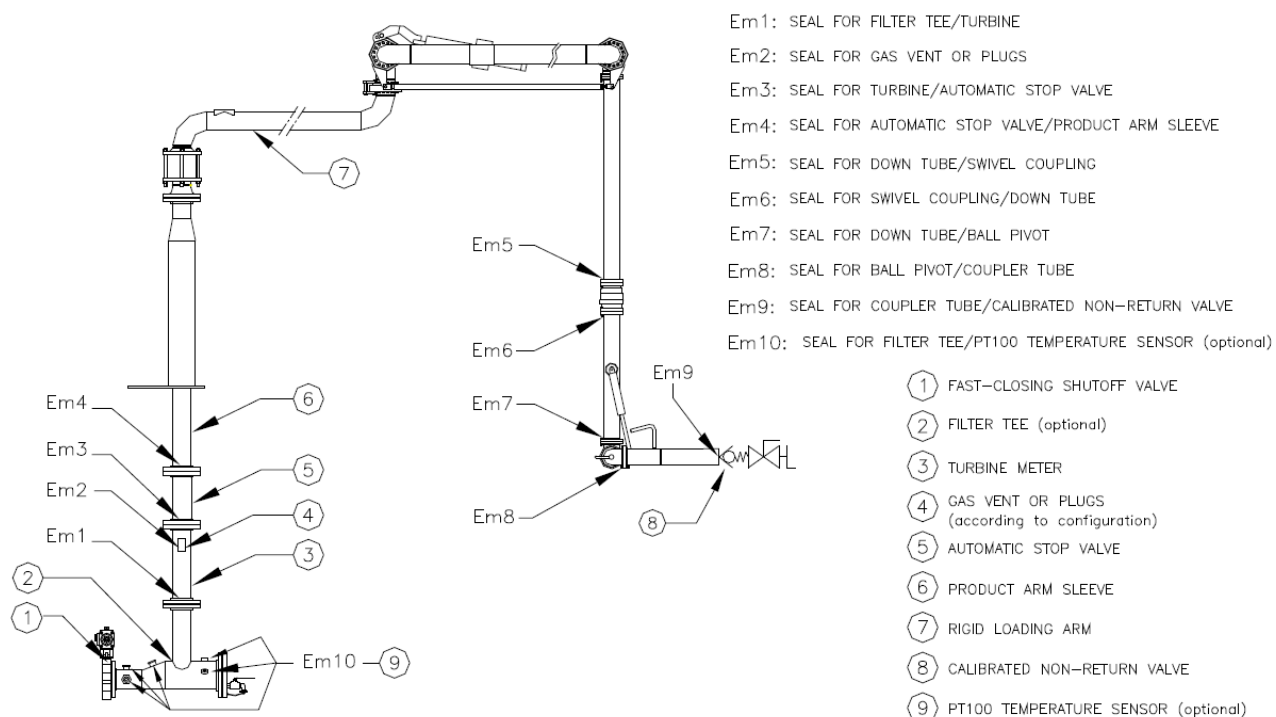

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 101 END TURBOCOMPT

This document is available at www.alma-alma.fr

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

Page 8 / 24

4.2. TOP LOADING SYSTEM

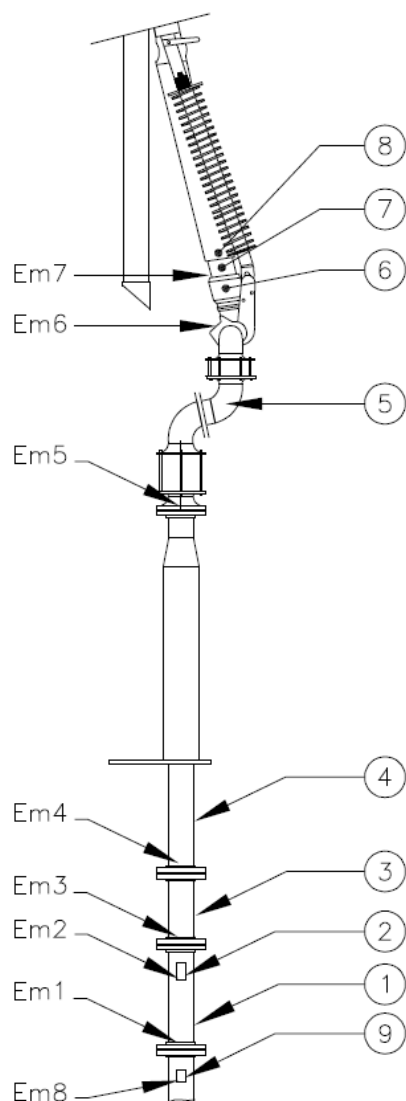

Em1: SEAL FOR PIPE/TURBINE

Em2: SEAL FOR GAS VENT OR PLUGS

Em3: SEAL FOR TURBINE/AUTOMATIC STOP VALVE

Em4: SEAL FOR AUTOMATIC STOP VALVE/PRODUCT ARM SLEEVE

Em5: SEAL FOR PRODUCT ARM SLEEVE/PRODUCT ARM SUPPORT

Em6: SEAL FOR PRODUCT ARM SUPPORT/FIAB VALVE

Em7: SEAL FOR FIAB VALVE/CALIBRATED NON-RETURN VALVE

Em8: SEAL FOR TUBE/PT100 TEMPERATURE SENSOR (optional)

① TURBINE METER

② GAS VENT OR PLUGS (according to configuration)

③ AUTOMATIC STOP VALVE

④ PRODUCT ARM SLEEVE

⑤ LOADING ARM


⑥ FIAB VALVE

⑦ CALIBRATED NON-RETURN VALVE


⑧ VACUUM BREAKER

⑨ PT100 TEMPERATURE SENSOR (optional)

The sealing plans for turbine meters, for electronic calculator-indicator and if relevant for gas separator or gas extractor are described in conformity with respective evaluation certificates.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 9 / 24

4.4. BOTTOM LOADING SYSTEM WITH FLEXIBLE ARM (CFA)

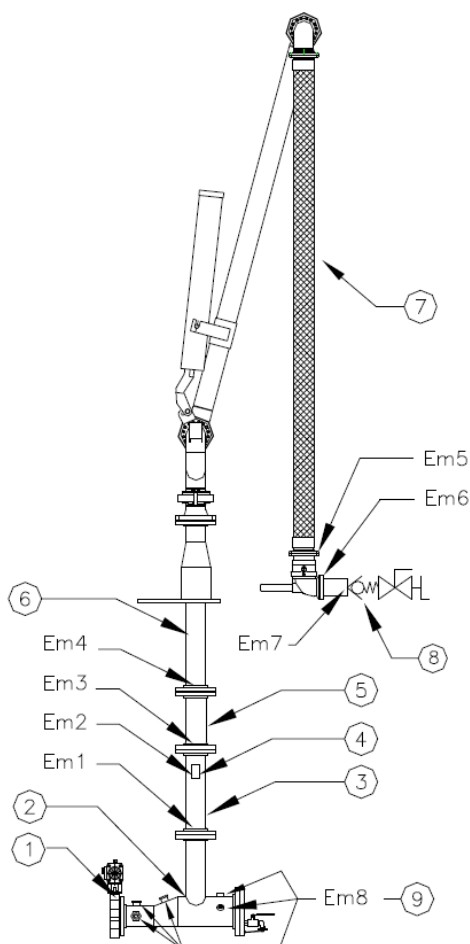


- Em1: SEAL FOR FILTER TEE/TURBINE
- Em2: SEAL FOR GAS VENT OR PLUGS
- Em3: SEAL FOR TURBINE/AUTOMATIC STOP VALVE
- Em4: SEAL FOR AUTOMATIC STOP VALVE/PRODUCT ARM SLEEVE
- Em5: SEAL FOR HOSE/BALL PIVOT
- Em6: SEAL FOR BALL PIVOT/COUPLER TUBE
- Em7: SEAL FOR COUPLER TUBE/CALIBRATED NON-RETURN VALVE
- Em8: SEAL FOR FILTER TEE/PT100 TEMPERATURE SENSOR (optional)

- ① FAST-CLOSING SHUTOFF VALVE
- ② FILTER TEE (optional)
- ③ TURBINE METER
- ④ GAS VENT OR PLUGS (according to configuration)
- ⑤ AUTOMATIC STOP VALVE
- ⑥ PRODUCT ARM SLEEVE
- ⑦ FLEXIBLE LOADING ARM
- ⑧ CALIBRATED NON-RETURN VALVE
- ⑨ PT100 TEMPERATURE SENSOR (optional)

The filter tee is illustrative only. The filter (as well as all connections for Pt100 sensors) can be combined with a gas extractor.

The sealing plans for turbine meters, for electronic calculator-indicator and if relevant for gas separator or gas extractor are described in conformity with respective evaluation certificates.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 11 / 24

5. ESSENTIAL FEATURES


5.1. GENERIC CHARACTERISTICS

Measuring system ALMA	TURBOCOMPT type TC 50	TURBOCOMPT type TC80	TURBOCOMPT type TC150	TURBOCOMPT type TCFH150
Turbine meter type	ADRIANE DN50-50	ADRIANE DN80-80 or DN100-80	ADRIANE DN100-150	FAURE HERMAN TLM 4-150
Accuracy class	0.5			
Liquids measured ⁽¹⁾	Liquid hydrocarbons (except LPG), biofuels, chemical liquids, alcohols			
Maximum cinematic viscosity at metering conditions	10 mm ² /s	13 mm ² /s	13 mm ² /s	15 mm ² /s
Indication scale interval	1 m ³ / 0.1 m ³ / 0.01 m ³ / 1 L / 0.1 L			
Minimum flowrate ⁽³⁾	4 m ³ /h	8 m ³ /h	15 m ³ /h	15 m ³ /h
Maximum flowrate ⁽¹⁾	50 m ³ /h	80 m ³ /h	150 m ³ /h	150 m ³ /h
Temperature of measured liquid	- 10 °C ⁽²⁾ to + 50 °C			-30 °C to +180 °C ⁽¹⁾
Minimum relative pressure ⁽³⁾	0,3 bar	0 bar		
Maximum relative pressure ⁽³⁾	20 bar	30 bar		
Minimum measured quantity	Value greater than or equal to 200 scale intervals but not less than 50 L (with 2H00)	Value greater than or equal to 200 scale intervals but not less than 100 L (with 2H00)		Value greater than or equal to 200 L
	Value greater than or equal to 500L or 1000L if a gas extractor ALMA type PURGOPTIQUE is used			
Power supply	230 V AC			

⁽¹⁾ Maximum flowrate, liquids measured and temperature of measured liquid ranges for measuring systems can be reduced regarding characteristics of the meter and the gas separator if relevant.

⁽²⁾ Except in certain cases (see evaluation certificate LNE-12393 covering ALMA Adriane turbine meter DN 50-50, DN 80-80, DN 100-80 or DN 100-150).

⁽³⁾ The maximum operating pressure may be reduced according to characteristics of the control valve used and the gas separator if relevant.
The minimum operating pressure may be increased according to characteristics of the control valve used and the gas separator if relevant.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 12 / 24

5.2. DETERMINATION OF THE SCALE INTERVAL

The possible indication scale intervals for a TURBOCOMPT system are as follows: 0,1L, 1L, 0,01m³, 0,1m³ and 1m³. The scale interval must be chosen in accordance with the chosen Minimum Measured Quantity (QMM).

5.3. DETERMINATION OF THE MINIMUM MEASURED QUANTITY (QMM)

The QMM must be of the form 1×10^n scale interval or 2×10^n scale interval or 5×10^n scale interval.

It must be determined in accordance with the indication scale interval, the customer requirements and errors caused by the contraction of the product in pipes before and after the meter.

In all cases, the following recommendations must be observed:

Meter	Minimum QMM	
	Scale interval 0.1L	Other scale interval (higher)
2H00 pulse emitter		
ADRIANE DN50-50	20 L or+	200 Scale interval or+
ADRIANE DN80-80	100 L or+	200 Scale interval or+
ADRIANE DN100-80	100 L or+	200 Scale interval or+
ADRIANE DN100-150	100 L or+	200 Scale interval or+
FH71 CO pulse emitter		
FH TLM4-150	200 L or+	200 Scale interval or+

5.4. MEASURED LIQUID

The measured liquid must be compatible with the list of products defined in the generic characteristics table.

Warning: Depending on the product family metered and the chosen meter, there may be restrictions on the instrument operating range (see § on temperature range).

In all cases, the viscosity of the product must remain compatible with the maximum viscosity accepted by the meter.

5.5. MEASURED LIQUID TEMPERATURE RANGE

The temperature range of the measured liquid must be within the generic range defined in the generic characteristics table.

However, depending on the meters, the following restrictions should be taken into account for the minimum temperature of the measured product:


Meter	Product	Minimum temperature
ADRIANE DN50-50	EMHV	8 °C
	Gas or regular fuel	-2°C
ADRIANE DN80-80 ADRIANE DN100-80 ADRIANE DN100-150	EMHV	0 °C
	Gas or regular fuel	-2°C
FH TLM4-150	all	-30°C

In all cases, at the minimum temperature defined, the viscosity of the measured liquid must be less than the maximum viscosity allowed, depending on the meter.

Meter	Maximum kinematic viscosity
ADRIANE DN50-50	10 mm ² /s
ADRIANE DN80-80 ADRIANE DN100-80 ADRIANE DN100-150	13 mm ² /s
FH TLM4-150	15 mm ² /s

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION

	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 13 / 24

5.6. ENVIRONMENT CONDITIONS

The environment conditions are fixed by the type of gas separator, the calculator and the meter used.

5.6.1.Environment temperature

The environment temperature range for a TURBOCOMPT system is **[-25°C; + 55 °C]**.

If the chosen calculator is the MICROCOMPT +, Rack version, in this case, this range is reduced to **[-10°C; +40 °C], but only for the latter**. The latter must be installed as per the recommendations indicated in this document.

5.6.2.Environment mechanical class

- Class M2 for the parts installed on site
- Class M1 **only for the MICROCOMPT+ if it is the RACK version**. It must be installed as per the recommendations indicated in this document.

5.6.3.Environment electromagnetic class

- Class E2 for the ALMA electronic calculator-indicator, type MICROCOMPT+, **RACK version**
- E3 for the parts installed on site with BOPP & REUTHER, type ZGA separators
- E2 for the parts installed on site for the TCFH150 (FAURE HERMAN TLM4-150 turbine)
- E3 for the parts installed on site for the TC50, TC80, and TC150 (ALMA ADRIANE turbines)

5.7. FLOWRATE RANGES

The flowrate range must be within the generic range defined in the generic characteristics table.

However, the maximum flowrate may be limited if a gas separator and/or a gas extractor is used.

Type of gas elimination device	Maximum flowrate [m3/h]
PERNIN Equipment FSGB48E	48
PERNIN Equipment SG80-1 AI	80
ALMA DN80/80	80
ALMA DN100/150	150
All other types listed (§ "Description" of LNE 22081)	Depending on size (see CEV separator or extractor)

Warning: A gas separator may be common to several measuring systems.

In this case, the maximum flowrate allowed for this measuring system must take the sum of the maximum flowrates for the other measuring systems concerned by the same gas separator into account.

Warning, the degassing system may consist of several gas separators connected in parallel and feed one or more measuring systems.

In that case, the gas elimination device must be the subject of a sizing study.

And in these cases only, it may not be part of the LNE 22081 list.


The system description and the compatibility of flowrates must be demonstrated in the "Supply Conditions file".

5.8. PRESSURE RANGES


The pressure range must be within the generic range defined in §5.1.

5.8.1.Minimum pressure

The minimum pressure must be equal to the highest minimum pressure of the various components.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 14 / 24

XAD 37 (bottom curve) and ZC.E5.E.80 (upper curve)

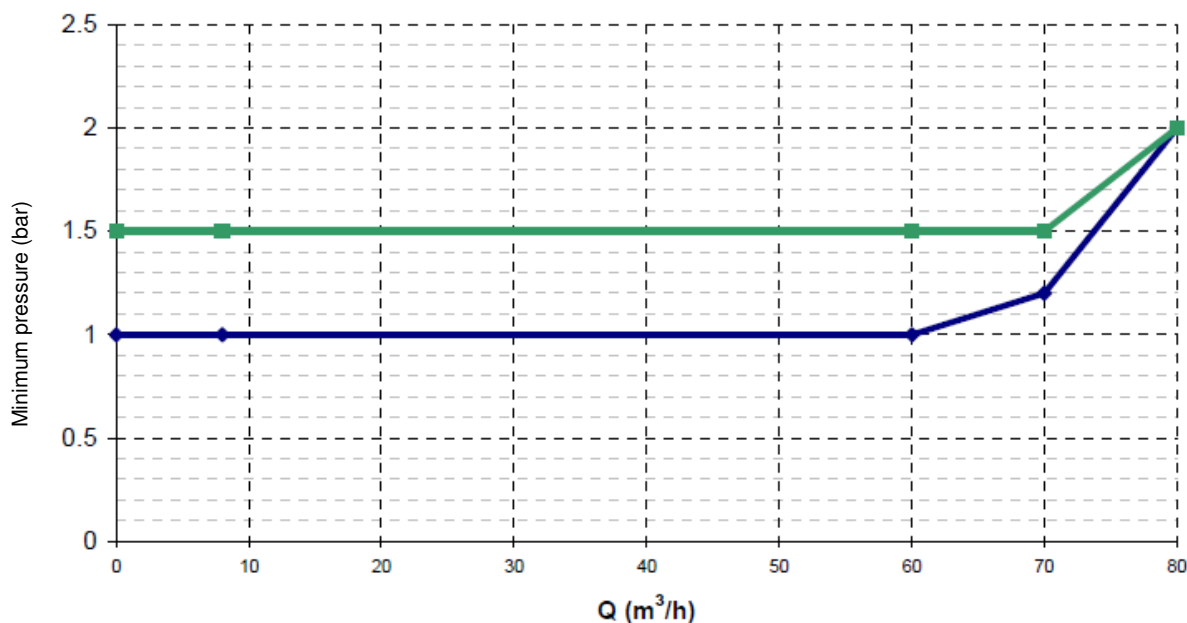

5.8.2. Maximum operating pressure

The maximum pressure must be equal to the lowest maximum pressure of the various components.

In particular, the use of certain gas separators or certain types of valves results in a decrease of the maximum operating pressure. Depending on the separator.

5.9. NEED TO ESTABLISH A SUPPLY CONDITIONS FILE

Refer to the § “Hydraulic supply” of EU CET LNE-22081.

ALMA TURBOCOMPT model measuring systems, types TC50, TC80, TC150 and TCFH150 must be installed in such a way that during normal operation neither air entry nor gas release will occur in the liquid upstream of the meter.


If there is neither a gas separator nor a pressure monitoring system at the inlet of every pump, it is necessary to establish a Supply conditions file in accordance with the § “Supply conditions file” of EU CET LNE-22081 to show that the pressure at the pump inlet must always be higher than the atmospheric pressure and the saturation vapour pressure of the liquid.

Otherwise, if the measuring system is only equipped with a pressure monitoring system at the inlet of every pump, blocking the flow if it is below atmospheric pressure, in order to admit only a positive pressure at the inlet, it is necessary to establish a Supply conditions file in accordance with the § “Supply conditions file” of EU CET LNE-22081 that can be limited to a description of the pressure monitoring system.

Otherwise, when the gas separator (even if not listed in the § “Description” of LNE-22081) is common to several measuring systems, or if one or more measuring systems are supplied with a degassing system consisting of several gas separators connected in parallel (even if not listed in the § “Description” of LNE-22081), it is necessary to establish a Supply conditions file in accordance with the § “Supply conditions file” of EU CET LNE-22081 that can be limited to show that the maximum flowrate of the gas separator, or gas separators system, remains higher than the sum of flowrates of all the measuring systems it supplies.

5.10. PRODUCT CONTRACTION UPSTREAM OF THE METER. NEED TO INSTALL A GAS DETECTION AND PURGE SYSTEM

Refer to § “Gas evacuation system” of EU CET LNE 22081.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 16 / 24

During shut-off periods, gas pockets may form in the piping following the thermal contraction especially between closing devices.

If they cause a measuring error greater than 1% of the minimum measured quantity, a gas detection system and possible vent devices must be installed on the supply pipe. The system must be positioned so that it is able to efficiently drain the air when the flow is stopped (pump(s) running, loading valve closed).

To determine the effect of gas pockets, depending on the case, calculate the volume of the pipe (V_{pipe}) between the pump (or the gas separator) and the meter.

The installation of an automatic detection system is required if:

- $V_{\text{pipe}} > \text{QMM}$ for exposed pipes
- $V_{\text{pipe}} > 5 \times \text{QMM}$ for insulated or underground pipes

At the outset or as a result of these calculations, the choice can be done to install:

- Located upstream of the meter, a gas extractor ALMA type PURGOPTIQUE covered by CEV n° LNE-31813

Or

- A gas detector DG at the high point of the pipe between the pump (or the gas separator, depending on configuration) and the meter

5.11. CONTRACTION OF THE PRODUCT BETWEEN THE METER AND TRANSFER POINT

Refer to OIML R117-1.

The effect of contractions due to temperature variations in the pipes between the meter and the transfer point must not exceed 1 % of the minimum measured quantity.

For this, the volume of the pipe between the meter and the check valve acting as a transfer point must not exceed the following volume (EU CET TURBOCOMPT LNE-22081):


- $V_{\text{pipe}} \leq \text{QMM}$ for exposed pipes
- $V_{\text{pipe}} \leq 5 \times \text{QMM}$ for insulated or underground pipes

6. GENERAL MECHANICAL RECOMMENDATIONS

6.1. MICROCOMPT+ ASSEMBLY GUIDELINES


It is necessary to comply with the instructions contained in the ATEX instruction handbook supplied with the MICROCOMPT+ calculator.


- Secure the box to a support adapted to the weight of the calculator with 4 x M6 screws (4 x M6 blind tapped holes, 12 mm deep, on 185x132 mm).
- Leave an empty space A of 100 mm around the MICROCOMPT+ to work on it more easily.

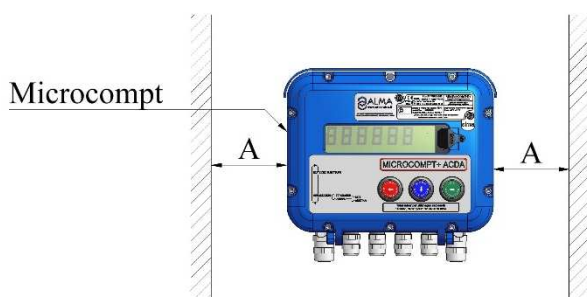

- Leave enough space under the box to avoid pressing the pushbuttons and pressing against the glass when the front of the MICROCOMPT+ is open.

Dimensions: A > 100mm and B > 60mm

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 17 / 24

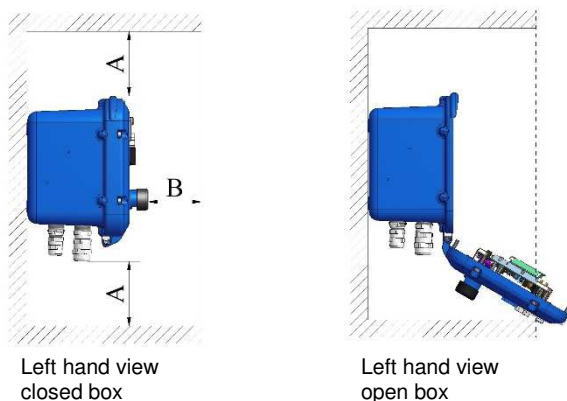

REFER TO THE INSTRUCTION MANUAL
(DELIVERED WITH THE EQUIPMENT, AVAILABLE ON THE ALMA WEBSITE)

6.1.1. Specificities of the RACK Version

The MICROCOMPT+, RACK version, **must be installed in a control room** (outside installation is prohibited). Precautions must be taken to ensure that the ambient temperature remains between - 10°C and +40°C.

6.2. METER ASSEMBLY GUIDELINES

6.2.1. ALMA ADRIANE Turbine

The installation of an ALMA ADRIANE turbine (all models) must comply with the following conditions:

- Position the turbine so that the nameplate as well as the pulse emitter(s) LEDs are easily accessible and visible
- Install the turbine in compliance with the direction of flow
- Fit seals between the turbine and the counter flanges
- Leave an empty space of at least 100 mm around the turbine to work on it more easily
- At the measuring system inlet, install a filter with a mesh equal to 400µm to protect the turbine, or a smaller mesh if other devices require specific protection (loading valve...) Warning: Use a type of filter whose reliability has been demonstrated and in particular, never use a Y-filter.
- After installation, if new or modified pipes have not been perfectly cleaned or pickled and passivated, the turbine must be protected during the commissioning period with a honeycomb strainer with a mesh of 1 mm or less, placed between the two flanges upstream of the filter.



The piping situated upstream or downstream of the turbine may be built with or without the straight pipe sections but it is important that they do not include any component that adjusts the flowrate which would effectively reduce the nominal diameter of the turbine at a distance of 10 times the nominal diameter upstream and 5 times the nominal diameter downstream.

6.2.2. FAURE HERMAN TML 4-150 Turbine

The installation of a FAURE HERMAN TML 4-150 turbine must comply with the following conditions:

- The upstream and downstream pipe must have the same nominal diameter as the turbine diameter
- If the turbine is equipped with an integrated flow conditioner, there are no specific requirements on the straight length before and after the turbine
- If the turbine is not equipped with an integrated flow conditioner
 - The upstream pipe must include a straight length equal to at least 20 times the nominal diameter of the turbine if there is no flow conditioner or equal to at least 10 times the nominal diameter if this is not the case
 - The downstream must include a straight length equal to at least 5 times the nominal diameter of the turbine

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 101 END TURBOCOMPT

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 18 / 24

6.3. GAS SEPARATOR

All gas separators must be installed **vertically** and the associated gas discharge channel must be **rigid and non-pinchable**.

The gas separator/s (or the installation) must include a **sighting device at the liquid outlet** providing a visual control that it operates/they operate correctly.

The gas discharge channel must not include a manual control valve if the closing of this valve neutralises the correct operation of the gas separator.

If such a closing device is required for security reasons, **a sealing device must ensure it is held in an open position** or its closure must automatically prevent any subsequent measuring of the measuring system in which the gas separator is integrated.

If the gas separator/s is/are lower-installed than the meter, **a check valve must be installed at the outlet/s** to avoid draining the pipe that connects these devices.

See provisions set out in the separator characteristics (CEV, CET or anywhere else).

6.4. CONTROL VALVE

6.4.1. Compatible valve types

The following control valves can be installed on a TURBOCOMPT system.


- SATAM types XAD36 or XAD 37 respectively for TURBOCOMPT measuring systems, types TC150 and TC80
- SATAM types ZC.E5.E.150 or XAD ZC.E5.E.80 respectively for TURBOCOMPT measuring systems, types TC150 and TC80E
- MASONEILAN type CAMFLEX for the TURBOCOMPT measuring system
- SMITH type 210
- SAMPI type HPV
- BROOKS/EMERSON types 788DVC and 787C
- BRODIE type BV88
- DANIELS types 401 AV501 and 788
- OCV SERIE 108

For any other valve types, please contact the Products & Project Technical Manager first to validate the characteristics.

6.4.2. Installation

All valves must be installed in accordance with its manufacturer's installation instructions.

The settings for use flowrates must be compatible with the measuring system flowrate range and if necessary, with the maximum flowrates indicated in the Supply conditions file.


ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 19 / 24

6.7. TEMPERATURE SENSOR

If the temperature sensor is installed connected to the MICROCOMPT+ calculator, it is necessary to comply with the following requirements:

- The sensor must be a 3 wire Pt 100 temperature sensor
- The thermowell receiving this sensor must be able to measure the temperature at the centre of the liquid flow
- A control pocket must:
 - be installed close to it in order to take a measurement identical to that of the previously mentioned sensor. **In particular, the length of the two thermowells must be identical**
 - be installed as vertically as possible so that it can be used with heat transfer fluid during the checks

INSTALLATION OF A TEMPERATURE SENSOR IN A TEE FILTER

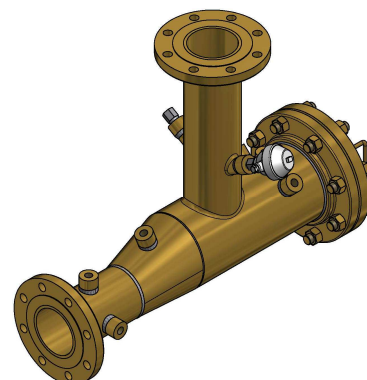

6.8. TRANSFER POINT

The transfer point for the TURBOCOMPT SOURCE system or on a horizontal pipe is represented by a calibrated valve, integrated or not in a coupler at the end of the arm.

The transfer point for the TURBOCOMPT top loading system is represented by a calibrated valve, at the high point of the top loading arm followed by a venting system to drain the downstream part of the arm to this transfer point.

This valve retains the liquid when measuring and during shut-off periods of the pipe between the meter and the transfer point.

It must be sealed, calibrated to at least 0.3 bar and equipped with a decompression system.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION




INSTALLATION GUIDE DI 101 END TURBOCOMPT

Units of measure:
Length: mm
Angle: degree (° ' ")
Temperature: °C

This document is available at www.alma-alma.fr

Page 21 / 24

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	<u>Units of measure:</u> Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 22 / 24


7.2. ELECTRICAL CONNECTION OF THE MICROCOMPT+

Refer to the MICROCOMPT+ DI 104 Installation file

7.3. ELECTRICAL CONNECTION OF THE METER

7.3.1. Specificity of the FAURE HERMAN TLM 4-150 turbine

The FAURE HERMAN turbine must be used with FH71 CO amplifiers, ref. **7397938** installed in the turbine connection boxes, in accordance with the following diagram:

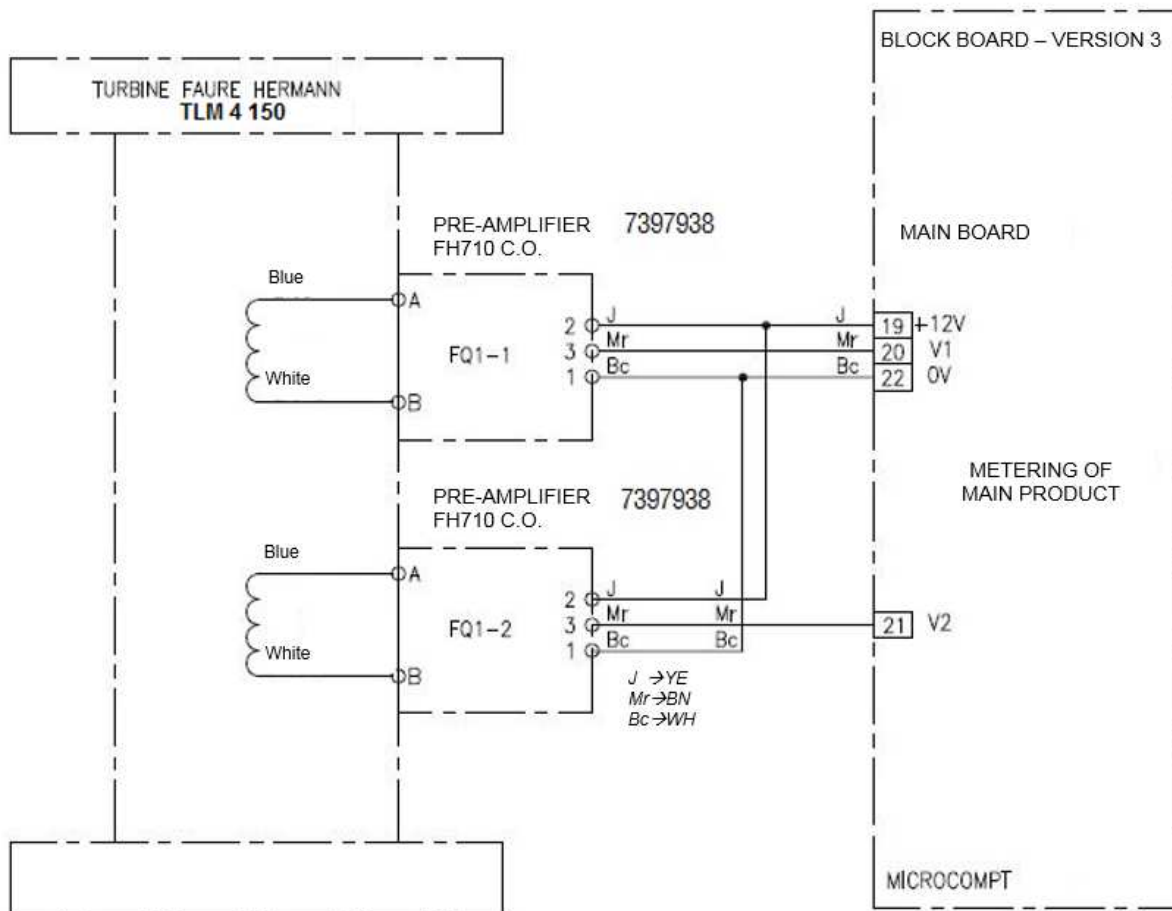


8. SEALING

Seals must comply with the sealing plans available in the Annex of the LNE-22081 certificate.

In so far as possible, sealing must be done with the sealing caps provided for this purpose or with beaded wire providing security.


Seals with labels that are destroyed when pulled off **are only authorised for elements found in the control room.**

The cables used for metrological signals must be sealed over its entire length; **the junction boxes or other intermediate boxes** between the sensor and the calculator **must be sealed** (box opening is sealed or the relevant terminals are sealed). This concerns metering, gas and temperature detection if the latter measurement is used for metrology.

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY		
THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION		
	INSTALLATION GUIDE DI 101 END TURBOCOMPT	Units of measure: Length: mm Angle: degree (° ' ") Temperature: °C
	This document is available at www.alma-alma.fr	Page 23 / 24

9. MEASURING SYSTEM PLATE KIT

The identification plate must be mounted close to the associated indicator so that it is clearly visible and easy to access in order to read the characteristics and add the regulatory markings.

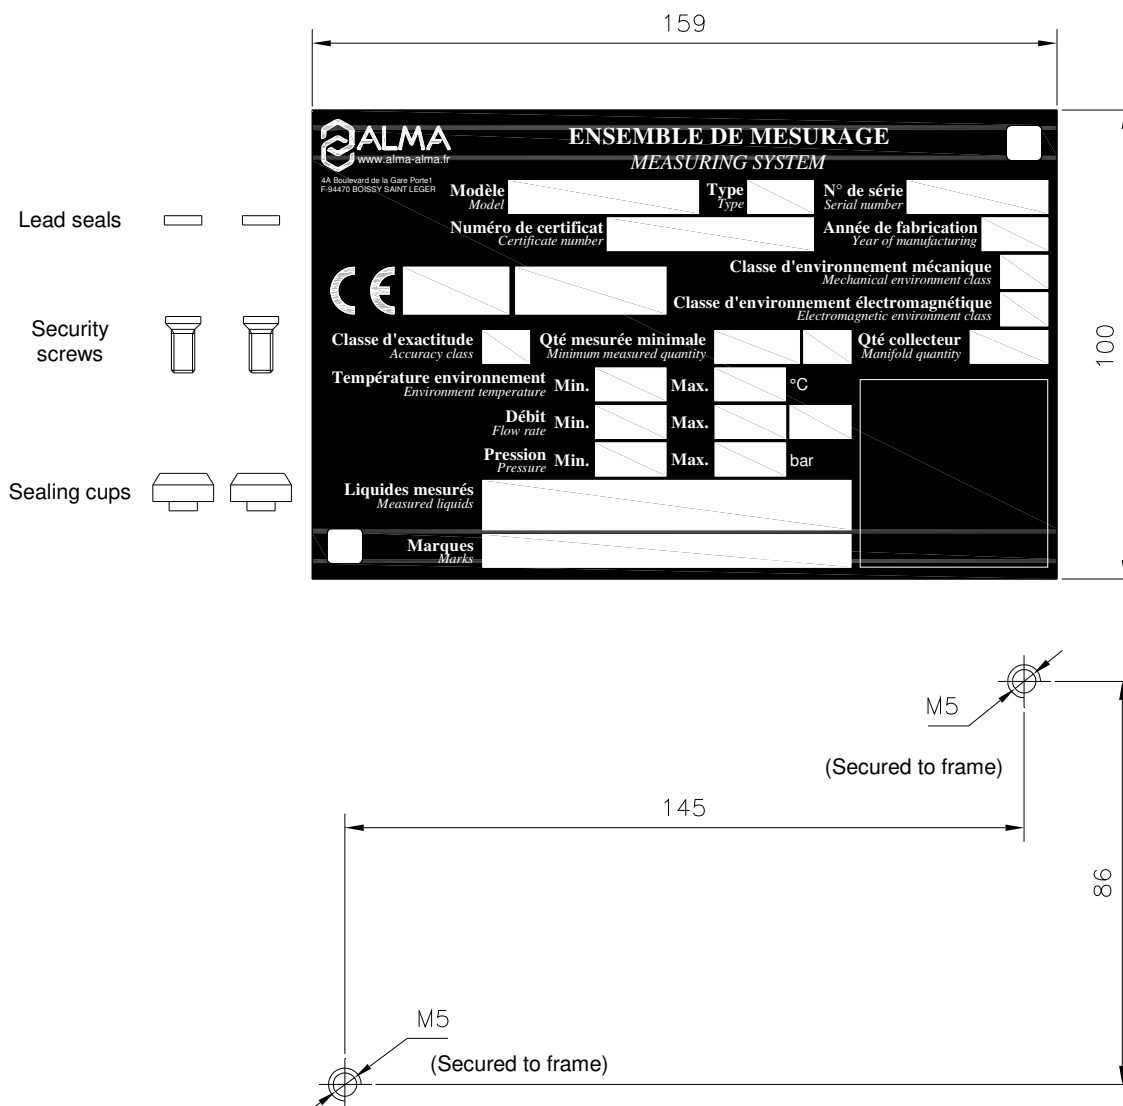

The security screws for sealing cups (supplied by ALMA) must be screwed into the tapped holes which are part of the frame (no removable nuts).

ALL RECOMMENDATIONS ARE FOR REFERENCE ONLY

THIS DOCUMENT IS THE PROPERTY OF ALMA. IT CAN BE NEITHER COPIED NOR COMMUNICATED TO ANY THIRD PARTIES WITHOUT ALMA AUTHORIZATION



INSTALLATION GUIDE DI 101 END TURBOCOMPT

Units of measure:
Length: mm
Angle: degree (° '' ''')
Temperature: °C

This document is available at www.alma-alma.fr

Page 24 / 24